

## AT1919MF AT1926ML AT2219MF AT2226ML User Guide




<b>Important safety instructions.....</b>	<b>3</b>
Disposal instructions .....	4
<b>Your LCD TV overview .....</b>	<b>5</b>
Front and side panels .....	5
Rear panel view .....	6
Remote control .....	7
<b>Connecting devices .....</b>	<b>9</b>
Wall mount preparation / removing the base .....	9
Basic connections .....	9
Enjoying analog and digital TV .....	10
<b>Connecting external audio/video devices .....</b>	<b>12</b>
Connecting a DVD, VCR, STB or audio/video equipment .....	12
Connecting a camera, camcorder or game console .....	13
Connecting a PC or notebook computer .....	14
Selecting the input source .....	14
<b>Channel controls.....</b>	<b>15</b>
Channel list .....	15
Favourite channel list .....	16
Electronic programme guide .....	16
<b>OSD navigation .....</b>	<b>18</b>
Navigating the OSD with the remote control .....	18
Adjusting the OSD settings .....	19
<b>OSD Menus .....</b>	<b>21</b>
Picture settings .....	21
Audio settings .....	22
Channel management .....	23
Settings .....	25
Advanced .....	26
<b>Troubleshooting .....</b>	<b>27</b>
There is no picture or sound .....	27
Picture is not clear .....	27
Picture is too dark, too light or tinted .....	27
Remote control does not work .....	27
<b>Product specifications .....</b>	<b>28</b>

Model number: \_\_\_\_\_

Serial number: \_\_\_\_\_

Date of purchase: \_\_\_\_\_

Place of purchase: \_\_\_\_\_

	HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
	DVB is a registered trademark of the DVB Project.
	Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

# Important safety instructions

Read these instructions carefully. Please put them somewhere safe for future reference.

1. Only use attachments/accessories specified by the manufacturer.
2. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.
3. Unplug this apparatus during lightning storms or when unused for long periods of time.
4. Do not install this equipment in a confined space such a book case or similar unit.
5. No naked flame sources, such as lighted candles, should be placed on the apparatus.
6. If the remote control will not to be used for a long time, remove the batteries. Use the remote control carefully. Do not drop the remote control on the floor. Keep it away from moisture, direct sunlight, and high temperatures.
7. Used or discharged batteries must be properly disposed of or recycled in compliance with all applicable laws. For detailed information, contact your local solid waste disposal authority.
8. Follow all warnings and instructions marked on the product.
9. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
10. Do not use this product near water.
11. Do not place this product on an unstable cart, stand or table. The product may fall, sustaining serious damage.
12. Slots and openings are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat register or in a built-in installation unless proper ventilation is provided.
13. This product should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
14. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be stepped on.
15. If an extension cord is used with this product, make sure that the total ampere rating of the equipment plugged into the extension cord does not exceed the extension cord ampere rating. Also, make sure that the total rating of all products plugged into the wall outlet does not exceed the fuse rating.
16. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short-out parts, which could result in a fire or electric shock. Never spill liquid of any kind on the product.
17. Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.
18. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - a When the power cord or plug is damaged or frayed.
  - b If liquid has been spilled into the product.
  - c If the product has been exposed to rain or water.



- d If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls could result in damage; extensive work by a qualified technician might then be required to restore the product to normal condition.
  - e If the product has been dropped or the case has been damaged.
  - f If the product exhibits a distinct change in performance, indicating a need for service.
19. Use only the proper type of power supply cord set (provided in your accessories box) for this unit. Always disconnect the power cord from the wall outlet before servicing or disassembling this equipment.
  20. Do not overload an electrical AC outlet, power strip, or convenience receptacle. The overall system load must not exceed 80% of the branch circuit rating. If power strips are used, the load should not exceed 80% of the power strip input rating.
  21. Some products are equipped with a three-wire electrical grounding-type plug that has a third pin for grounding. This plug only fits into a grounded electrical outlet. This is a safety feature. Make sure the AC outlet is properly grounded. Do not defeat the safety purpose of the grounding-type plug by trying to insert it into a non-grounded outlet. If you cannot insert the plug into the outlet, contact your electrician to replace the obsolete outlet.
  22. Do not use this LCD TV in the workplace in accordance with BildscharbV, and maintain ample distance from it when watching. Watching a big-screen TV too close can cause eyestrain.
  23. This TV is designed for home entertainment purposes only. Make sure there is sufficient distance between you and the TV when you are viewing content to avoid harming your eyes.



.....  
**The grounding pin is an important safety feature. It is possible to receive an electric shock from a system that is not properly grounded.**  
 .....



.....  
 The grounding pin also provides good immunity ability against unexpected noise that interferes performance of this product and is produced by other nearby electrical devices.  
 .....

## Disposal instructions

Do not throw this electronic device into the rubbish bin / container when discarding. To minimize pollution and ensure utmost protection of the global environment, please recycle.

For more information regarding WEEE, please refer to <http://global.acer.com/about/environmental.htm>.



**Соответствует сертификатам,  
обязательным в РФ**


Compliant with Russian regulatory certification.



**ME61**


# Your LCD TV overview

## Front and side panels

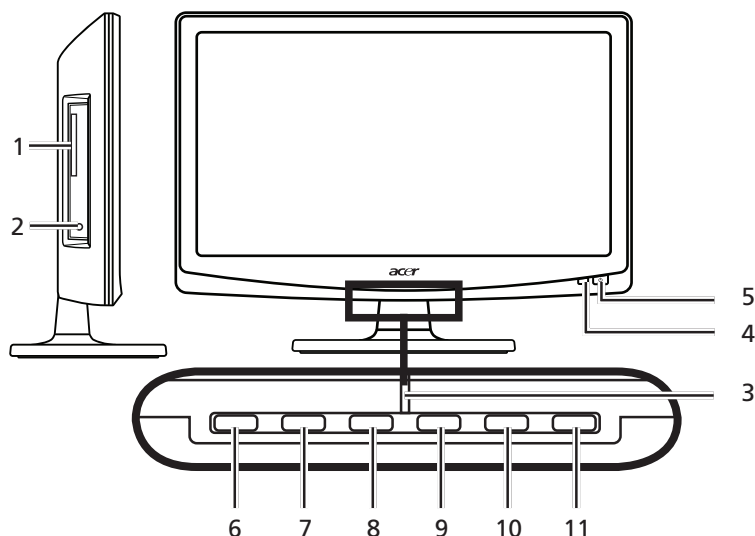

No.	Item	Description
1	Common interface	Insert a common interface module here. A module may be required by certain channels (e.g. some pay-per-view channels).
2	Earphone	Insert a 3.5 mm headphone jack here.
3	Power LED	Indicates the power status of the TV.
4	Remote control receiver	Receives signals from the remote control.
5	Power button	Press to turn the TV ON and OFF.
6	Volume down	When the OSD is on, functions the same as the Left arrow.
7	Volume up	When the OSD is on, functions the same as the Right arrow.
8	Channel down	When the OSD is on, functions the same as the Down arrow.
9	Channel up	When the OSD is on, functions the same as the Up arrow.
10	Menu key	Turns the OSD menu ON and OFF.
11	Source (Input) key	Press to change input source. When the OSD is on, press this button to confirm selection.

# Rear panel view

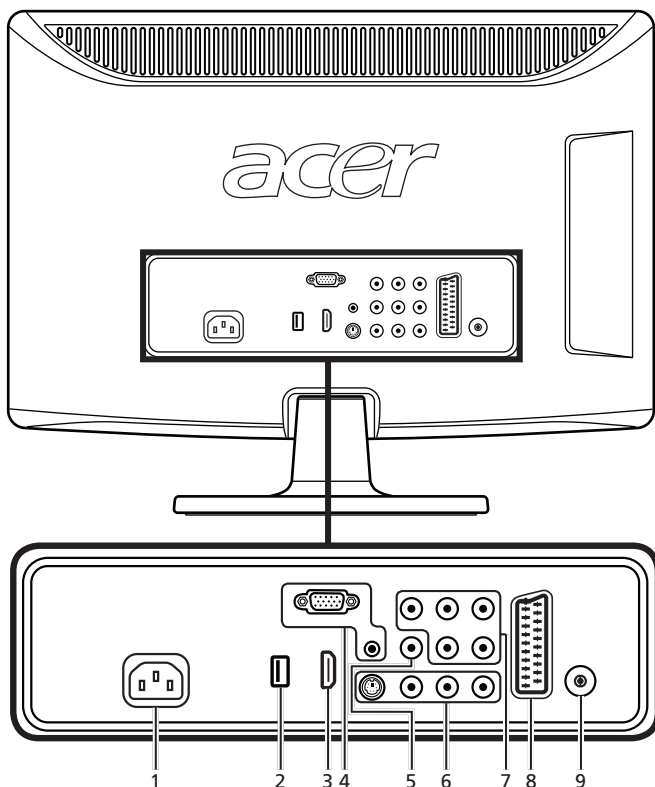

## No. Item


- |   |                                |
|---|--------------------------------|
| 1 | AC-in                          |
| 2 | Service port                   |
| 3 | HDMI                           |
| 4 | VGA-in + PC Audio-in           |
| 5 | SPDIF out                      |
| 6 | AV in-S-video, CVBS, Audio L/R |
| 7 | AV in-COMPONENT + Audio L/R    |
| 8 | SCART                          |
| 9 | Tuner*                         |



\* Tuner could support analog, digital and mixed signal.

# Remote control


## General keys

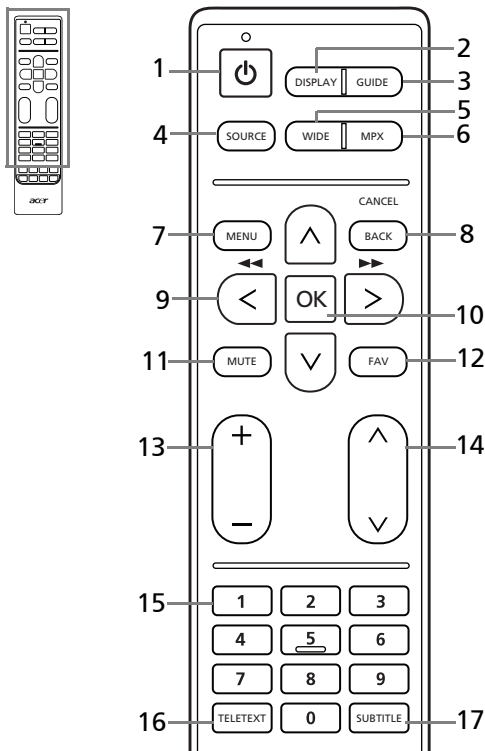

No.	Item	Description
1	POWER	Press to turn your TV on/off.
2	DISPLAY	Press to display or change input/channel information (dependent on input/source type).
3	GUIDE	Press to launch Electronic Programme Guide (EPG) mode (Digital TV mode only). See "Electronic programme guide" on page 16.
4	SOURCE	Press to select correct source/input mode. See "Selecting the input source" on page 14.
5	WIDE	Press to toggle scaling mode between 4:3, 16:9 and Letterbox 1, 2, 3 modes.
6	MPX	Press to display and select the audio signal.
7	MENU	Press to open or close the Menu.
8	Back/CANCEL	Press to back to previous Menu.
9	Directional keys	On certain models, the left and right directional keys also function as rewind and fast-forward keys when viewing multimedia files.

No.	Item	Description
10	OK/ENTER/ CH LIST	ENTER: Press to confirm channel number selection. CH LIST: Press to launch the channel list. See "Channel list" on page 15.
11	MUTE	Press to toggle audio on and off.
12	FAV	Press to display the favorite channel list.
13	VOL (+/-)	Press to increase or decrease the volume.
14	CH (up/down)	Press to sequentially select the TV channel.
15	Number keys	Press 0 - 9 on the remote control to select a channel.
16	TELETXT/MIX	Press to switch from TV/AV to Teletext mode. Press to overlay teletext page on the TV image.
17	SUBTITLE	Press to view subtitles on the screen.

## Teletext keys

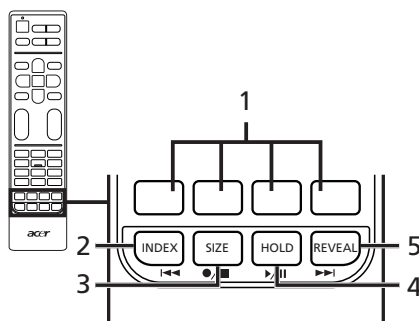

No.	Item	Description
1	Colour buttons (R/ G/Y/B)	Operates corresponding button on the teletext page.
2	INDEX	Press to go to the index page.
3	SIZE	Press once to zoom teletext page to 2X. Press again to resume.
4	HOLD	Press to pause the current teletext page.
5	REVEAL	Press to reveal hidden teletext information.

\* ◀◀ ◉/■ ▶▶ only for certain models


# Connecting devices

## Wall mount preparation / removing the base




Caution: Disassemble the base carefully otherwise the plastic parts and/or TV body may be damaged.



AT1919MF/AT1926ML

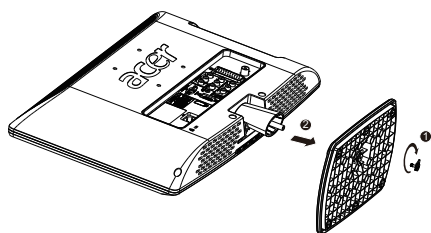

AT2219MF/AT2226ML

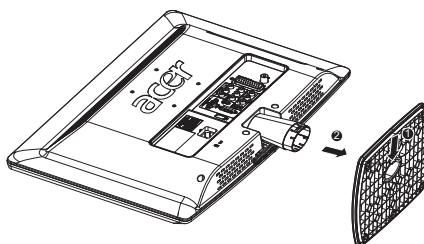

1. Remove the base.

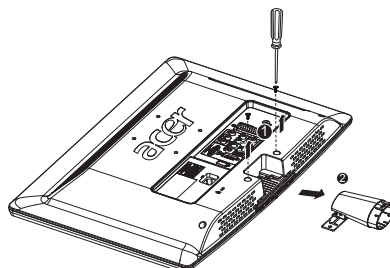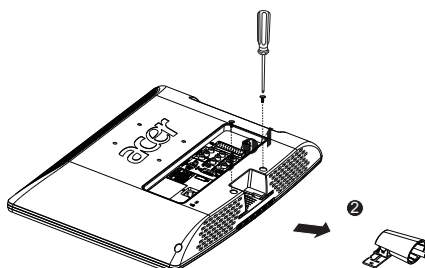


2. Remove the three screws from inside the stand.

3. Assemble the wall mount following the instructions included with the wall mount.

## Basic connections

### Connecting the power cord

1. Connect the AC cord into the AC input on the back of the set.
2. Connect the plug to the wall outlet as shown.

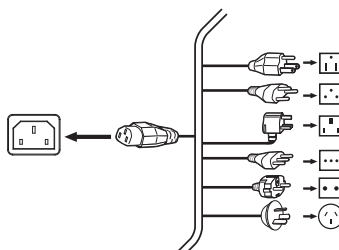


## Setting up the remote control

1. Open the cover on the back of the remote unit.
2. Insert two AA batteries (supplied) to match the polarity indicated inside the battery compartment.


## Enjoying analog and digital TV

### Connecting an antenna/cable

Connect the antenna cable to the appropriate antenna terminal on the back of the TV set as shown below.

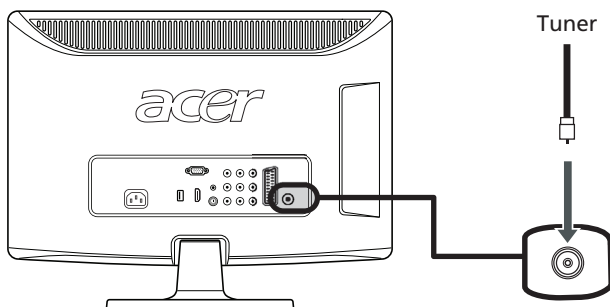

### Getting started watching your TV

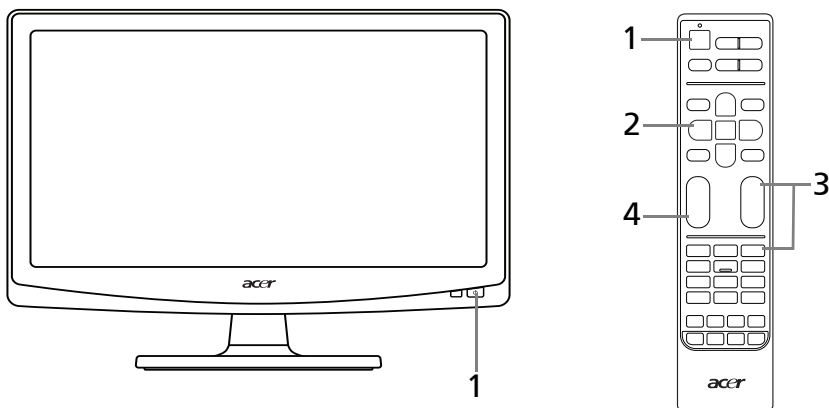

#### 1. Power

- a Turn on the power switch beneath the screen.
- b Press the power button or channel up/down button on the remote control.

#### 2. Installation Guide

The first time you switch on the TV, you will be asked to select the language and scan for channels.

Press the **OK** key to begin the setup process.



.....  
**Tip:** You can also adjust these settings using the front control panel. See "Front and side panels" on page 5.  
.....

- a Select the setup language you prefer.
- b Please select the correct country for signal reception.
- c Ensure that your co-axial cables are connected correctly before proceeding.
- d Scan for digital channels and analog channels.
- e Setup is now complete. You are ready to begin watching TV.



.....  
**Note:** Setup may vary due to local broadcast differences.  
.....

### 3. Changing channels

- a Press 0 - 9 on the remote control to select a channel. The channel changes after 2 seconds. Press **OK** to select the channel immediately.
- b Pressing the channel ( CH ) up / down button on the remote control will also change the channel.

### 4. Adjusting the volume


Adjust the volume level using the ( VOL ) up/down button on the remote control.

# Connecting external audio/video devices


## Connecting a DVD, VCR, STB or audio/video equipment

Connect your DVD player, VCR or audio/video equipment using the SCART port located at the rear of your LCD TV as shown below.

### Source-in

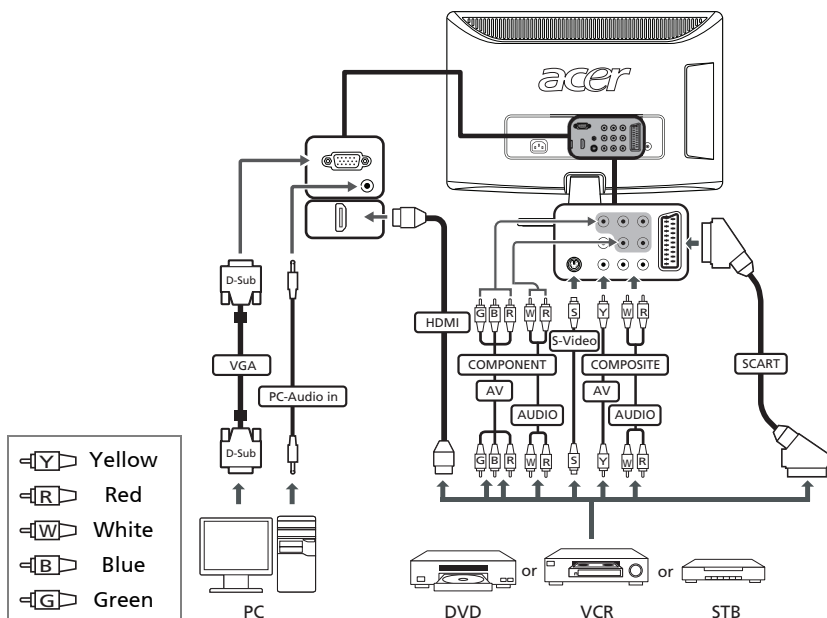


Acer recommends the following priority for connection types:  
HDMI -> COMPONENT -> SCART -> Composite.

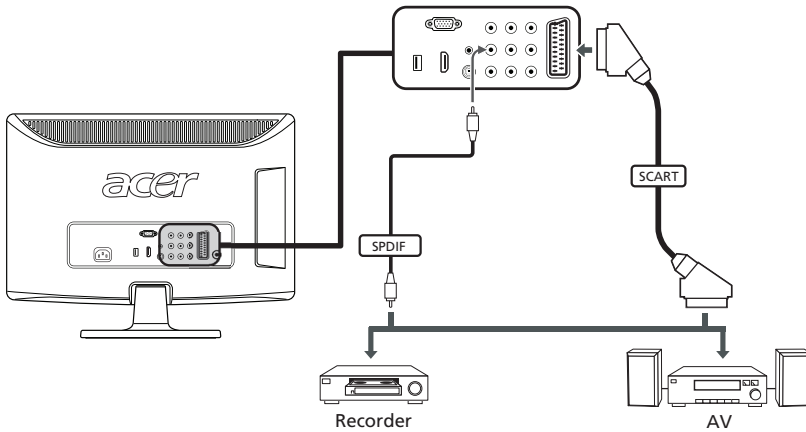

Analog TV signal output through SCART is only available when watching an analog TV channel.

## Connecting a camera, camcorder or game console

Connect your camera or camcorder to the video/audio ports on the TV set as shown below.

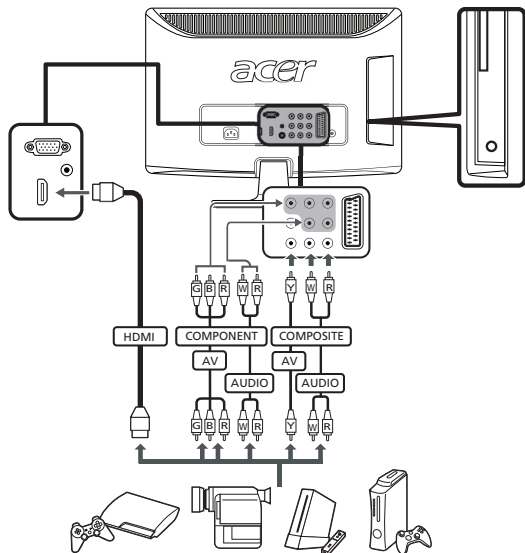


## Connecting a PC or notebook computer

To display PC output on your TV, connect your PC or notebook computer to the TV as shown below.



For VGA connections, Acer recommends setting your PC's external monitor resolution to 1366 x 768 pixels @ 60 Hz refresh rate (for AT1919MF/AT1926ML models) or 1920 x 1080 pixels @ 60 Hz refresh rate (for AT2219MF/AT2226ML models).

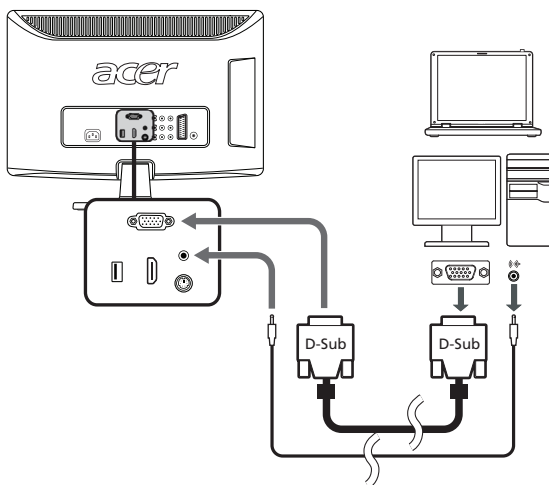


## Selecting the input source

Once you have connected your antenna or external equipment to the TV, you need to select the correct input source.

Press the **SOURCE** button on the remote control to see the list of available source connections:


- TV
- SCART
- Component
- D-Sub
- HDMI
- AV
- S-Video

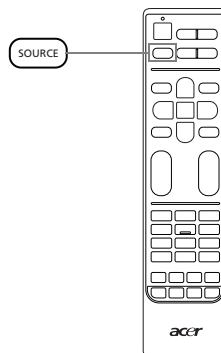

# Channel controls

## Channel list

Channel list allows you to quickly find the TV channel you are searching for.

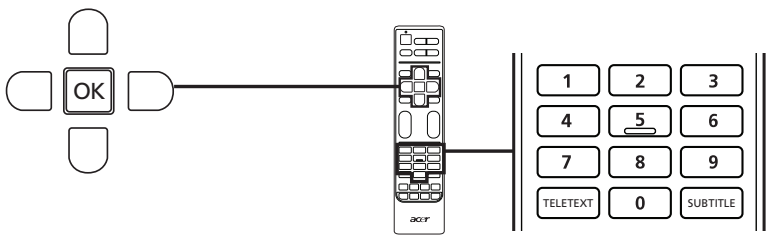





To open the channel list feature:		
1		Press the <b>OK</b> key on the remote control. This will bring up the channel list menu.
2		The current channel will be highlighted.
3		Use the directional keys to navigate the list and select the channel you wish to watch.

# Favourite channel list


The favourite channel list allows you to store your favourite TV channels and flick between them at the touch of a button.

To set a favourite channel, follow the steps described on this page.

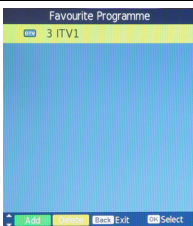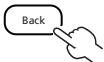Viewing your favourite channels		
1		On the remote control, if you press the <b>FAV</b> key, the TV will display a list of favourite TV channels. Use the up or down directional keys to select a channel, and then press <b>OK</b> .
Adding favourite channels		
1		To set a favourite channel: Press the <b>FAV</b> key on the remote control to display the favourite channel list.
2		Press the <b>green</b> button on the remote control to add the current channel as a favourite channel.
3		Press the <b>BACK</b> key on the remote control to exit.


## Electronic programme guide

The electronic programme guide (EPG) is an onscreen service available on digital and cable TV that provides information about scheduled broadcast programmes on all digital channels by time, title and channel.

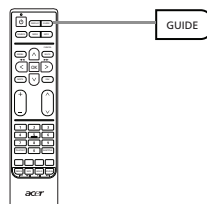


# Guide screen

There are four main areas of the EPG screen:

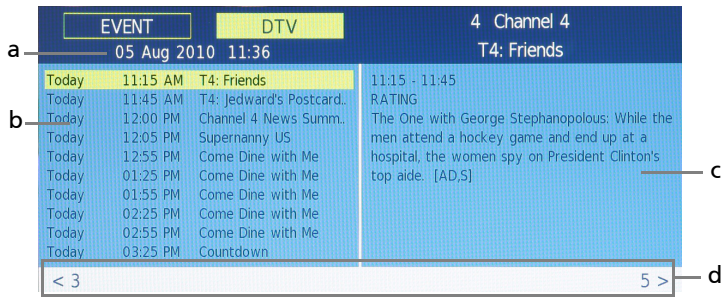

- a Information bar  
The top of the screen shows the type of signal being viewed and the current time; with the channel number, channel title and selected program name on the right.
- b Programme guide  
The section on the left shows the programme guide, with the start time and title. Use the up and down directional keys to select different programmes.
- c Programme information  
The section on the right shows information about the selected programme: the start and finish times, any age rating and a summary.
- d Channel navigation  
Use the left or right directional keys to switch to the previous or next channel. The bar across the bottom shows which channel will be shown.

## Navigating the EPG (for Digital TV mode)

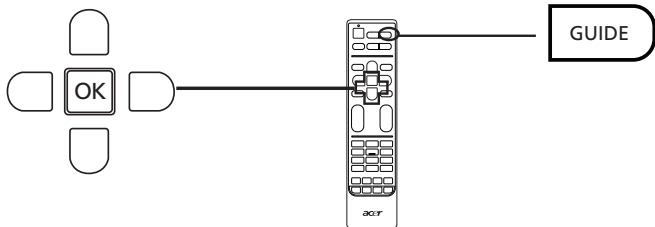


1		Press the <b>GUIDE</b> key on the remote control.
2		Use the directional keys to navigate around the EPG menu and press <b>OK</b> to select your highlighted option.

# OSD navigation

Many of the advanced settings and adjustments are available through using the OSD (onscreen display) menus, as shown in the example screenshot below.

Basic operations required to navigate these menus (Picture, Audio, Channel management, Settings and Advanced) are described in this section.

## Navigating the OSD with the remote control

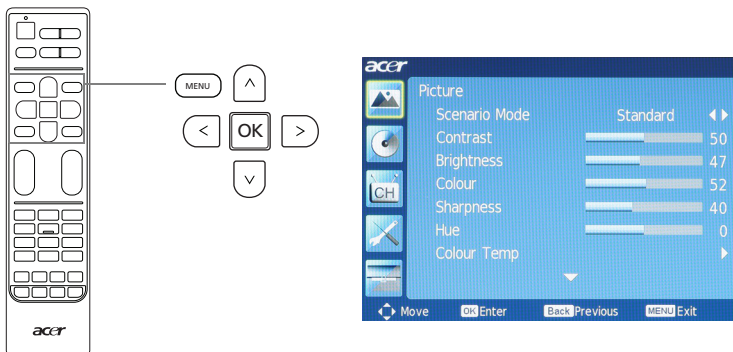

**Tip:** You can also interact with these menus using the right panel controls. Please see "Front and side panels" on page 5 for details.


There are five main OSD menus. These are: Picture, Audio, Channel management, Settings and Advanced. Use the following method to navigate these menus.		
1		Press the <b>MENU</b> button on the remote control or the <b>MENU</b> button on the control panel.
2		Select your desired menu by using the up and down <b>directional keys</b> to switch between the five menus. Press <b>OK</b> or the right directional key to enter a menu. Press <b>BACK</b> or the left directional key to return to the menus.
3		Use the <b>directional keys</b> to interact with the menu. The up /down directions will scroll through the menu options, while left/right will adjust the different settings (for example, in the Picture menu, settings such as brightness, contrast, etc.). Press <b>MENU</b> to exit.

# Adjusting the OSD settings

The OSD can be used for adjusting the settings of your LCD TV.


Press the MENU key to open the OSD. You can use the OSD to adjust the picture quality, audio settings, channel settings and general settings. For advanced settings, please refer to following page:

## Adjusting picture quality

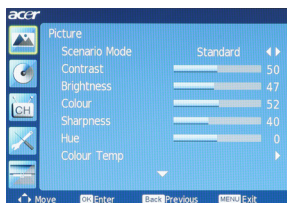


1. Press the **MENU** key to bring up the OSD.
2. Using the directional keys, select **Picture** from the OSD. Then navigate to the picture element you wish to adjust.
3. Use the left or right keys to adjust the sliding scales or select one of the preset scenario modes. Press **MENU** to save and exit.
4. The **Picture** menu can be used to adjust the current **Scenario Mode, Brightness, Contrast, Hue, Colour, Sharpness** and other image-related qualities.

## Adjusting audio settings

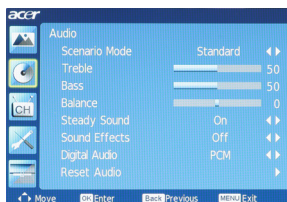


1. Press the **MENU** key to bring up the OSD.
2. Using the directional keys, select **Audio** from the onscreen display. Then navigate to the feature you wish to adjust.
3. Use the left or right keys to adjust the sliding scales or select one of the preset scenario modes. Press **MENU** to save and exit.
4. The **Audio** menu can also be used to adjust the the current **Scenario Mode, Treble, Bass, Balance, Steady Sound, Sound Effects** and other important soundrelated settings.

## Adjusting channel management

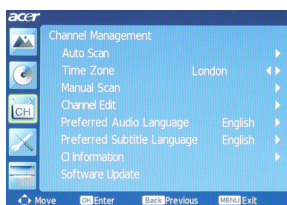


1. Press the **MENU** key to bring up the OSD.
2. Using the directional keys, select **Channel Management** from the OSD.
3. Use the directional keys to navigate the menus.
4. The **Channel management** menu can be used to adjust **Auto scan, Time Zone, Manual Scan, Channel Edit** and other important channel-related settings.

## Adjusting settings

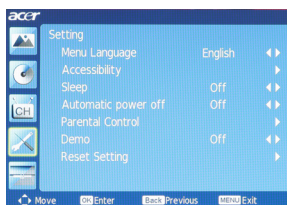

1. Press the **MENU** key to bring up the OSD.
2. Using the directional keys, select **Settings** from the OSD. Then navigate to the feature you wish to adjust.
3. The **Settings** menu can be used to adjust the screen **Menu Language, Accessibility, Sleep, Parental Control, Demo** and other important settings.

## Adjusting advanced settings

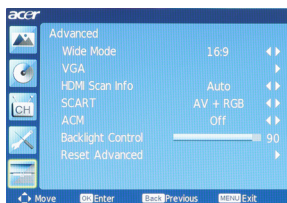

1. Press the **MENU** key to bring up the OSD.
2. Using the directional keys, select **Advanced** from the OSD. Then navigate to the feature you wish to adjust.
3. The **Advanced** menu can be used to adjust the **Wide Mode, HDMI Scan Info, SCART, ACM, Backlight Control** and other important settings.



.....

The options available on the OSD may vary depending on the TV signal source and model. Some digital options may not be available with an analog signal and vice versa.

.....

## Picture settings

Open the **Picture** menu as described in the OSD navigation section. This menu provides the following settings:

### Scenario mode

Scenario mode provides preset viewing modes designed to give you the best picture quality when watching a particular kind of programme. These provide preset values for brightness, contrast, hue colour and sharpness. There are pre-defined audio and video settings for optimal enjoyment of the following scenarios: Standard, Movie, Game, Sport, Concert, User.

Mode	Information
Standard	Standard mode allows you to watch your favourite channels with sharp, brilliant imagery via adaptive brightness and contrast adjustments, and listen to clear-sounding audio.
Movie	For comfortably enjoying movies at home, Movie mode displays dim scenes in clear detail; compensates for colour; and smoothly presents motion images. This is accomplished through optimal Gamma correction plus saturation, brightness and contrast adjustments. Movie mode makes the most of high-definition movie soundtracks.
Sport	Sport mode is suited for outdoor sports programmes, with accurate background depth and clear gradation between the bright, outdoor playing field and darker auditoriums. Sports mode also brilliantly enhances colours and presents swiftly moving pictures without residual images. All of this is achieved via specific Gamma corrections and saturation adjustments. Precise audio can be heard.
Concert	Concert mode places you in a virtual concert hall, opera house or other dim environment by means of adaptive brightness and contrast adjustments. Concert mode accentuates symphonic harmonies and the tenor audio range.
Game	Game mode carefully details the exquisite graphics of modern video games, providing lifelike entertainment while protecting your eyesight by adjusting brightness and contrast. What's more, Game mode provides a heightened audio experience.
User	User mode allows you to save your favourite video and audio settings.

### Contrast

Change the contrast of the image.

### Brightness

Change the brightness of the image.

### Colour

Change the colour depth of the image.

### Sharpness

Change the sharpness of the image.

## Hue

Change the hue of the image.

## Colour temp

This setting adjusts the colour temperature of the image. You can set it to Standard, Cold, User or Warm depending on your preference. With the User setting, you may change the colour values individually.

## Noise reduction

This setting filters noise from the image. You can set it to Auto, Low, Medium or High depending on your preference.

## Reset picture

Return all picture settings to default values, removing any changes.

## Audio settings

Open the Audio menu as described in the OSD navigation section. This menu provides the following settings:

### Scenario mode

Scenario mode provides preset audio modes designed to give you the best sound quality when listening to a particular kind of programme. These provide preset values for treble and bass. There are pre-defined audio and video settings for optimal enjoyment of the following scenarios: Standard, Movie, Game, Sport, Concert, User.

Mode	Information
Standard	Standard mode allows you to watch your favourite channels with sharp, brilliant imagery via adaptive brightness and contrast adjustments, and listen to clear-sounding audio.
Movie	For comfortably enjoying movies at home, Movie mode displays dim scenes in clear detail; compensates for colour; and smoothly presents motion images. This is accomplished through optimal Gamma correction plus saturation, brightness and contrast adjustments. Movie mode makes the most of high-definition movie soundtracks.
Sport	Sport mode is suited for outdoor sports programmes, with accurate background depth and clear gradation between the bright, outdoor playing field and darker auditoriums. Sports mode also brilliantly enhances colours and presents swiftly moving pictures without residual images. All of this is achieved via specific Gamma corrections and saturation adjustments. Precise audio can be heard.
Concert	Concert mode places you in a virtual concert hall, opera house or other dim environment by means of adaptive brightness and contrast adjustments. Concert mode accentuates symphonic harmonies and the tenor audio range.
Game	Game mode carefully details the exquisite graphics of modern video games, providing lifelike entertainment while protecting your eyesight by adjusting brightness and contrast. What's more, Game mode provides a heightened audio experience.
User	User mode allows you to save your favourite video and audio settings.

## Treble

Boost or reduce high audio tones.

## Bass

Boost or reduce low audio tones.

## Balance

Change the balance between the left and right speakers.

## Steady sound

This function prevents sudden changes in the audio output level. If this function is On, volume levels will be consistent when switching between input sources and changing channels.

## Sound effects

Turn Sound Effects on to add virtual surround sound. If Sound Effects are on, Treble and Bass settings are not available.

## Digital Audio

This allows you to set the type of Digital audio signal that is used.

## Reset audio

Return all audio settings to default values, removing any changes.

## Channel management

Open the **Channel Management** menu as described in the OSD navigation section. This menu provides the following settings:

### Auto scan

Auto scan allows you to scan for new or deleted channels. If you completed the setup wizard the first time you turned on your TV, all available channels are listed.

To scan again, select the Auto Scan setting, and then your country from the Country List. Use the directional keys to select Start and press the OK key.

Wait until the scan has finished; this will take several minutes.

### Time zone

If there are multiple time zones in the country selection, set your local time zone here. In countries with only one time zone this will be set automatically.

### Digital manual scan

You can manually add a digital channel by searching in specific UHF channels. Use the left or right directional keys to change the channel being scanned.

### Analog manual scan

You can manually add an analog channel by adjusting the settings here. Use the up or down directional keys to select a setting to change, use the left or right directional keys to change the setting. You may set: the analog channel where the signal will be stored, the encoding system, which direction to search through analog frequencies, fine tune to a specific frequency and if this channel will be skipped in the channel list.

Use the left or right directional keys to change the channel being scanned.

## Channel edit

You can edit the detected channels, to change how they are displayed in the channel list. Use the up or down directional keys to select a channel, you may then use the coloured keys to perform different actions:

- **Delete (red):** You can remove a channel from the Channel List. Press the red key once to mark a channel for deletion, then press the red key again. Finally select Yes and press the **OK** key to remove the channel. Press the **BACK** or **MENU** key to cancel.
- **Rename (green):** You can rename an analog channel (not digital channel as the names are assigned by the broadcaster). Press the green key, then use the left or right directional keys to select the character to change, then use the up or down directional keys to change the letter. Names are limited to 5 characters. Press the green key to confirm or **Menu** to cancel.
- **Move (yellow):** You can move an analog channel (not digital channel as the order is assigned by the broadcaster). Press the yellow key, then use the up or down directional keys to move the channel up or down through the channel list. Press **OK** to confirm or **Menu** to cancel.
- **Skip (blue):** Press the blue key to select channels you want to skip. These channels will automatically be skipped when the **OK** key is used to select channels later on. However, you can still manually select these channels.

## Preferred audio language

If multiple audio streams are available, the TV will attempt to use the language set here. The current setting is displayed in the Information screen (press the **DISPLAY** key).

## Preferred subtitle language

If multiple subtitles are available, the TV will display the language selected in this option, if it is available.

When watching TV, press the **SUBTITLE** key to see a list of available subtitles.

## CI information

This setting shows information about the CI interface, if a CI card is being used.


# Settings

Open the **Settings** menu as described in the OSD navigation section. This menu provides the following settings:

## Parental control

Parental control is a handy feature that can block chosen TV sources.

Parental control allows you to enter a password and effectively stop anyone without the password from watching TV. Three options are available: Channel Block, Age Rating and Change Password.

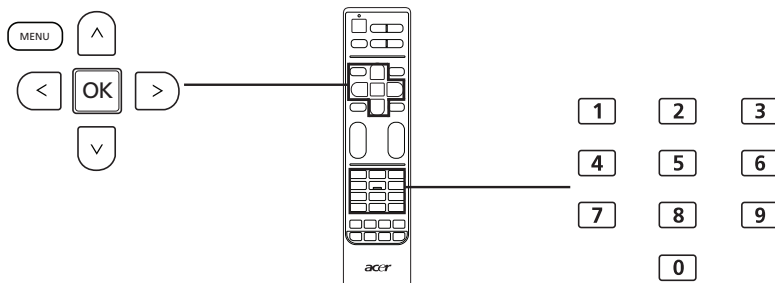

Navigate to the Parental Control setting and press OK. Enter your Password (see below), then select one of the three options.

## Channel block

Press OK to see the list of channels. Use the up and down directional keys to select the channel to block and then press the green key. A padlock symbol is displayed next to blocked channels. Press the green key again to unblock a channel.

When viewing channels, if a blocked channel is selected the TV will ask for your password. Enter your password to view the channel.

## Age rating (for digital TV)

Most digital TV allows you to block content according to rating systems. The rating system used is dependent on region, and is only available on digital channels. Analog channels will not be blocked with this option.

The settings cover from 4 to 18 years of age. When you lock a category, the categories for that age and younger will be blocked.

## Change password

You can change the default password to a 4-digit code of your choice. If you are using the parental controls, then we recommend you change the password periodically.



.....  
 The default password for this TV is "0000." First enter "0000" when you want to change the password. If you forget your password, please enter 6163 to reset.  
 .....

## Menu language

Set the language displayed for the OSD menus.

## Accessibility

You can choose between normal subtitles and subtitles for the hearing impaired, when these are available.

## Sleep

You can set a time delay, after which the TV will turn off. The delay can be 15, 30, 45, 60, 90 or 120 minutes.

## Automatic power off

If Automatic Power Off is active, if the TV on for four hours without any channel changes or other activity, it will turn off. A warning message is displayed one minute before the TV turns off.

## Demo

Displays a banner highlighting the television's key features.

## Reset settings

Return all settings to default values, removing any changes.

## Advanced

Open the **Advanced** menu as described in the OSD navigation section. This menu provides the following settings:

### Advanced picture adjust

Select this option to adjust the backlight brightness, or activate ACM (Adaptive Contrast Management) to automatically vary the brightness depending on the image on the screen.

### Wide mode

Press to toggle scaling mode between 4:3, 16:9 and different Letterbox modes (1, 2, 3). Wide Detect is also available when viewing digital TV, HDMI and SCART signals.

### VGA

This section provides horizontal and vertical settings that adjust the position of the image if you are using a VGA connection. Other settings provide advanced adjustments that may be needed, depending on the VGA signal.

### HDMI scan info

Use this setting to adjust the size of the image if you are using a HDMI connection.

### SCART

A SCART connection can send AV, S-video, or both signals. Use this setting to select the correct signal, or the signal that provides the best quality.

### Reset advanced

Return all advanced settings to default values, removing any changes.

# Troubleshooting

---

Before you call the Acer service center, please check the following items:

Here is a list of possible situations that may arise during the use of your LCD TV. Easy answers and solutions are provided for each.

## There is no picture or sound

- Make sure the power cord is properly inserted in the power outlet.
- Make sure the input mode is correctly set by your selected input.
- Make sure the antenna at the rear of the TV is properly connected.
- Make sure the main power switch is turned on.
- Make sure the volume is not set to minimum or the sound is not set to mute.
- Make sure the headphones are not connected.
- Reception other than those of broadcasting stations can be considered.

## Picture is not clear

- Make sure the antenna cable is properly connected.
- Consider whether your TV signal is being properly received.
- Poor picture quality can occur due to a VHS camera, camcorder, or other peripheral being connected at the same time. Switch off one of the other peripherals.
- The 'ghost' or double image may be caused by obstruction to the antenna due to high-rise buildings or hills. Using a highly directional antenna may improve the picture quality.
- The horizontal dotted lines shown on the pictures may be caused by electrical interference, e.g., hair dryer, nearby neon lights, etc. Turn off or remove these.

## Picture is too dark, too light or tinted

- Check the colour adjustment.
- Check the brightness setting.
- Check the sharpness function.
- The fluorescent lamp may have reached the end of its service life.

## Remote control does not work

- Check the batteries of the remote control.
- Make sure the remote sensor window is not under strong fluorescent lighting.
- Try to clean the remote control sensor lens on the TV with a soft cloth.
- Use the buttons (hotkeys) on the TV before the remote control works.

If the above suggestions do not solve your technical issue, please refer to the warranty card for service information.

# Product specifications

Model	AT1919MF/AT1926ML	AT2219MF/AT2226ML
Panel spec		
Resolution (pixels)	1366 x 768	1920 x 1080
Contrast Ratio (typ.)	600:1	
Dynamic Contrast Ratio (max.)	30000:1	
Response (typ.)	5 ms	
Power supply		
Input	100 to 240 V AC (50~60 Hz)	
Max. power consumption	40 W	46 W
Power saving	< 0.5 W	
Mechanical		
Dimensions (W x H x D mm)	451.4 x 352 x 160.43	512.2 x 393.2 x 169.4
Weight (kg)	3.4	4.1
Weight (lbs.)	7.49	9.03
Analog TV system		
Colour system	PAL, SECAM	
Sound system	B/G/D/K/I/L	
Stereo system	NICAM/A2	
Subtitle	Teletext 1.5 (1000 pages)	
Digital TV system		
Digital TV standard	DVB-T HD	
Sound system	ISO11172-3 layer1 & layer2	
Stereo system	PCM / MPEG ( Layer I & II ) Stereo 32 / 44.1 / 48 KHz	
Frequency	7/8 MHz	
Resolution	1080P	
Terminal		
Analog/Digital Tuner In	Hybrid	
SCART	CVBS (In/Out), RGB (In), Audio R/L (In/Out), ATV/DTV	
Component in	YPbPr, Audio (R/L)	
AV-in	AV-in CVBS, S Video, Audio (R/L)	
HDMI	Yes (HDMI 1.3)	
PC D-sub in	Yes	
PC audio in	Yes	
SPDIF out	Yes (Coxial)	
Headphone out	Yes	
USB Port	Yes	

Model	AT1919MF/AT1926ML	AT2219MF/AT2226ML
Resolution		
HDMI	SD (576i/480i/480p) HD (720p/1080i/1080p)	
Audio system		
Speakers	3 W + 3 W	

PC Input Signal Reference Chart

AT1919MF/AT1926ML

	Resolution	Horizontal Freq. (kHz)	Vertical Freq. (Hz)	Standard
1	640 x 480	31.5	60.0	VGA
2	640 x 480	37.9	72.8	VGA
3	640 x 480	37.5	75.0	VGA
4	640 x 480	35.0	66.7	MAC
5	720 x 400	31.5	70.1	VESA
6	800 x 600	35.2	56.3	SVGA
7	800 x 600	37.9	60.3	SVGA
8	800 x 600	48.1	72.2	SVGA
9	800 x 600	46.9	75.0	SVGA
10	832 x 624	49.7	74.6	MAC
11	1024 x 768	48.4	60.0	XGA
12	1024 x 768	56.5	70.1	XGA
13	1024 x 768	60.0	75.0	XGA
14	1280 x 720	45.0	59.9	VESA
15	1366 x 768	47.7	59.7	WXGA

	Resolution	Horizontal Freq. (kHz)	Vertical Freq. (Hz)	Standard
1	640x480	31.5	59.9	1GA
2	640x480	37.9	72.8	
3	640x480	37.5	75.0	
4	640x480	35.0	66.7	MAC
5	720x400	31.5	70.1	VESA
6	800x600	35.2	56.3	SVGA
7	800x600	37.9	60.3	
8	800x600	48.1	72.2	
9	800x600	46.9	75.0	
10	832x624	49.7	74.6	
11	1024x768	48.4	60.0	XGA
12	1024x768	56.5	70.1	
13	1024x768	60.0	75.0	
14	1280x720	45.0	59.9	
15	1152x864	67.5	75.0	
16	1280x800	49.7	59.8	
17	1360x768	47.7	60.0	
18	1366x768	47.7	59.8	
19	1600x900	56.0	59.9	
20	1600x900	70.5	74.9	
21	1280x1024	64.0	60.0	SXGA
22	1400x1050	65.3	60.0	SXGA+
23	1680x1050	65.3	60.0	WSXGA+
24	1920x1080	67.5	60.0	
25	1920x1080	66.6	59.9	



- .....
1. The PC input does not support Sync on Green or Composite Sync.
  2. The PC input does not support interlaced signals.
- .....