

Acer LCD TV



AT2058ML
AT2358ML
AT2358MWL
User Guide

Contents

Important safety instructions	3
Disposal instructions	4
Your LCD TV overview	5
Front and side panels	5
Rear panel view	6
Remote control	7
General keys	7
Teletext and Multimedia	8
Basic connections	9
Connecting the power cord	9
Setting up the remote control	9
Enjoying analog and digital TV	9
Connecting an antenna/cable	9
Getting started watching your TV	10
Connecting external audio/video devices	11
Connecting a DVD, VCR, STB or audio/video equipment	11
Connecting a camera, camcorder or game console	12
Connecting a PC or notebook computer	13
Connecting a USB storage device	13
Selecting the input source	14
Playing multimedia files from a USB storage device	15
Connecting a USB storage device	15
Navigating in the multimedia screen	15
Channel controls	18
Channel list	18
Favourite channel list	19
Programme information	20
Electronic programme guide	20
Time shifting (digital channels only)	22
Record programs to a USB storage device (digital channels only)	22
OSD navigation	23
Navigating the OSD with the remote control	23
Adjusting the OSD settings	24
OSD menus	26
Picture settings	26
Sound settings	28
TV settings	29
Country	29
Settings	30
Parental	31
Troubleshooting	33
PC Input Signal Reference Chart	34
Product specifications	35
Wall mount preparation / removing the base	37

© 2010 All Rights Reserved.
Acer LCD TV User Guide
Original Issue: 07/2010

Model Number: _____
Serial Number: _____
Purchase Date: _____
Place of Purchase: _____

	HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
	DVB is a registered trademark of the DVB Project.

Important safety instructions

Read these instructions carefully. Please put them somewhere safe for future reference.

1. Only use attachments/accessories specified by the manufacturer.
2. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.
3. Unplug this apparatus during lightning storms or when unused for long periods of time.
4. Do not install this equipment in a confined space such a book case or similar unit.
5. No naked flame sources, such as lighted candles, should be placed on the apparatus.
6. If the remote control will not to be used for a long time, remove the batteries. Use the remote control carefully. Do not drop the remote control on the floor. Keep it away from moisture, direct sunlight, and high temperatures.
7. Used or discharged batteries must be properly disposed of or recycled in compliance with all applicable laws. For detailed information, contact your local solid waste disposal authority.
8. Follow all warnings and instructions marked on the product.
9. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
10. Do not use this product near water.
11. Do not place this product on an unstable cart, stand or table. The product may fall, sustaining serious damage.
12. Slots and openings are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat register or in a built-in installation unless proper ventilation is provided.
13. This product should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
14. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be stepped on.
15. If an extension cord is used with this product, make sure that the total ampere rating of the equipment plugged into the extension cord does not exceed the extension cord ampere rating. Also, make sure that the total rating of all products plugged into the wall outlet does not exceed the fuse rating.
16. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short-out parts, which could result in a fire or electric shock. Never spill liquid of any kind on the product.
17. Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.
18. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:



- a. When the power cord or plug is damaged or frayed.
 - b. If liquid has been spilled into the product.
 - c. If the product has been exposed to rain or water.
 - d. If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls could result in damage; extensive work by a qualified technician might then be required to restore the product to normal condition.
 - e. If the product has been dropped or the case has been damaged.
 - f. If the product exhibits a distinct change in performance, indicating a need for service.
- 19 Use only the proper type of power supply cord set (provided in your accessories box) for this unit. Always disconnect the power cord from the wall outlet before servicing or disassembling this equipment.
 - 20 Do not overload an electrical AC outlet, power strip, or convenience receptical. The overall system load must not exceed 80% of the branch circuit rating. If power strips are used, the load should not exceed 80% of the power strip input rating.
 - 21 Some products are equipped with a three-wire electrical grounding-type plug that has a third pin for grounding. This plug only fits into a grounded electrical outlet. This is a safety feature. Make sure the AC outlet is properly grounded. Do not defeat the safety purpose of the grounding-type plug by trying to insert it into a non-grounded outlet. If you cannot insert the plug into the outlet, contact your electrician to replace the obsolete outlet.
 - 22 Do not use this LCD TV in the workplace in accordance with BildscharbV, and maintain ample distance from it when watching. Watching a big-screen TV too close can cause eyestrain.
 - 23 This TV is designed for home entertainment purposes only. Make sure there is sufficient distance between you and the TV when you are viewing content to avoid harming your eyes.



The grounding pin is an important safety feature. It is possible to receive an electric shock from a system that is not properly grounded.



The grounding pin is also providing good immunity ability against unexpected noise that interferes performance of this product and is produced by other nearby electrical devices.

Disposal instructions

Do not throw this electronic device into the rubbish bin / container when discarding. To minimize pollution and ensure utmost protection of the global environment, please recycle.

For more information regarding WEEE, please refer to
<http://global.acer.com/about/environmental.htm>

Соответствует сертификатам, обязательным в РФ
 (Compliant with Russian regulatory certification)




ME61

Your LCD TV overview

English

Front and side panels

1	Common interface
2	AV in-COMPOSITE + Audio L/R
3	USB port
4	Earphone
5	HDMI port

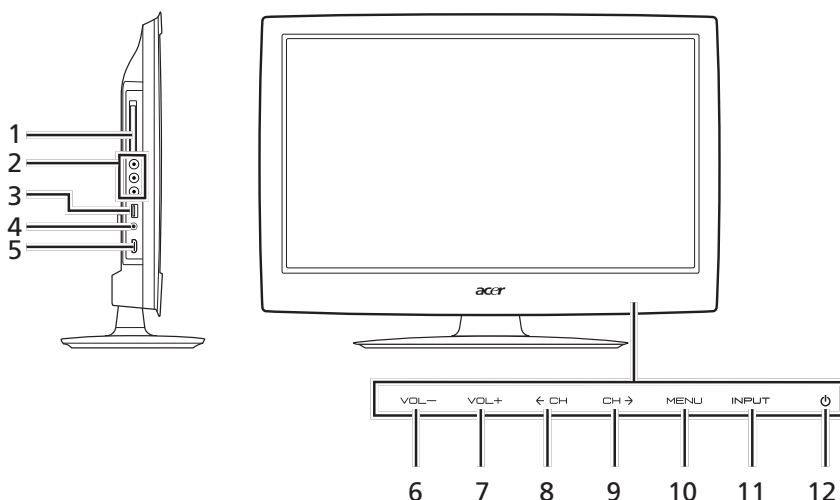


6	Volume down	When the OSD is on, functions the same as the Left arrow.
7	Volume up	When the OSD is on, functions the same as the Right arrow.
8	Channel down	When the OSD is on, functions the same as the Down arrow.
9	Channel up	When the OSD is on, functions the same as the Up arrow.
10	Menu key	Turns the OSD menu ON and OFF.
11	Source (Input) key	Press to change input source. When the OSD is on, press this button to confirm selection.
12	Power button	



The control buttons are touch-sensitive. Simply touch the area to activate the function.


Rear panel view

1	DC-in	5	SPDIF out
2	HDMI port	6	SCART
3	VGA-in + PC Audio-in	7	AV out-CVBS + Audio L/R
4	AV in-COMPONENT + Audio L/R	8	Tuner (hybrid)

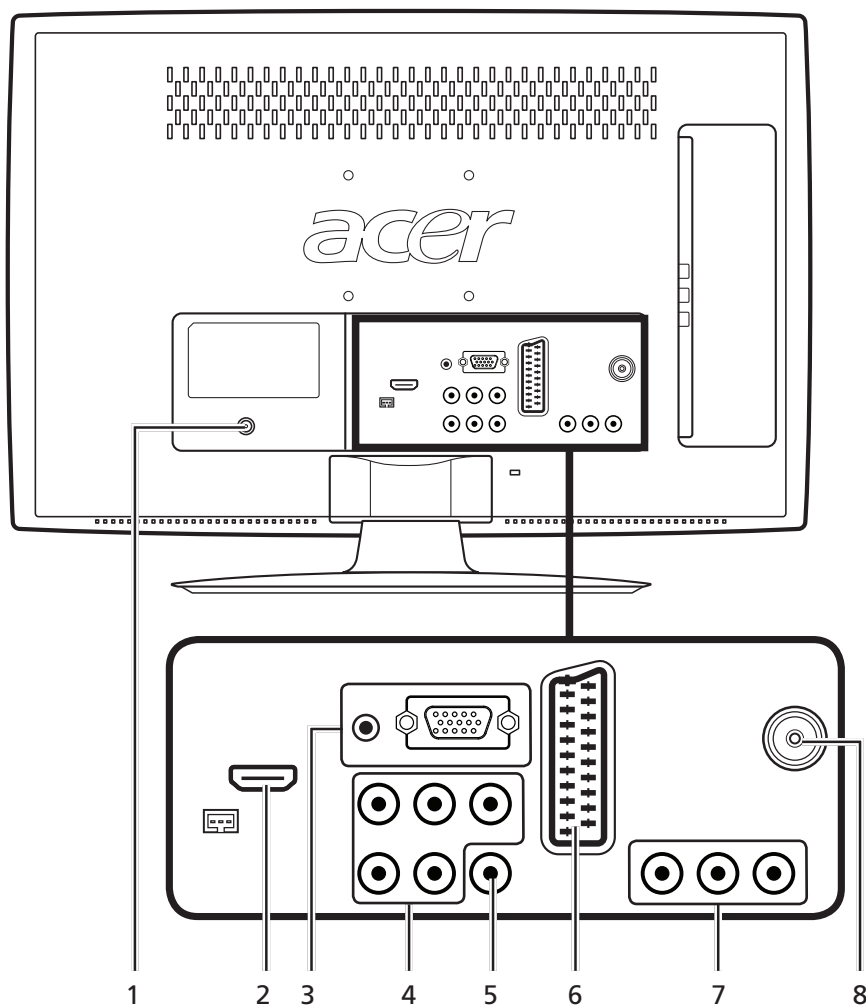

Remote control


General keys

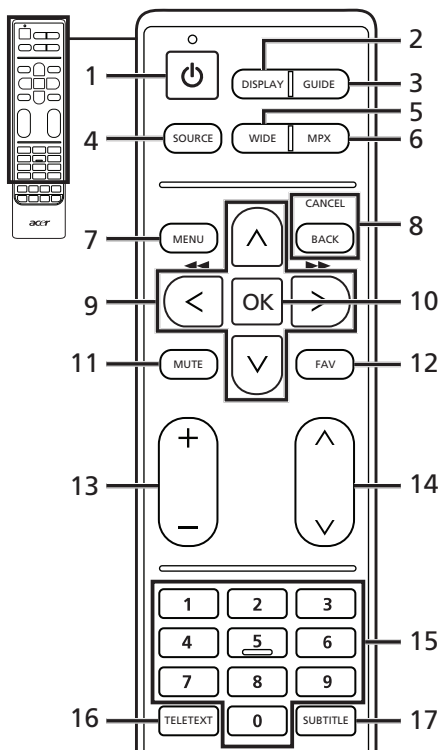

- 1 POWER**
Press to turn your TV on/off.
- 2 DISPLAY**
Press to display or change input/channel information (dependent on input/source type).
- 3 GUIDE**
Press to launch Electronic Programme Guide (EPG) mode (Digital TV mode only). See page 34.
- 4 SOURCE**
(TV/YPbPr/AV/SCART/PC/HDMI/USB)
Press to select correct input mode.

- 5 WIDE**
Press to toggle scaling mode between Auto, Normal, Zoom1, Zoom2 and Wide modes.
- 6 MPX**
Press to display and select the audio signal.
- 7 MENU**
Press to open or close the Menu.
- 8 Back/CANCEL**
Press to back to previous Menu.
- 9 Directional keys**
On certain models, the left and right directional keys also function as rewind and fast-forward keys when viewing multimedia files.
- 10 OK/ENTER/CH LIST**
ENTER: Press to confirm channel number selection.
CH LIST: Press to launch the channel list. See page 33.
- 11 MUTE**
Press to toggle audio on and off.
- 12 FAV**
Press to display the favorite channel list.
- 13 VOL (+/-)**
Press to increase or decrease the volume.
- 14 CH (up/down)**
Press to sequentially select the TV channel.
- 15 Number keys.**
- 16 TELETEXT/MIX**
Press to switch from TV/AV to Teletext mode.
Press again to overlay teletext page on the TV image.
- 17 SUBTITLE**
Press to view subtitles on the screen.

Teletext and Multimedia

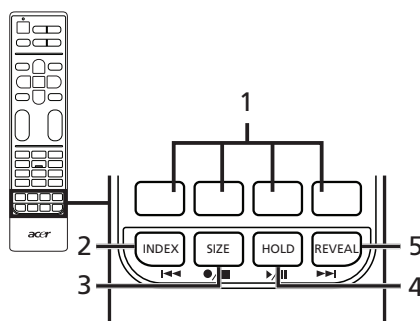

Teletext

- 1 Colour buttons (R/G/Y/B)**
Operates corresponding button on the teletext page.
- 2 INDEX**
Press to go to the index page.
- 3 SIZE**
Press once to zoom teletext page to 2X.
Press again to resume.
- 4 HOLD**
Press to pause the current teletext page.
- 5 REVEAL**
Press to reveal hidden teletext information.

Multimedia


- 1 Colour buttons (R/G/Y/B)**
No function when using the multimedia interface.
- 2 Previous Track**
Press to go to the beginning of a track, or the previous track.
- 3 Stop**
Press to stop playback.
On certain televisions the remote control can start recording programmes. This feature is not available on your television.
- 4 Play/Pause**
Press to start playing the selected track, or pause a track if it is already playing.
- 5 Next track**
Press to skip to the next track if multiple tracks have been selected.
- 6** You may use the left and right directional buttons to advance or rewind in a track. Press the button again to increase how fast the track advances (x2/x4/x8/x16).
Press the Play/Pause button to resume playback.

The left and right directional keys also function as rewind and fast-forward keys when viewing multimedia files.

Basic connections

Connecting the power cord

- 1 Connect the AC cord into the AC input on the back of the set.
- 2 Connect the plug to the wall outlet as shown.

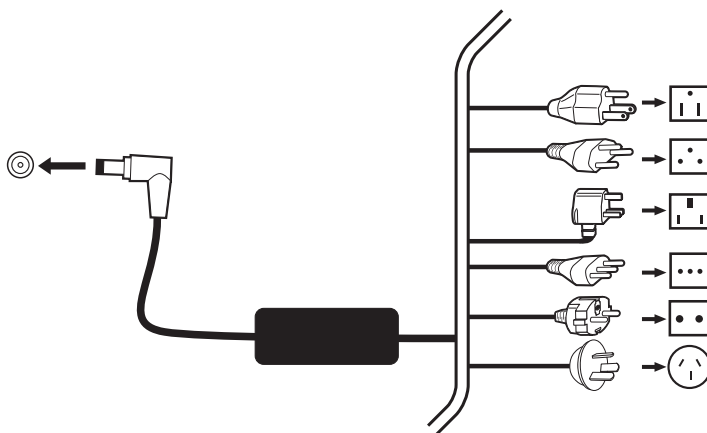


Setting up the remote control

- 1 Open the cover on the bottom of the remote unit.
- 2 Insert two AA batteries (supplied) to match the polarity indicated inside the battery compartment.



Enjoying analog and digital TV

Connecting an antenna/cable

Connect the antenna cable to the appropriate antenna terminal on the back of the TV set as shown below.

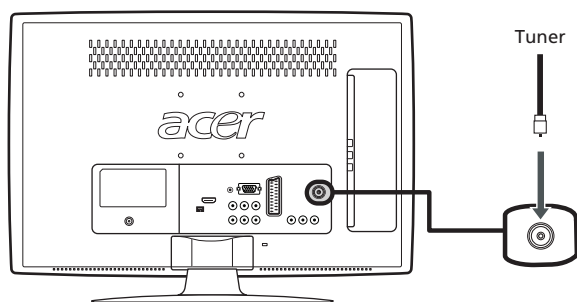

Getting started watching your TV

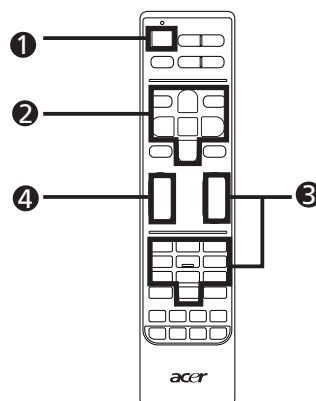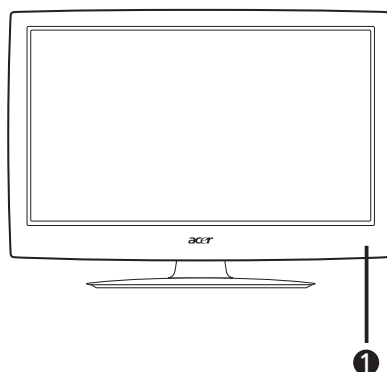

1 Power

- a. Turn on the power switch.
- b. Press the power button or channel up/down button on the remote control.

2 Installation Guide

The first time you switch on the TV, you will be asked to select the language and scan for channels.

Press the **OK** key to begin the setup process.



You can also adjust these settings using the front control panel. Please see "Front panel view" on page 8 for details.

- Step 1. Select the setup language you prefer.
- Step 2. Please select the correct country for signal reception.
- Step 3. Select **Home** mode.
- Step 4. Ensure that your co-axial cables are connected correctly before proceeding.
- Step 5. Scan for digital channels and analog channels.
- Step 6. Setup is now complete. You are ready to begin watching TV.

3 Changing channels

- a. Press 0 - 9 on the remote control to select a channel. The channel changes after 2 seconds. Press **OK** to select the channel immediately.
- b. Pressing the channel (**CH**) up / down button on the remote control will also change the channel.

4 Adjusting the volume

Adjust the volume level using the (**VOL**) up/down button on the remote control.




Setup may vary due to local broadcast differences.

Connecting external audio/video devices

Connecting a DVD, VCR, STB or audio/video equipment


Connect your DVD player, VCR or audio/video equipment using the SCART port located at the rear of your LCD TV as shown below.

Source-in

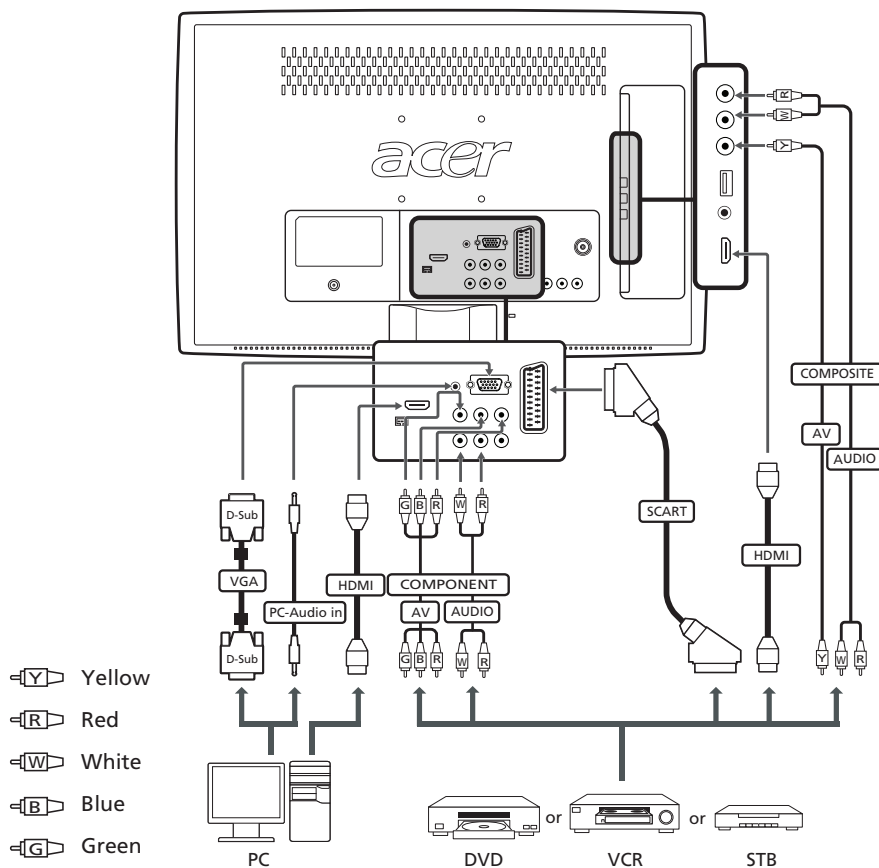


* Acer recommends the following priority for connection types:
HDMI -> COMPONENT -> SCART -> Composite.

TV-out

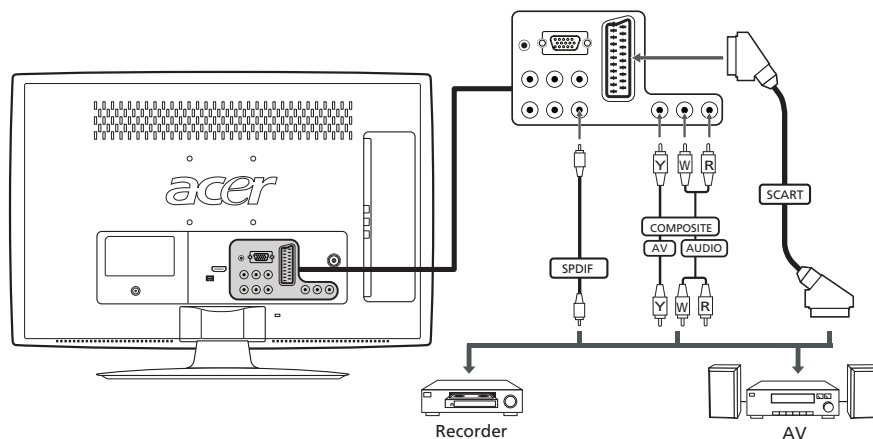


Connecting a camera, camcorder or game console

Connect your camera or camcorder to the video/audio ports on the left of the TV set as shown below.

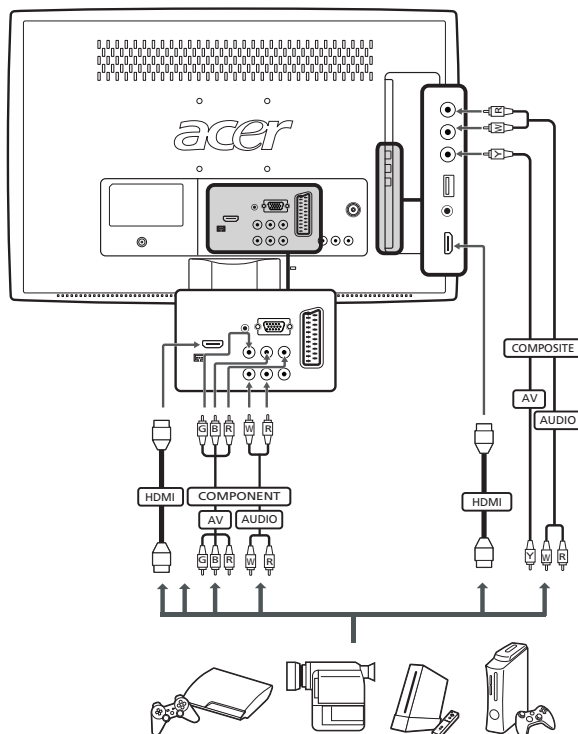

Connecting a PC or notebook computer


To display PC output on your TV, connect your PC or notebook computer to the TV as shown below.

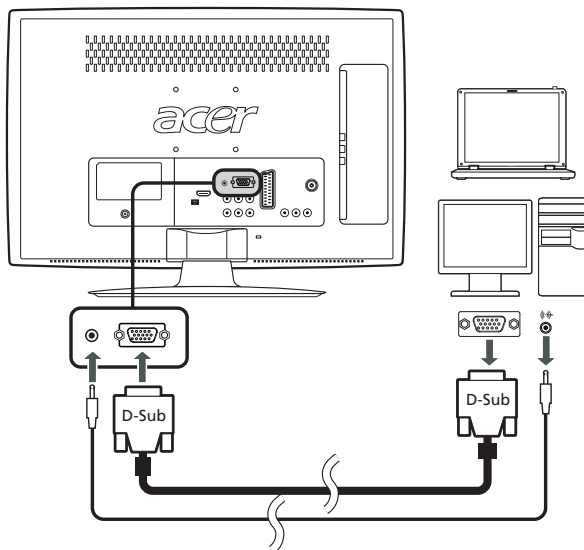

For VGA connections, Acer recommends setting your PC's external monitor resolution to 1920 x 1080 pixels @ 60 Hz refresh rate.

Connecting a USB storage device


To display multimedia content on your TV, connect the USB device to the TV as shown below.

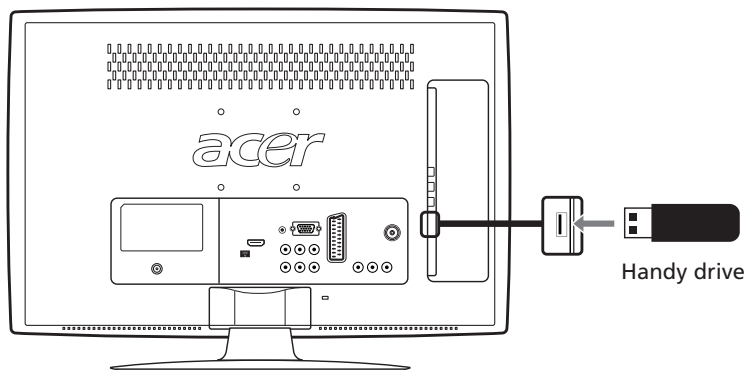

Selecting the input source

Once you have connected your antenna or external equipment to the TV, you need to select the correct input source.


Press the **SOURCE** button on the remote control to select the correct input source (TV/YPbPr/AV/SCART/PC/HDMI/USB).

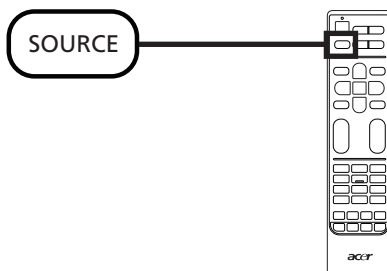

Playing multimedia files from a USB storage device


Connecting a USB storage device

Connect the USB storage device to the USB port on your computer.
Press the Source button on the remote control and select USB.

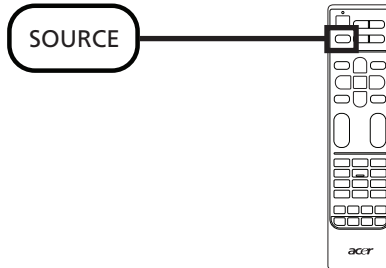

Navigating in the multimedia screen

There are three main areas of the multimedia screen:

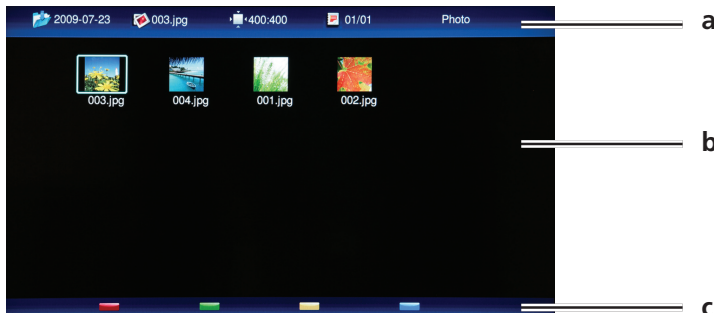

a. Status bar

The top of the screen shows the type of media being viewed: **Photo**, **Music** or **Movie**, with some information about the selected file. Press the **MENU** button and select **Media Type** to change the type of media being shown: Select **Photo**, **Music** or **Video** and press the **OK** button.

Sort	Photo
Media Type	Music
Thumbnail Size	Video

b. Navigation menu

The middle of the screen shows the contents of the USB device. Use the directional keys and press **OK** to open a file or folder.



Note: Only files that match the selected media type are displayed.

Press the **BACK** button to return to the folder that contains the folder being viewed.

c. File option bar


The bottom of the screen shows addition options for the file being viewed, such as volume level or special functions for the coloured buttons on the remote control.



Note: When playing a movie or viewing photos, the top and bottom bars will disappear after a short delay.

Photo files

Select a photo and press **OK** to open it. Photo files will be shown in a slideshow, each photo will be displayed for a short duration. Press **Play/Pause** to pause the display on a specific photo.

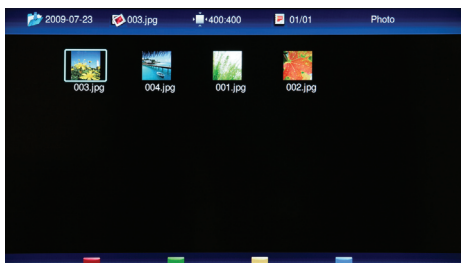

Press **Previous ('Index')** or **Next ('Reveal')** to return to the previous photo, or to view the next photo.

Press **BACK** or return to the folder navigation list

Music files

Select a music file and press **OK** to open it. Press **Play/Pause** to pause a track.




Press **Previous ('Index')** or **Next ('Reveal')** to skip to the previous track or advance to the next track in the folder.

Press and hold the left and right directional buttons to advance or rewind in a track. Press **BACK** to return to the folder navigation list and preview screen.

Movie files

Select a movie file and press **OK** to open it. Press **Play/Pause** to pause a movie.

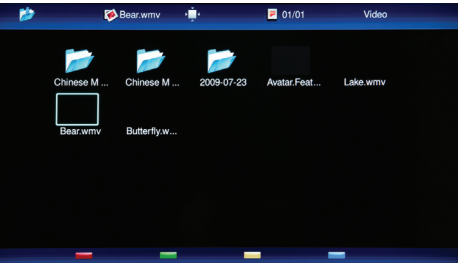

English

Press **Previous ('Index')** or **Next ('Reveal')** to skip to the previous movie or advance to the next movie in the folder.

You may use the left and right directional buttons to advance or rewind in a movie. Press the button again to increase how fast the track advances or rewinds (x2/x4/x8/x16).

Press **BACK** to return to the folder navigation list and preview screen.

Leaving multimedia storage display

Simply stop playback and press Source to select a different source type.




Warning: Do not remove the USB storage device while a media file is playing. Stop playback and switch to a different source before removing the device from the USB port.

Channel controls

Channel list

Channel list allows you to quickly find the TV channel you are searching for.

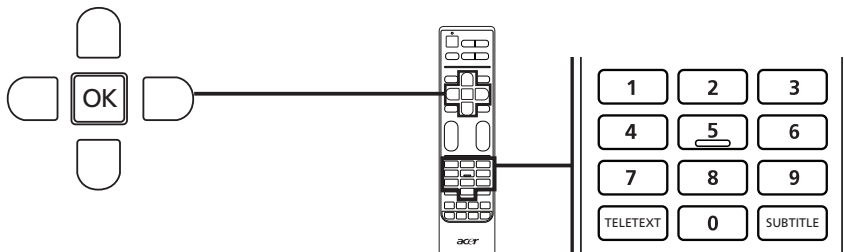
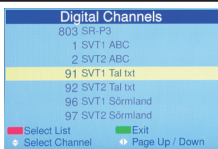




To open the channel list feature:		
1		Press the OK key on the remote control. This will bring up the channel list menu.
2		The current channel will be highlighted.
3		<p>Use the directional keys to navigate the list and select the channel you wish to watch.</p> <p>Use the red key to switch between the digital and analogue channel lists.</p> <p>Use the green key to exit the list.</p>

Favourite channel list


The favourite channel list allows you to store your favourite TV channels and flick between them at the touch of a button.

To set a favourite channel, follow the steps described on this page.

Storing favourite channels		
1		Press the FAV key on the remote control. This will bring up the favourite channel list.
2		The Favourite list will be shown. Press OK to select, delete or add a favourite channel.
3		Press the BACK key on the remote control to exit.
Viewing your favourite channels		
		On the remote control, if you press the FAV key, the TV will display a list of favourite TV channels. Use the up or down directional keys to select a channel, and then press OK .

Programme information

Press the **DISPLAY** key to see information about the current programme (if available).

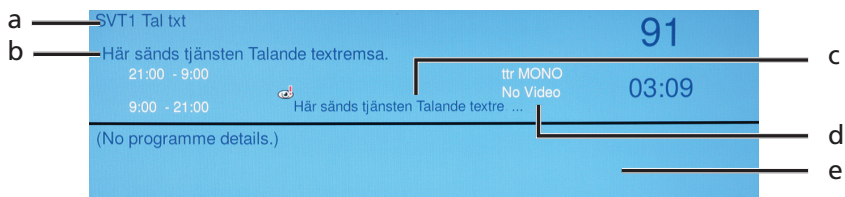


- a. Programme title
- b. Programme schedule
- c. Subtitle
- d. Audio language
- e. Programme summary

If 'Subtitle' is displayed press the **SUBTITLE** key to see a list of available subtitles.

Electronic programme guide

The electronic programme guide (EPG) is an onscreen service available on digital and cable TV that provides information about scheduled broadcast programmes on all digital channels by time, title and channel.

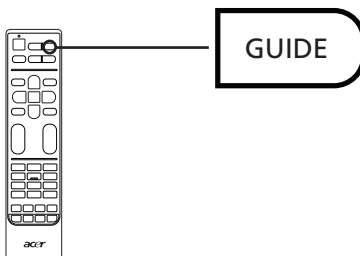

Guide screen

There are four main areas of the EPG screen:



English


The top of the screen shows the type of signal being viewed and the current time; with the channel number, channel title and selected program name on the right.

The section on the left shows all names for digital channels.

The section on the right shows information about programs for the selected channel: the start and finish times, any age rating and a summary.

Use the up or down directional keys to switch to the previous or next channel.

Navigating the EPG (for Digital TV mode)

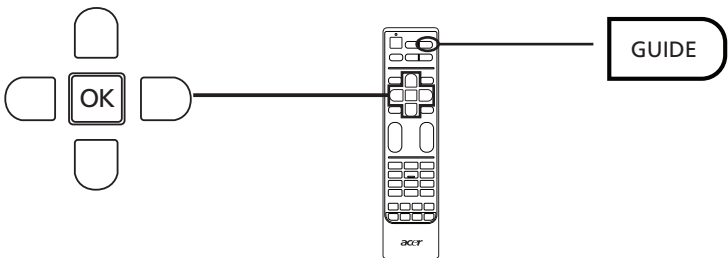

1		Press the GUIDE key on the remote control.
2		Use the directional keys to navigate around the EPG menu and press OK to select your highlighted option.

Time shifting (digital channels only)

Your TV allows you to temporarily store ('time shift') a program to a USB storage device (digital channels only); this allows you to pause the program, and later resume playback from that point.

Step 1. Connect a USB storage device to the USB port on your TV.

Step 2. While viewing a digital TV channel, press **PAUSE** to start the time shift function. If the USB storage device has not been configured for use with your TV, select **Auto** in the window that is displayed.

Step 3. Use left and right direction keys to rewind and fast-forward the time-shifted program.

Step 4. Press **BACK** to disable time shifting.



Note: The USB storage device must have at least one gigabyte (GB) of free space to store time shifting information. It is recommended you use an empty USB device.

If a Sleep timer had been set before activating the time shift function, the timer will be suspended.



Warning: Do not remove the USB storage device while time shifting is active. Disable time shifting before removing the device from the USB port.



Note: 180 minutes of 480i content, or 30 minutes of 1080i content, requires approximately four gigabytes (GB) of memory. The time shift function cannot store more than four gigabytes of time shift information. Once four gigabytes of data has been stored, the time shift function will delete the stored data and restart storing content. This occurs even if more storage is available.

Record programs to a USB storage device (digital channels only)

Your TV allows you to record digital TV programs to a USB storage device.

Step 1. Connect a USB storage device to the USB port on your TV.

Step 2. While viewing a digital TV channel, press **STOP/REC** to start recording the program. A confirmation message will be displayed for a short duration.

Step 3. A progress indicator in the lower-left corner of the screen shows the duration of the recording.

Step 4. Press **STOP/REC** again to stop recording the program.

Step 5. Use the multimedia player to view your recorded programs (see "Playing multimedia files from a USB storage device"). Recorded files are stored in the "PVR" folder.




Warning: Some USB storage devices may not support the time shifting or recording functions. Please use a different storage device.

OSD navigation

Many of the advanced settings and adjustments are available through using the OSD (onscreen display) menus, as shown in the example screenshot below.

Basic operations required to navigate these menus (Picture, Audio, Channel management, Settings and Advanced) are described in this section.

Navigating the OSD with the remote control

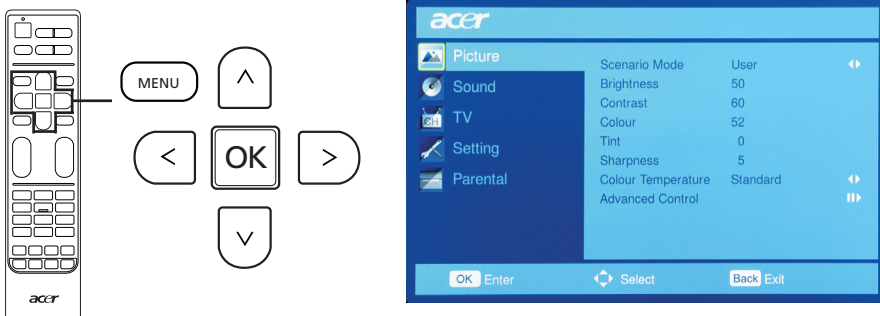

You can also interact with these menus using the right panel controls. Please see "Front panel view" on page 5 for details.

There are five main OSD menus. These are: Picture, Audio, Channel management, Settings and Advanced. Use the following method to navigate these menus.		
1		Press the MENU button on the remote control or the MENU button on the control panel.
2		Select your desired menu by using the up and down directional keys to switch between the five menus. Press OK or the right directional key to enter a menu. Press BACK or the left directional key to return to the menus.
3		Use the directional keys to interact with the menu. The up / down directions will scroll through the menu options, while left/right will adjust the different settings (for example, in the Picture menu, settings such as brightness, contrast, etc.). Press MENU to exit.

Adjusting the OSD settings

The OSD can be used for adjusting the settings of your LCD TV.


Press the **MENU** key to open the OSD. You can use the OSD to adjust the picture quality, audio settings, channel settings and general settings. For advanced settings, please refer to following page:

Adjusting picture quality




- 1 Press the **MENU** key to bring up the OSD.
- 2 Using the directional keys, select **Picture** from the OSD. Then navigate to the picture element you wish to adjust.
- 3 Use the left or right keys to adjust the sliding scales or select one of the preset scenario modes. Press **MENU** to save and exit.
- 4 The **Picture** menu can be used to adjust the current **Scenario Mode**, **Brightness**, **Contrast**, **Colour**, **Tint**, **Sharpness** and other image-related qualities.

Adjusting sound settings

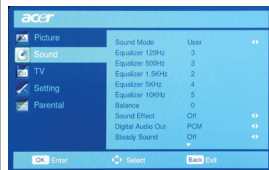


- 1 Press the **MENU** key to bring up the OSD.
- 2 Using the directional keys, select **Sound** from the onscreen display. Then navigate to the feature you wish to adjust.
- 3 Use the left or right keys to adjust the sliding scales or select one of the preset scenario modes. Press **MENU** to save and exit.
- 4 The **Sound** menu can also be used to adjust the the current **Sound Mode**, **Equaliter**, **Steady Sound**, **Sound Effects** and other important sound-related settings.

Adjusting TV settings

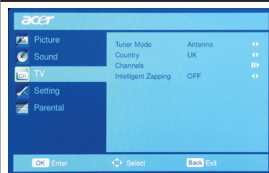


- 1 Press the **MENU** key to bring up the OSD.
- 2 Using the directional keys, select **TV** from the OSD.
- 3 Use the directional keys to navigate the menus.
- 4 The **TV** menu can be used to adjust **Tuner mode**, **Country**, **Channels**, **Channel Edit** and other important channel-related settings.

Adjusting settings

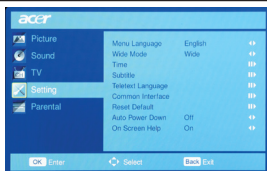

- 1 Press the **MENU** key to bring up the OSD.
- 2 Using the directional keys, select **Settings** from the OSD. Then navigate to the feature you wish to adjust.
- 3 The **Settings** menu can be used to adjust the screen **Menu Language, Time, Subtitle, Teletext** and other important settings.

Adjusting Parental settings

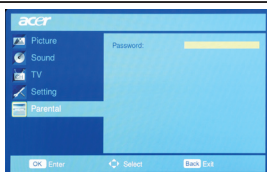

- 1 Press the **MENU** key to bring up the OSD.
- 2 Using the directional keys, select **Parental** from the OSD. Then navigate to the feature you wish to adjust.
- 3 The **Parental** menu can be used to adjust the **Channel block, Parental guidance, Input block, Change password** and other important settings.



The options available on the OSD may vary depending on the TV signal source and model. Some digital options may not be available with an analog signal and vice versa.

OSD menus

Picture settings

Open the Picture menu as described in the **OSD navigation** section. This menu provides the following settings:

Scenario mode

Scenario mode provides preset viewing modes designed to give you the best picture quality when watching a particular kind of programme. These provide preset values for brightness, contrast, hue colour and sharpness. There are pre-defined audio and video settings for optimal enjoyment of the following scenarios: Standard, Movie, Game, Sport, Concert, User.

Mode	Information
Standard	Standard mode allows you to watch your favourite channels with sharp, brilliant imagery via adaptive brightness and contrast adjustments.
Movie	For comfortably enjoying movies at home, Movie mode displays dim scenes in clear detail; compensates for colour; and smoothly presents motion images. This is accomplished through optimal Gamma correction plus saturation, brightness and contrast adjustments.
Sport	Sport mode is suited for outdoor sports programmes, with accurate background depth and clear gradation between the bright, outdoor playing field and darker auditoriums. Sports mode also brilliantly enhances colours and presents swiftly moving pictures without residual images. All of this is achieved via specific Gamma corrections and saturation adjustments.
Concert	Concert mode places you in a virtual concert hall, opera house or other dim environment by means of adaptive brightness and contrast adjustments.
Game	Game mode carefully details the exquisite graphics of modern video games, providing lifelike entertainment while protecting your eyesight by adjusting brightness and contrast.
User	User mode allows you to save your favourite video settings.

Brightness

Change the brightness of the image.

Contrast

Change the contrast of the image.

Colour

Change the colour depth of the image.

Tint

Change the tint of the image.

Sharpness

Change the sharpness of the image.

Colour temperature

This setting adjusts the colour temperature of the image. You can set it to Standard, Cold, User or Warm depending on your preference. With the User setting, you may change the colour values individually.

Advanced

Noise reduction

Reduce any noise on the video signal

Flesh tone

Enhanced flesh tones in the video

Backlight

Change the brightness of the TV backlight

ACM

Activates Automatic Contrast Management to adjust the backlight brightness depending on the video

Sound settings

Open the Audio menu as described in the **OSD navigation** section. This menu provides the following settings:

Sound mode

Scenario mode provides preset audio modes designed to give you the best sound quality when listening to a particular kind of programme. These provide preset values for treble and bass. There are pre-defined audio and video settings for optimal enjoyment of the following scenarios: Music, Speech, User. For example, Music mode accentuates symphonic harmonies and the tenor audio range.

Equalizer 120 Hz / 500 Hz / 1.5 KHz / 5 KHz / 10 KHz

Adjust the volume for certain frequency bands

Balance

Change the balance between the left and right speakers.

Sound effect

Turn Sound Effects on to add virtual surround sound. If Sound Effects are on, Treble and Bass settings are not available.

Digital Audio Out

This allows you to set the type of Digital audio signal that is used.

Steady sound

This function prevents sudden changes in the audio output level. If this function is On, volume levels will be consistent when switching between input sources and changing channels.

Audio type

Access audio options for the hard of hearing or visually impaired.

Audio description

Adjust the volume for the spoken menu description for the visually impaired.

TV settings

Open the TV menu as described in the OSD navigation section. This menu provides the following settings:

Tuner mode

Adjust the signal settings to receive Antenna or Cable signals.

Country

Select the country you live in to scan for the correct signals.

Channels

Channel scan

Channel scan allows you to scan for channels. If you completed the setup wizard the first time you turned on your TV, all available channels are listed.

Wait until the scan has finished; this will take several minutes.

Update scan

Update scan allows you to scan for new or deleted channels.

Wait until the scan has finished; this will take several minutes.

Single RF scan

You can manually add a digital channel by searching in specific UHF channels.

Analogue manual scan

You can manually add an analog channel by adjusting the settings here.

Channel edit

You can edit the detected channels, to change how they are displayed in the channel list.

Use the up or down directional keys to select a channel, direction, OK and number keys to change the channel number or name.

Intelligent zapping

If Intelligent Zapping is on, then channels viewed for less than the period defined here will not be added to the zapping memory.

Settings

Open the Settings menu as described in the OSD navigation section. This menu provides the following settings:

Menu language

Set the language displayed for the OSD menus.

Wide mode

Press to toggle scaling mode between Normal, Wide and different zoom modes (1, 2). Auto is also available when viewing digital TV and HDMI signals.

Time

Use these settings to adjust the time and set the sleep delay.

Time zone

Set your time zone.

Time

Set the time and date.

Sleep

You can set a time delay, after which the TV will turn off. The delay can be 15, 30, 45, 60, 90 or 120 minutes.

Subtitle

Use these settings to adjust subtitles.

Analogue subtitles

Set if subtitles are displayed when available.

1st / 2nd subtitle

Set the 1st and 2nd priority for subtitle languages, if more than one subtitle is available.

Subtitle type

You can choose between normal subtitles and subtitles for the hearing impaired, when these are available.

Teletext language

Use these settings to adjust digital teletext settings.

Digital Teletext language

Set the language used for digital teletext pages.

Decode page language

Set the type of text used for teletext pages.

Common interface

Displays information about any card installed in the common interface slot.

Reset default

Return all settings to default values, removing any changes.

Automatic power off

If Automatic Power Off is active, if the TV on for four hours without any channel changes or other activity, it will turn off. A warning message is displayed before the TV turns off.


On screen help

Show onscreen help messages.

Parental

Open the Parental menu as described in the OSD navigation section. Enter your Password (see below), then select one of the three options.

Parental control allows you to enter a password and effectively stop anyone without the password from watching TV. Three options are available: Channel Block, Age Rating and Change Password.

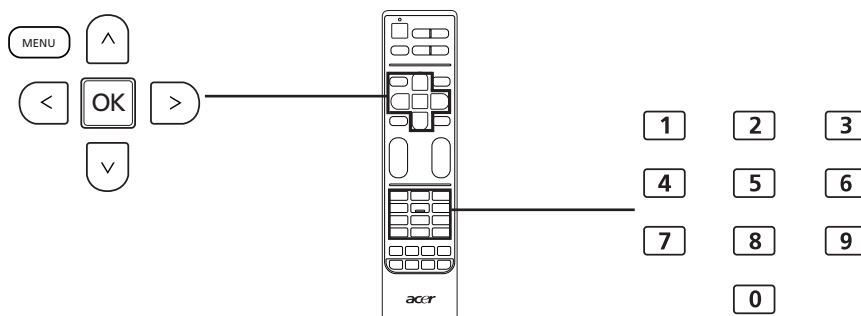

This menu provides the following settings:

Channel block

Press OK to see the list of channels. Use the up and down directional keys to select the channel to block and then press OK. A padlock symbol is displayed next to blocked channels. Press the OK again to unblock a channel.

When viewing channels, if a blocked channel is selected the TV will ask for your password. Enter your password to view the channel.

Parental Guidance

Most digital TV allows you to block content according to rating systems. The rating system used is dependent on region, and is only available on digital channels. Analog channels will not be blocked with this option.

Age rating (for digital TV)

The settings cover from 4 to 18 years of age. When you lock a category, the categories for that age and younger will be blocked.

Input block

Press OK to see the list of input sources (SCART, HDMI, etc.). Use the up and down directional keys to select the input source to block and then press OK. A padlock symbol is displayed next to blocked input sources. Press the OK again to unblock an input source.

Set password

You can change the default password to a 4-digit code of your choice. If you are using the parental controls, then we recommend you change the password periodically.

Clear all

Return all parental settings to default values, removing any changes.



The default password for this TV is "0000." If you forget your password, please enter 6163 to reset.

Troubleshooting

Before you call the Acer service center, please check the following items:

Here is a list of possible situations that may arise during the use of your LCD TV. Easy answers and solutions are provided for each.

There is no picture or sound

- Make sure the power cord is properly inserted in the power outlet.
- Make sure the input mode is correctly set by your selected input.
- Make sure the antenna at the rear of the TV is properly connected.
- Make sure the main power switch is turned on.
- Make sure the volume is not set to minimum or the sound is not set to mute.
- Make sure the headphones are not connected.
- Reception other than those of broadcasting stations can be considered.

Picture is not clear

- Make sure the antenna cable is properly connected.
- Consider whether your TV signal is being properly received.
- Poor picture quality can occur due to a VHS camera, camcorder, or other peripheral being connected at the same time. Switch off one of the other peripherals.
- The 'ghost' or double image may be caused by obstruction to the antenna due to high-rise buildings or hills. Using a highly directional antenna may improve the picture quality.
- The horizontal dotted lines shown on the pictures may be caused by electrical interference, e.g., hair dryer, nearby neon lights, etc. Turn off or remove these.

Picture is too dark, too light or tinted

- Check the colour adjustment.
- Check the brightness setting.
- Check the sharpness function.
- The fluorescent lamp may have reached the end of its service life.

Remote control does not work

- Check the batteries of the remote control.
- Make sure the remote sensor window is not under strong fluorescent lighting.
- Try to clean the remote control sensor lens on the TV with a soft cloth.
- Use the buttons (hotkeys) on the TV before the remote control works.

If the above suggestions do not solve your technical issue, please refer to the warranty card for service information.

PC Input Signal Reference Chart

English

AT2058ML

Item	H.Freq. (KHz)	Mode	Resolution	V.Freq. (Hz)
1	31.469	IBM VGA 12H	640x480	59.94
2	35.156	VESA	800x600	56.25
3	37.879	VESA	800x600	60.317
4	48.363	VESA	1024x768	60.004
5	44.772	HD	1280x720	59.855
6	44.776	CVT 2.3MA	1280x768	60
7	47.712	VESA	1360x768	60
8	55.54	VESA	1600x900	59.987

AT2358ML/AT2358MWL

Item	H.Freq. (KHz)	Mode	Resolution	V.Freq. (Hz)
1	31.469	IBM VGA 12H	640x480	59.94
2	35.156	VESA	800x600	56.25
3	37.879	VESA	800x600	60.317
4	48.363	VESA	1024x768	60.004
5	44.772	HD	1280x720	59.855
6	44.776	CVT 2.3MA	1280x768	60
7	47.712	VESA	1360x768	60
8	63.981	VESA	1280x1024	60
9	66.587	FHD	1920x1080	60



PC input does not support Sync on Green, Composite Sync or interlaced signals.

Product specifications

Model	AT2058ML	AT2358ML/AT2358MWL
Panel spec		
Resolution (pixels)	1600 x 900	1920 x 1080
Brightness (typ.)	250 nit	
Contrast Ratio (typ.)	1000:1	
Dynamic Contrast Ratio (max.)	InfiniteCons	
Viewing angle (typ.)	170x160(CR>=10)	
Response (typ.)	5 ms (Gray to Gray)	
Power supply		
Input	100VAC~220VAC, 50/60 Hz	
Max. power consumption	50W	
Power saving	<1 W	
Mechanical		
Dimensions (W x H x D mm)	502.3 x 366.7 x 156	572.2 x 405.8 x 156
Weight (kg)	3.47	4.49
Weight (lbs.)	7.67	10.79
Gross weight (Kg)	4.9	6.2
Gross weight (lbs)	10.83	13.7
Wall-mounting holes	VESA, 75mm x 75mm	
Analog TV system		
Colour system	PAL, SECAM	
Sound system	B/G/D/K/I/L	
Stereo system	NICAM/A2	
Subtitle	Teletext 1.5 (1000 pages)	
Digital TV system		
Digital TV standard	DVB-T HD (H.264)/DVB-C	
Sound system	ISO11172-3 layer1 & layer2 32KHz, 44.1KHz, 48KHz	
Stereo system	MPEG (Layer I & II), HE-AAC Dolby AC-3/AC-3 +	
Frequency	7/8 MHz	

Model	AT2058ML	AT2358ML/AT2358MWL
Terminal		
Analog/Digital Tuner In	Hybrid	
SCART	CVBS (In/Out), RGB (In), Audio R/L	
Component in	YPbPr, Audio (R/L)	
AV-in	CVBS, S Video, Audio (R/L)	
AV-out	CVBS, Audio (R/L)	
HDMI 1	Yes (HDMI 1.3)	
HDMI 2	Yes (HDMI 1.3)	
PC D-sub in	Yes	
PC audio in	Yes	
SPDIF out	Yes (Coxial)	
Headphone out	Yes	
USB Port	Yes	
Resolution		
HDMI	480i/p, 576i/p, 720p, 1080i	480i/p, 576i/p, 720p, 1080i, 1080p
Audio system		
Speakers	5 W + 5 W	
Mutimedia support via USB		
Photo	JPG, BMP, PNG	
Audio	MP3, AAC	
Video	MPEG-2, H.264	

Wall mount preparation / removing the base




Caution: Disassemble the base carefully otherwise the plastic parts and/or TV body may be damaged.


English

- 1) Remove the base.
- 2) Remove the screws from inside the stand.

AT2058ML/AT2358ML

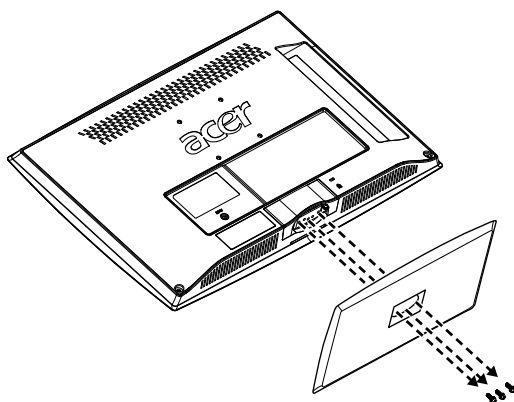

AT2358MWL

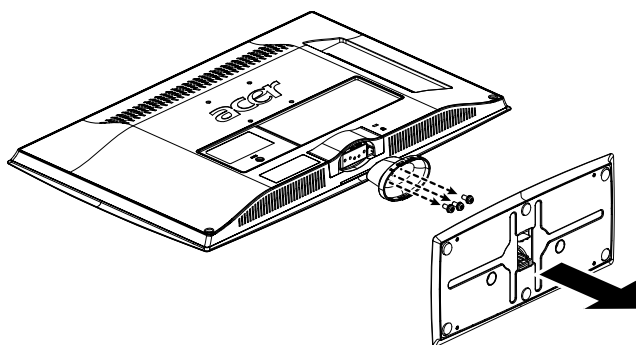

- 3) Assemble the wall mount following the instructions included with the wall mount.