 




DVD PLAYER

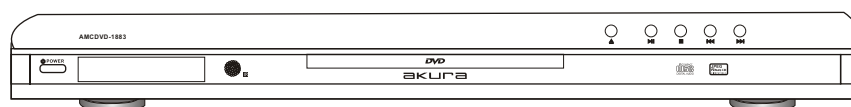

COMPACT
disc
DIGITAL AUDIO

JPEG
Picture CD
COMPATIBLE

OWNER'S MANUAL

SAFETY INFORMATION

TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



The crossed out wheeled bin is intended to show that this appliance must not be placed with ordinary household waste. When this appliance has reached the end of its useful life. It must be disposed of in accordance with local by-laws. Consult your

CAUTION	
	The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the product enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.
	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

IMPORTANT SAFEGUARDS

In addition to the careful attention devoted to quality standards in the manufacture of your video product, safety is a major factor in the design of every instrument. However, safety is your responsibility, too. This sheet lists important information that will help to assure your enjoyment and proper use of the video product and accessory equipment. Please read them carefully before operation and using your video product.

Installation

Read all instructions carefully, even if you are familiar with the appliance.

1. This appliance is not intended for use by children or infirm persons without supervision.
2. Children should be prevented from playing with the appliance.
3. This appliance should be placed on a dry, level surface before it is operated.
4. **INDOOR USE ONLY?** This appliance is not intended for outdoor use.
5. Do not expose this appliance to rain or moisture, Do not immerse the appliance in water or any other liquid.
6. Do not place items filled with liquids, such as vases, on the appliance. Do not expose the appliance to dripping or splashing liquids.
7. This appliance is not intended for use in bathrooms, laundry areas or similar moist locations. Never locate this appliance in the immediate surroundings of, or where it may fall into, a bath, basin, washtub, shower or swimming pool.
8. Do not place naked flame sources, such as candles, on the appliance.
9. Do not locate the appliance or leads near heat sources.
10. Do not block any of the ventilation openings, Ensure that vents are not covered by newspapers, tablecloths, curtains, etc. Do not install in a tight-fitting cabinet.
11. Do not insert or allow foreign objects to enter any grille openings.
12. Do not allow the Mains lead to be stepped on or tripped over.
13. To disconnect the appliance, switch off the power outlet and remove the plug from the power outlet.
14. Do not miss-use the mains lead. Do not carry the appliance by the mains lead. When unplugging the appliance from a power socket, hold the plug NOT the wire.
15. Do not use the appliance if the mains lead has been damaged or if the appliance has failed, or is damaged physically, call the Help line number.
16. Do NOT attempt to repair, disassemble or modify this apparatus, This could lead to serious damage to health or death. This appliance has NO user serviceable parts. You may cause the warranty to be cancelled.

Caution.

This appliance has a Class One laser assembly. Do NOT open. Do NOT look at the Laser directly.

FEATURES

DVD, CD compatible
CD-R, CD-RW capable

TV format:

PAL / NTSC colour system
4:3 / 16:9 screen format select

Video output:

Composite Video output
S-Video output
Component Video(Y Pb/Cb Pr/Cr) output
Scart output

Audio output:

Down-mix stereo output
Digital audio output (coaxial)
Dolby Digital output
Scart output

DVD features:

Multi Subtitle select
Multi Language select
Multi Angle select

Other features:

On screen display menu
Digital zooming
Slow motion
Parental control
JPEG picture viewer

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.*



The player has built in copyright protection technology that prevents copying from a DVD disc to any media.

If a video recorder is connected to the player, the video output image will be distorted during recording.

CONTENTS

Page

SAFETY INFORMATION

FEATURES

CONTENTS



INTRODUCTION	1-2
Front/Rear Panels	1
System Connections	3-5
Getting Started	6-7
On Screen Display(OSD)	8-9
Remote Control	10
Function Buttons	11-13
Menu' s	14-16
Trouble Shooting Guide	17
Specification	18

INTRODUCTION

About DVD


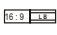 



DVD (Digital Versatile Disc) is a digital video medium under the MPEG II format, featuring a variety of revolutionary entertainment capabilities. The MPEG II video compression technology provides capacity for an excellent picture of minimum 500 lines resolution on screen, up to 8 language soundtracks, up to 9 views from different camera angles and up to 32 language subtitles (provided by the DVD disc itself which supports these features).


Disc information

Disc types	DVD	CD
Decoding Method	Digital / MPEG II	Digital
Capacity	Single-layer / Single side 4.7GB = 2 hr Single-layer / Double sides 8.5GB = 4 hr Double-layers / Single side 9.4GB = 4.5 hr Double-layers / Double sides 17GB = 8 hr	650MB = 74min
Disc size	12cm / 8cm	12cm / 8cm
Horizontal Resolution	500 lines up	-
Sub-titles	32	-
Sound tracks	8	1
Symbol		

DVD features symbols

Each DVD disc contains various features depending on production of the disc. Below are some of the symbols representing the features:

	Number of Audio Tracks		Screen Format
	Number of Subtitles		Zoom
	Angle Indicator		

 The player has built in copyright protection technology that prevents copying from a DVD disc to any media.

If a video recorder is connected to the player, the video output image will be distorted during recording.

REMARK

Some features contained in this DVD player are related to the DVD disc's software.

Some features cannot be performed if the disc does not support the feature, or requires special settings.

Check the features printed on the disc's packing or follow the instructions of the Disc's on screen menu.

Select a DVD disc

DVD Region Code

DVD discs and DVD players are manufactured under the worldwide agreed DVD Regional Code System that the player will operate only with corresponding disc of the same Regional Code.

Region code	Region
1	Canada, USA
2	Europe (incl. Poland, Romania, The Czech republic), Japan, Middle East (incl. Saudi Arabia, Egypt, Iran, South Africa)
3	East Asia (incl. Hong Kong, Taiwan, South Korea), South-East Asia
4	Australia, Caribbean, Central & South America, Mexico, New Zealand
5	Africa, Former Soviet Union, India, North Korea, Pakistan, Turkmenistan
6	China

Care of disc

Video disc contains high-density compressed data that needs proper handling

- Hold the disc with fingers. Hold the disc's outer edge and/or the center spindle hole. Do not touch the disc surface.



- Do not bend or press the disc. Do NOT expose the disc to direct sunlight or heating sources.

 


- Store discs in cabinet vertically, in dry condition. Prevent exposure to:
 - Direct sunlight
 - Heat or exhaust from a heating device.
 - Extreme humidity.
- Clean the disc surface with a soft, dry cleaning cloth. Wipe the disc surface gently, radially, from center toward the outer edge.
- Do not apply thinner, alcohol chemical solvent, or sprays when cleaning. Such cleaning fluids will permanently damage the disc surface.

INTRODUCTION


About the player

Front panel

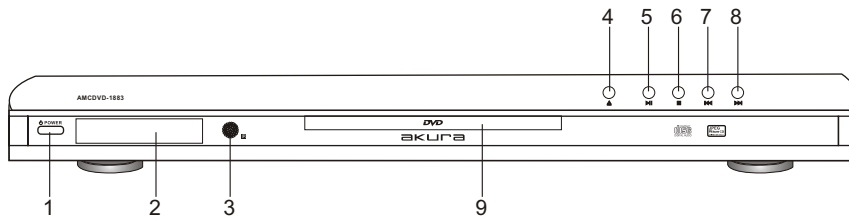


1. Power button
2. VFD display
3. Remote control sensor
4. Open/Close button
5. Play/pause button
6. Stop button
7. PREV button
8. NEXT button
9. Disc tray

 Rear panel

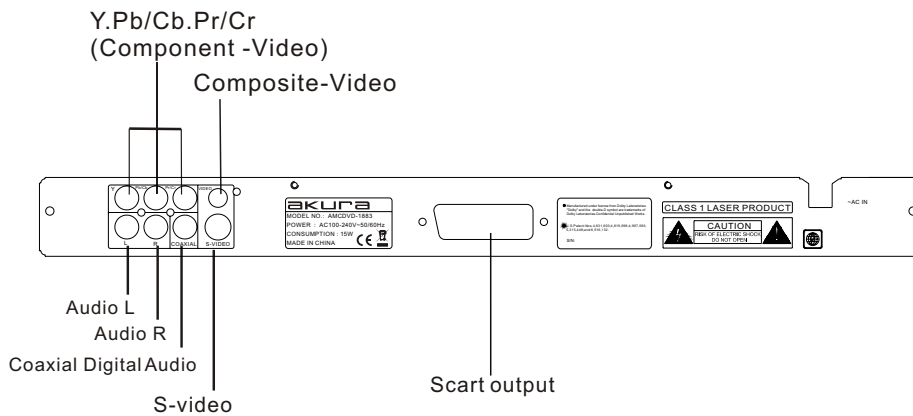


SYSTEM CONNECTION

 System connection to a TV set

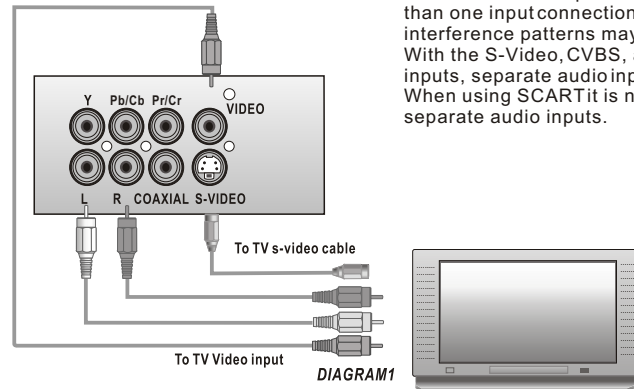

 Select one video input method **ONLY**. If more than one input connection is made then interference patterns may be seen. With the S-Video, CVBS, and Progressive scan inputs, separate audio inputs must be used. When using SCART it is not necessary to connect separate audio inputs.

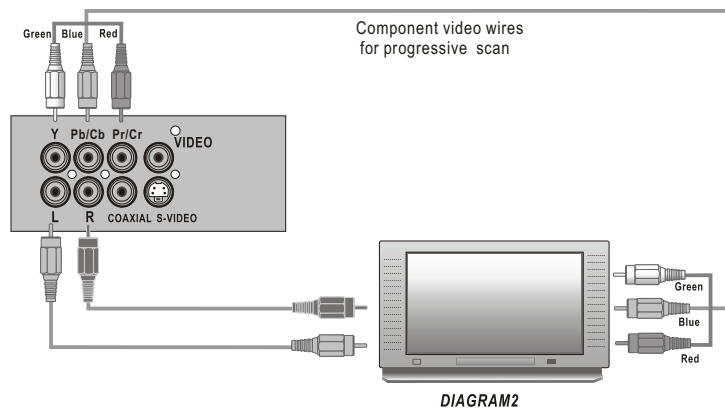


The player is equipped with 4 forms of output.
 Scart Output
 S-Video
 Composite video Output
 Progressive Scan Output.

To view the DVD player, using Scart Output, most modern Tv's will select the DVD player automatically when the DVD player is switched On.


If using S-Video, Composite Video or Progressive Output, you will need to select the correct input using the Tv remote control.

 If using an older Tv and Scart you may need to select AV on your Tv.

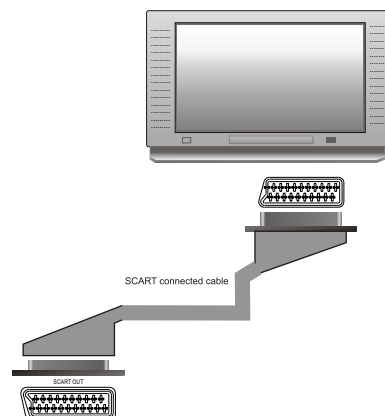


SYSTEM CONNECTION

 Audio connecting to a stereo Amplifier

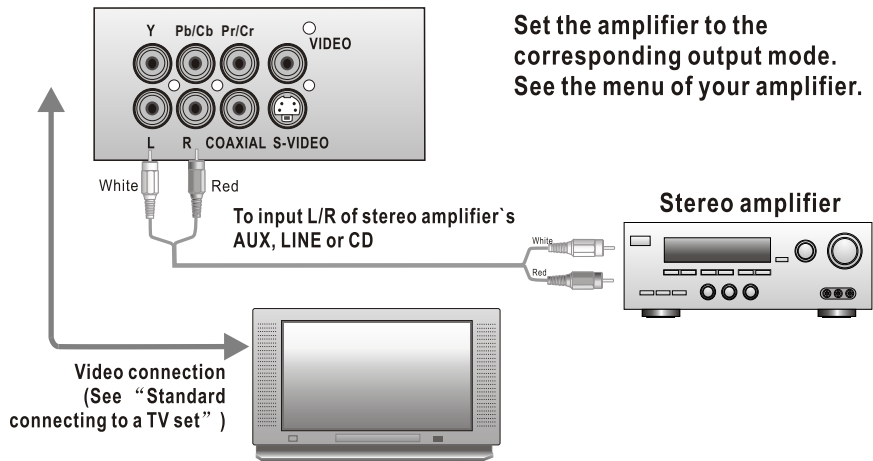

 Digital audio connection to a digital Amplifier

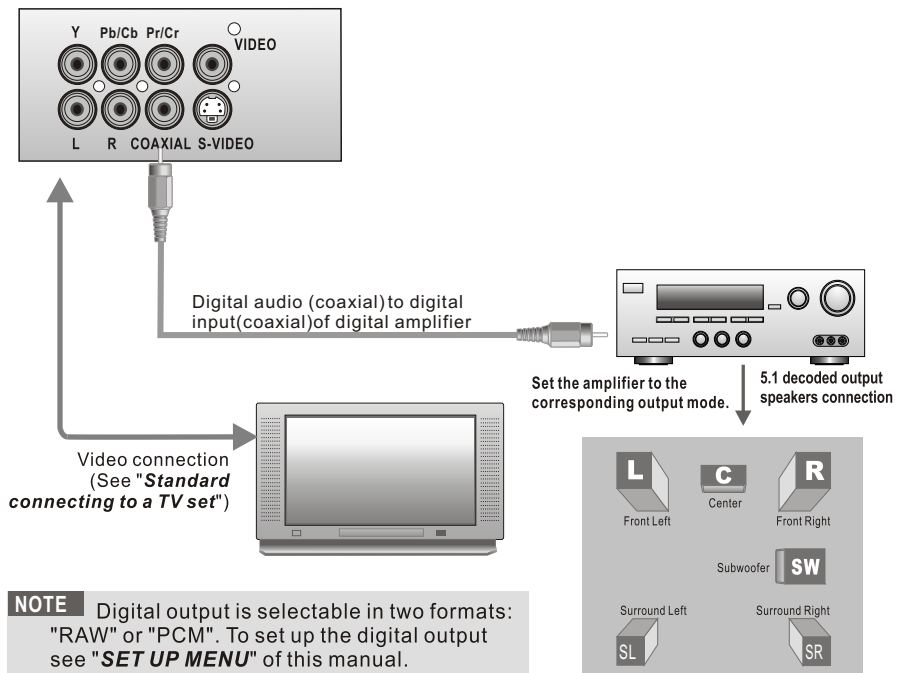


GETTING STARTED


- Unpack the unit.
- Read through this owner's manual before installation and use.
- Load batteries into the remote control unit.
- Connect the system, make sure the connections are secured.
- Connect the power plug to the AC power outlet.

Loading batteries to the remote control

 - Remove the battery compartment cover.
- Load two AAA (UM-4 or R03) batteries into the battery compartment.
- Make sure that the batteries have been inserted in the correct polarities matching to the symbols +, - marked in the battery compartment. Close the battery compartment cover.
- When replacing batteries, replace both batteries. Do not mix new and used batteries operating together, otherwise, the operation lifetime will be much shorter than normal.
- Remove the batteries if the unit will not be used for a prolonged period of time.

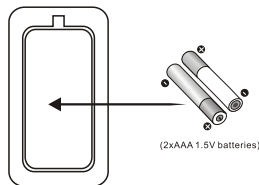

(2xAAA 1.5V batteries)

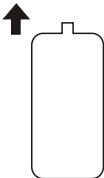 

When batteries are replaced, do not break open exhausted batteries or throw on a fire, they may explode

The remote control transmits a directional infrared beam. Be sure to aim the remote control directly at the infrared sensor of the unit during operation.

If the sensor has been covered or there is a large object between the remote control and the sensor, the sensor will not respond.

The sensor may not be able to receive the remote signal when it is exposed to direct sunlight or a strong artificial light (fluorescent or strobe light). In this case, change the direction of the light or reposition the unit to avoid direct lighting.

Switch on the player

Press the main power switch on the DVD player. Power on the TV set, and the amplifier if connected.

Set up the system

Select the corresponding setting of the TV set (AV1, AV2, S-Video, DVD etc.).

For connection through a RF modulator, select the corresponding channel until the DVD screen appears.

If amplifier has been connected, select the corresponding output mode.

Load a disc

Press OPEN/CLOSE button  on the remote control (or front panel) to eject the disc tray.

Load a disc, label side up, onto the disc tray and press OPEN/CLOSE button.

Automatic playback

The unit will take a few seconds to load the disc's initial data, display the disc type logo on the left upper corner on screen, and then start playing back automatically.

If a DVD disc menu appears on screen



Press PLAY button on the remote (or on the unit) to start playing.

 


Press the DIRECTION buttons to select the desired feature in the menu. And then press ENTER button to confirm a selection in the menu.



Remote sensor

Within approximately 6 meter (20 feet)

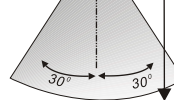

GETTING STARTED

Problem disc messages

The following message will display on screen when there is a format problem with the loaded disc:

“WRONG REGIONAL DISC”

Region code of the disc is not matching to the player's region code (region 1 to region 6)
UK is region 2.

“WRONG PASSWORD”

The rating level of the disc is higher than the rating level setting of the player.
The player will not play the disc.

“WRONG DISC”

The player is equipped with automatic disc quality detection software. When the player detects a problem disc or a damaged disc, the player may keep playing the disc at lower quality or stop playing, depending on the damaged level of the disc.

Production qualities of DVD discs vary, some discs might deviate from the industrial standard. Some incorrectly formatted discs may playback on the player. However, the playback and operational quality of those disc may be substandard.

Power management

If not using the Player for long periods it is wise to turn off the power fully at the socket.

 
ON SCREEN DISPLAY

An On Screen Display (OSD) indicator will be displayed at the upper part of the TV screen when certain functions are executed, or when pressing the DISPLAY button on the remote control.

The OSD indicator is a user friendly interface designed to display the status of playback type. When a different disc is loaded (DVD, CD) ; the OSD indicator bar will be different.


The OSD bar will appear automatically if it is activated by pressing the DISPLAY button. Press the DISPLAY button again and a new status bar will appear. Press DISPLAY button a third time and the OSD bar will disappear. When OSD indicator bar appears, press other button, the OSD indicator bar will disappear automatically.

DVD mode - OSD

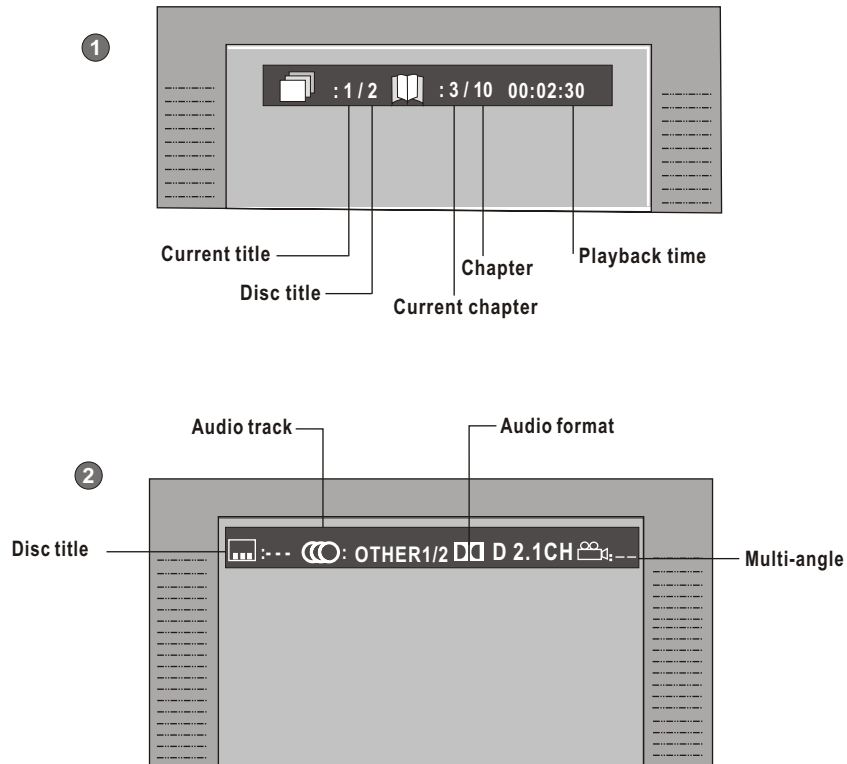


ON SCREEN DISPLAY

  CD mode - OSD

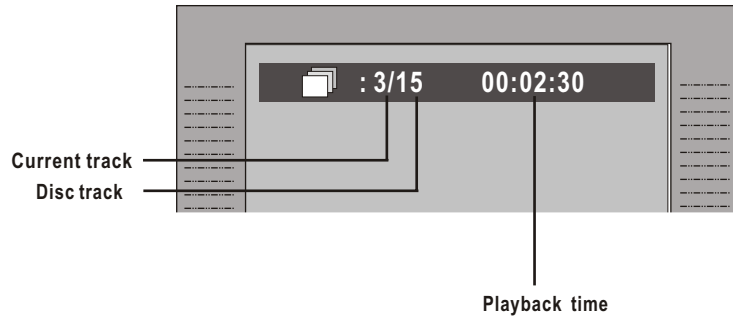

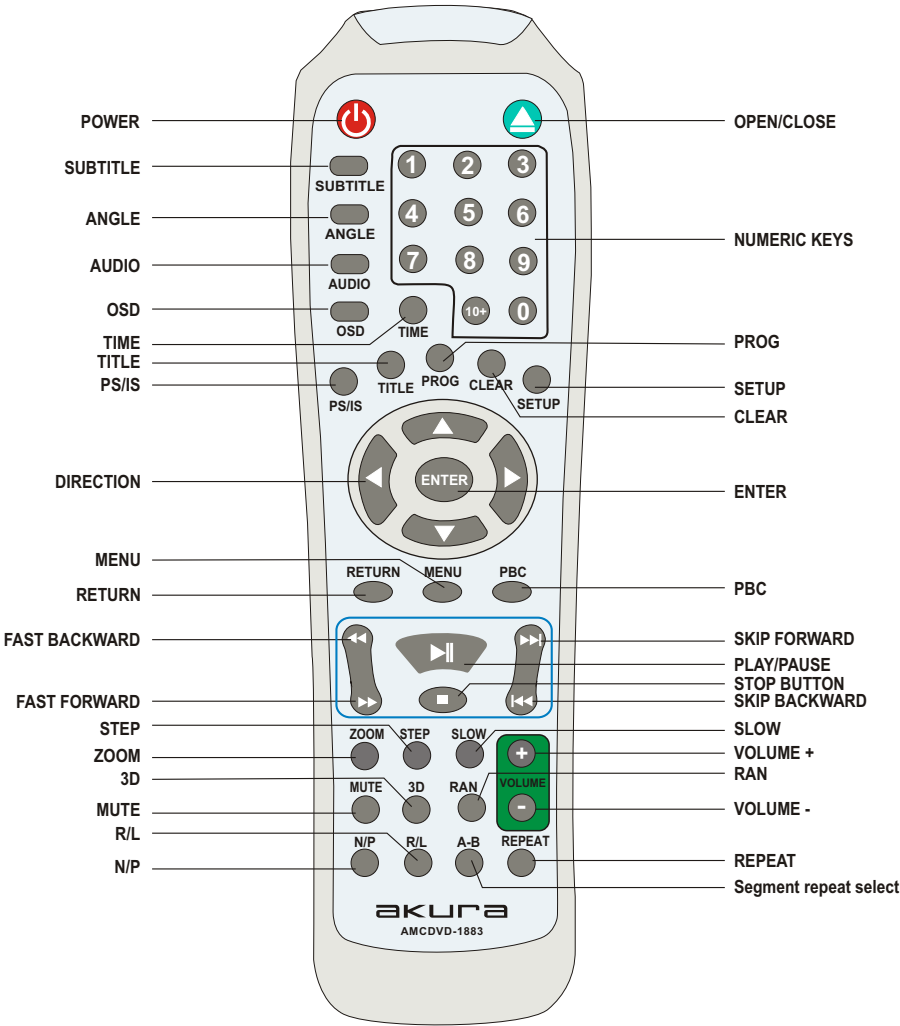

Remote control




FUNCTION BUTTONS


OSD
 Press DISPLAY button.
 To show the time and status information.

Open/Close disc tray
 To open and close the disc tray.
 Press OPEN button on the front panel or the remote.





Play/Pause
 Press PLAY button to play the disc,
 and pause(still Picture).

Press PLAY button to resume normal playback.

Stop
 Press STOP button to stop in two modes.
 A) Press the STOP button Once. STOP memorizes the interrupted position and the OSD shows "PRESTOP."
 B) Press the STOP button twice to completely stop the disc. The OSD shows STOP. When the PLAY button is pressed the disc will start from the beginning.


Slow
 The player is muted in SLOW mode.
 Press SLOW button to play at slow motion. Repeatedly pressing the button will decrease the slow speed.


Normal → X1/2 → X1/4 → X1/8 → X1/16 → X1/32

Skip Forward / Backward
 Press  button skip forward DVD chapter or CD track.
 Press  button skip backward DVD chapter or CD track.

NOTE
 Player will not skip forward or backward during "WARNING" section of a DVD disc.
 Single chapter DVD or single track CD cannot skip.

Fast backward/forward

Press  button to fast backward through the disc. Repeatedly pressing the button will increase the search speed.
 Normal → X2 → X4 → X8 → X16 → X32


Press  button to fast forward through the disc. Repeatedly pressing the button;
 Normal → X2 → X4 → X8 → X16 → X32

 Press PLAY button to resume normal playback.

NOTE

The player is muted in fast forward or fast backward this mode.
 Player will not fast forward or fast backward during WARNING section of a DVD disc.

DISC TITLE / MENU

MENU
 While playing a DVD.
 Press the MENU button return to the DVD disc start menu.

 Press PLAY button to resume play from where you previously stopped it.

TITLE
 While playing a DVD, press the TITLE button return to the beginning of the DVD disc.

NOTE

Some DVD discs refuse the TITLE function.

RETURN
 Press RETURN button returning to the upper level menu.

NOTE

The "Return" function is only effective when playing the disc of VCD2.0 in PBC ON mode.

FUNCTION BUTTON

Select an item in menu

In the DVD disc start menu or in the player's set up menu



Press **DIRECTION** button to highlight function icons.



 
Press **ENTER** button to confirm a selection.



Press **CLEAR** button to cancel an entry.

Numeric Key Pad

(Random Program access)

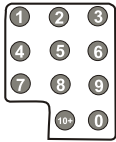

- 1) To direct access a DVD Chapter or a CD track, input the desired DVD Chapter or CD Track number using the numeric key pad.
- 2) Input data for the DVD disc start menu or the player's setup menu.

NOTE Some DVD discs do not allow direct access function.



Press **MUTE** button to select mute on or mute off.

Search a desired section

 
To search for a desired Title, Chapter, Time or Track.



In DVD mode pressing the **Go To** button once appear



pressing the **TIME** button twice appear

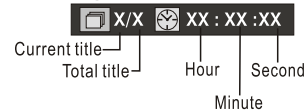

Press **ENTER** button to execute the search.

NOTE

Some DVD discs do not allow Search function. Search does not function during program play.

Repeat section A-B

To repeat playback a specific section of a disc.



Press the **A-B** button at the starting point of the desired section. "A" display on screen.



Press the **A-B** button again, at the end of the desired section, "A-B" display on screen. The play will start repeat playback the desired section A to B until the function is cancelled.



To cancel the function. Press the **A-B** button again return to normal play.

NOTE

Some DVD discs do not allow A-B function.

Repeat

Repeatedly playback desired Title, Chapter or Track.



Press **REPEAT** button repeatedly to select the repeat mode .

In DVD mode

REP.CHAPTER
REP.TITLE
REP.DISC
REP.OFF

Repeat chapter
Repeat title
Repeat all disc
Repeat off

In CD mode

REP.TRK
REP.DISC
REP.OFF

Repeat track
Repeat disc
Repeat off

NOTE

Some DVD discs do not allow REPEAT function.

Multi - Angle / Subtitle / Audio

- ANGLE** While playing back a DVD disc, press the ANGLE button repeatedly to select the desired camera angle. A DVD disc may contain up to 9 selectable camera angles.
- SUBTITLE** While playing back a DVD disc, press the SUBTITLE button repeatedly to select the desired SUBTITLE. A DVD disc may contain up to 32 selectable subtitles.
- AUDIO** While playing back a DVD disc, press the AUDIO button repeatedly to select the desired audio sound track. A DVD disc may contain up to 8 selectable audio sound tracks.

NOTE
DVD disc start menu may contain set up of Angle, Subtitle and Audio soundtrack selection. You may do the selection in the disc start menu.

Volume Up / Down

- While playing back a disc. Press the VOLUME button- or + to adjust the volume output. Volume level will display on screen.



The volume level control does not apply to digital output levels when a DVD disc is playing.

ZOOM

- PLAY DVD**
Press the ZOOM button repeatedly TV Screen display:
ZOOM X2--> ZOOMX 4--> ZOOM OFF
- PLAY JPEG**
Press the ZOOM button repeatedly TV Screen display scale:
150%-->200%-->25%-->50%-->100%
While zoom 100%, press direction button to rotate picture.
While zoom 150%.200%,press direction button to move picture position.

NOTE
The picture quality is degraded as the picture size increased.

SETUP

- SETUP** Press the SETUP button to enter the player's setup menu. Setup menu is a facility for the owner to adjust the detail setting of the player. For the detail of Setup menu see "SET UP MENU" of this instruction manual.

PROGRAM

To program play a disc in a desired sequence.

- PROGRAM** In PBC off mode, Press PROGRAM button, to enter the program menu.



In DVD mode

When the program menu appears input the Title number, press ENTER. Then input title Chapter number, press ENTER button.



 
(PLAY) --- Press PLAY button to start program play.



(CLEAR) --- Press CLEAR button if you want to cancel the wrong information you input. Press CLEAR again to cancel all the tracks.



(PROG) --- Press PROG button to quit the program menu.

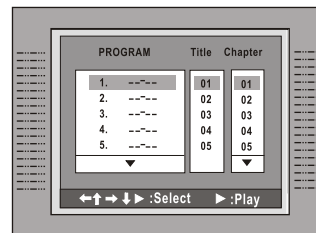

In CD mode

When the program menu appears, input the Track number, press ENTER, when the programming is completed.



 
(PLAY) --- Press PLAY button to start program play.



(STOP) --- Press twice STOP button to quit the program mode.

FUNCTION BUTTON



CLEAR (CLEAR) --- Press CLEAR button to cancel any incorrect button press.

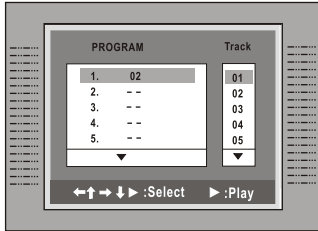

SETUP MENU

Various features of the player can be adjusted in the SETUP menu:

  1. Press SETUP button **SETUP**
SETUP menu appears.
2. Press the UP/DOWN button to highlight the desired menu.

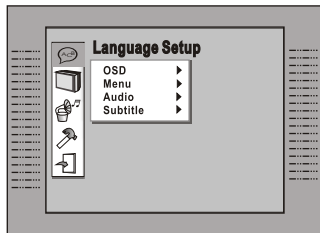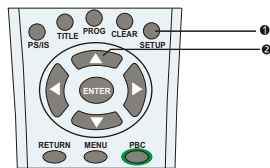

NOTE

Make sure DVD is in STOP mode, before selecting item from the Set Up Menu .

LANGUAGE MENU

In STOP mode, press SETUP button **SETUP**

Press UP/DOWN button

Press ENTER button , the screen displays sub-menu.

Press UP/DOWN button to highlight the desired item in the LANGUAGE.

Menu “ : ”

Press **ENTER** to confirm your selected item.

OSD	→	ENGLISH
		FRENCH
		GERMAN
		ITALIAN
		SPANISH

 
Select the players OSD .

Press **ENTER** to confirm the selection.

Press SETUP button **SETUP** to quit.

Default setting

ENGLISH

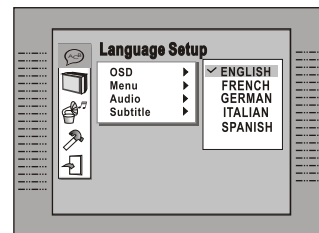


SETUP MENU (Press SETUP button)

- MENU** → ENGLISH
 CHINESE
 JAPANESE
 FRENCH
 GERMAN
 ITALIAN
 SPANISH
 PORTUGUESE
 HINDI
 THAI
 RUSSIAN
 KOREAN
 OTHERS

Select the disc language setting.
 Press **ENTER** to confirm the selection.
 Press **SETUP** button to quit.

 
Default setting **ENGLISH**

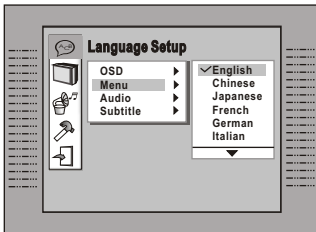

- SUBTITLE** → ENGLISH
 CHINESE
 JAPANESE
 FRENCH
 GERMAN
 ITALIAN
 SPANISH
 PORTUGUESE
 HINDI
 THAI
 RUSSIAN
 KOREAN
 OFF

Select the disc subtitle setting.
 Press **ENTER** to confirm the selection.
 Press **SETUP** button to quit.

 Default setting **OFF**

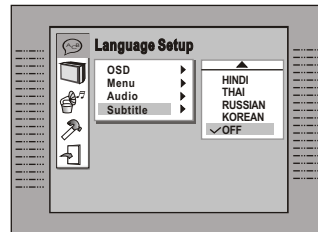


AUDIO

Select the disc audio setting.
 Press **ENTER** to confirm the selection.
 Press **SETUP** button to quit.

- AUDIO** → ENGLISH
 CHINESE
 JAPANESE
 FRENCH
 GERMAN
 ITALIAN
 SPANISH
 PORTUGUESE
 HINDI
 THAI
 RUSSIAN
 KOREAN
 OTHERS

 
Default setting **ENGLISH**

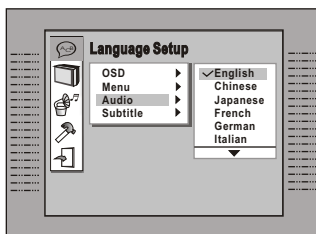

AUDIO SETUP

In **STOP** mode. Press **SETUP** button to enter next sub-menu.
 Press **ENTER** to enter next sub-menu.

 OUTPUT

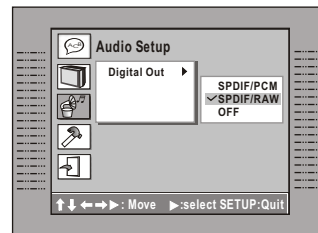

Press **ENTER** to confirm the selection, or
 Press **SETUP** button to quit.


Default setting **SPDIF/RAW**

 
NOTE

When the digital output is **NOT** in use, it is recommended to turn it off, for the purpose of minimizing circuit interference.

SETUP MENU (Press SETUP button)

SCREEN MENU

In STOP mode, press **SETUP** button .
Press **UP/DOWN** button  to highlight the desired item in the **SCREEN** menu.
Press **ENTER** to confirm the selection.

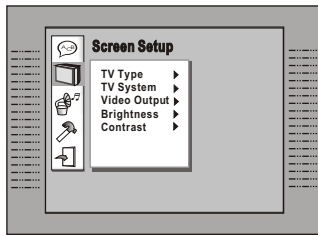

Adjust TV screen viewable format

TV TYPE → 4:3 PS (Pan Scan)
4:3 LB (Letter Box)
16:9 (Wide Screen)

Default setting 4:3 PS

TV SYSTEM → NTSC
PAL
AUTO

Default setting PAL

VIDEO OUT → CVBS+S-Video
CVBS+Y U V
YUV P- SCAN
CVBS+RGB

Default setting CVBS+ RGB

BRIGHTNESS → NORMAL
BRIGHT
SOFT

Default setting NORMAL

CONTRAST → -4
-3
-2
-1
0
1
2
3
4

 
Default setting 0

NOTE

1. Certain DVD disc are formatted in wide screen (16:9) or letter box (4:3) only. Adjusting the setting of the disc player will not alter the screen size for these "Format-only" discs.
2. The PSCAN button on the remote should only be used if you have a Component Video Connection
3. If you TV does not have a Y, Cb, Cr Component function, please do not change Video Out setting

CUSTOM SETUP

After entering the main menu, choose and confirm "CUSTOM setup" and then the following window will appear on the TV screen.

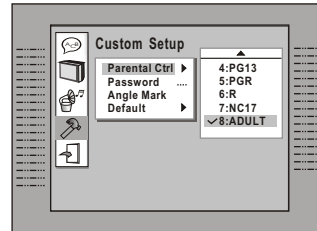

A) "Parental Control"

There are 8 levels of Parental Control, as follows:
1: KID SAF; 2: G; 3: PG; 4: PG 13; 5: PGR; 6: R; 7: NC 17;
8: ADULT Level one opens discs to people of all ages.
Level eight is suitable only for adults.

If you want to change the Parental Control setting, enter the level number and then the four digit pass code. The default code is 8888. (If you are using the player for the first time, there is the code that is needed.)

When the input code has been confirmed, the level setting menu will appear. Move the cursor to the appropriate level and press ENTER to confirm. Press Set Up to exit the Menu.

B) "Password"

Move the cursor to the PASSWORD prompt and press ENTER. Input the password 8888 if this is your first use.

After confirmation, you will be required to input a new 4 digit pass code. After entering your new pass code, press ENTER to confirm.

WARNING: Please keep a copy of the new pass code in a safe place. Otherwise you will not be able to change the Parental Control. Please remember your PASSWORD, as the DEFAULT setting will revert everything BUT the PASSWORD to the factory defaults.

C) "ANGLE MARK" You can choose to have the ANGLE MARK function ON or OFF. In the ON mode, an ICON will display on the screen when a disc has multiple angle shots available for viewing. Press ANGLE on the remote to enjoy these scenes.

D) "DEFAULT" This function allows you to change the player back to the factory default settings. All settings will be changed back to the original settings. If you have changed the default PASSWORD of 8888, this will not revert.

TROUBLE SHOOTING

Should the Player develop a fault please check below before calling the Customer help line

Fault	Symptom	Remedy
Dead No display lit	No power to the system	Check system is plugged in and the power is turned on
Disc will not play	No disc	Insert a playable disc
	Disc placed upside down	Check disc is label side up
	Incorrect region code	Ensure the region code of the disc is Region 2
	Damaged disc or dirty surface	Clean the disc "as page 1" . If disc is cracked or badly scratched, discard
No picture	Laser lens may have condensation on surface	If the player has been stored in a cold place ,Leave the player in a warm room for 2 hrs
	TV not receiving DVD signal	Check that the TV is set to the TV are correct
Distorted or Noisy picture	TV settings incorrect	Check that the TV is set to the correct Video input
	Dirty disc	Clean the disc as page 1
	Incorrect system selection	Reset DVD colour system to match disc page 11
Picture not full screen	Connection of the DVD player	Connect the DVD player directly to the TV ,NOT via a VCR
	Screen format incorrect	Set screen format as page 16
General malfunction	No, or unusual operation	Disconnect from the supply for 30 minutes to allow the controller to reset. If no better contact your local supplier.
No Sound	Incorrect language selected	Enter Language setting menu page 16
	Mute Set	Un-mute
No Skip Search	Incorrect type of disc	Some discs do not have this feature ,You cannot Skip at the start of most discs.
No Surround sound	General setup incorrect	See Setup .Page 15.
Remote control not working	Batteries are low or exhausted	Replace the batteries with known good ones
	Objects in the signal path	Remove any objects in the Line of sight path with the player.
	Background light	Remote controls do not operate well in bright sunlight. Darken the room.

If you cannot rectify the problem. Please call the Customer Help Line on 01422 203676, Monday Friday 8 am 8pm. Saturday 9am 4pm, Sunday 10am 4pm. Bank holidays as Sunday.



CAUTION : To reduce the risk of fire and electric shock, do not remove the cover (or back) of the unit. Refer servicing only to qualified service personnel.

SPECIFICATIONS

Video Format	MPEG 2
Audio Format	MPEG 1, LAYER 1, LAYER 2 , LAYER 3
Signal Output	Color System: PAL/NTSC Audio System: DIGITAL downmix stereo DIGITAL output Audio DAC 24 bit/96KHz Video Output: 1 Vpp(at 75 ohm) Audio Output (Stereo): 2 Vpp
Frequency Response	CD: 20Hz-20KHz (EIAJ) DVD: 20Hz-22KHz (48K) 20Hz-44KHz (96K)
S / N ratio	> 90 dB
THD	< 0.05%
Output Terminals	Video (composite) output X 1 S-Video output X 1 Component Video(Y Pb/Cb Pr/Cr) Down Mix Stereo output (Left and Right) X 1 Digital audio(coaxial)output X1 Scart output X1
Power input	AC 230V 50/60Hz 15W (Max)
Dimension	Body size: L430xW260xH38mm Packing size: L466xW96xH345mm Net weight: 2.2kg

Please note :- Specifications may change at any time without notice