

2 ch
output



INSTRUCTION MANUAL

DVD1033



IMPORTANT
READ THESE INSTRUCTIONS
BEFORE USE AND RETAIN
FOR FUTURE REFERENCE.

IMPORTANT SAFEGUARDS

For your protection, please read these safety instructions completely before operating the appliance, and keep this manual for future reference.

 
Carefully observe all warnings, precautions and instructions on the appliance and in the operating instructions, and adhere to them.

INSTALLATION

Water and Moisture - Do not use powerline operated appliances near water - for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.




Heat - Do not place the appliance near or over a radiator or heat register, or where it is exposed to direct sunlight.

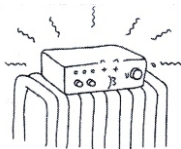

Ventilation - The slots and openings in the cabinet are provided for necessary ventilation. To ensure reliable operation of the appliance, and to protect it from overheating, these slots and openings must never be blocked or covered.

 
- Never cover the slots and openings with a cloth or other materials.




- Never block the slots and openings by placing the appliance on a bed, sofa, rug or other similar surface.



 - Never place the appliance in a confined space, such as a bookcase, or built-in cabinet, unless proper ventilation is provided.



 Accessories - Do not place the appliance on an unstable cart, stand, tripod, bracket, or table. The appliance may fall, causing serious injury to a child or an adult, and serious damage to the appliance.



- An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

 


USE

Power Source - This appliance should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of electrical power supplied to your home, consult your dealer or local power company. For those appliances designed to operate from battery power, or other sources, refer to the operating instructions.



Overloading - Do not overload wall outlets, extension cords or convenience receptacles beyond their capacity, since this can result in fire or electric shock.



When not in use - Unplug the power cord of the appliance from the outlet when left unused for a long period of time. To disconnect the cord, pull it out by grasping the plug. Never pull the plug out by the cord.



Power-Cord Protection - Route the power cord so that it is not likely to be walked on or pinched by items placed upon or against them, paying particular attention to the plugs, receptacles, and the point where the cord exits from the appliance.

 


Lightning - For added protection for this appliance during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the appliance due to lightning and powerline surges.

Cleaning - Unplug the appliance from the wall outlet before cleaning or polishing it. Do not use liquid cleansers or aerosol cleansers. Use a cloth lightly dampened with water for cleaning the exterior of the appliance.



Object and Liquid Entry - Never push objects of any kind into the appliance through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the appliance.




SERVICE

Damage Requiring Service-Unplug the appliance from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - When the power cord or plug is damaged or frayed.



 - If liquid has been spilled or objects have fallen into the appliance.



- If the appliance has been exposed to rain or water.



 
- The appliance does not appear to operate normally or exhibits a marked change in performance. - This indicates a need for service.



- If the appliance does not operate normally when following the operating instructions, adjust only those controls that are specified in the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the appliance to normal operation.



- If the appliance has been subject to excessive shock by being dropped, or the cabinet has been damaged.

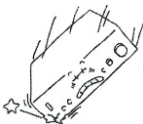

Servicing - Do not attempt to service the appliance yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.



 
FRONT PANEL & UPSIDE & UNDERSIDE ILLUSTRATION

Front panel



- ① POWER
- ② PLAY/PAUSE
- ③ PREV
- ④ NEXT

Upside

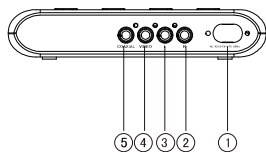


- ① POWER
- ② Right channel output jack
- ③ Left channel output jack
- ④ VIDEO output jack
- ⑤ Digital signal COAXIAL output jack

Underside



REMOTE CONTROL

 
- When use, direct the remote control to the infra-red sensor (within 45 degrees)
- Do not put remote control near to the place with high temperature or moisture
- Do not put water or any other object on remote control
- Do not use new and old batteries or different type batteries together
- Please replace batteries when find remote control is out of work or weak sensitivity.

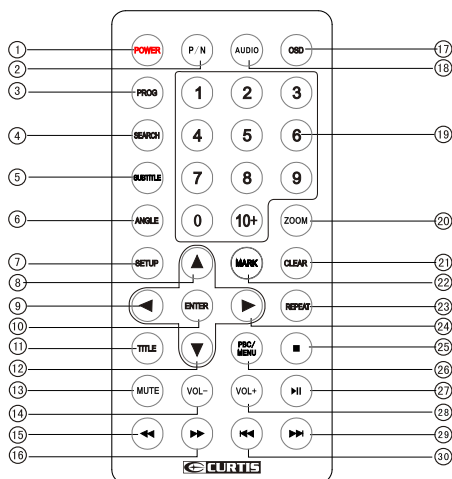

- | | | |
|------------|---------------|--------------|
| ① POWER | ⑪ TITLE | ⑳ CLEAR |
| ② P/N | ⑫ DOWN | ㉑ MARK |
| ③ PROG | ⑬ MUTE | ㉒ REPEAT |
| ④ SEARCH | ⑭ VOL- | ㉓ RIGHT |
| ⑤ SUBTITLE | ⑮ F. REV | ㉔ STOP |
| ⑥ ANGLE | ⑯ F. FWD | ㉕ PBC/MENU |
| ⑦ SETUP | ⑰ OSD | ㉖ PLAY/PAUSE |
| ⑧ UP | ⑱ AUDIO | ㉗ VOL+ |
| ⑨ LEFT | ㉒ NUMBER KEYS | ㉘ NEXT |
| ⑩ ENTER | ㉓ ZOOM | ㉙ PREV |


SYSTEM CONNECTION

 Home Theater System Connect Instruction

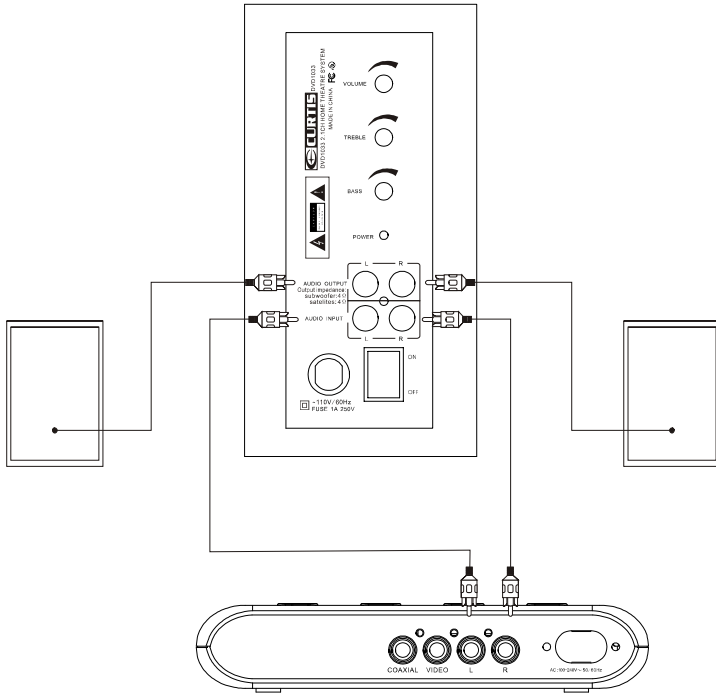

Video SETUP

 
This player allows you to customise the performance to your personal preferences.



Displaying The Setup Menu Screen

The Setup Preferences.

 The selected category will Provide you the Setting details using the following screen.

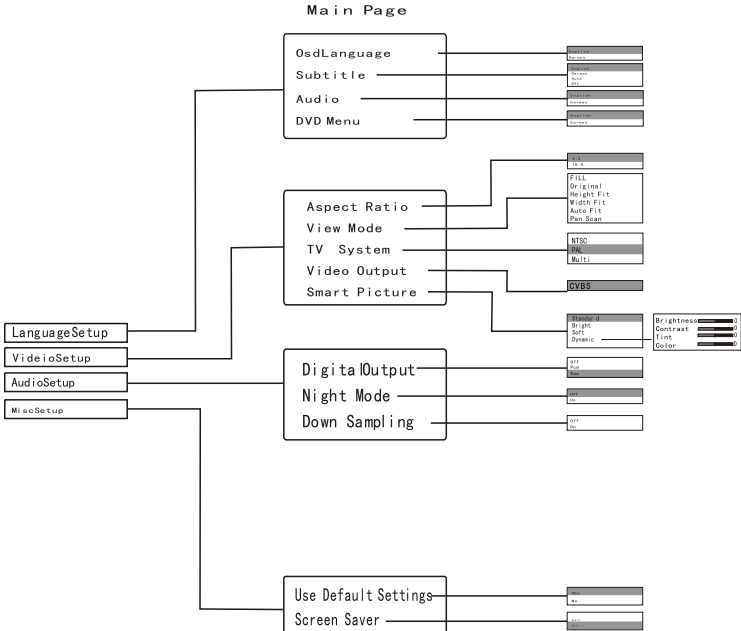

1. Press SETUP Key to access the setup menu.
2. Press direction keys to(Highlight) a item, then press ENTER to confirm.
3. Press SETUP key to exit setup menu.
factory defaults.

REMOTE CONTROL OPERATION

POWER

Press POWER to turn on the player after power adapter is connected

P/N

Press STOP key first then and press P/N to select “PAL” or “NTSC” system

PROG

Press PROG to get programme menu when reading DVD & VCD, then program your wanted songs. (DVD programme needs TITLE and MENU.)

 
SEARCH

During VCD playback, press SEARCH, and the menu will display as follow:



Use \uparrow \downarrow to select TIME, TRACK.
Use the number keys to input the desired time or track, then press ENTER to confirm.

During DVD playback, press SEARCH, and the menu will display as follow:



Use \uparrow \downarrow to select TIME, TITLE or CHAPTER.
Use the number keys to input the desired time, title or chapter, then press ENTER to confirm.

Note: 1) TIME searches for an exact time in the track.
2) TRACK searches for a desired title or chapter
3) For some DVD discs, the search function is unavailable.

SUBTITLE

During DVD playback, Press SUBT repeatedly to select from up to 4 subtitle languages.

Note: This function is disc specific (language will vary).

ANGLE

During DVD playback, Press ANGLE to view scenes from different camera angles. Press ANGLE to repeatedly to change from one camera angle to another.

Note: This function is disc specific.

SETUP

For the details, please refer to features setup.

REMOTE CONTROL OPERATION

UP & DOWN & LEFT & RIGHT (**▼▲◀▶**)

Use to highlight selections on a menu screen. When playing JPEG files, press to rotate the picture.

ENTER

Press this button to confirm selection on a menu screen.

TITLE

During DVD playback, press TITLE to display the DVD title menu or play the first title.

Note: this function is subject to the disc.

MUTE

During playback, press this button to turn off the sound output. Press it again to resume the sound output.

F. REV & F. FWD (**◀▶**)

The player can fast forward and backward playback at X2;X4;X8;X16 of normal speed. Press PLAY to resume normal playback.

OSD

Press to display disc information such as disc type, elapsed time.

AUDIO

Press to change between different channels.

NUMBER KEYS

To input the time, title, chapter and track numbers, then press ENTER to confirm.

ZOOM

Press this button to zoom the picture. Also, you can press cursor buttons to shift the picture.

CLEAR

Press CLEAR to delete numbers you have entered. Press once to delete one digit, press and hold to delete all digits.

REMOTE CONTROL OPERATION

MARK

MARK: During DVD,VCD, playback press the Button the menu will display as follow

Use **↑ ↓** to select the different bookmark

Press **ENTER** to input the current time.

If it has been input yet, the player will play from this time.



REPEAT

Each press of the REPEAT button will change the repeat mode.

During VCD, CD, MP3 playback, there are three modes: repeat Single, repeat All and Off.

During DVD, playback, there are three modes: Repeat Chapter, Repeat Title and Off.

Note: During VCD playback, the PCB mode must be set to Off

STOP

Press STOP once during playback to stop and hold playback.

Press PLAY to resume playback from the point you have pressed STOP.

Press STOP twice to stop playback completely.

MENU/PBC

When playing DVD disc, press this button to display ROOT MENU;

When playing VCD/SVCD, press this button to select PBC ON/OFF.

PLAY/PAUSE

Press PAUSE during playback to pause playback.

Press again to step forward one frame

Press PLAY to resume normal playback.

NOTE: the step function is not available during CD playback

VOL+ & VOL-

Press VOL + to enlarge the volume.

Press VOL - to reduce the volume.

PREV & NEXT (⏮, ⏭)

Press to SKIP to previous/next track or chapter during playback.

Trouble Shooting

REMOTE CONTROL IS INSENSITIVE OR DOES NOT WORK

Check the batteries of remote control and make sure that they are to be powerful and good conductivity

Direct the remote control to the IR sensor of the player.

Check whether there are some obstacles between the remote control and IR sensor.

ABNORMAL FUNCTION OPERATION

Turn off the power, and then turn on again.

DISC IS LOCKED IN THE TRAY

The disc can not be taken out of the tray when the player is reading, so you have to turn off the power and turn on again, and press OPEN/CLOSE key immediately to open the tray

Type of Disc	DVD/VCD/HDCD/CD/DVD+R/RW WMA, MP3 Kodak Picture CD	Frequency Response	CD: 4Hz 20KHz (EIA/T) DVD: 4Hz 22KHz (48K) 4Hz 44KHz (96K)
		S/N ratio	> 92 dB
		THD	< 0.04%
Video Format	MPEG 4	Output Terminals	Video (composite) output X1 2ch output X 1 Digital coaxial output X1
Audio Format	MPEG 1, LAYER 1, LAYER 2, LAYER 3	Power input	AC 110-240V 50Hz-60Hz 25W
Signal Output	Color System: PAL/NTSC Audio System: AC-3 Digital output Audio DAC 16bit/48KHz Video Output: 1 Vpp (at 75 ohm) Audio Output: 2 Vpp	Dimensions	Body size: W225 X D185 X H34 mm Packing size: W254 X D219 X H69 mm Net weight: 0.52Kg