 


LCD HDTV Owner's Manual

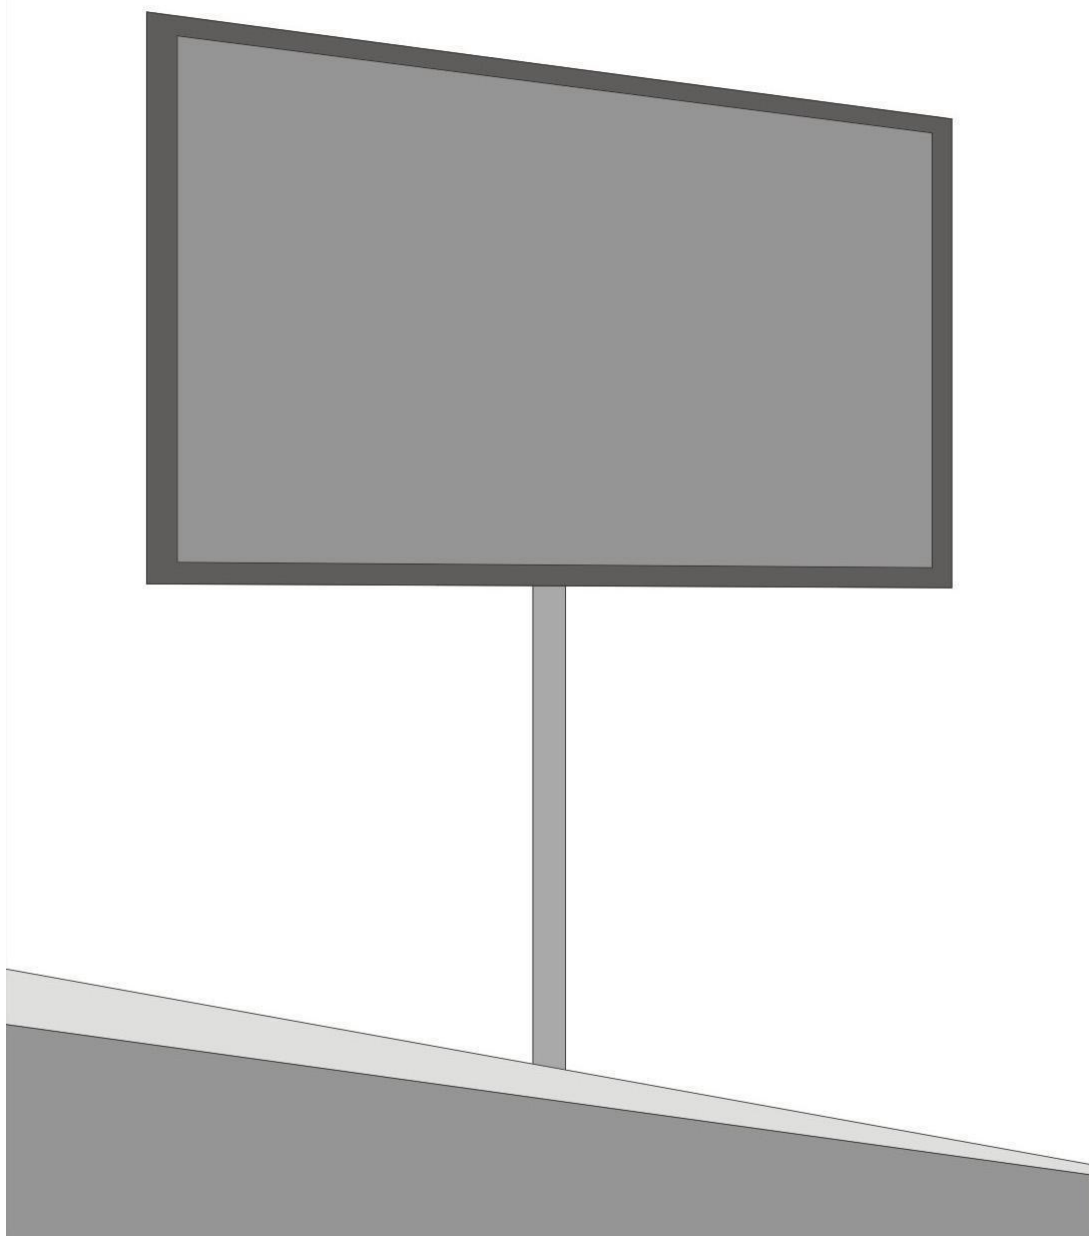

BEFORE USING THIS PRODUCT	2
SAFETY PRECAUTIONS	2
INTRODUCTION YOUR TELEVISION	5
SUPPLIED ACCESSORIES.....	5
TV CONTROL FUNCTIONS	6
SETTING UP THE REMOTE CONTROL.....	7
REMOTE CONTROL FUNCTIONS.....	8
INPUTS AND OUTPUTS	9
OSD MENU – MAIN MENU	10
1 PICTURE MENU	12
2 VIDEO MENU.....	14
3 AUDIO MENU.....	16
5 SETTING.....	19
6 SCREEN	20
7 PIP.....	22
GENERAL SPECIFICATIONS	24
SPECIFICATIONS FOR DIFFERENT CRUST.....	24
RGB FREQUENCY TABLE	25

Before Using This Product

Safety Precautions

Electrical energy can perform many useful functions, but it can also cause personal injuries and property damage if improperly handled. This product has been engineered and manufactured with the highest priority on safety. But IMPROPER USE CAN RESULT IN POTENTIAL ELECTRICAL SHOCK OR FIRE HAZARD. In order to prevent potential danger, please observe the following instructions when installing, operating and cleaning the product. To ensure your safety and prolong the service life of your LCD TV product, please read the following precautions carefully before using the product.

1. Read these instructions---All operating instructions must be read and understood before the product is operated.

2. Keep these instructions---These safety and operating instructions must be kept in a safe place for future reference.

3. Heed all warnings---All warnings on the product and in the instructions must be observed closely.

4. Follow all instructions---All operating instructions must be followed.

5. Attachments---Only use attachments/accessories specified by the manufacturer. Do not use attachments not recommended by the manufacturer. Use of improper attachments can result in accidents.

6. Power source---This product is intended to be supplied by a listed power supply indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the cable system.

7. Power cord protection---Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

8. Overloading---Do not overload wall outlets, extension cords, or convenience receptacles on other equipment as this can result in a risk of fire or electric shock.

9. Entering of objects and liquids---Never insert an object into the product through vents or openings. High voltage flows in the product, and inserting an object can cause electric shock and/or short internal parts. For the same reason, do not spill water or liquid on the product.

10. Servicing---Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

11. Damage requiring service---If any of the following conditions occurs, unplug the power cord from the AC outlet, and request a qualified service person to perform repairs.

- a. When the power cord or plug is damaged.
- b. When a liquid is spilled on the product or when objects have fallen into the product.
- c. When the product has been exposed to rain or water.
- d. When the product does not operate properly as described in the operating instructions.

Do not touch the controls other than those described in the operating instructions. Improper adjustment of controls not described in the instructions can cause damage, which often requires extensive adjustment work by a qualified technician.

- e. If the product has been dropped or the cabinet has been damaged in any way.
- f. When the product displays an abnormal condition or exhibits a distinct change in performance.

Any noticeable abnormality in the product indicates that the product needs servicing.

12. Replacement parts---In case the product needs replacement parts, make sure that the service person uses replacement parts specified by the manufacturer, or those with the same characteristics and performance as the original parts. Use of unauthorized parts can result in fire, electric shock and/or other danger.


13. Safety checks--- Upon completion of service or repair work, request the service technician to perform safety checks to ensure that the product is in proper operating condition.

14. Wall or ceiling mounting---When mounting the product on a wall or ceiling, be sure to install the product according to the method recommended by the manufacturer. This is a safety feature.

15. Stand---Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. Do not place the product on an unstable trolley, stand, tripod or table. Placing the product on an unstable base can cause the product to fall, resulting in serious personal injuries as well as damage to the product. When mounting the product on a wall, be sure to follow the manufacturer.



16. Careful move--- When a cart is used, use caution when the cart/apparatus combination to avoid injury from tip-over. Sudden stops, excessive force and uneven floor surfaces can cause the product to fall from the trolley

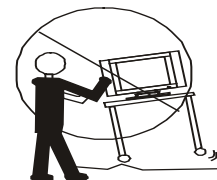


17. Lightning---Unplug this apparatus during lightning storms or when unused for long periods of time. For added protection for this television equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna. This will prevent damage to the equipment due to lightning and power-line surges.




18. Do not use this apparatus near water---for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like. Do not use immediately after moving from a low temperature to high temperature environment, as this causes condensation, which may result in fire, electric shock, or other hazards.



19. Clean only with dry cloth---Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

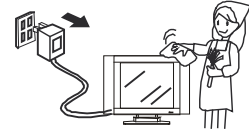


20. Ventilation---Do not block any ventilation openings. Install in accordance with the manufacturer instructions. The vents and other openings in the cabinet are designed for ventilation. Do not cover or block these vents and openings since insufficient ventilation can cause overheating and/or shorten the life of the product. Do not place the product on a bed, sofa, rug or other similar surface, since they can block ventilation openings. This product is not designed for built-in installation; do not place the product in an enclosed place such as a bookcase or rack, unless proper ventilation is provided or the manufacturer

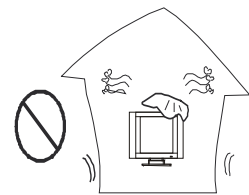

21. Heat sources---Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.



22. Panel protection---The LCD panel used in this product is made of glass. Therefore, it can break when the product is dropped or impacted upon by other objects. Be careful not to be injured by broken glass pieces in case the LCD panel breaks.

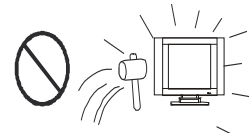






23. Pixel defect---The LCD panel is a very high technology product, giving you finely detailed pictures. Occasionally, a few non-active pixels may appear on the screen as a fixed point of blue, green or red. Please note that this does not affect the performance of your product.


Introduction Your Television

Supplied Accessories

The following items come with your LCD TV:

	Remote control
	Two AA batteries
	Power Cord
	User Manual
	Warranty Card


TV Control Functions

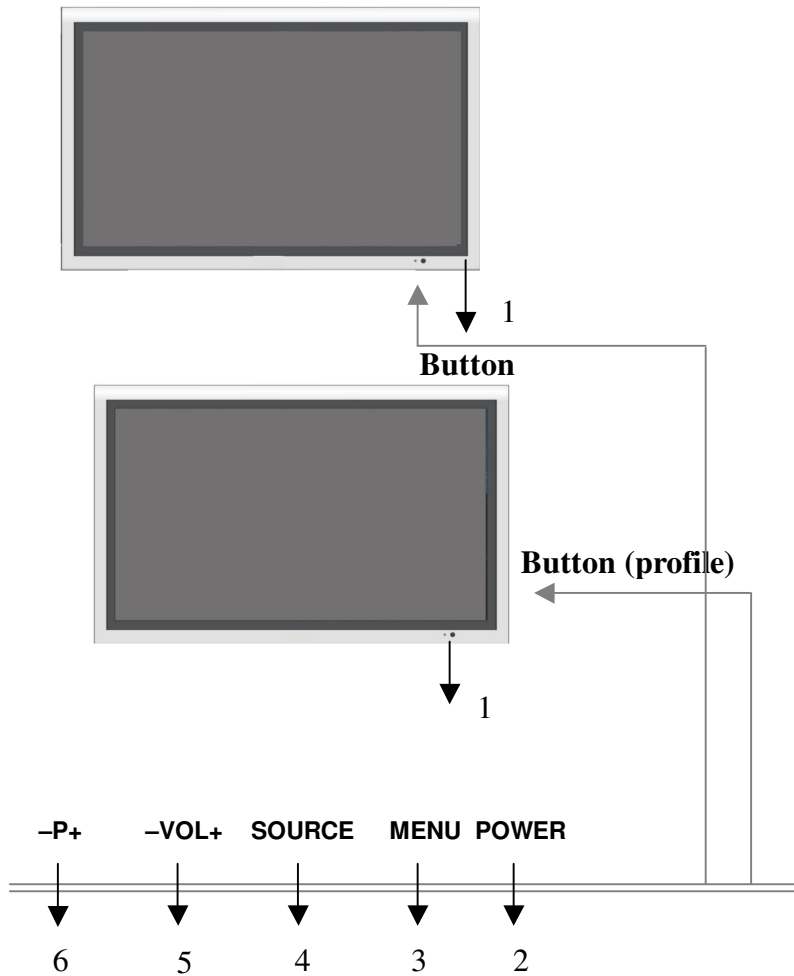

1	LED Indicators	The LED indicator light up in 2 different colors green, red. Each colors represent different status. Green - Power is on; Red - Standby.
2	POWER	Press this button to turn the power on/standby.
3	MENU	Press this button to display the OSD menu. It contains all the options to configure your TV's settings.
4	SOURCE	Video input selection. Press this button to display the menu for input selection mode.
5	-VOL+	Press to adjust the volume/when in the menu mode, these acts as navigation keys.
6	-P+	Press to change Program/when in the menu mode, these acts as navigation keys.


Setting Up the Remote Control

1. Open the lid of your remote control battery compartment on the back of the remote control.

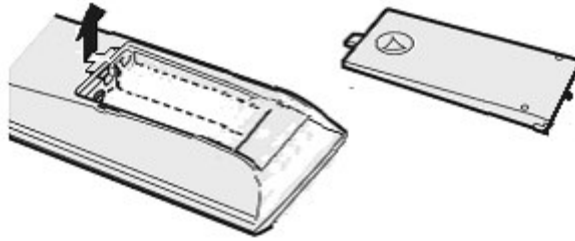

2. Insert two AA batteries. Use the (+) and (-) marks to guide you. The (+) marks on your batteries correspond to the (+) marks on the compartment. The (-) marks on your battery correspond to the (-) marks on the compartment.

Note: Do not mix new and old or different kind of batteries

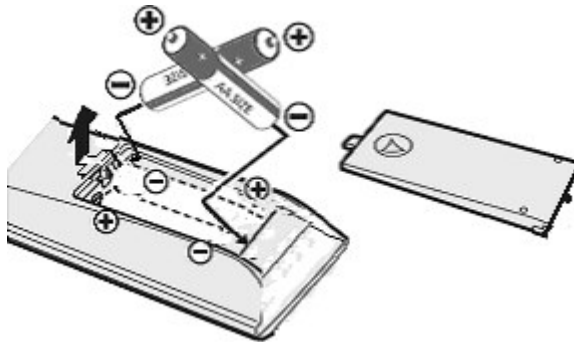

3. Put the lid back onto the remote control battery compartment.




Remote Control Functions

The table below explains each button's function.

	1	POWER	Power on/off
	2	NICAM	Switch the audio
	3	DISPLAY	Display current info
	4	TELETEXT	Teletext on/off
	5	INDEX	Request index page
	6	MIX	Teletext mix mode
	7	SIZE	Change display size
	8	Four color buttons	There are four color buttons and the colors are red, green, yellow, and blue from left to right. By pressing these buttons, you can enter relative pages fastly which is indicated in the last row of current teletext page
	9	WIN CH+	PIP program UP
	10	WIN CH-	PIP program DOWN
	11	MENU	The button to enter into or exit from menu
	12	P+	Program UP
	13	V-	Volume DOWN
	14	P-	Program DOWN
	15	PICTURE	Call out picture mode menu and adjust the picture mode
	16	0-9	Digital keys
	17	RECALL	Recall last program
	18	SLEEP	Set the sleep time
	19	PIP	PIP on/off
	20	P.AV	Select the source for PIP sub window
	21	SWAP	Main and PIP source swap
	22	P.FREEZE	Freeze PIP window
	23	WINDOW	Active the PIP window or main window for setting
	24	P.SIZE	PIP size
	25	P.Pos	PIP position
	26	M.WIN	Mutil window on/off
	27	POP	POP on/off
	28	PC	Select PC signal
	29	SOUND	Call out sound mode menu and adjust the audio mode
	30	V+	Volume UP
	31		To confirm that what you choosed
	32	EXIT	Exit the menu
	33	TV/AV	Input source selection
	34	FAV CH-	Favorite program DOWN
	35	FAV CH+	Favorite program UP
	36	FAV ON/OFF	Favorite program on/off
	37	CANCEL	Remove the teletext & program
	38	REVEAL	Show the hidden words
	39	HOLD	Toggle hold on or off for current display page
	40	SUBPAGE	Some page attach sub-page, press this button to view sub page
	41	FREEZE	Main window freeze
	42	ZOOM	Adjust aspect setting
	43	MUTE	Press MUTE to turn off audio and then press MUTE or VOL+ to turn on audio

Inputs and Outputs


Your LCD TV has five types of video connections. You should capitalize on the best connection available from your LCD TV to get the best display quality. For example, if you have a progressive DVD player that supports a component video connection, you should connect the DVD player to your LCD TV using component video connections instead of composite video or S-video connections.

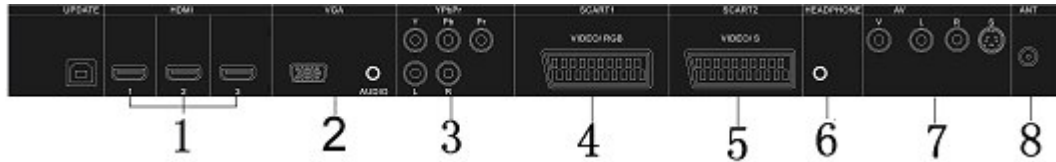

	Available Interface	Description	Recommended Devices
1	HDMI	HDMI input	HDTV, Set-top Box, Progressive HD DVD Player.
2	PC Video Input		
3	Component Inputs	Component support both High	
4	SCART1 input	SCART signal 1 input	
5	SCART2 input	SCART signal 2 input	
6	Headphone output		
7	AV & S-Video input		
8	TUNER		

OSD Menu – Main Menu

 1.1 Overview

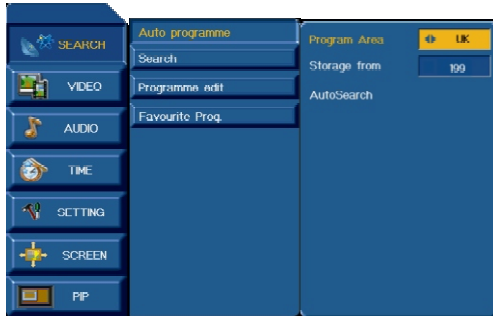

Menu Structure and Navigation

Use the following keys to navigate through the main menu:

- Press the **MENU** key to invoke the main menu as shown.
- Use **P-/P+** keys to select the main menu icon, the focused icon will be shown as a depressed button.
- Press the **V-/V+** keys to go to the corresponding menu.

Use the following keys to navigate through the secondary menu:

- Press the **P-/P+** keys to select menu item, the focused item will be highlighted in yellow.
- Press the **V+** keys to select the sub menu.
- Press the **P-/P+** keys to select sub menu item, the focused item will be highlighted in yellow.
- Press the **V-/V+** keys to select the selection, adjust item value.
- Exit the OSD mode by either of the following methods:
 - a) Wait for Time out.
 - b) Press the EXIT/MENU key.

Menu Icon Description



Search Menu

To adjust the TV search, including: Auto program, Search, Program Edit and Favorite Prog.



Video Menu

To adjust the video settings, including: Video mode, Color Temp, Contrast, Brightness, Colour, Sharpness, Hue and DNR.



 
Audio Menu

To adjust the audio settings, including: Audio mode, DynamicBass, Voice, AVC, Balance, Treble and Bass.




Time Menu

To adjust Timer, including: Clock, Off time and On time.




Setting Menu

 To adjust Language, Keypad Lock, Blue Screen, OSD Transparent and Master reset.



Screen Menu

 
To change Auto config, Manual config, VGA Mode, XGA Mode, ARC and NR




PIP Menu

To adjust Input, DW, PIP, PIP Input, Win.size and Win.position

 1 Picture Menu

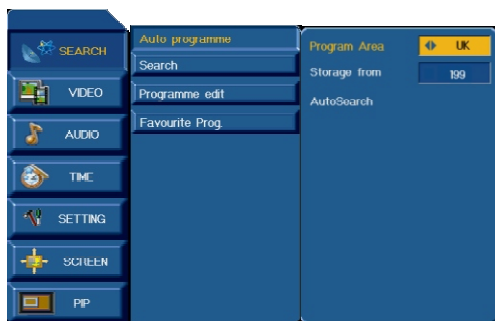

Using the SEARCH menu

- 1 Press **MENU** and then use **P-/P+** to select the search menu.(Input must be TV)
- 2 Press **V+ /**  key to access the submenu
- 3 Use the **P-/P+** to choose the Auto programme, search, Program edit, Favorite prog
- 4 Make the selections and settings as described in the following chapter
- 5 You can exit the menu by pressing the **EXIT** button

Basic Operation

1) Auto programme

Program Area.




Press **V-/V+** repeatedly to choose where you stay among UK,Gemany,France, Italy, Spain, Russia, Aust./Nz. Others

Press  to confirm your choice and return previous menu.

Press **MENU** to return main menu.

 
Storage from



Press **V+ /**  to access the Auto program

Press **P-/P+** to select the Storage from item

Auto Programme

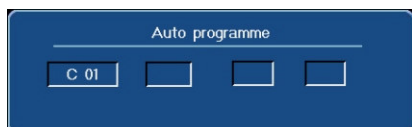

Press **V+ /**  to access the Auto programme

 
Press **P+** or **P-** to access the Auto Search item

Press **V+** to activate Auto searching

During the Automatic search and store process, sound and color system are automatically adjusted according to the TV signal. When auto search

is finished, or all programs storage spaces are occupied, or you have pressed **MENU** or **EXIT** during the searching process, the search will automatically stop.

2) Search

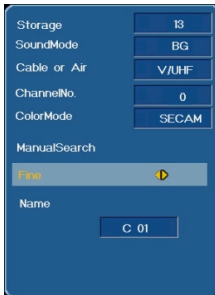

Press **V+**/ to access the Search submenu.

Press **P-/P+** to select Storage/ Sound mode / Channel No./Color mode/ Manual search/Fine/Name
press **V+ or V-** to make the settings as below

Storage Storage the program number

Sound mode Switch among B/G, I, D/K, L system

Channel number Display the current channel number

Colormode Switch among Auto, PAL, SECAM, NTSC, system

Press to confirm your choice and return previous menu

Press **MENU** to return main menu

Manual search



In TV mode, select Manual search option and press **V-/V+** to search programs within higher or lower frequency. Press to stop or press **MENU** to return previous menu during the searching process. After searching, the TV automatically store receivable channels and return the menu

Fine

Press **V-/V+** repeatedly to choose the fine extent which you expect

Press to store fine extent and to return previous menu

Press **MENU** to return main menu

Name

 
Press **V+**/ to access the name item


Press **P-/P+** repeatedly to select each letter or code and press **V-/V+** to move cursor position to edit channel name

Press to store channel name and press **V+** to edit the channel name


Press to confirm your choice and return previous menu

3) Programme edit



Press **V+**/ to access the programme edit item
 Press **V-/V+**, **P-/P+** to select program
 Press the **Red** button to delete selected program
 Press the **Green** button to copy selected program
 Press the **Yellow** button to move selected program
 Press the **Blue** button to skip selected program
 Press **MENU** to return previous menu


4) Favorite Prog.

Press **V+**/ to access the Favorite program item
 Press **P-/P+** repeatedly to select the favorite program
 Press **V-/V+** to select a target program as the favorite program is to be exchanged with the current program
 Press **MENU** to return previous page

2 Video Menu






Using the Video menu

- 1 Press **MENU** and then use **P-/P+** to select the video menu
- 2 Press **V+**/ to access the submenu
- 3 Use the **P-/P+** to choose the Video mode, Color temp, Contrast, Brightness, Colour, Sharpness, Hue.
- 4 Make the selections and settings as described in the following chapter
- 5 You can exit the menu by pressing the **EXIT** button


Basic Operation

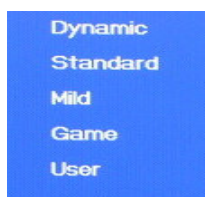- 1) Video mode




Press **V+**/ to access the video mode
 Press **P-/P+** repeatedly to choose Dynamic, Standard, Mild, Game, user mode.
 Press  to return previous menu
 Press **MENU** to return main menu

2) Color Temp

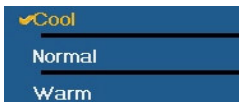

Press **V+ /**  to access the color temp item


Press **P-/P+** repeatedly to choose Cool, Normal, Warm mode

Press  to return previous menu


Press **MENU** to return main men

3) Contrast



Press **V+ /**  to access the contrast item

Press **V-/V+** repeatedly to adjust the picture's contrast

Press  to return previous menu

Press **MENU** to return main men

4) Brightness



Press **V+ /**  to access the Brightness item


Press **V-/V+** repeatedly to adjust the picture's Brightness

Press  to return previous menu

Press **MENU** to return main men

5) Color



Press **V+ /**  to access the Color item

Press **V-/V+** repeatedly to adjust the picture's Color

Press  to return previous menu


Press **MENU** to return main men

6) Sharpness



Press **V+ /**  to access the Sharpness item

Press **V-/V+** repeatedly to adjust the picture's Sharpness

Press  to return previous menu

Press **MENU** to return main menu

7) Hue (Only available for NTSC signal input)



This option is for adjust the picture's Hue

8) Back Light




This option is for adjust the back light

3 Audio Menu





Using the Audio menu

- 1 Press **MENU** and then use **P-/P+** to select the Audio menu
- 2 Press **V+/** to access the submenu
- 3 Use the **P-/P+** to choose the Audio mode, DynamicBass, Voice, AVC, Balance, Treble, Bass
- 4 Make the selections and settings as described in the following chapter
- 5 You can exit the menu by pressing the **EXIT** button


Basic Operation

1) Audio mode

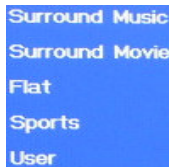

Press **V+/** to access the Audio mode


Press **P-/P+** repeatedly to choose Surround Music, Surround Movie, Flat, Sports, user mode.

Press  to return previous menu


Press **MENU** to return main menu

2) DynamicBass



Press **V+/** to access the Dynamic Bass item


Press **P-/P+** repeatedly to select Dynamic Bass On/Off

Press  to return previous menu


Press **MENU** to return main menu

3) Voice



Press **V+/** to access the voice item

Press **P-/P+** repeatedly to select voice On/Off


Press  to return previous menu

Press **MENU** to return main menu


4) AVC



This function is for controlling volume automatically

Press **V+**/ to access the AVC item


Press **P-/P+** repeatedly to select AVC On/Off

Press  to return previous menu


Press **MENU** to return main menu

5) Balance



Press **V+**/ to access the Balance mode


Press **V-/V+** repeatedly to adjust the balance between the left and right audio channel

Press  to return previous menu


Press **MENU** to return main menu

6) Treble



Press **V+**/ to access the Treble mode


Press **V-/V+** repeatedly to adjust the accompanying sound's treble

Press  to return previous menu


Press **MENU** to return main menu

7) Bass



 
Press **V+**/ to access the Bass mode

Press **V-/V+** repeatedly to adjust the accompanying sound's bass


Press  to return previous menu

Press **MENU** to return main menu

4 Time

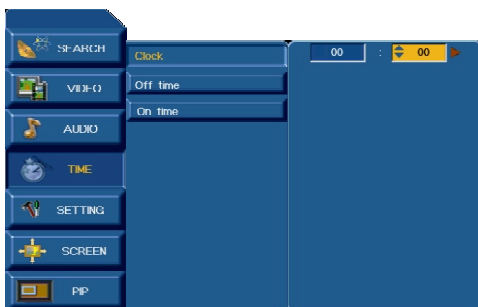



Using the Time menu

- 1 Press **MENU** and then use **P-/P+** to select the Time menu
- 2 Press **V+/** to access the submenu
- 3 Use the **P-/P+** to choose the Clock, Off time, On time
- 4 Make the selections and settings as described in the following chapter
- 5 You can exit the menu by pressing the **EXIT** button


Basic Operation




1) Clock



- Press **V+/** to access the Clock item
- Press **P-/P+** repeatedly to adjust the clock value
- Press  to return previous menu

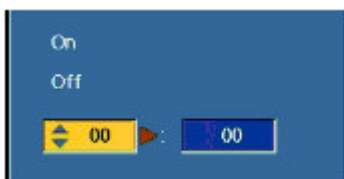


2) Off Time



- Press **V+/** to access the Off time item
- Press **V-/V+** repeatedly to turn Off time on or off. If selected on, Press **V+/** to activate the time adjustment then press **P-/P+** to adjust the Clock value
- Press  to return previous menu
- Press **MENU** to return main menu

1) On time




- Press **V+/** to access the On time item
- Press **V-/V+** repeatedly to turn On time on or off. If selected on, Press **V+/** to activate the time adjustment then press **P-/P+** to adjust the Clock value and to preset the volume and the Program When you turn on TV next time
- Press  to return previous menu
- Press **MENU** to return main menu

5 Setting




Using the Setting menu

- 1 Press **MENU** and then use **P-/P+** to select the Setting menu
- 2 Press **V+/** to access the submenu
- 3 Use the **P-/P+** to choose the Language, Keypad lock, Blue Screen, OSD Transparent, Master Reset
- 4 Make the selections and settings as described in the following chapter
- 5 You can exit the menu by pressing the **EXIT** button


Basic Operation

1) Language




Press **V+/** to access the language item

Press **P-/P+** repeatedly to choose English, Francais, Deutsch, Espanol, Italiano, Pyccknn, Dutch, Protuguese, Swedish.

Press  to return previous menu

Press **MENU** to return main menu

2) Keypad Lock

Press **V+/** to access the keypad lock item


Press **P-/P+** repeatedly to choose lock or unlock, When the keypad lock are locked you can not control the TV by press buttons on TV

Press  to return previous menu


Press **MENU** to return main menu

3) Blue Screen



Press **V+ /**  to access the Blue Screen item


Press **P-/P+** repeatedly to set the blue screen to On or Off when there is No signal input

Press  to return previous menu


Press **MENU** to return main menu

4) OSD Transparent



Press **V+ /**  to access the OSD transparent item

Press **P-/P+** repeatedly to change OSD transparent

Press  to return previous menu

Press **MENU** to return main menu


5) Master Reset

Press **V+** to reset all the user values to default values

6 Screen




Using the Screen menu


- 1 Press **MENU** and then use **P-/P+** to select the Screen menu
- 2 Press **V+ /**  to access the submenu
- 3 Use the **P-/P+** to choose Auto config, Manual config, VGA Mode, XVGA Mode, ARC, NR
- 4 Make the selections and settings as described in the following chapter
- 5 You can exit the menu by pressing the **EXIT** button

Basic Operation

1) Auto config. (This is for VGA input only)


Press **V+ /**  to access the screen config item



Press **V+** config the screen automatically

Press  to return previous menu.

Press **MENU** to return main menu

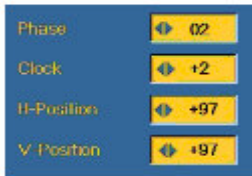2) **Manual config. (This is for VGA input only)**




Press **V+/** to access the Manual config item
Press **P-/P+** to choose phase, Clock, H-position, V-position items
Press **V-/V+** to adjust picture's horizontal position and vertical position
Press  to return previous menu
Press **MENU** to return main menu

3) **VGA Mode (This is for VGA input only)**



This is for PC mode to select an optimal VGA resolution from 600x480, 640x400, 720x400

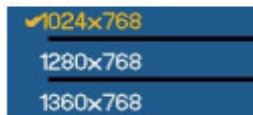

4) **XGA Mode (This is for VGA input only)**



This is for PC mode to select an optimal XGA resolution from 1024x768, 1280x768, 1360x768



5) **ARC (aspect ratio choice)**



Press **V+/** to access the ARC item
Press **P-/P+** to Switch between the spectacle, original, 4:3,16:9,14:9,Zoom mode
Press  to return previous menu.
Press **MENU** to return main menu

6) **NR (Noise reduction)**




Press **V+/** to access the NR item
Press **V-/V+** to choose a value to reduce the noise, higher NR will cause less image sharpness.
Press  to confirm and return previous menu.
Press **MENU** to return main menu

7 PIP




Using the PIP menu

- 1 Press **MENU** and then use **P-/P+** to select the PIP menu
- 2 Press **V+/** to access the submenu
- 3 Use the **P-/P+** to choose the Input, DW, PIP, PIP input, Win.size, Win.Position
- 4 Make the selections and settings as described in the following chapter
- 5 You can exit the menu by pressing the **EXIT** button


Basic Operation

1) Input

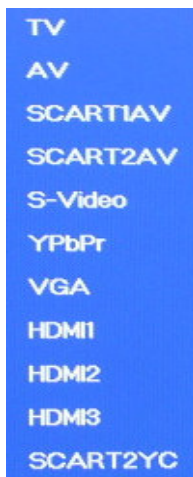


Press **V+/** to access the Input item



Press **P-/P+** to choose TV, AV, SCART1AV, SCART2AV, S-Video, YPbPr, VGA, HDMI1, HDMI2, HDMI3, SCART2YC

Press  to return previous menu

Press **MENU** to return main menu

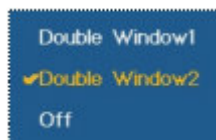

 2) DW



Press **V+/** to access the Double window item
Press **P-/P+** to choose Double window1, Double window2, OFF
Press  to return previous menu
Press **MENU** to return main menu



3) **PIP**





Press **V+/** to access the PIP item
Press **P-/P+** to turn the PIP On or Off
Press  to return previous menu
Press **MENU** to return main menu

4) **PIP Input**





Press **V+/** to access the PIP Input item
Press **P-/P+** to select the PIP input source from TV, AV, SCART1AV, SCART2AV when you access the PIP mode
Press  to return previous menu
Press **MENU** to return main menu

5) **Win.size**

Press **V+/** to access the window size item
Press **V-/V+** to adjust the PIP window size
Press  to return previous menu
Press **MENU** to return main menu

6) **Win.position**

Press **V+/** to access the window position item
Press **P-/P+** and **V-/V+** to adjust the PIP window position. PIP window position can be placed upper left, upper right, lower left, lower right
Press  to return previous menu
Press **MENU** to return main menu

General Specifications

LCD Panel	Screen Size	42" diagonal
	Resolution	(H) 1920 X (V) 1080 pixels
	Display Color	16, 7M Color
	Aspect Ratio	16: 9 WIDE
Input/Output	Video in	1 Vp-p/75 Ω , L/R Audio Vp-p/75 Ω
	S-VIDEO in	Y 1 Vp-p/75 Ω , C 0.7 Vp-p/75 Ω
	Y / Pb/Cb / Pr/Cr	Y 1 Vp-p/75 Ω , Cb/Pb / Cr/Pr 0.7 Vp-p/75 Ω , L/R Audio
	SCART in	SCART X 2
	RGB Video + Audio in	VGA X 1 + Phone Jack X 1
	HDMI in	HDMI X 3
	Antenna input	75 Ω
Audio	Built-in speaker	10W X 2
Compatibility	Color Temperature	Normal/Warm/Cool
	Progressive Scan	Yes
	3-2 pull down	Yes
Compatibility	Color system	PAL, NTSC, SECAM
	SDTV/HDTV	480i, 480p, 576i, 576p, 1080i, 720p, 1080i, 1080P
	PC	VGA/SVGA/XGA
	Operative temperature	32°F ~ +105°F
	Storage temperature	14°F ~ +120°F

Specifications for different crust

42"

Power	AC 100~240V, 260W
Dimension	*1 (W) 40.25 X (D) 10.30 X (H) 29.30 inch (with speaker/stand)
	*2 (W) 42.05 X (D) 12.20 X (H) 31.61 inch (with speaker/stand)
Net Weight	*1 28.0kg
	*2 27.0kg



***1**



***2**

RGB Frequency Table

The table below shows the frequency ranges supported by the LCD TV. It supports from VGA to XGA. If you are connecting your PC to the LCD TV via the RGB port, please use the following table in order to setup your PC's VGA output for maximum optimization.

Source	Resolution	Vertical Frequency
HDMI input	480i / P	60
	576i / P	50
	1080i	50 / 60
	720p	50 / 60
	1080P	50 / 60
Component (Y/PbCb/PrCr)	480i / P	60
	576i / p	60
	1080i	50 / 60
	720p	50 / 60
	1080P	50 / 60
PC input	640 x 480	60
		72
		75
		85
	720 x 400	75
		85
	800 x 600	56
		60
		70
		75
		85
	1024 x 768	60
		70
		75
		85
	1360 x 768	60
1280 x 1024	60	