 


60W 2.1 SOUNDBAR

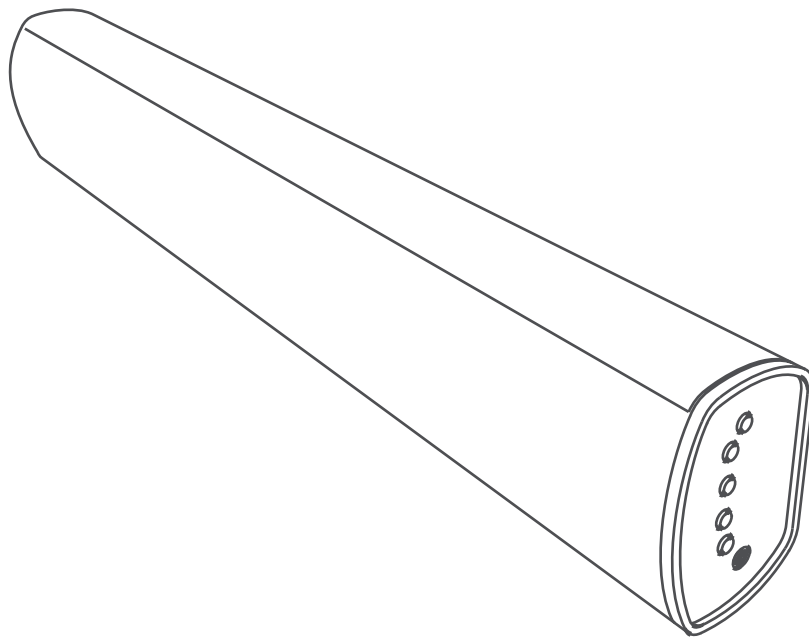

MODEL: GDSB04BT60

USER MANUAL



Goodmans

1 Welcome



2 60W 2.1 Soundbar

- 2.1 In The Box
- 2.2 Side View
- 2.3 Rear view
- 2.4 Remote Control

3 Quick Setup

- 3.1 Power On/Off and Function Selection
- 3.2 Auto Power Off
- 3.3 Adjusting The Volume

4 Operation

- 4.1 Selecting LINE IN
- 4.2 Selecting AUX IN
- 4.3 Selecting Optical in
- 4.4 Selecting Bluetooth

5 Troubleshooting

6 Technical Specifications

7 Customer Support

1 Welcome



Thank you for choosing this Goodmans product. We've been making electronics for the British people for 70 years. Each of our projects has been carefully designed to be great at what it does and this one is no exception. We hope you enjoy your new 60W 2.1 Soundbar

2 Your 60W 2.1 SOUNDBAR

2.1 In The Box

Carefully remove your 60W 2.1 Soundbar from the packaging.

Inside the box you will find:

- 60W Soundbar
- Optical Cable
- Quick Start Guide
- Guarantee Booklet
- 3.5mm Line-in Cable
- 3.5mm To RCA Cable
- RCA To RCA Cable
- Remote Control
- Wall Mount Kit

If any of these items are missing, contact customer support.
Visit: www.goodmans.co.uk/support



Mains Power

Your 60W Soundbar requires a mains supply of 230-240V AC ~ 50Hz. Please ensure that your mains supply is compatible before use. Disconnect the Power Cord from the mains when not in use.

Position of 60W Soundbar

Place on a flat, stable surface that is not subject to vibrations. Avoid the following locations:

- Where it is exposed to direct sunlight
- Where it is close to heat radiating sources
- Where the humidity is high and ventilation is poor
- Where it is dusty



2.2 Side View

A POWER

Press to power the soundbar on or off.

B SOURCE

Press to select input.

C VOLUME

Press to increase the volume.

D VOLUME

 
Press decrease the volume.

E BLUETOOTH

Press to pair the Bluetooth device with soundbar after access to BT mode.

F LINE IN SOCKET

Connect external audio source with 3.5mm audio cable.

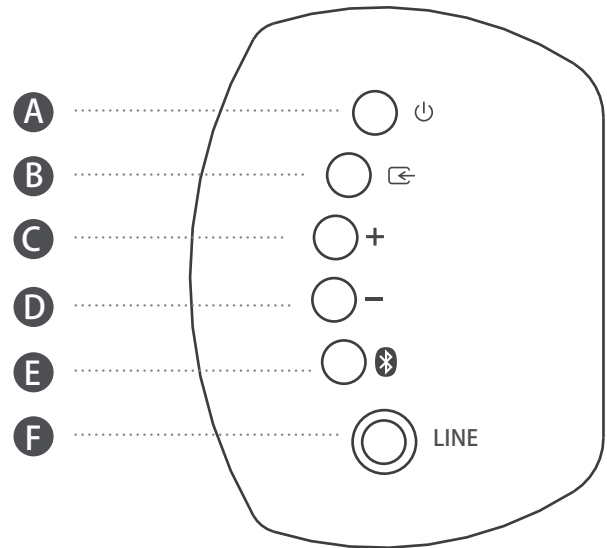

2.3 Rear View

J AUX INPUT SOCKET

 
Connect external audio sources with RCA audio cable.

L OPTICAL INPUT SOCKET

Connect external audio sources with optical cable.


K DC MAIN INPUT SOCKET

Connect external mains adaptor to this socket.

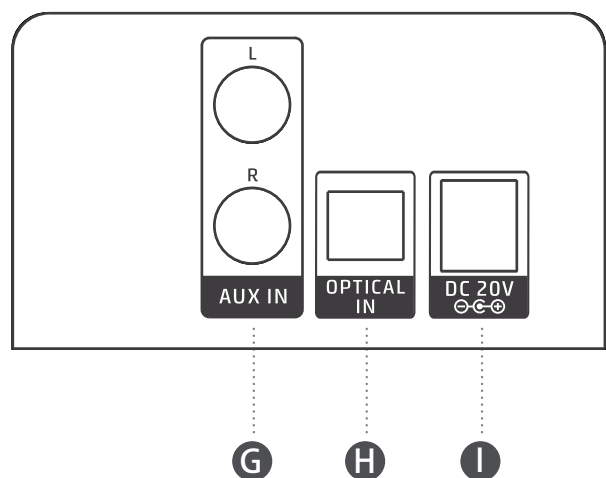



 2.4 REMOTE CONTROL

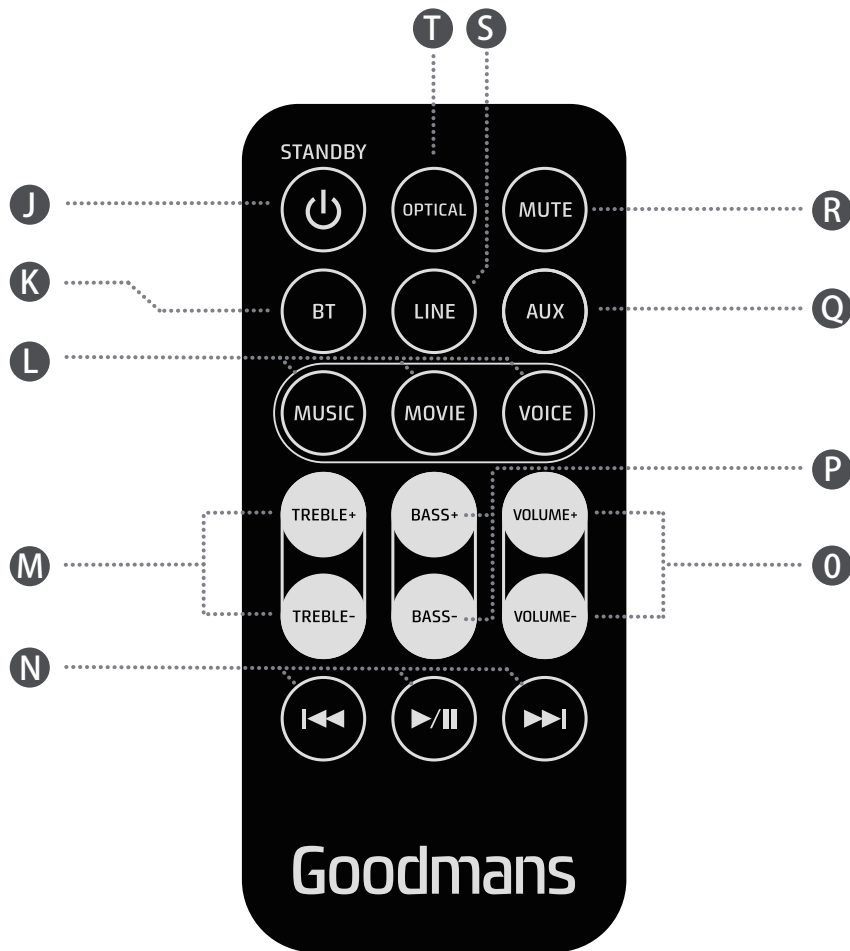




- | | |
|--|--|
| J STANDBY
Press to turn on/off. | P BASS
Increase or decrease bass settings. |
| K BT
Press to select BT mode. | Q AUX
Press to select AUX IN mode. |
| L DSP PRESETS
Press to access to Music/Movie/Voice mode. | R MUTE |
| M TREBLE
Increase or decrease the treble settings. | S LINE
Press to select LINE IN mode. |
| N In BT mode
Press to Skip/Back/Play/Pause/Stop the track. | T OPTICAL
Press to select OPTICAL IN mode. |
| O VOLUME
Increase or decrease the volume. | |

3 Quick Setup



3.1 Power On/Off and Function Selection

 1. This 60W Soundbar is supplied with a mains adaptor. To connect the power, insert the small end in the rear of the unit(DC20V).
2. Insert the UK plug into a household power socket, and switch the power on.
3. Press the  button to turn the unit on.
4. Press the  button to select Bluetooth/Line in/Aux/Optical mole.

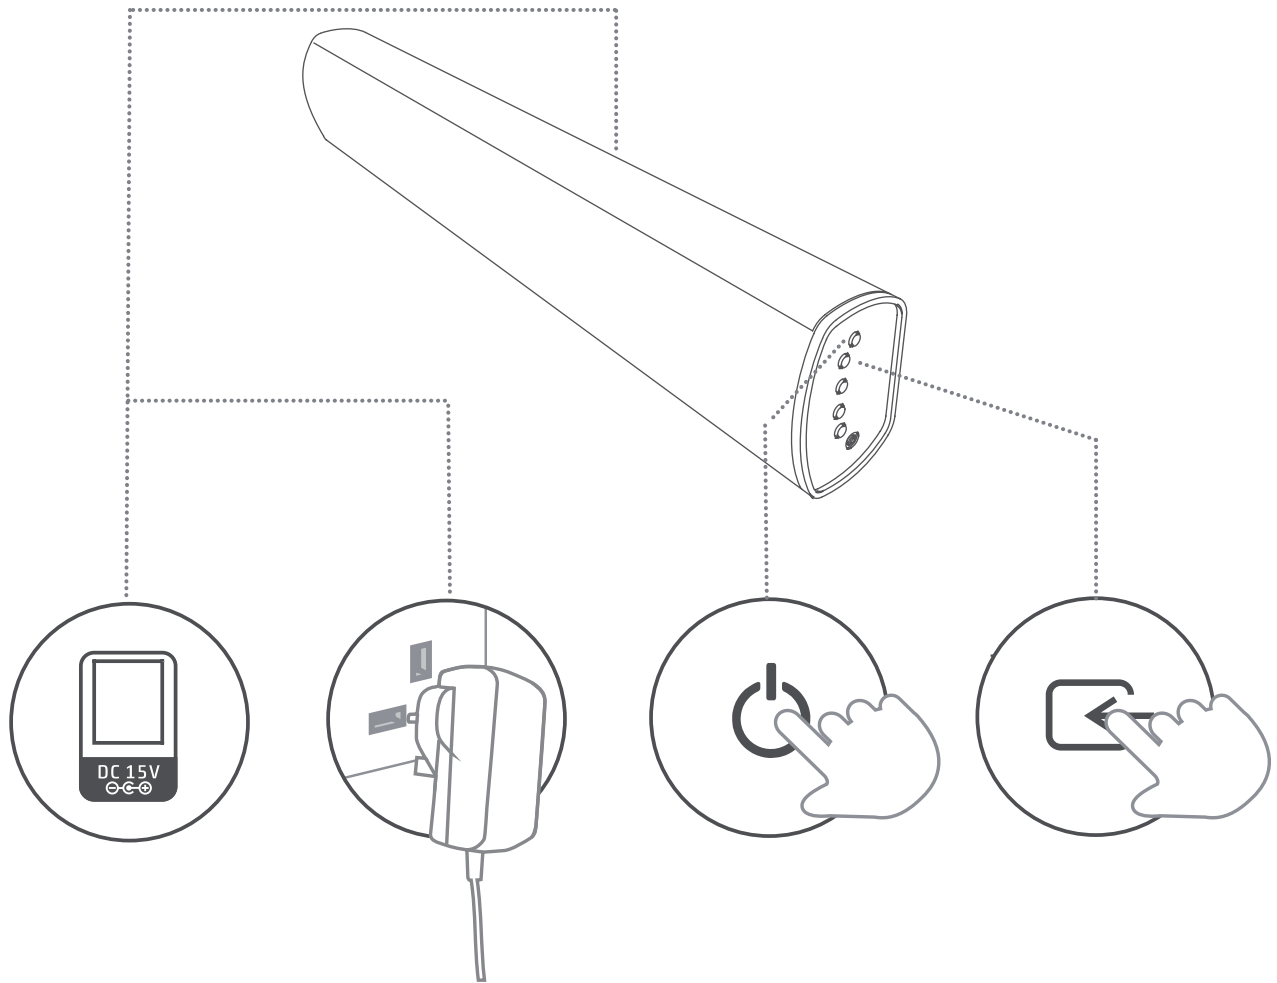


3.2 Auto Power Off

If no audio signal is continuously detected from the selected mode in for more than 170 minutes, the unit will power-off automatically.



 3.3 Adjusting the Volume

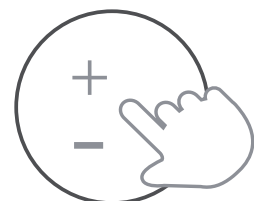Press the + button or - button on the side of the soundbar to adjust the volume to a comfortable level.








4.1 Selecting LINE IN

1. Press the  button in the side of the soundbar or alternatively press the STANDBY button on the remote control, so that the blue LED is illuminated.
2. Press the  button and select LINE IN mode or press the LINE IN button on your remote control.
3. Adjust volume to the desired level.




4.2 Selecting AUX IN

1. Press the  button in the side of the soundbar or alternatively press the STANDBY button on the remote control, so that the blue LED is illuminated.
2. Press the  button and select AUX IN mode or press the AUX button on your remote control.
3. Adjust volume to the desired level.

4.3 Selecting Optical in

1. Connect one end of Optical cable to the back of the soundbar and the other end to the OPTICAL OUTPUT of your TV.
2. Press the  button in the side of the soundbar or alternatively press the STANDBY button on the remote control, so that the blue LED is illuminated.
3. Press the appropriate OPTICAL button on your remote control to select the input.
4. Adjust volume to the desired level.

4.4 Selecting Bluetooth

1. Press and hold the  button on the unit or alternatively press the STANDBY button on the Remote Control.
2. Press the  button and select Bluetooth mode or press the BT button on the Remote Control to switch Bluetooth mode.
3. Press the  button on the unit. The blue light will flash quickly.
4. Use the controls on your Bluetooth device to select (GDSB04BT60) in your Bluetooth settings to pair. If your device requests a password, enter the "0000" . Refer to your device's user manual for instructions on pairing and connecting Bluetooth devices.

5 Troubleshooting



Problem	What to do
Soundbar does not respond (no power).	Check the mains power cable and make sure it is plugged into a suitable power outlet. Check that the mains power supply is switched on. Connect the power to a different power outlet.
No sound.	Check the Soundbar volume control is not at minimum. Check that the Soundbar is not set to MUTE. If you are connecting to the Soundbar using a headphones port on your external audio device then check the volume is turned up on that device.
The Remote Control does not work.	Replace the battery. Make sure there are no obstacles obscuring the Soundbar.
No sound in Bluetooth mode.	Check that the Soundbar is Paired with a Bluetooth device. If prompted enter the code '0000'.

6 Technical Specification

Power Supply	AC 230V,50 HZ.
Power Source of Remote Control	DC 3V, 1 x CR2025 Battery (supplied)
Power Consumption	60W
Audio Power	Woofer 40W Left Channel 10W Right Channel 10W
Impedance	2x Woofer 25W 8Ω 1x Left Channel 20W 8Ω 1x Right Channel 20W 8Ω

7 Customer Support

Our customer service team is available for technical or guarantee support. Visit www.goodmans.co.uk/support