Goodmans

User Manual

DVD/CD Player

Model:GDVD166

















Before attempting to connect, operate or adjust this player, please read these instructions completely.

Please save this manual.

Contents

Introduction	
Safety is Important	
Safety Instructions	5
Servicing	
Electrical Information	6
Parts and Controls	7
Getting Started	9
In The Box	
Turning the DVD Player On/Off	
Turning the Surround Sound Unit On/Off	
Screen Saver	
The Remote Control	
Installing the batteries	
Using the Remote Control	
Connecting External Equipment	11
Connecting to a stereo television	11
Connecting to a mono television	
Connecting to a TV with S-video or component video input terminals.	
Connecting to a stereo audio system	
Compatible Discs	
Region code	
Inserting a Disc	
Menu systems	
Language Setup	
Screen Setup	
TV Type	
4:3 PS (Pan Scan) Mode	
4:3 LB (Letter box) Mode	
16: 9 Mode	
TV System	
Video Out	
Brightness	
Contract	21

Audio Setup	22
Custom Setup	
Parental Control	
Change Password	24
Angle Mark	24
Default	24
DVD Player Functions	
Pausing Playback	25
Viewing Frame by Frame	25
Stopping Playback	25
Resume Function	
Fast Search Forward/Reverse	26
Skipping Chapters or Tracks	26
Slow Motion (DVD only)	
Special Functions	27
Search DVDs	
Zoom Function (DVD only)	
Title Button (DVD only)	28
Menu Button	
Repeat Function (DVD)	
Repeat Function (CD)	
Repeat A-B	
Selecting a Scene Angle	
Subtitle Function	
Audio Function	. 30
OSD Function	31
Mute Button	32
R/L Button	32
Playing Audio Discs	33
GOTO - Audio Discs	. 34
Program Function - Audio Discs	
Playing Picture CDs or JPEG Picture CDs	36
Care and Maintenance	37
Handling Discs	. 37
Help and Advice (dvd player)	38
Guarantee	

Introduction

Thank you for purchasing this product which has been designed and manufactured to give you many years of trouble-free service.

You may already be familiar with using a similar product, but do please take time to read these instructions - they have been written to ensure you get the very best from your purchase.

Safety is Important



To ensure your safety and the safety of others, please read the Safety Instructions **before** you operate this product.

Keep this information in a safe place for future reference.



WARNING: THIS PRODUCT UTILISES A CLASS 1 LASER. USE OF CONTROLS, ADJUSTMENTS OR PROCEDURES NOT LISTED IN THIS USER GUIDE MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.



This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

Safety Instructions



Warning: Ensure that you read all the safety instructions before using your DVD Player.

Power Source

This appliance must only be connected to a 100-240V AC, 50/60Hz mains supply.

Safety Considerations

- Position the power lead and other connected leads, so that they
 are not likely to be walked on, pinched or where items can be
 placed on or against them.
- Do not use this appliance in humid or damp conditions. Do not place water filled items such as a vase on top of the appliance.
- Ensure that naked flame sources, such as candles are not placed on top of the appliance.

Cleaning

- Ensure that the appliance is disconnected from the mains supply before it is cleaned.
- Do not use any liquids or aerosol cleaners, as this may damage the unit.
- The appliance should be cleaned with a soft, dry cloth.

Ventilation

- Do not cover any of the ventilation slots on the unit, as this may cause the appliance to overheat.
- Never allow children to insert foreign objects into holes or slots on the appliance.

Battery Disposal

- · Please ensure that used batteries are disposed of safely.
- · Please do not dispose of in a fire or with household waste.
- · Please check with local authority for disposal regulations.

Safety Instructions - Continued

Servicing

- There are no user-servicable parts in your DVD player.
- When servicing, refer to qualified service personnel.
- Consult your dealer if you are ever in doubt about the installation, operation, or safety of your equipment.


Electrical Information

Make sure that the voltage of your electricity supply is the same as that indicated on the rating plate. This appliance may be fitted with a non-rewireable plug. If you need to change the fuse in a non-rewireable plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the plug must not be used until a replacement is obtained.

If the plug has to be changed because it is not suitable for the socket, or it becomes damaged, it should be removed and an appropriate plug fitted following the wiring instructions below. The waste plug must be disposed of safely, as insertion into a mains socket is likely to cause an electrical hazard.



CAUTION: IF A 13 AMP (BS1363) PLUG IS USED, A 3 AMP FUSE (BS1362) MUST BE FITTED.

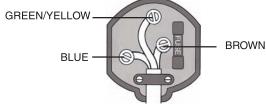


As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

- The blue wire must be connected to the terminal marked with the letter N or coloured black.
- The brown wire must be connected to the terminal marked with the letter L or coloured red.
- The green and yellow wire must be connected to the terminal marked with the letter E.

Parts and Controls


DVD Front panel

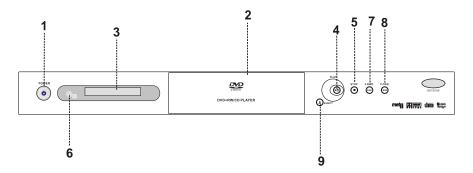


- 1.Power button
- 2.Disc tray
- 3.VFD Display
- 4.Play/pause button
- 5.Stop button

- 6.Remote control receiver
- 7. Fast backward search/Skip
- 8. Fast forward search/Skip forward
- 9. Eject button

DVD Rear Panel

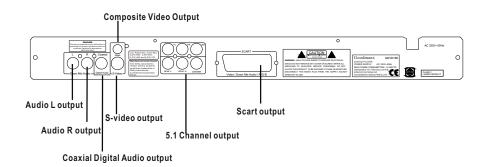

Remote Control DVD

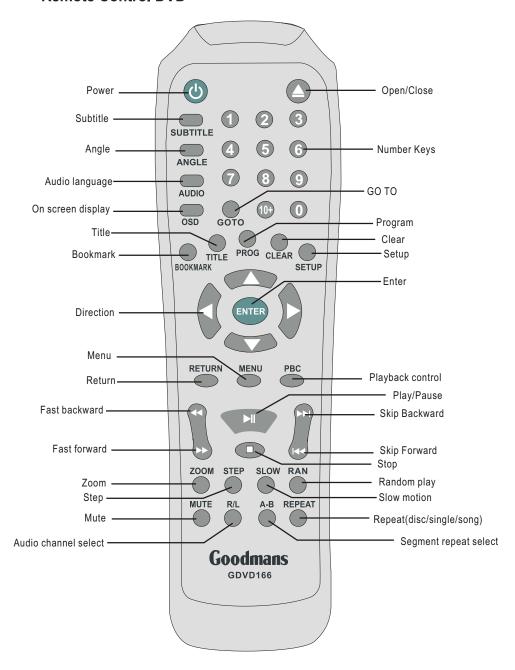

Getting Started

Remove your DVD player carefully from the box. You may wish to store the packaging for future use.

In The Box

Included in this package should be:

Goodmans DVD player

Remote control

2xAAA Batteries

User guide

Scart cable

If any of these items be missing, please contact the helpline on **0870 873 0080**.

NOTE

Note: Unless otherwise stated, all references to buttons refer to the remote control.

Turning the DVD Player - On/Off

Press the **Power** button on the front of the unit or the **Power** button on the remote control.

NOTE

Note: when you use the power button to turn the unit off, it is not disconnected from the mains AC supply. This state is called the standby mode.

The Remote Control

Installing the batteries

Locate the remote control, and remove the battery cover.

Insert two AAA size batteries into the compartment.

NOTE

Note: Refer to the diagram inside the battery compartment for correct installation of batteries.



DVD Player Remote

We recommend the use of Ever Ready Energizer batteries.



Using the Remote Control

To use the remote control, point it at the front of the DVD player, towards the sensor situated to the left of the DVD drawer.

The remote control has a range of up to 6 metres from the DVD player and at an angle of up to 45 degrees.

Do not block the path of the beam from the remote control to the DVD player.

NOTE


Note: Sunlight or very bright light will reduce the remote control sensitivity.

Connecting External Equipment

Connecting to a stereo television

There are two ways to connect your DVD player to a stereo television.


1. Use the RCA lead to connect the Audio left/right and video sockets on the DVD player to the corresponding sockets on the TV.

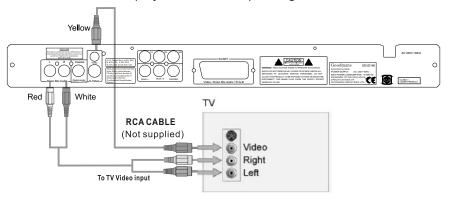

NOTE

Note: The picture quality can be improved by using a S-video lead instead of the RCA video lead mentioned above.

2. Using the supplied Scart Cable, Connect the Scart socket on the DVD to the Scart socket on the TV.

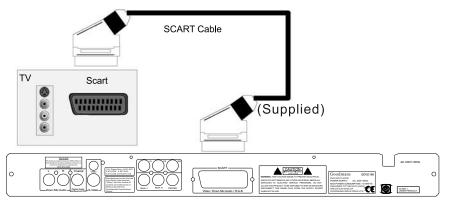


NOTE

Note: Do not use a combination of options 1 and 2, as this may produce picture interference.

Connecting to a mono television




Note: The following information is for guidance only and may not exactly match your DVD player

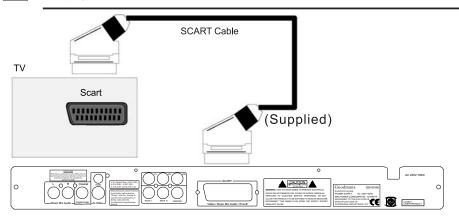

There is only one way to connect your DVD player to a mono television.

1. 21 Pin Scart (DVD) to 21 Pin Scart (TV).

Connecting to a Amplifier input

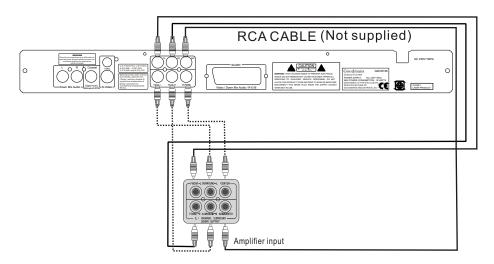

Connecting to a TV with S-video input terminals



NOTE: You do not have to connect anything to the VIDEO OUT terminal if you have connected the unit to your television with the S-VIDEO OUT terminals.


S VIDEO OUT

The S-video terminal achieves a stronger picture than the VIDEO OUT terminal by separating the chrominance (C) and luminance (Y) signals. (results depend on the television used.)

Connecting to a stereo audio system



Note: The following information is for guidance only and may not exactly match your DVD player

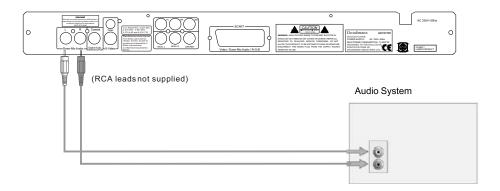

There is only one way to connect your DVD player to an audio system.

1. Connect the left and right audio output on the DVD to left and right audio in on the Audio System.

Connecting to an amplifier or pro logic system.

Connect the DVD player to the amplifier using the Coaxial socket depending on your system.

Compatible Discs

Your DVD player can play discs that are marked with the following logos:

DVD VIDEO	8cm/12cm DVD Video Discs.		
COMPACT Recordable	12cm Compact Disc Recordable Discs.		
COMPACT Rewritable	12cm Compact Disc Re-Writable Discs.		
COMPACT DIGITAL AUDIO	8cm/12cm Compact Disc Audio Discs.		
COMPACT COMPACT PHOTO	12cm Photo Compact Discs.		

Region code

If the region code of the disc being played does not match the region code of this DVD player then the disc cannot be played. If you do try to do this a region violation notice will appear on the screen.

The region code for this player is region 2 (refer to the symbols below).



Inserting a Disc

Ensure the DVD player is connected to the mains and correctly connected to your television.



Note: For instructions on connecting your DVD player to your television, see the "Connecting To External Equipment" section (p11-14).


Press the **Power** button on the front of your DVD player.

Press the **Open/Close** button to open the DVD drawer.



Note: OPEN will show on the DVD display panel and the top left of the screen.

Place a compatible disc into the recess on the DVD disc tray, ensuring that the label is facing upwards. Place 8cm discs on the inner recess.

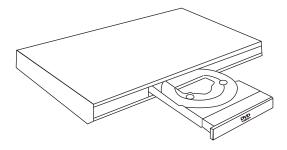



Note: for a list of compatible disc formats see previous page.

Press the Open/Close button to close the DVD drawer.



Note: Loading will be displayed in the top left corner of the screen.

Menu systems

Ensure the DVD player is in stop mode (press the stop button twice).


Press the **SETUP** button.

The language menu will be displayed on the screen.

You can scroll through the menus using the grey arrow buttons on the remote control. Once the required menu is highlighted, use the **ENTER** button to select the menu.

To return to the normal display, press the **SETUP** button to exit the menu screen.

Language Setup

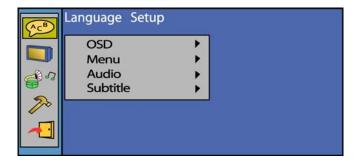


Various language settings for the Disc menu, Subtitles and Audio track can be preset on this DVD player. Choose from the options given.

NOTE

Note: If the chosen language is not available on the DVD, the DVD will play in its default language.

Screen Setup

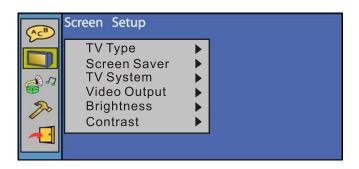

NOTE

Note: Some options can only be selected if the DVD is in STOP mode.

TV Type

TV Aspect Ratio

DVDs are produced in a variety of screen aspect ratios. This menu enables you to select one of three aspect ratios:

- 4:3 PS
- 4:3 LB
- 16:9

Select the most appropriate aspect ratio for the DVD being viewed.

4:3 PS (Pan Scan)

Pan and Scan is used for most normal television broadcasts. It has an aspect ratio of 4:3. If you select this setting when viewing a DVD the picture will fill the screen but, you will not see the left and right edges of the picture.



4:3 LB (Letter Box)

Letter Box will show the DVD in its original aspect ratio so depending on the size of your television screen, you may see black borders above and below the picture.



16:9


Choose this setting if you have a widescreen television.





Depending on the aspect ratio of the DVD disc, e.g. 2.35:1, the movie may still show black lines around the edge of the picture. This is normal and not a fault with the DVD Player.

TV System

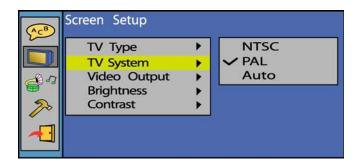

This DVD player supports NTSC and PAL formats.

To select the relevant format, ensure that the DVD player is in the full stop mode.




Note: the PAL format is generally used by televisions in the U.K. Check your television user guide for advice.




Note: If NTSC is selected with a non-compatible television you may experience interference or an unstable picture.

Video Output

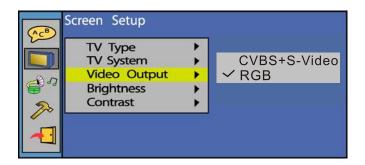


Select CVBS+S-Video if you are using the S-video lead. **Select RGB** if you are using a SCART lead.

Brightness

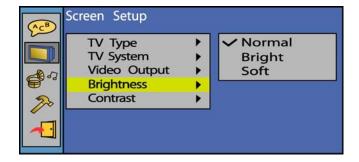

Set the brightness to either normal, bright or soft depending on the light level in the room.

Contrast

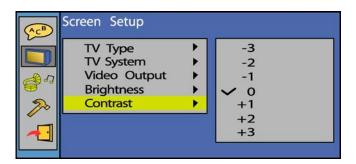

The contrast can be adjusted from -4 to +4.

Audio Setup

Digital Out



Select Digital when the DVD player is connected to a Dolby Pro Logic decoder.

SPDIF/PCM

PCM (Pulse Code Modulation) is an uncompressed digital format. PCM is digitalised at either 48 KHz or 96 kHz from, 16 to 24 bits. This format ensures a very high quality but it does not support the surround sound effect. When selected, the audio contained on the disc is passed directly to the amplifier through the digital output in PCM format.

SPDIF/RAW

This is the raw audio contained on the disc.




Note: Check with your Amplifier user manual to see which output is correct for your system.

Custom Setup

Parental Control

Press the **ENTER** button to select the parental control menu.

The following menu will be displayed:

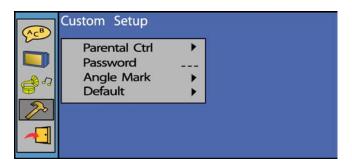

Enter the password.

NOTE

Note: The password is set to '8888' in the factory, this can be changed by following the procedure described on page 24

The parental control menu will be displayed

You can prevent the playback of unsuitable DVD's by setting the parental control to a lower level.

3 PG General

4 PG 13 Parental guidance advised

6 R 15+

7 NC17 Adult content (18+)

8 ADULT No restrictions

NOTE

Note: This feature only works if the content rating is included within the disc.

Change Password

You can change the current password by selecting CHANGE PASSWORD and pressing the **ENTER** button.

You will need to enter the current password (initially set to '8888') then press the **ENTER** button

Type in your new password, then press **ENTER** again to confirm.

Angle Mark

With the Angle Mark function switched On, when a DVD containing multiple viewing angles is inserted, an angle indicator icon will be displayed on the screen.

Press the **ANGLE** button on the remote control to step through the available angles.

To switch this function OFF, select the **ANGLE MARK** menu option and press **ENTER**. Select Off using the **CURSOR DOWN** button, then press **ENTER** again to confirm.



Note: The multi-angle function is only available when the DVD being played contains scenes recorded in multiple angle format, check DVD case for details.

Default

To return the DVD player to the factory settings, highlight the **DEFAULT** setting and press the **CURSOR RIGHT** button to select READ, then press the **ENTER** button.



Note: The parental setting and password are not changed.

DVD Player Functions

A hand symbol appears on the top left side of the TV screen when the function requested is not available.

Pausing Playback

Press the **PAUSE** button to pause DVD playback.



Note: Playback will freeze and 'pause' will be displayed on the screen.

Press the **PLAY** button to resume normal playback.

Viewing Frame by Frame

Press the **PAUSE** button to pause the playback.

Each time you press the **STEP** button the still picture advances to the next frame.



Note: 'Step' will be displayed on the screen.

Pressing **PLAY** returns to the normal playback mode.

Stopping Playback

Press the STOP button.



Note: Playback is stopped, 'PRESTOP' will be shown on the screen.

Resume Function

Playback can be resumed from the last played point by pressing the **PLAY** button again, if the STOP button is pressed for a second time this will not happen and playback will commence from the beginning of the disc.

Fast Search Forward/Reverse

Press the **SEARCH FORWARD** button to search forwards through the disc.

Press the **SEARCH BACKWARD** ◀ button, to search backwards through the disc.

Repeatedly pressing the search buttons will toggle through the various search speeds available: x2, x4, x8, x16, x32

To resume normal speed playback, press the **PLAY** button.

Skipping Chapters or Tracks

Press the **SKIP FORWARD >>**I button to select the next track or chapter

Press the **SKIP BACKWARD I**◀ button once to skip to the beginning of the previous chapter or track.

Press the **SKIP BACKWARD I**◀ button repeatedly to select previous chapters or tracks.

Slow Motion (DVD only)

During Playback,

Press the **SLOW** button repeatedly to toggle through the playback speeds shown below.

Slow button	Display Shows	Action
1 st Press	Slow x1/2	Plays the title at one-half normal speed.
2 nd Press	Slow x1/4	Plays the title at one-quarter normal speed.
3 rd Press	Slow x1/8	Plays the title at one-eighth normal speed.
4 th Press	Slow x1/16	Plays the title at one-sixteenth normal speed.
5 th Press	Slow x1/32	Plays the title at one thirty-second normal speed.
6 th Press	Play	Return to normal speed.

NOTE

Note: The sound is muted during slow-motion playback.

Special Functions



 
Note: Some DVD discs do not support the SEARCH function.

Search DVDs

Search by Chapter or Title Number

Press the GOTO button.

The following will be displayed on the screen

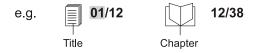

Press the left or right arrow keys to move the cursor between title and chapter entry points.

Using the numeric buttons, enter the title or chapter number.

Press **ENTER**, playback will then jump to that point.

Search by Title Time

Press the GO TO button twice.

The following will be displayed on the screen

Using the numeric buttons, enter the time you want to jump to.

Press ENTER, playback will then jump to that point.

Zoom Function (DVD only)

During playback or pause.

Press the **ZOOM** button repeatedly to cycle through the zoom options.

Zoom button	Display Shows	Action
1st Press	Zoom x 2	Multiplies the screen size by two.
2nd Press	Zoom x 4	Multiplies the screen size by four.
3rd Press	Zoom x 1	Return to normal picture.



Note: When zooming in, you can use the cursor keys to pan across the picture.

Title Button (DVD only)

While playing a DVD, press the **TITLE** button to return to the root menu.



Note: This function is not supported on all DVD discs.

Menu Button

Press the **MENU** button to return to the start menu on the disc.

Repeat Function (DVD)

Each time you press the **REPEAT** button, the repeat status changes as follows.

REPEAT CHAPTER (repeats the current chapter)

REPEAT TITLE (repeats the current title)

REPEAT DISC (repeats all titles and chapters on the disc)

To cancel the repeat function, press the **REPEAT** button again.

Repeat A-B

The A-B function allows a selected portion of any length to be repeated.

When the film reaches the beginning of the section you want to repeat, press the **A-B** button. "**REPEAT A**" will be displayed on the screen.

Press the **A-B** button again, when the film reaches the end of the section you want to repeat. "**A-B**" will be displayed on the screen.

NOTE

Note: The selected section will be repeated until the function is cancelled.

To cancel the A-B function, press the **A-B** button again.

Selecting a Scene Angle



Note: the multi-angle feature may not be available on all discs.

Each time you press the **ANGLE** button, the scene angle changes.

If there are no other angles available, the hand symbol will be displayed

Subtitle Function

Pre-recorded DVD videos often come with subtitles in several languages. You can change the subtitle language of the current disc at any time.

Press the **SUBTITLE** button repeatedly to cycle through the available languages.



Note: See the DVD disc cover for supported languages.

Audio Function

Press the **AUDIO** button repeatedly to cycle through the available audio tracks



Note: See the DVD disc cover for details

OSD Function

The **OSD** button is used to display information about the current disc.



Note: The display function can also be used with audio discs, although different displays will be shown.

Press the **OSD** button once to display the following



Press the **OSD** button again to display additional information (see example below).

| 1/2

(1):4/21

00:14:28

...: Off

()): English - 1/2

D 2CH

⊠:PAL

∞4:--

Press the **OSD** button again to turn the infomation display off.

Mute Button

The **MUTE** button cancels the sound output from the DVD player, MUTE appears on the bottom right hand corner of the screen.

Press the **MUTE** button again to restore the sound, MUTE OFF appears on the screen for a couple of seconds.

R/L Button (Audio CDs only)

Select between the available audio tracks.

Playing Audio Discs

Press the Power button on the front of your DVD player.

Press the **Open/Close** button on the remote control or the **Open/Close** button on the DVD player to open the DVD drawer.

NOTE

Note: **OPEN** will show on the DVD display panel and the corner of the screen.

Place an audio disc into the recess on the DVD disc tray, make sure that the label is facing up.

Press the **Open/Close** button on the remote control or the **Open/Close** button on the DVD player to close the DVD drawer.

NOTE

Note: When the drawer has closed **LOAD** will show on the DVD display and **Loading...** will be displayed in the top right of the screen.

The DVD player will start to play the first audio track on the disc.

Press the **OSD** button once to display the track number and elapsed track time.

Press the **OSD** button again to remove the infomation.

Fast Search Forward/Reverse

Press the **SEARCH FORWARD** button to search forwards through the disc.

Press the **SEARCH BACKWARD** ◀ button, to search backwards through the disc.

Repeatedly pressing the search buttons will toggle through the various search speeds available: x2, x4, x8, x16, x32

To resume normal speed playback, press the **PLAY** button.

Skipping Chapters or Tracks

Press the **SKIP FORWARD** button to select the next track.

Press the **SKIP BACKWARD I**◀◀ button once to skip to the beginning of the previous track.

Press the **SKIP BACKWARD** I◀◀ button repeatedly to select previous tracks.

Repeat Function (CD)

Each time you press the **REPEAT** button, the repeat status changes as follows.

REPEAT TRACK (repeats the current track)

REPEAT DISC (repeats all tracks on the disc)

To cancel the repeat function, press the **REPEAT** button again.

GOTO - Audio Discs

Disc GOTO

Press the GOTO button.

e.g. **DISC GOTO** : : : will be displayed on the screen.

Using the numeric buttons, enter the time.

Press ENTER, playback will then jump to that point.

NOTE

Note: The time entered is limited to the length of the disc.

Select Track Number

Using the numeric buttons, enter the track required.


'NO' will appear on the top left corner of the screen

Press ENTER, playback will then jump to that point

Program Function - Audio Discs

The program function can be used to play a user preset sequence.

Press the PROG button.

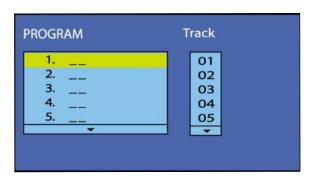

The cursor will be placed at the first program location.

Use the numeric buttons to enter the track number and then press the **CURSER DOWN** button.

The cursor will move to the next program location.

Use the numeric buttons to enter the next track number.

Continue to enter the tracks as required.

If you want to erase a track from the program, highlight the track and press the **CLEAR** button on the remote control.

Once all the entries have been entered, press the **PLAY or ENTER** buttons to start the program sequence.

Press the **OSD** button to display the track number and elapsed track time.

Playing Picture CDs or JPEG Picture CDs

Basic Playback

Load a picture CD or a JPEG picture CD into the CD tray. After a few seconds, each picture will be displayed in turn.

Pause, Next and Prev

Press the **PAUSE/STEP** button to pause the slideshow.

Press the **PLAY** button to resume the slideshow.

During pause mode, press the **SKIP BACKWARD** or **SKIP FORWARD** button to view the next or previous image.

Rotating

During pause mode, use the left or right **CURSOR** keys to rotate the image by ninety degrees.

Zoom and Scrolling

Press the **ZOOM** button to view the pictures at different sizes.

NOTE

Note: You can use the **CURSOR** keys to pan across the picture

Care and Maintenance

Handling Discs



To remove a disc from its storage case, press down on the centre of the case and lift the disc out.



Hold the disc by the edges, to avoid touching the recorded side of the disc.

Cleaning Discs



Fingerprints and dust should be carefully wiped from the disc's surface with a soft cloth. Audio discs and DVD discs have no grooves to collect dust and microscopic debris so gently wiping with a soft cloth should remove most particles. Wipe in a straight line from the inside to the outside of the disc. Small dust particles and light stains should have no effect on reproduction quality.

Never use chemicals such as record sprays, antistatic sprays, benzene, or thinners to clean the discs. These chemicals can irreparably damage the disc's surface.

Discs should be returned to their cases after use. This avoids serious scratches that could cause the laser pickup to skip.

Do not expose discs to direct sunlight, high humidity, or high temperatures for extended periods. Exposure to high temperatures can warp the disc.

Do not stick paper or write anything with a ball point pen on the label side of the disc.

Help and Advice (DVD player)

The DVD Player Will Not Power Up	The Picture Quality Is Poor
Ensure that the plug is connected to the mains socket. Replace the fuse in the plug.	Make Sure that the DVD disc surface is not damaged. Clean the DVD disc, and try again. See page 34 Ensure that the scart lead is fitted securely. Check that NTSC output format has not been selected.
Disc Does Not Play	Incorrect OSD Language
Check that the Disc has been correctly loaded, with the label facing up. Check the format of the disc is supported. Ensure the DVD disc is Region 2.	Refer to the Setup section of the user guide and change the OSD (On Screen Display) Language. See page 15
No Picture	Some Functions Do Not Work (Angle, Zoom etc.)
Ensure that the DVD Player and the Television are powered on. Check that the scart cable is fitted securely. Ensure that the Television has the AV channel or equivalent selected. Try a different DVD disc, that you are sure works ok.	Refer to the DVD disc contents. Not all functions are available on all DVD discs.
No Sound	No Response From The Remote Control
Check that the DVD Player has not been muted. Ensure the volume on the television and DVD are set to an audible level. If you are using a normal TV, make sure the audio setup is set to 2CH. Ensure that the scart lead is fitted securely (refer to the Setup section).	Ensure that the path between the remote control and the front of the DVD Player is not obstructed. Check that the batteries have been correctly fitted. Replace the batteries.



Note: If none of the above suggestions seem to work, try switching your DVD Player off and then on again.



Warning: If this does not work, contact either your supplier or a qualified DVD repair technician. Never attempt to repair a DVD Player yourself.

Customer Helpline Number: 0870 873 0080

Guarantee

This product is guaranteed for 12 months from the date of original purchase. If any defect arises during this period due to faulty materials or workmanship, the unit will be replaced, a refund given or a repair carried out free of charge (where possible) by the dealer from whom it was purchased.

The guarantee is subject to the following provisions:

- The guarantee is only valid within the boundaries of the country of purchase.
- The product must be correctly assembled and operated in accordance with the instructions contained in this booklet.
- The guarantee does not cover accidental damage, misuse, or consumable items.
- The guarantee will be rendered invalid if the product is resold or has been damaged by inexpert repair.
- The manufacturer disclaims any liability for incidental or consequential damages.

This guarantee is in addition to, and does not diminish, your statutory, or legal rights.

Goodmans

The manufacturer reserves the right to amend the specification without prior notice.