 


Goodmans

Model GTVL32W8HD

User Guide

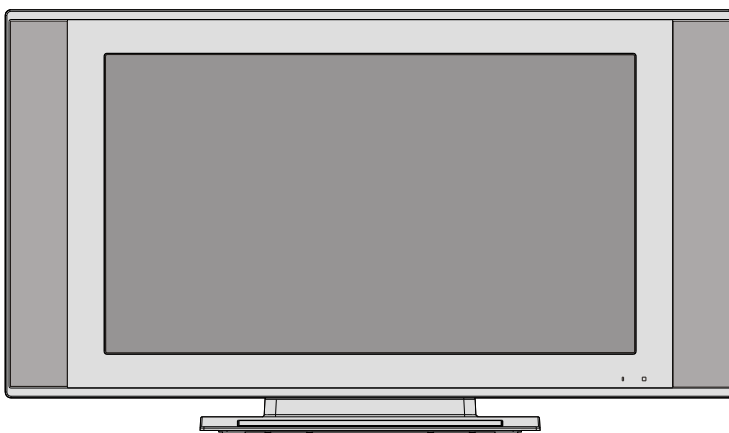

Goodmans LCD Colour Television

Goodmans Product Information Helpline: 0870 873 0080

WWW.goodmans.co.uk

IMPORTANT SAFEGUARDS

 
IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

BLUE : NEUTRAL

BROWN : LIVE

GREEN & YELLOW : EARTH

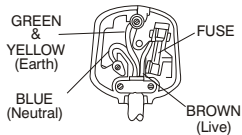

If your product is fitted with a moulded plug which requires replacement please cut off the plug and dispose of safely. The replacement plug should then be rewired as shown in the diagram.

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as followings.

The wire which is coloured green and yellow must be connected to the terminal which is marked with the letter E, or by the earth symbol (\equiv), or colour green or green and yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured blue or black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

This appliance must be earthed.

If a 13 AMP (BS 1363) Plug is used, fit an ASTA approved 3 or 5 AMP Fuse.

Warning: To prevent shock do not operate this appliance in rain / moisture conditions. To clean this product disconnect the TV from the mains supply. Only use a damp cloth moistened with soapy water. Do not use chemical cleaners as this may damage the finish of the LCD screen.

BOX CONTENTS:


32" LCD TELEVISION
REMOTE CONTROL
WARRANTY CARD
INSTRUCTION BOOKLET
BATTERY x 2
3 YEARS INSURANCE PLAN
HDMI CABLE

Contents


Location of controls	4-5
Remote Control Buttons	6
Locations Of Tuning in the TV stations	7
Locations Of Tuning in the TV stations	8
Installation	9-10
For TV Features	9
Safety Precautions	9
Safety Precautions	9
Before Switch On The TV	10-11
Power Connection	10
Connections To The Aerial Input Socket	10
How To Connect Other Devices	10
Inserting Batteries In The Remote Control Handset	10
Precautions When Using Batteries	11
TV Tuning in the TV stations	11-12
Service Tips	13

Location of controls




 
1. Standby Button
2. Power Indicator
3. Remote Sensor
4. AV / TV
5. MENU
6. PROG.- Button
7. PROG. + Button
8. VOL.- Button
9. VOL. + Button
10. Speakers
11. PC Audio In
12. VGA In
13. DVI In
14. Input Socket(75 Ohm)
15. Scart 2 (Fully wired for AV In and Out)
16. Scart 1 AV Input only
17. AV Audio Left In
18. AV Audio Right In
19. YCbCr / YPbPr In
20. AV Video In
21. Side AV In

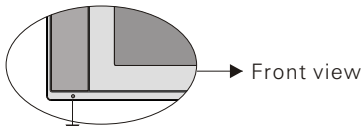

Ⓜ Main PowerSwitch

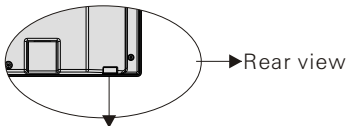 

Ⓜ Main PowerSwitch

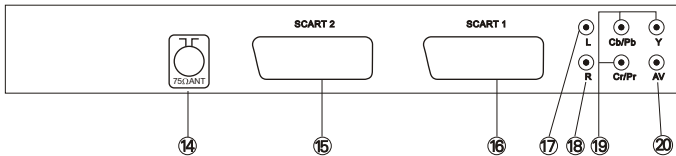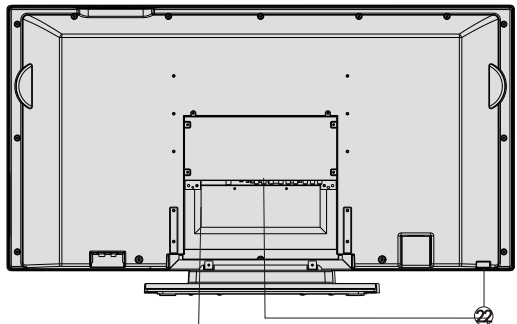   
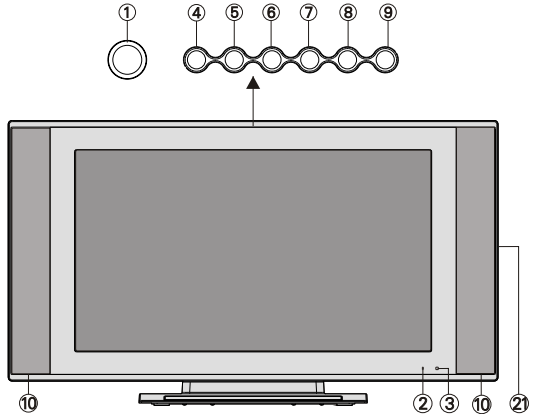 


LOCATION OF CONTROLS

GTVL32W8HD IMPORTANT INFORMATION

The power switch on this TV is factory set to its ON position. After connecting the mains cable to the TV and to a 230VAC mains supply the **Standby Light should glow on the front panel**. Insert the supplied batteries in the remote control and Press the power button on the Remote. The **Power indicator will change colour to Green** And shortly afterwards the TV screen will glow. Follow the tuning information shown on page 11 of the instruction manual.

  In the event that the TV does not power up after pressing the remote control power button please check that the mains cable is firmly pressed into the mains socket located on the TV and that the mains socket has power. Also check that the mains switch on the TV has not accidentally been turned off. When Inserting the mains plug on the TV. The mains switch is located to the side of the mains socket as shown in the accompanying diagram. Push the switch and check that the power indicator glows red on the right side of the TV front panel.

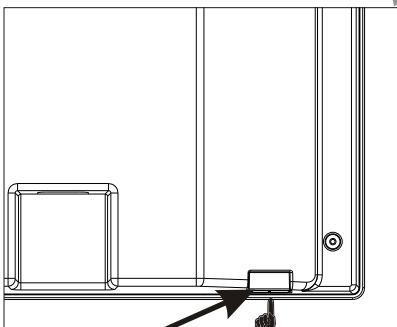
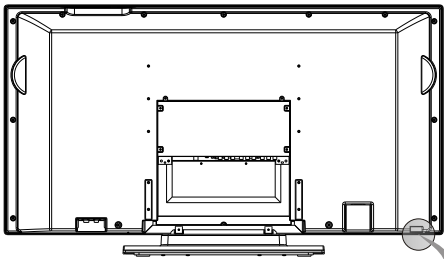


POWER SWITCH

PUSH UP

HDMI AND AUDIO CABLE CONNECTIONS

  
Connect the supplied HDMI cable to the DVI socket of the TV. Connect the other end to the HDMI output socket of the HD player source. Connect the supplied audio cable to the Audio input socket on the TV. Connect the other end of this cable to the HD player audio out socket.

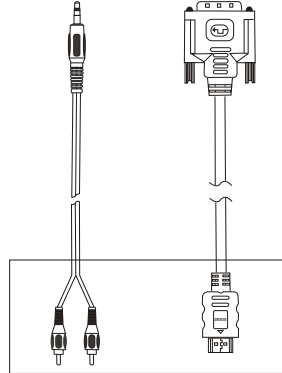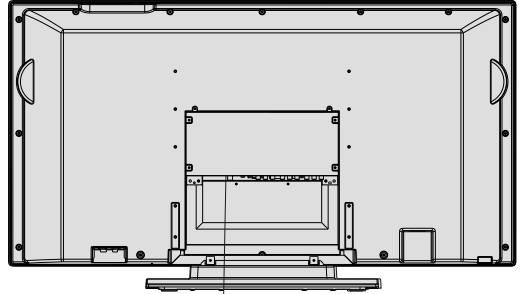

Device HDMI

Remote Control Buttons

 - ① = STANDBY
- ② = MUTE
- ③ 0-9 = DIGIT
- ④ TXT I/O = TELETEXT FUNCTION
- ⑤ STILL = STILL
- ⑥ = QUICK VIEW
- ⑦ AV/TV = AV/TV
- ⑧ MENU = MENU
- ⑨ PROG.+ = PROGRAM UP
- ⑩ PROG.- = PROGRAM DOWN
- ⑪ VOL.+ = VOLUME UP
- ⑫ VOL.- = VOLUME DOWN
- ⑬ I/II = SOUND MODE SELECTION
- ⑭ P.P. = PICTURE MODE
- ⑮ = SCREEN DISPLAY
- ⑯ = SLEEP BUTTON
- ⑰ = TXT/MIX
- ⑱ = SELECT THE INDEX TELETEXT PAGE
- ⑲ = UPDATE
- ⑳ = REVEAL
- ㉑ = SIZE
- ㉒ = SELECT SUBPAGES
- ㉓ = HOLD
- ㉔ TXT.S.=TELETEXT SAVE

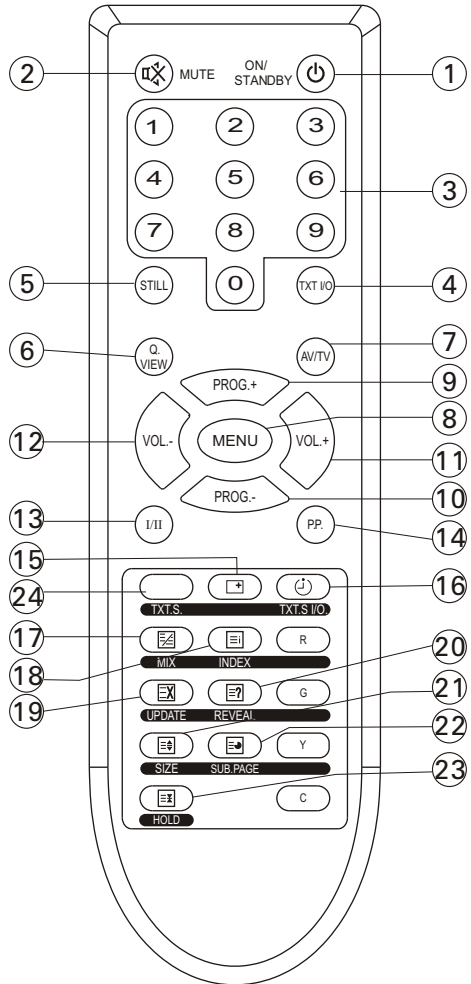

Remote control functions

1.STANDBY BUTTONS(⏻)

Switch the TV from on to standby or from off to operate.

2.MUTE BUTTON(🔇)

Press once to mute the sound, press again to return to previously set sound level.

3.0/9 DIGIT BUTTONS

You can call directly one or two digits program number that you want. When you only want to select one digit program number. You must press 0 button at first. Then to select a digit from 1-9, you press two or three digit buttons directly to select two or three digit program number.

4.SCREEN DISPLAY BUTTON(📺)

It can display currently screen mode information.

5.SLEEP BUTTON(🌙)

This key is used to set the sleep time in 10 minutes step up to four hours.

6.QUICK VIEW BUTTON

Press this button to return to the previously viewed program.

7.I/II SOUND MODE SELECTION BUTTON

Press the button, you can selection 3 modes sound input (Stereo Mode .Left mode. Right mode.)

8.AV/TV BUTTON

Press this button to select external signal such as AV, YCbCr, YPbPr, Scart, PC or DVI, then the selected signal will be displayed on the screen.

9.MENU BUTTON

Use menu button for tuning procedure. Please refer to page 10-11 for the detail.

10.PROGRAM UP/DOWN BUTTON(PROG.+/-)

Press the program up button to select the program forwards.

Press the program down button to select the program

11.VOLUME UP/DOWN BUTTON (VOL.+/-)

Press volume up/down buttons to adjust sound level.

12.P.P. BUTTON

TV/AV mode, press this button to adjust the picture mode.

User mode picture → Soft picture → Dynamic picture → Standard picture

13.STILL BUTTON

Press this button to hold the current picture.

**If press the STILL key at first, and then press TXT I/O key, the system will go to the teletext status, and then the other keys are disabled. Please press the TXT I/O key again to exit the teletext status.

14.TELETEXT FUNCTION

Most TV channels broadcast information via teletext. Each channel transmits a page with information on how to use its teletext system. Look for the teletext page with the main index (usually page 100).

Depending on the TV channel, teletext is in different systems: Top and Fastext.

- Teletext consists of a number of which are selected by directly entering the corresponding page number.
- Fastext make use of the colours SHOWN along the bottom line, corresponding, with the colours keys of your remote control to select teletext information.

- SWITH Teletext on and off.

Press **TEXT** button to SWITH teletext on.

Press **TEXT** button to SWITH teletext off.

1.SELECT A TELETEXT PAGE

With the digit keys enter the desired page number. The page counter seeks the page.

A message appears when you entered a nonexistent or incorrect page number. Complete the 3-digit number and then re- enter the correct page number. Page numbers beginning with 0 or 9 do not exist.

2.WITH fast text

Select with the colour keys, corresponding to the coloured options at the bottom of the screen, the desired subject.

3.WITH THE PROGRAM UP/DOWN


Press the program up/down to select the previous or the following pages.

SELECT THE INDEX TELETEXT PAGE

Press the **INDEX** key to display the main index (usually p.100)


TELETEXT BROADCASTS:

If subpages are available you can stop them from automatically rotating or select the described subpage yourself.


Press the  key.

The subpage number is displayed at the bottom of the screen.


Press the red or green key to select the previous or following subpage, or change the subpage with the PROG .+/- or with the digit keys.

Press the  key again to exit this function.


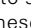 
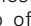 
1. SIZE

Press  repeatedly to display the upper part, the lower part and then to return to the normal page size . When the upper part is displayed. You can scroll the text. Line by line using the PROG +/-.


2. REVEAL


Press  to reveal/conceal the hidden information. Such as solutions to riddles and puzzles.

3. HOLD

 
 
 
 
Press  to stop the automatically rotating of the sub pages if these are available. The  icon is displayed. At the top of the screen. Press the  key again to continue the automatic rotating again.

4. TXT/MIX

Press the  key to display the teletext pages super imposed on th TV picture.

Press the  key again to switch the TV picture off again.

5. UPDATE

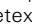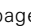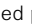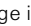
Displays the TV picture on the screen while waiting for the new Teletext page. The display  or  will appear at the top left hand corner of the screen. When the updated page is available then display  or  will change to the page number. Press this button to view the updated teletext page.

6. STORAGE

Press the T.X.T.S I/O key into the storage function. Then press the number key to select the storage station, then press T.X.T.S key wait until the all words in the button turn to white, then save OK.

Installation

 Install Display on solid horizontal surface such as a table or desk. For ventilation, leave a space of at least 10 cm free all around the set. To prevent any fault and unsafe situations, please do not place any objects on top of the set. This apparatus can be used in tropical and/or moderate climates.

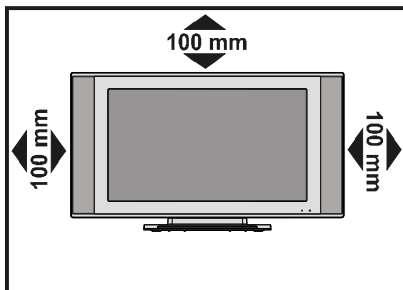

- Locate the receiver in the room where direct light does not strike the screen.

Total darkness or a reflection on the picture screen can cause eyestrain. Soft and indirect lighting is recommended for comfortable viewing.

- Allow enough space between the receiver and the wall to permit ventilation.
- Avoid excessively warm locations to prevent possible damage to the cabinet or premature component failure.
- This TV operates on AC supply directly, connect the AC plug to the socket at the back of the TV. Insert the mains plug in the socket having a mains voltage of 230V AC.
- Do not install the receiver in a location near heat sources such as radiator, air ducts, direct sunlight, or in a place somewhere like close compartment and close area.
- Do not cover the ventilation openings when using the set.

For TV Features

16:9 Aspect Ratio
Digital Comb Filter
System (PAL/SECAM/BG/DK/I/LL')
DVI INPUT
VGA INPUT
Viewing Angle 176° /176°
PC monitor mode (PC/VGA input)
Scart (RGB)
Sleep Timer
Nicam Stereo
Teletext

Safety Precautions

1. Power Source

This TV should be operated only from a 230V AC, 50Hz supply.

2. Power Cord

The power supply cord should be placed such that it is not likely to be walked on or pinched by items placed upon them or against it. Pay particular attention to cord where it enters the plug, power outlet, and the point where it exits from the TV.

3. Moisture and Water

Do not use this equipment in humid or damp places (avoid the bathroom, the sink in the kitchen, and near the washing machine). Do not expose this TV to rain or water, as this may be dangerous.

4. Cleaning

Before cleaning, unplug the mains cable from the household supply. Do not use liquid or aerosol cleaners. Only use a soft dry cloth.

5. Ventilation

The slots and openings on the TV are intended for ventilation and to ensure reliable operation. To prevent overheating, these openings must not be blocked or covered in anyway.

6. Lightning

In case of storm or lightning or when going on holiday, disconnect the power cord and aerial lead from the wall outlet.

7. Servicing

Please refer all servicing to qualified personnel. Do not remove cover as this may result in electric shock.

 
8. Naked Flame Sources

Do not place naked flame sources on the TV.

WARNING: When the device is not in use for a long periods, disconnect from power.

Instructions for waste disposal:

- Packaging and packaging aids are recyclable and should principally be recycled. Packaging materials, such as foil bag, must be kept away from children.
- Battery, including those which is heavy metal-free, should not be disposed of with household waste. Please dispose of used battery in an environmentally sound manner. Find out about the legal regulations which apply in your area.
- Cold cathode fluorescent lamp in LCD PANEL contains a small amount of mercury, please follow local ordinates or regulations for disposal.

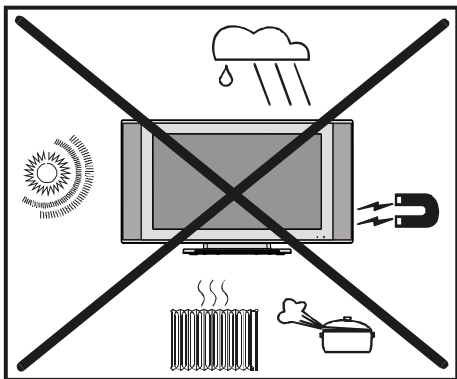

“DO NOT LEAVE YOUR TV IN STAND-BY OR ON WHEN YOU LEAVE YOUR HOUSE”

"The LCD panel is a high technology product with about a million thin film transistors, giving fine picture details. Occasionally, a few non-active pixels may appear on the screen as a fixed point of blue, green or red. Please note that this does not affect the performance of the product."

 
Before Switching on the TV

Power connection

IMPORTANT: This TV set is designed to operate on 230V AC, 50Hz only.

- After unpacking, allow the TV set to reach the ambient room temperature before connecting the set to the mains.

Connections to the Aerial input socket

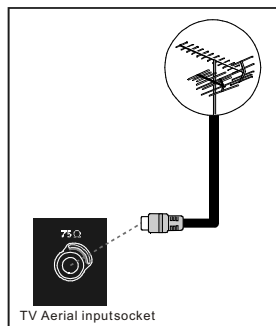

- Connect the aerial plug to the aerial input socket located at the back of the TV.

 
How to connect other devices

IMPORTANT: Switch off the TV before connecting any external device.

Sockets for external connections are at the rear and underside of the TV. For connection of other devices via Scart refer to the manuals of the related devices.

Inserting batteries in the remote control handset

- Remove the battery cover located on the back of the handset by gently pulling upwards from the indicated part.
- Insert two AAA (R03) Alkaline or equivalent batteries.
- Replace the battery cover.

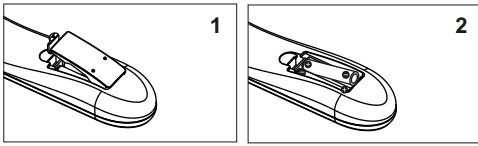

Precautions when using batteries

- Do not use old and new batteries together.
- Do not use different types of batteries (for example, Manganese and Alkaline batteries) together.
- Note that there are chargeable and non-chargeable batteries. Do not attempt to charge non-chargeable batteries.
- Remove the batteries from the remote control unit if you do not intend to use the unit for a long time.

NOTE:

- Do not drop the remote control unit.
- Do not subject the remote control unit to physical shocks.
- Keep the remote control unit dry. Wetting it may cause the unit to malfunction.
- Replace the batteries with new ones when operation of the unit deteriorates.

 
Operating the TV

Connect the mains cable to the mains input socket located at the rear of this TV. Connect the other end of the mains cable to a 230VAC mains socket. The TV's power switch has been already left in its ON position at the factory. The Power/Standby light on the front panel should change from red to green colour and in a short while the LCD screen should light up. If the power/standby light is not illuminated press the power switch located underneath the left side of the TV.

POWER ON / OFF BUTTON

Remote control Stand by button ,switch the TV from on to standby or from off to operate.

TUNE menu

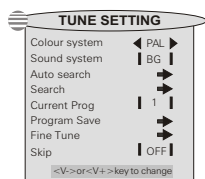

- By default colour is set to UK PAL.
- By default sound is set to UK I.
- Important: Make sure that the TV aerial is connected and if a VCR is being used that this is also connected and switched on.

TUNING IN THE TV STATIONS (Automatic Search)

1. Press MENU button 4 times.
2. Press PROG - button twice until Auto Search is highlighted.
3. Press the VOL + button to start auto tuning process.
4. After several minutes the tuning scan will stop and the TV will show the first TV station memorized into Programme 1 location.
5. Any non / ghost stations can be removed by selecting the station to be erased and repeating point 1 above then using the VOL + button highlight SKIP function then press the VOL + button to change OFF to ON. Press MENU button to escape from the menu and if necessary repeat this operation to remove other non stations. Note that these non stations will be shown if the numeric key pad on the remote is used to change channels. When using the PROG +/- buttons these stations will not show.

TUNING IN TV STATIONS (MANUAL)

MANUAL SEARCH

1. Press "1" on the remote numeric keypad.
2. Press MENU button 4 times.
- 3 Press PROG - button 3 times until SEARCH is highlighted.
4. Press VOL + or - to enter the manual tuning menu.
5. Press Vol +/- to start the manual tuning. In a short while a TV station will show and the tuning will stop. If this is the desired station to be stored in PROG 1 position then press the MENU button. The station will be stored in PROG 1 position. If it is not the correct station then press the VOL +/- button and start manual search until the desired station is located. To store other station press button 2 on the remote and repeat the above instructions.

Fine Tune

When Fine Tune is selected. The frequency data is fine-tuned in upward or downward direction by the VOL +/- buttons.

Skip

 
Press the VOL +/- buttons to set skip function on or off. When the skip function is on ,the current program number will be skipped.

 
SOURCE BUTTON

Press repeatedly to select TV, AV, YCbCr, YPbPr, SCART 1, SCART 2, PC monitor, DVI monitor mode.




MENU BUTTON

1. press this button to display menu PICTURE SETTING , SOUND SETTING, SYSTEM SETTING, TUNE SETTING and PICTURE POSITION can be selected by the PROG. +/- buttons.

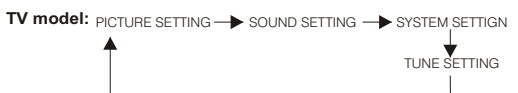

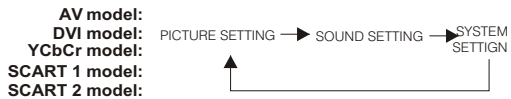

Picture menu

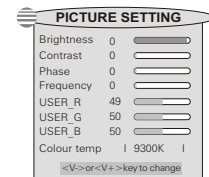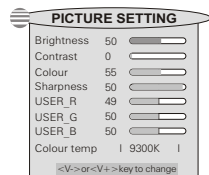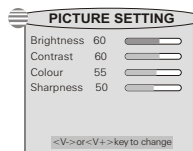   

Enter the PICTURE SETTING menu, you can select different submenu at different model. At TV model you can select Brightness, Contrast, Color, Sharpness items by pressing the PROG. +/- buttons and adjust them by pressing VOL +/- buttons. The adjusted level is stored in custom mode. At the other model, the operation is same. At the YPbPr, PC and DVI model, you can select Colour temp (colour temperature) submenu, then you can choose different color temperature by the VOL +/- button, the order shown below: 9300K → 7300K → 6500K

 


" The Picture setting has Dynamic / Standard / Mild and User settings. each time the P.P button is pressed the picture setting (colour brightness) will be changed. Note that you can change and save your preferences as to colour brightness etc when you select the USER setting. To make the required changes simply press the P.P button repeatedly until USER shows, then press the MENU button and adjust the colour / brightness etc as desired. The changed settings are automatically memorized and will show when USER setting is subsequently used.

When you select User model, you can adjust USER_R, USER_G and USER_B.

At the other model, the USER_R, USER_G and USER_B submenu can not be selected.


SOUND menu

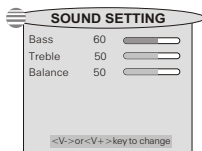

1. Bass
Press the VOL +/- buttons can adjust the Bass level.
2. Treble
Press the VOL +/- buttons can adjust the treble level.


3. Balance
Press the VOL +/- buttons can adjust the left or right volume balance.

 SETUP menu

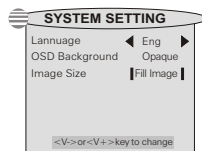

1. Language
Press the VOL +/- buttons can select different language
2. OSD Background
Press the VOL +/- buttons can change the OSD's background.

 2. At the TV, AV or S-Video, you can change the display mode shown:

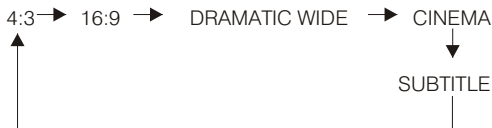

Service Tips

BEFORE CALLING FOR SERVICE, HAVE YOU CHECKED () THE FOLLOWING CHART ON SYMPTOMS AND SOLUTIONS?

Symptoms	Solution																				
	Try different channel, if OK, probably station trouble																				
	Check aerial connections on back of set																				
	Check aerial for broken wires																				
	Re-orient aerial (if indoor type)																				
	Probably local interference																				
	Adjust fine tuning control																				
	Adjust brightness control																				
	Adjust contrast control																				
	Check if station is broadcasting colour																				
	Adjust colour control																				
	Check if system switch is correct																				
	Check if on/off switch is "on"																				
	Check Batteries in Remote control																				
No picture, no sound	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>					<input checked="" type="checkbox"/>													
Poor sound, picture OK	<input checked="" type="checkbox"/>						<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>												
Poor picture, sound OK	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>												
Weak picture	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>													
Blurred picture	<input checked="" type="checkbox"/>			<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>													
Double image	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>													
Lines in picture	<input checked="" type="checkbox"/>			<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>													
Distorted picture	<input checked="" type="checkbox"/>			<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>													
Weak reception on some channels	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>													
Horizontal bars				<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>													
Picture rolls vertically	<input checked="" type="checkbox"/>			<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>													
Poor colour	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>												
No colour	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>				<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>								
Misoperation of Remote control																					<input checked="" type="checkbox"/>
No Remote control																					<input checked="" type="checkbox"/>
On Screen Display Control outside the screen													<input checked="" type="checkbox"/>								