 


COLOR
TELEVISION

G
I
D
U
R
G

GULENAR26HDIB

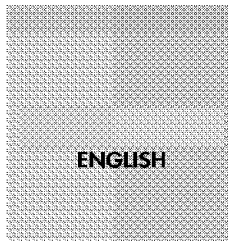

ENGLISH

List of contents

Important Information	4
Special features	5
Safety instructions	6
Getting started	7
Aerial connection.....	7
Switching on.....	7
Battery fitting.....	7
Control unit	8
Remote control.....	9
Using the TV	10
Tuning the TV	11
Automatic tuning	11
Manual tuning.....	12 -13
Program organising	14-15
TV setup	16
Sound menu	16
Picture setup	17
Features Menu.....	18-19
Digital TV menu.....	20
Using teletext	21-22
Connecting external equipment.....	23-27
Help and service tips	28
Technical specifications table	29

Important Information

 
The LCD display panels are manufactured using an extremely high level of precision technology, however sometimes some parts of the screen may be missing picture elements or have luminous spots. This is not a sign of a malfunction.


Cleaning the screen and the cabinet...

After turning off the power, clean the screen and the cabinet with a soft, dry cloth. We recommend that you do not use any proprietary polishes or solvents on the screen or cabinet as this may cause damage.

Disposal...

The cold cathode fluorescent lamp in the LCD panel contains a small amount of mercury, when the set reaches the end of its useful life please dispose of it in accordance with Local Government Regulations or at a recycling centre.
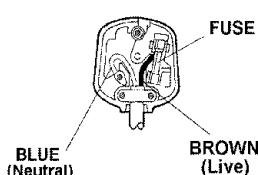
<p>IMPORTANT</p> <p>The wires in the mains lead are coloured in accordance with the following code: Blue – Neutral Brown – Live As the colours in the mains lead of this</p>  <p>BLUE (Neutral)</p> <p>BROWN (Live)</p> <p>FUSE</p>	<p>appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:</p> <p>The wire which is coloured blue or black must be connected to the terminal which is marked with the letter N or coloured Black.</p> <p>The wire which is coloured brown or red must be connected to the terminal which is marked with the letter L or coloured Red.</p> <p>No connection is to be made to the Earth terminal of the plug.</p> <p>If a 13 Amp (BS1363) Plug is used, fit an ASTA approved 3, 5, or 13 Amp fuse as required.</p> <p>If your product is fitted with a moulded plug which requires replacement please cut off and dispose of safely, then rewire as shown above.</p>
--	--
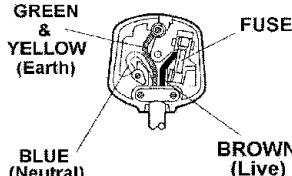 
<p>IMPORTANT</p> <p>The wires in the mains lead are coloured in accordance with the following code: Blue – Neutral Brown – Live Yellow/Green – Earth As the colours in the mains lead of this</p>  <p>GREEN & YELLOW (Earth)</p> <p>BLUE (Neutral)</p> <p>BROWN (Live)</p> <p>FUSE</p>	<p>appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:</p> <p>The wire which is coloured green and yellow must be connected to the terminal which is marked with the letter E, or by the earth symbol, or coloured green or green and yellow.</p> <p>The wire which is coloured blue or black must be connected to the terminal which is marked with the letter N or coloured Black.</p> <p>The wire which is coloured brown or red must be connected to the terminal which is marked with the letter L or coloured Red.</p> <p>If a 13 Amp (BS1363) Plug is used, fit an ASTA approved 3, 5, or 13 Amp fuse as required.</p> <p>If your product is fitted with a moulded plug which requires replacement please cut off and dispose of safely, then rewire as shown above.</p>
--	---

Television

Thank you for buying this television which is designed to give you many years of satisfactory service.

You may already be familiar with using a television but do please take time to read these instructions. They are designed to familiarise you with the unit's many new features and to ensure you get the very best out of your purchase.

Special Features

- 26" TFT-LCD WXGA/VGA Panel
- Available for Cable Channels (A decoder may be required)
- 2x7 W Stereo sound
- 800-Page Teletext Feature
- PIP (Picture in Picture) Feature
- Wide angle perspective
- 2 SCART sockets, AV out Socket
- HDMI input
- S-VHS and Cinch inputs for S-Video connection
- PC connection
- Minimum energy consumption
- AVL – Automatic Volume Limiting
- ATS – Automatic Tuning System
- Programmed power off
- Graphic equalizer
- Colour Transfer sharpness feature (CTI)
- Black-White Transfer sharpness feature (LTI) and picture sharpness
- Compound Filter (Digital Comb Filter) Feature for clear images
- On screen viewing of all control commands, program numbers and additional features
- Manual Fine Tuning
- 100 Analog Channel Memory
- Infrared Remote Control
- Panel Lock
- Ability to watch NTSC broadcasts through SCART input
- Easy handling through an advanced menu system. Ability to choose from 23 languages.
- 1000 Digital Channel Memory
- Adjustable 4 favorite list
- 8-Day EPG (Electronic Program Guide)



HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Safety is Important

Your safety and the safety of others is important. Please, therefore, ensure you read the Safety instructions **before** you operate this television.

Safety instructions

❗ Read all the safety instructions before first use of your TV.



- Position the television so that direct light does not fall on the screen. Excessive light will cause a washed out effect.



- Position the power supply lead and other leads so that they are not likely to be walked on or pinched by things placed on or against them.



- Do not place objects filled with liquid such as a vase or flower pot near or on the television.
- Do not expose the TV to dripping or splashing of liquids.
- Do not place naked flame sources such as lighted candles on or next to the TV set.



- Make sure that no naked flame sources, such as lighted candles, are placed on top of the appliance.
- Do not place the television near heat sources such as radiators, ovens, stoves, etc.



- Do not push, hit or screw into the screen of your product.



- The heat built up in the set escapes through ventilation holes, so do not cover the set by drapes, clothes etc. that may block air circulation. Do not place the television on carpet or soft furnishings. Leave a minimum of 10cm gap around all sides of the TV unit.



- Never let children push anything into the holes or slots on the case.
- Clean the TV Screen using a slightly damp cloth or chamois leather. Never use abrasive cleaning agents like liquid or aerosol cleaners.
- Remove the mains plug from the socket outlet while cleaning.



- Never apply pressure on the screen when cleaning.
- Never put your screen on hard objects. Your TFT screen may be damaged.



- If you wish to place the television on a shelf or in a wall unit always ensure there is a minimum air gap of 10 cm around the top, sides and rear of the television, to assist ventilation.



- Your TV set is designed to operate with mains voltages 230V AC; 50Hz. Do not connect your TV set to power sources other than the mains supply.
- If you don't use the television for a long period, please remove the mains plug from wall socket outlet.
- To fully disconnect the TV, the mains plug is used as a disconnecting device and therefore shall be readily operable.

Getting started

Remove your Television carefully from the box. You may wish to store the packaging for future use.

In the box

Inside the carton box you should have:

 
- Accessories box
- Power cord
- Remote control
- Batteries

Note: Various type of connection cables are optional.

Read these instructions before use.

Aerial connection

To connect an aerial, plug the aerial lead into the aerial socket on the rear of the TV.

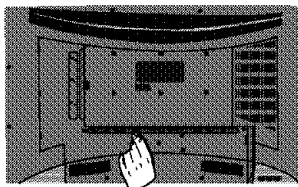

You can use an outdoor or indoor aerial. However, if you use an indoor aerial the quality of the reception may be reduced and adjustment of the aerial may be required when changing programs.

Please note

If you live in a poor reception area or use an indoor aerial you may experience loss or corruption of teletext transmissions.

Switching on and First Use


1. Connect the power cord plug to the mains socket.
2. Connect the input socket of the power cord to the power socket at the back panel of the LCD TV

Note 1: Your TV will go to stand-by mode in five minutes if there is no broadcast signal.

Note 2: Your TV is equipped to operate from the control buttons on the cabinet. In case your R/C is broken or the batteries are exhausted.

Please Note

 When not in use disconnect the mains plug from the mains supply.



3. Press the **Power** button on the cabinet of the TV. The standby indicator will be bright blue.

4. Press a numeric button or the **Program Up / Program Down** button on the remote handset or **Program Up / Program Down** on the cabinet of the TV to switch the TV on. The picture will appear after a few seconds. The indicator turns into dim blue.

Press the **Standby** button to switch the TV to standby. The standby indicator turns will be bright blue.

Please Note

Do not leave the television in standby unattended or overnight.

Switching the TV on for the first time

To install your TV, please read the sections "TV controls" and "Tuning the television".

The batteries

 
 
Remove the back cover to reveal the battery compartment and make sure you insert the batteries the right way round.

Suitable battery types for this remote are UM-4, IEC R03 or AAA 1.5V.




Do not throw your old batteries into a fire, dispose of them in a designated disposal area.

Do not combine a used, old battery with a new one or mix battery types.

The performance of the remote control will deteriorate beyond a distance of 8 metres or outside an angle of 30 degrees from the centre of the TV.



Control Unit

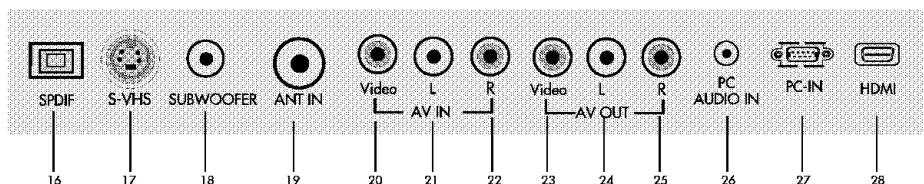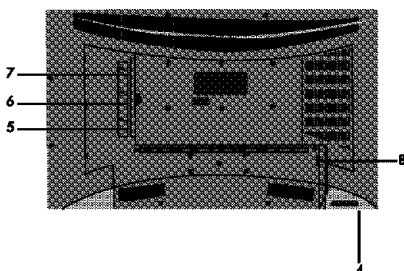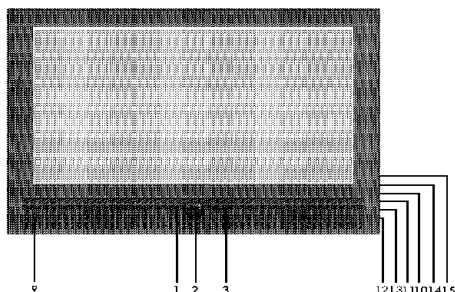   


- | | |
|--------------------------|--|
| 1. Stand-by | 15. Program up |
| 2. Power on / off | 16. S/PDIF |
| 3. Remote control | 17. S-VHS (S-Video in source menu) |
| 4. Headphone jack | 18. Subwoofer Output |
| 5. CI Input | 19. Antenna input |
| 6. Scart 2 | 20. AV IN input CINCH connector (Select AV in source menu) |
| 7. Scart 1 | 21. AV IN or S-Video Phono Connector (L) (Select AV in source menu) |
| 8. Power Input | 22. AV IN or S-Video Phono Connector (R) (Select AV in source menu) |
| 9. Speaker | 23. Video output CINCH connector (See page 18 - Scart2 Output) |
| 10. Source Select | 24. Audio RCA output (L) (See page 18 - Scart2 Output) |
| 11. Menu button | 25. Audio RCA output (R) (See page 18 - Scart2 Output) |
| 12. Volume down | 26. PC sound input |
| 13. Volume up | 27. VGA (PC input) |
| 14. Program down | 28. HDMI |

Please note

- Do not use Video RCA and S-Video connections at the same time, otherwise they will each effect the performance of the other.
- RGB inputs from scarts will give you better picture quality than cinch or S-VHS inputs when connecting to an external device.

 Remote control

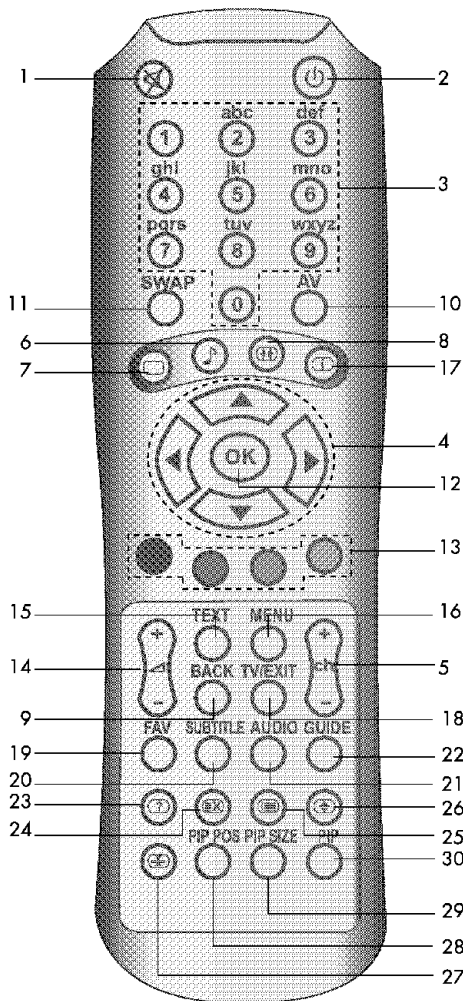

1. Mutes the sound (🔇).
2. Puts TV into and out of standby mode (⏻).
3. Used for any numeric input.
4. Navigation in menus. Functions in interactive applications.
Change teletext pages.
5. Program position up and down (⬆️⬆️).
6. Selects pre-defined sound modes or customer-own one (🔊).
7. Selects pre-defined picture modes or customer-own one (🖼️).

 
8. Selects preset picture modes or customer setting (🖼️).
9. Functions as Exit/Cancel key in interactive applications.
10. Displays all possible sources ATV, DTV, AV1, ..., HDMI, etc.
11. Swaps between current program and previous one.
12. Select in menus and interactive applications (OK).
13. Functions in teletext and interactive applications.
14. Increase and decrease volume level (🔊).
15. On/Off analog teletext or digital interactive applications. When in teletext mode, mix key is used for mixing teletext and analog video.
16. Displays menu.
17. Displays info banner in digital mode. Moves to index page in teletext mode (📄).
18. Exit OSD or interactive applications. Move from any source to TV.
19. Displays favorite lists.
20. Displays subtitles.
21. Selects possible audio available. Selects dual HI for analog.
22. Displays Electronic Program Guide (EPG) in digital mode.
23. Reveals concealed text in teletext page (🔍).
24. Selects a page while watching TV (📄).
25. Allows access to subpages within a teletext page (📄).
26. Doubles the size of teletext characters (🔍).
27. Hold a desired page (📄).
28. Displays PIP position menu for PIP position.
29. Resizes PIP window.
30. Activates PIP menu for PIP operations.

Using the TV

Turning on for the first time and Tuning

TV controls

Temporary On-Off (STAND-BY)



Press the red (⏻) stand-by button (temporary on-off function) located on the upper right hand side of your remote control, or bottom of the side panel of your television. When it is switched on the unit will go into stand-by. To switch your television back on, either press the same button, any of the number buttons or one of the (ch) buttons.

Caution!

If you are not going to use your television for a long period of time, make sure to switch it off from the main power button.

When you first switch it on, the Language menu appears.

1. Select the menu language by pressing (L) or (R).

2. Select Country with (←) or (→) and then select the country where you are located with (L) or (R).

 
3. Select autoprogram with (←) or (→) and press (OK) to start the search.

- The automatic station search starts. This may last a minute or longer, depending on the number of television stations received.
- After the search, the station list appears. You can delete any stations which have been saved more than once.

SOURCE Menu: Pres the AV key of the remote control. The SOURCE menu which is visualized below appears on the screen. From this menu switching to the "Analogue TV" "Digital TV" "PC" is possible. You may select the modes "Scart 1" "Scart 2" "S-Video" "AV" "HDMI" "YPbPr".

SOURCE
Analog TV
Digital TV
Scart 1
Scart 2
S-Video
AV
PC
HDMI
YPbPr
OK/SELECT

Programme selection



Press the (ch) buttons on your remote control, or use numeric buttons in order to switch to the desired channel on your television. In order to select a program whose number is greater than 9, you can use the numeric buttons, punching in the desired numbers as required. For example, to select program 12, press the numeric buttons 1 and 2 one after another.

75%			
Programme	Type	CA	Quality
800	BBC THREE	Free	HD
901	BBC NEWS 24	Free	HD
902	BBC1	Free	HD
903	CBBC Channel	Free	HD
904	BBC TWO	Free	HD
905	BBC ONE	Free	HD
"EXIT" to cancel			
Page Up		Page Down	

Mute

 


To temporarily mute the sound of your television, press the (M) button, where the (M) on screen display will appear on screen as an indication of the application.

When you press the same button again, the sound will return. In the mute position, when you press the (V) key, the sound is turned down but the Mute position is not aborted, if you

press the (V) button the volume will increase and automatically switch out of the mute function.

Return to Selected Button Program (SWAP)

 



 
 


If you wish to return to the previous program that you were watching then you have the ability to return with a single function, by pressing the (SWAP) button.

 
Regardless of whether you are at AV, or any other program, by using the SWAP function allows you to swap between the program you were watching and the last selected program. If you hit the same button again, you will return to the program or AV you were watching before.

PR 01 ➔ (SWAP) PR 11 ➔ (SWAP) PR 01

Control Menu

Press the  button. You will see the MENU with all the headings of the different controls on screen. The Up/Down buttons () or () enable you to select between the different Sub-menu titles. Enter a Sub-menu by pressing the  or Up/down () or () button.

to exit the application at any given stage, simply press the MENU or TV button. Pressing menu while in a Sub-menu returns you to the previous menu.



Tuning the television

You can either tune the programs automatically or manually storing them in your television.

Please Note









 
 
 


In the case that your television does not receive any broadcast signals for 5 minutes it will automatically go to stand-by. The 5 minute countdown OSD will be displayed on screen.


Automatic tuning and storing of the television program channels with ATS

The ATS (Automatic Tuning System) on your television enables the automatic finding and sequencing of channels.


Sequencing is done according to the selected country channels, which broadcast Teletext and channel names; followed by all channels with Teletexts without channel names and then by channels without Teletext, to be concluded by foreign channels broadcasting Teletext with channel names.



The setup menu is accessed via the menu button. The setup sub-menu is selected by means of the up-down button. The Setup menu is accessed using the  button or the  button. The  button or the  button is pressed to enter the Auto-tuning process. The ATS menu appears on the screen. The country selection is done via the  or  buttons. The autoprogram title is selected by means of the  or () buttons, it is confirmed via the  or () or () buttons. A Warning appears on the screen; the search is started via the  button or it is cancelled using the  button.

 

ATS	
Country	◀ Switzerland ▶
Autoprogram	

 

SETUP	
Auto Tuning	▶
Manual Tuning	▶
Program Management	▶

Manual tuning and storing of the Digital television channels



The setup menu is accessed via the button. The setup title is selected by means of the or button. The Setup menu is accessed using the button or the button. The arrow button or the button is pressed to enter the Manual tuning process. The manual tuning screen appears.

The manual search is started via the button, when a channel is found, it is added to the list; the button must be pressed again for the next channel. The channel is saved in memory by pressing the yellow button. It is possible to navigate the page up and down via the red and green button. The selected channel appears on the screen by means of the button."

Note: To manual tune digital television channels, you must have Digital selected as source. Press AV and select Digital as Source, confirm with the OK button.

 
Manual tuning and storing of the Analogue television channels :

The setup menu is accessed via the button. The setup sub-menu is selected by means of the or button. The setup menu is entered using the button or the button. Before starting the tuning process, the number at which the channel to be stored is entered in the program no. tab. Using the or buttons, the system tab is accessed and it is determined via the right-left side buttons in which system the channels are to be selected. This should be set to I for U.K. The search is started by means of the or buttons in the

search tab. The found channel is confirmed by selecting the store tab and pressing . The same process is repeated for the other channels, i.e.

Note: To manual tune Analogue television channels, you must have Analogue selected as source. Press AV and select Analogue as Source, confirm with the OK button.

Note: Tuning can also be carried out by selecting channel line while in setup sub-menu; and using or buttons until the desired broadcast is found. This then needs storing as explained above.

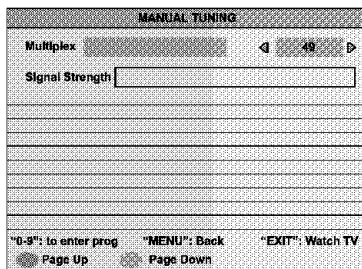

Choose band tab accordingly. The default is C for Aerial connection however select S-Band for cable channels directly connected to tuner.

Fine Tuning





 




If the current channel requires fine tuning, select the Manual Fine Tuning bar by using the down button in the Manual Tuning menu. Using the right-left movement / buttons on your remote control you will have the ability to get the exact quality of tuning required. Under normal conditions you will not need Fine Tuning. Your television will automatically lock channels, which need AFC values. However, in the event that the TV transmitters do not work, then you may need to use this process. For storing the settings to the memory press button.


 
 

 
 
 









INSTALLATION		
Program No	◀ 1 ▶	
System	◀ B/G ▶	
Channel	◀ 6 ▶	
Band	◀ C ▶	
Search	◀▶	
Fine Tuning	0	
Store		

Auto tuning and storing of the Analogue television channels:

  The setup menu is accessed via the  button. The setup sub-menu is selected by means of the  or  button. Using the  button or the  button, the setup menu is accessed. Here, the Auto tuning option is selected and the ATS menu appears on the screen. In this menu, a country is selected and one lower tab is accessed. In the Auto-program tab, press  or right arrow button. A prompt appears on the screen. To resume the process, the process is confirmed via the  button and the search is started.

8-Day EPG (Electronic Program Guide)(Digital)

8-Day EPG can be started by pressing GUIDE  button on the remote control. By pressing ,  or red and green ,  buttons you can move along the channel list and choose a channel. Left and right ,  buttons are used to move along the bar where the hours are shown. Press  to watch the selected channel. To enter SET TIMER menu press blue  button, you can choose a program and set it's starting and ending time by using **set timer** menu. You can also select the subtitle and audio language of the program from this menu. Pressing the GUIDE  or TV/EXIT  button, will close the EPG menu.

		2 BBC TWO 14:05 - 15:30	
		My Favourite Wife - After being ship-wrecked for seven years, Ellen (Irene Dunne) returns home on the day that her husband Nick (Gary Grant) is having her declared legally dead so that she can remarry. (1940, b&w)	
Programme		13:20	14:00
1 BBC ONE	Look No	Cash in the Attic	Cool Runnings
2 BBC TWO	Penny Sarnade		
7 BBC THREE	This Is BBC THREE		
30 CBBC Channel	Slig of the Dump		Loon Animadness
40 BBC NEWS 24	BBC News	BBC News	BBC News
8-Day	Mon	Tuesda	Wedne Thursd Friday Saturd Sunday Monda
'Up/Down' for service	'On Up/Down' for day selection		"OK" to watch
 Page Up	 Page Down		 Time

Program management (Digital)



The setup menu is opened via the button. The setup title is selected by means of the / button. The setup menu is entered via the button and the button. Using the or side buttons, the tab program management is selected. The program management menu appears by means of the button or the arrow button. In this menu, a channel can be erased, navigation can be done on the page via the or buttons. The channels can be added to the desired favourites list.

Program Management (Analogue) :

The setup menu is opened via the button. The setup title is selected by means of the or button. The setup menu is entered via the button and the button. Using the or side buttons, the tab program management is selected. While on the tab, the button or the arrow button is pressed, the program management menu appears. In this menu, it is possible to erase a channel, relocate it, rename it or remove it from the list.

Switching the locations of the analog program channels that have already been stored



The processes can be done while on the program management (analogue) menu. Select the program you want to switch by using the or or / button. Press the Green coloured button.

number and name will appear green. Using the or or Right-left / buttons carry it to other program location you want to switch to. To finish the switching press the Green button. All channels stored above the new location are shifted up one place.

Favorite List (Digital)

Store your favorite channels to navigate your way around quickly, easily and avoid browsing channels that you don't wish to view. Make sure that Digital TV is selected from the source menu. Press Menu on your remote control and select setup using / buttons. Press right button to enter setup menu. Select Program management with / buttons and press to enter. To add the channels to the favorite list use /, / buttons to scroll through the channel list and press to select a check mark will appear next to the channel name, and the channel will be added to your favorite list. You can deselect the channels by applying same steps. When you deselect the channel the check mark will disappear and the channel will be removed from your favorite list. You can add channels to more than one favorite list. You can reach favorite list by pressing FAV button on your remote list. You can reach favorite list by pressing button on your remote control.

FAVOURITE LIST	
ALL	
FAV1	
FAV2	
FAV3	
FAV4	
"OK" to select	"EXIT" to cancel

PROGRAM MANAGEMENT						
Programme	Type	CA	FAV1	FAV2	FAV3	FAV4
1 BBC ONE						
2 BBC TWO			✓			
7 BBC THREE				✓		
30 CBBC Channel					✓	
40 BBC NEWS 24			✓	✓	✓	✓
51 BBCi						
"OK": to tick "MENU": Back "EXIT": Watch TV Page Up Page Down Delete						

Deleting a program that has been stored (Analogue)



The processes can be done while on the program management (analogue) menu. Select the program you want to delete by using the (left arrow) or (right arrow) button

or Right-left (left arrow)/ (right arrow) button. Press the Blue (blue circle) coloured button. The screen will show the confirmation menu. You can press the Green (green circle) button to delete or the Red (red circle) button to exit the menu.


When you press the Green (green circle) button, the selected channel will be deleted and all following channels will move up in their position accordingly.

01 SHOW	11----	S	21----	S	
02 CNN	12----	S	22----	S	
03 BBC P	13----	S	23----	S	
04 S04	14----	S	24----	S	
05 S05	15----	S	25----	S	
06 S07	16----	S	26----	S	
07 S09	17----	S	27----	S	
08 S10	18----	S	28----	S	
09 C07	19----	S	29----	S	
10-----	S	20----	S	30----	S
Skip		Name			
Move		Delete			

Deleting a program that has been stored (Digital):

The setup menu is opened via the (MENU) button. The setup title is selected by means of the (left arrow) or (right arrow) button. The setup menu is entered via the (OK) button and the (left arrow) button. Using the (left arrow) or (right arrow) buttons, the tab program management is selected. While on the tab, the (left arrow) button or the (OK) button is pressed, the program management menu appears. The yellow (yellow circle) button is pressed on the channel tab which is intended to be erased, the confirmation menu appears. Using the (OK) button, the erasing process is confirmed or the process is cancelled via the (EXIT) button.

 Skipping an Analogue program that has been stored



In the event that you do not wish to come across certain programs while going up and down between channels

using the (left arrow) buttons, use the following function. Select the program to be skipped by using the (left arrow) or (right arrow) button or Right-left (left arrow)/ (right arrow) button. Press the Red (red circle) coloured button. To the right of the name of the program to be skipped will appear the letter "S" in red. You have the option of applying this method on more than one program channel.

To cancel the program skipping function press the Red (red circle) button again. red "S" to the right of the program name will disappear, and the skipping will be cancelled. Note: You can still access skipped channels by using the numeric buttons.

01 SHOW	11----	S	21----	S	
02 CNN	12----	S	22----	S	
03 BBC P	13----	S	23----	S	
04 S04	14----	S	24----	S	
05 S05	15----	S	25----	S	
06 S07	16----	S	26----	S	
07 S09	17----	S	27----	S	
08 S10	18----	S	28----	S	
09 C07	19----	S	29----	S	
10-----	S	20----	S	30----	S
Skip		Name			
Move		Delete			

To name the Analogue programs

The programs in the table might show the channel names automatically with ATS, but could also show the channel number instead of the name.

You can name any or all of the programs with names that have a maximum of five characters.

Select the program you want to name

using the (left arrow) or (right arrow) or Right-left (left arrow)/ (right arrow) buttons. Press the Yellow (yellow circle) button. The screen will show the number, volume type and name information for the channel you want to name.









To select a character to use the Right-left (left arrow)/ (right arrow) button and use the (left arrow) or (right arrow) buttons to change the character to the desired letter, number or sign. After entering all the letters press the (OK) button to store the name.

 
To write names for any of the other programs, simply repeat the above procedure. In the event that you wish to exit the application, simply press the (EXIT) button.


If no name is entered for any program, the program number will be automatically displayed.


The setup of your television: Setting up the Sound Menu



You can set the volume with the Volume buttons on the television or the  buttons on the remote control.

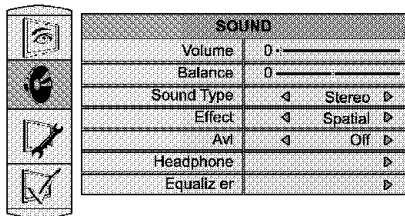
You can control the other sound settings by entering the Sound menu. For this application all you need to do is press the  button of your remote control. The sound menu is selected by means of the  or  buttons and the menu is accessed via the  button or the  button. Select the functions from the headings in this menu.






Effect: If you want to add depth to the sound of the program you watch, select Spatial with the  button.

 AVL: Television transmitters have different sound levels. This can be noticed from the different volume levels that can be heard while switching from one program to another. Using the right/left movement  buttons switch to on. The AVL (Automatic Volume Limiting) function maintains the same sound level as you switch from program to program. To cancel choose off.

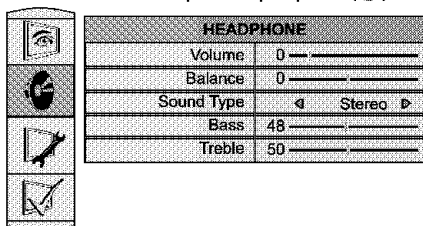Headphones: By connecting the headphone unit to your television you can listen to the program sounds independently from your television. In order to increase and decrease the sound level of the headphones, you can enter the HEADPHONES menu and make the necessary adjustments using the right/left  buttons in the Volume bar. When you only want to hear the sound from the headphone, just press  button.












Balance: To adjust the volume balance between the left and right headphone to the desired level, select the Balance bar using the down  button. Using the right/left movement  buttons adjust the balance.


Sound Type: The program you watch might be stereo or in two different languages. Using the right/left keys  in this menu you can select Mono/Stereo or Dual-A/Dual-B language. Dual-A/Dual-B is not always present with a program broadcast.


Bass: You can adjust the bass levels of the sound you hear in the headphone.

 
Treble: You can adjust the treble levels of the sound you hear in the headphone.

The sound and headphone adjustments made will be stored without any additional transactions necessary.


Equalizer: Selecting the Equalizer mark press  or  button. The equalizer setting function will be displayed. You can select with the right/left  buttons, pre-programmed, unchangeable equalizer settings. These are Music, Sport, Cinema and Speech. There is also a User setting. To adjust the User setting; select User and press the  button. You can adjust the frequency levels with the  or  buttons. You can select 120Hz, 200Hz, 500Hz, 1.5KHz, 5KHz, 7KHz and 10KHz frequency bands with  and  buttons. To store the adjustment levels in memory press the menu button. You can exit the equalizer function pressing the  button again.

Please note: You can choose the equalizer position directly using the  button of your remote control.


You can exit the equalizer function pressing the  button at any time.

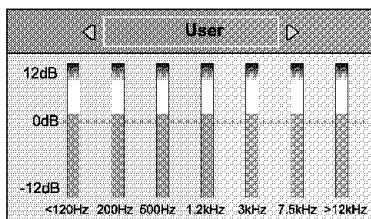

Picture Setup

 

PICTURE		
Brightness	50	_____
Contrast	30	_____
Colour	50	_____
Sharpness	6	_____
Noise Reduction	◀	Soft ▶
Picture Smart	◀	Soft ▶
Picture Format	◀	Letterbox ▶

 

Access picture sub-menu by pressing the button on your remote control. Use / buttons to select Picture sub-menu and enter by pressing OK or button. Select the setting function you want using the Up and down buttons or and adjust their levels with the right and left / buttons.

The picture brightness, contrast, colour and sharpness levels can all be adjusted according to your desire. The changes you make in the picture settings will be automatically stored as your personal settings.

Noise Reduction: Using this feature you can reduce static by selecting off, Soft, Sharpest or Sharp function.

Smart Picture: This is one of the pre-installed and unchangeable features, to select this feature use your / buttons. Soft, Natural and Rich are constant values. User are the values you stored into memory. Furthermore, you can select one of the non-adjustable default settings in the memory (Picture Mode) by pressing the button on your remote control.

Picture Format: This feature enables you to watch any broadcast image in the format you desire. These are; Auto, 16:9 (no option on sample), Letterbox, 14:9, 4:3, and Zoom. You can do the selection without entering the picture menu by using the format selection button.

Colour Tint: When NTSC video is used in SCART, Colour Tint settings can be made. If you do not use such a video type the Colour Tint choice is not seen in the menu. If NTSC video is used in SCART this choice becomes active and can be seen in the menu.

Depending on the type of broadcast being transmitted, programmes can be viewed in a number of formats. Press the button repeatedly to select between **Zoom**, **Letterbox**, **Auto**, **16:9**, **14:9**, and **4:3**.

Please note: Whenever the MENU button is pressed the picture size setting will change while the menus are ON the screen. This is to ensure that the menus do not overlap the edges of the viewable area.

Zoom

To fit the screen by stretching the image horizontally, holding the correct proportions at the centre of the image. Some distortion may occur.



Letterbox

Use this setting when watching a widescreen DVD, widescreen video tape or a 16:9 broadcast (when available). Due to the range of widescreen formats (16:9, 14:9, 20:9 etc.) black bars may be visible on the top and bottom of the screen. Letterbox format removes black bars or makes them less visible.



Auto

Some channels may send automatic screen formatting. If you wish to switch automatically to this format select Auto. The TV will automatically switch to the detected format from the scart inputs or broadcast.



16:9

Use this setting when watching a widescreen DVD, widescreen video tape or a 16:9 broadcast (when available). Due to the range of widescreen formats (16:9, 14:9, 20:9 etc.) black bars may be visible on the top and bottom of the screen.



14:9

This is the movie format.



4:3

 
Use this setting to view a 4:3 broadcast.



Using the special functions to change the size of the displayed image (i.e. changing the height/width ratio) for the purposes of public display or commercial gain may infringe on copyright laws.

The pictures on this page for Features menu need to be reversed. nalogue picture is in digital section and vice-versa. Please change as is appropriate to this section.

Features Menu (Analogue)



FEATURE			
On/Off Timer			D
Menu Language			D
Scart2 Output	4	Scart 1	D
Teletext	4	Auto	D
Panel Lock	4	Off	D

 


The Feature menu is accessed via the menu button. The feature menu is selected by using the up-down buttons and use the (OK) button or the Right side button, to enter.

You can select the headings you want to adjust in this menu by using the (←) or (→) buttons.

Features Menu (Digital)

The Feature menu is accessed via the menu button. The feature menu is selected by using the up-down buttons and use the OK button or the Right side button, to enter. You can select the headings you want to adjust in this menu by using the (←) or (→) buttons.



FEATURE			
Digital Features			D
On/Off Timer			D
Menu Language			D
VCR Mode	←	Off	D
Scart2 Output	←	Scart 1	D
Teletext	←	Auto	D
Panel Lock	←	Off	D

DIGITAL FEATURES			
Default Audio Language	←	English	→
Default Subtitle Language	←	English	→
Parental Control			→
Control Info Text		No Words	→
Software Upgrading			→
WREN: Back	EXIT	WREN: TV	

Panel Lock: If you switch this feature On, the buttons on the TV (except IO) will not work when the TV is in Stand-by mode or on.

Language: Select the menu language line and press (OK) or the right (→) button. The screen will show the menu languages. Select the desired language using the Up-down (←) or (→) and Right-left (←) or (→) buttons. Press the (OK) button again. Your television will now feature the language you have chosen for all the adjustment indicators and menus.



MENU LANGUAGE	
English	Norsk
Deutch	Dansk
Frangas	Deutsch
Italiani	Suomi
Español	Polski
Portuguesa	Eesti
Türkçe	Prerok
Slovenka	Slovensk
Česky	Magyar
Hrvatski	Čeština
Romana	Bulgar
Slovenko	

Scart2 output: This features enables you to select the video and audio output source to your recording equipment.

Either connect the scart input of recording device to the TVs Scart1 source (marked AV1 on the unit and select Scart 1 in Scart2 output option. Or connect the AV (Cinch) Input of recording device to the TVs AV out (Cinch) connection and select AV in Scart2 output option.

Connect the output of your recording device as you find appropriate from connecting external equipment chapter.

To record from the output set recorder to record from its correct input source, you may need to refer to recording devices User manual. The recording device will record what analogue or digital channel you are viewing. Note that if you attempt to view output of recording device while the recording devices is set to the input source from the tv you will probably experience interference on your Tv screen.

Note: If pip mode is active while recording, the window selected will be recorded. If you select the other PIP window (using up/down buttons) during record the output is automatically switched.

On/Off Timer: Your television features an automatic stand-by feature which can be enabled for any time period up to 12 hours and 59 mins by using the numeric buttons. If you want your television to automatically go into stand-by, please select the off timer line. Select the desired duration with the Right (→) and left (←) button.

At the end of the chosen duration the screen will show a 30 second countdown before switching off the screen and entering into stand-by. To cancel the automatic stand-by; set off timer to 00:00.


The setup menu is opened via the menu button. The feature title is selected by means of the up-down button. Using the (OK) button or the (→) button, the feature menu is accessed. The On/off timer tab is selected and its menu is opened via the right button. In the Off-timer tab, the sleep time is set via the right-left side buttons and the time to elapse till it restarts after being turned off is set on the On-timer tab. In the On-timer list title, it is decided whether the power-on will be done by the digital TV or the analogue TV.

VCR mode(Digital): Using this feature you can avoid image distortions from the device or the magnetic tape while watching. For this you have to switch the VCR mode to ON.

	FEATURE	
	Digital Features	
	On/Off Timer	▷
	Menu Language	▷
	VCR Mode	◀ Off ▷
	Scart2 Output	◀ Scart 1 ▷
	Teletext	◀ Auto ▷
	Panel Lock	◀ Off ▷

Please note: This feature is only active for the AV inputs. This option will not be seen in Feature menu while watching programs or in PC mode. This feature becomes automatically active in the "0" numbered program. When you store the "0" numbered channel as video device antenna output, you will be able to avoid image distortions from the device or the magnetic tape while watching.

 PIP Usage (Picture in Picture) Feature:




Press the button on your remote control. The screen will show the PIP window selection menu.



In this menu use / buttons to select either Picture in Picture (PIP) or Divided Screen (PAP) and press the button. According to the selection a picture will open in main picture or two pictures side by side.

 If you choose Full Screen mode PIP will be disabled. In the event that you wish to exit PIP mode, simply press the button and select the full screen icon.



When PIP or PAP feature is selected you can activate the main picture or the secondary picture by pressing up and down navigation buttons. The active picture is expressed with a white border. The menu features can be used for the active picture. With the AV button you can choose also the sources at the active window during PIP or PAP feature is on

 
Note:

- 1) To change a channel or source a PIP window is displaying:
 - a) Select the window to change using up/down buttons.
 - b) Use remote control to change channels or source as you would in normal full screen mode.
- 2) You can use PIP in PC or DVI mode.
- 3) The same source cannot be watched with PIP and the main image.

PIP Position

This feature enables you to position your PIP window. For this press the button, while PIP mode is active, to bring the PIP Position menu on screen.

Press the right/left / buttons to select the PIP Position desired. After you have positioned your PIP window you can exit the menu by pressing the button on the remote control.

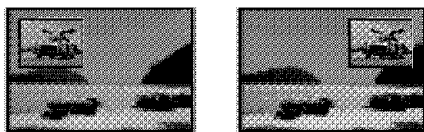

PIP Size

This feature enables you to resize your PIP window. For this press the button, while PIP mode is active, to bring the PIP Size menu on screen.

Press the right/left / buttons to change the PIP Size. After resizing your PIP window you can exit the menu by pressing the button on the remote control.

PAT Mode

The pat (picture and text) feature is opened by pressing the button and then pressing the button while in the TEXT mode. This feature ensures that both the teletext and the channel intended to be watched be visualized on the screen simultaneously. To exit the pat mode, the PIP button is pressed.

 


Digital TV Menu:

Digital TV menu also consists of the following menus as in the Analogue TV menu:

1. PICTURE
2. SOUND
3. SETUP
4. FEATURE

Here, the only difference is the "Digital Features" option located under the "FEATURE" Menu. Please see the following picture:

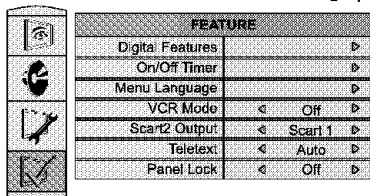


On the picture below, you can see the sub-menus located under the option "Digital Features".

To enter Digital Features select Digital feature using the up/down buttons and press OK to enter.

1. Timer Menu:

By setting the timer in the Timer menu the TV can be set to automatically switch to another channel at a specific time. To enter Timer select timer using the up/down buttons and press right button. After a short delay the timer menu will appear. Press the red button to enter a new timer. Set timer menu is displayed after a short delay. The settings of date, starting time, ending time, repeating function, subtitle and audio language for the timer are made using the (◀▶) or (⏮⏭), (⏪⏩) and numeric buttons. When complete Press OK to save the event.

 When the set time and hour arrives, a pop-up menu appears on the screen to prompt the user whether they would like to switched to the specified channel or not. Channel switching is enabled via the (OK) button or the timer is cancelled using the (TIMER) button.

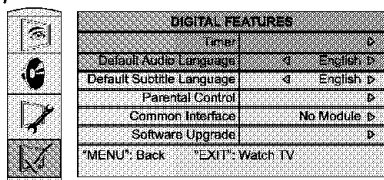

2. Default Audio Language Option:

This setting ensures that the default language will be audible when it is available with a broadcast. Selection is made among languages using the (◀▶) keys.

3. Default Subtitle Language Option:

 
 
Set the default language desired. If subtitle option is activated and the default language is available with the broadcast you are watching subtitles will automatically be displayed in this language. Selection is made among languages using the right/left arrow keys.

4. Parental Control Menu:

Using this menu, the adult user determines a password with the buttons 0-9 and is able to prevent access to the channels they determine from among the 'Program Management' menu. When it is intended to switch to the blocked channel, the password is prompted.

Besides, it is also activated so that the features like timer, auto search, manual search, program management found in the menu are not changed.

At the beginning the pin is "1982". After you enter the pin, the Parental Control Menu with the Change pin option appears. You can change the pin by using this menu

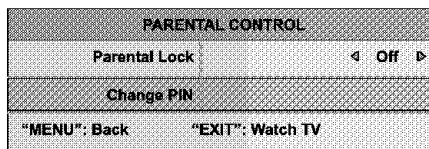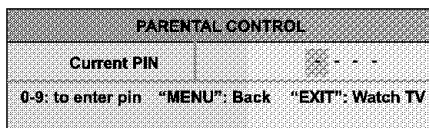

5. Common Interface Menu:

 
When the CI module is inserted in order to be able to watch encoded channels, the inserted module is viewed in the 'Common Interface' menu. It is possible to access from this option the information related to the module. Top up TV feature is supported.

6. Software Upgrade Menu:

The possibility for uploading new software is ensured via the Software Upgrade menu. Menu adjustments can be done using the right/left arrow buttons. If new software data is being sent along with the broadcast, new software can be downloaded via this menu option.

Software updates can be performed automatically or manually as desired.

When the Auto Upgrade is selected "ON" if there is a new SW, there will be upgrade every time the TV passes through stand-by mode.

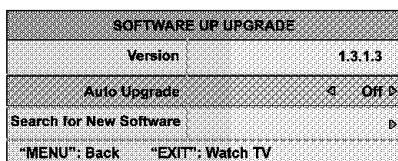

Using Teletext

Teletext is an information system that displays text on your TV screen. Using the teletext control buttons you can view pages of information that are listed in the teletext index.

Please Note


No on screen display is available in text mode. The contrast, brightness and colour cannot be changed but the volume control is still available.

To enter Text mode

Please Note

Make sure the TV channel you are watching transmits teletext.



Press the  button. The text page will appear, normally the index page.

To exit Text mode





Press the  button. The screen will return to the channel you were watching.



To select a page of text



Find the number of the page in the index and enter it using the Numeric buttons. The number of the page will appear in the top left hand corner of the screen.

The page counter will search for your page. When it finds it, the page will be displayed.

 
To move to the next page of text press the  /  button.


To move to the previous page press the  /  button.

To return to the index page press the  button.


TV/Text mix



 
To view a TV programme whilst in text mode, press the  button. The text will be superimposed over the TV programme.

Press the  button again to return to the TV programme.

 
Page search whilst watching TV




In Text mode press the  button. The TV will return to TV mode with the text page number in the top left hand corner of the screen.

Enter the page number you want using the Numeric buttons.


The top line of the text page will appear whilst the text searches for your page. When the page is found the number will remain in the top left hand corner of the screen.


Press the  button to view your selected page of text.

 
Double height text



If you have difficulty reading the text on the TV you can double the height of the text.

Press the  button. The top half of the page will be displayed in double height text.

Press the  button again. The bottom half of the page will be displayed in double height text.

Press the  button again to return to the full page.

Page Stop

If the page of text you have selected contains sub pages, these sub pages will automatically be displayed in order with a delay to allow you to read the page.



To stop the move to the next sub page press the (■) button.



To continue moving through the sub pages press the (○) button again.

To select a sub page



If the page of text you are viewing contains sub pages, the number of the sub page you are on and the total number of sub pages is displayed on the right of the screen i.e. 1/7.



To select a sub-page press the (■) button. Press the UP button or CH+ button to select next sub-page and press the DOWN button or CH- button to select the previous sub-page.



Enter the number of the sub page, using the Numeric buttons in the format SOT for sub page 1.



To reveal information



Press the (■) button to reveal concealed information (quiz answers etc.).



Press the (■) button again to cancel the information again.

Clock



Press the (■) button, while watching a TV program, to display the time.
Notes: This is only operational for analogue source channels that also receive teletext.

Fasttext

At the bottom of the teletext screen is a row of subject headings in red, green yellow and blue.

The remote control has a row of coloured buttons corresponding to the row of coloured subjects on the screen.

Pressing one of the coloured buttons will take you directly to the page corresponding to the subject heading.

Teletext characters are decoded according to the languages of the countries chosen before Auto program. For correct decoding and showing of the teletext characters, the auto-program should be carried out by selecting your country from the pop up menu for Country selection before tuning.

Digital Teletext

 
Viewing a digital text service

Digital TV channels broadcast high quality digital teletext for their subscribers including graphics and text. The content and navigation within the digital teletext is defined by the broadcaster.

Selecting digital text from channels



Digital teletext services are indicated sometimes by a symbol appearing on screen. To enter the digital teletext, press the RED or TEXT button on your remote control. After having entered the digital teletext, the on-screen instructions direct one to the desired sub-pages. The navigation inside the digital teletext may be performed using the arrows, colors, numbers and OK/SELECT buttons on the remote control. Having finished to view the digital teletext, one may leave it by pressing either the RED or the TEXT button on the remote control

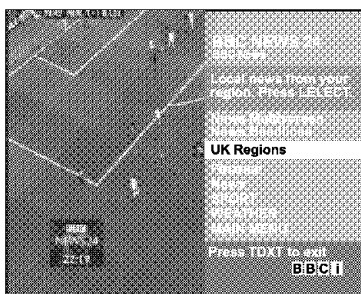

Connecting external equipment

AV Inputs:

Press the (🔍) button on your remote control. You will enter the Source menu from where you can select the screen input mode. Here select the input you desire.

TV: To move to TV mode while in AV modes, select Analogue and press the (OK) button.

Scart1: To be able to view the broadcasting images from the device connected to Scart1, select Scart1 and press the (OK) button. (If the connected device has an RGB output, you will be able to watch it over Scart.)

Scart2: To be able to view the broadcasting images from the device connected to Scart2, select Scart2 and press the (OK) button. (If the connected device has an RGB output, you will be able to watch it over Scart.)

SVHS: To be able to view the images from the device connected to the S-Video input, select S-Video and press the (OK) button.

AV: To be able to view the images from the device connected to the RCA (Chinch) input, to the selection and press the (OK) button.

PC: To be able to view monitor images in PC mode, move on to the selection and press the (OK) button.

SOURCE Menu: Press the AV key of the remote control. The SOURCE menu which is visualized below appears on the screen. From this menu, switching to the "Analogue TV" "Digital TV" "PC" is possible. You may select the modes "Scart1" "Scart2" "S-Video" "AV" "HDMI" "YPbPr".

HDMI Option: HDMI (High-Definition Multimedia Interface) is a digital video and audio standard which can transmit the uncompressed digital video as well as audio together and has been acknowledged throughout the world marking a first and only example of its kind available. You can connect by means of a single cable any HDMI supported video or audio source (STB, DVD player, A/V receiver) and any monitor or television that is HDMI supported. Using HDMI, you may watch High definition video in addition to being able to listen to the digital audio of up to 8 channels using a single cable.

From HDMI input, High-bandwidth Digital Content Protection (HDCP) is supported.

 
Connecting a video recorder/DVD recorder or Decoder

① Via SCART

Make sure the TV and video recorder are both switched off.

Plug one end of the SCART lead (not supplied) into the back of the video recorder and the other end into one of the SCART sockets on the back of the TV. Connect aerial to the RF/aerial input at the rear of your recording/decoding device. Connect RF/Aerial out socket of your recording/decoding device to the TV's aerial input.

Switch on the video recorder and the TV.



Press the (🔍) button on the remote control to select SCART1, SCART2 to correspond with the SCART socket you are using on the back of the TV.

Please note: You can connect RGB external equipment via Scart.

Select the video output of the external device by using its menu, and set to RGB.

② Via RCA lead

Make sure the TV and video recorder are both switched off.

Plug one end of the RCA lead into the video and audio out sockets on the back of the video recorder and plug the other end into the video and audio in sockets of the TV.

If the sound is mono, use the Audio Input L. and in the SOUND menu select the MONO feature. Connect aerial to the RF/aerial input at the rear of your recording/decoding device. Connect RF/Aerial out socket of your recording/decoding device to the TV's aerial input.

SOURCE
Analogue TV
Digital TV
Scart 1
Scart 2
S-video
AV
PC
HDMI
YPbPr
"OK" SELECT

③ Via aerial socket (Video recorder only)

Make sure the TV and video recorder are both switched off.

Unplug the aerial lead from the TV and plug it into the aerial socket on the video recorder.

 
Plug a coaxial plug into the RF out socket on the rear of the video recorder and plug the other end into the aerial socket on the TV. Switch on the video recorder and the TV. If your video recorder has a test signal, switch it on. (Refer to the video recorder user guide). Alternatively play a pre-recorded tape as a substitute.

See 'Tuning the TV' and carry out the tuning procedure for the video recorder test signal. Select a programme number 0.

④ Via RCA lead and S-Video socket

You can also connect it through the S-Video socket of the TV.

Plug the S-Video plug into the S-Video socket and the audio leads into the audio sockets.

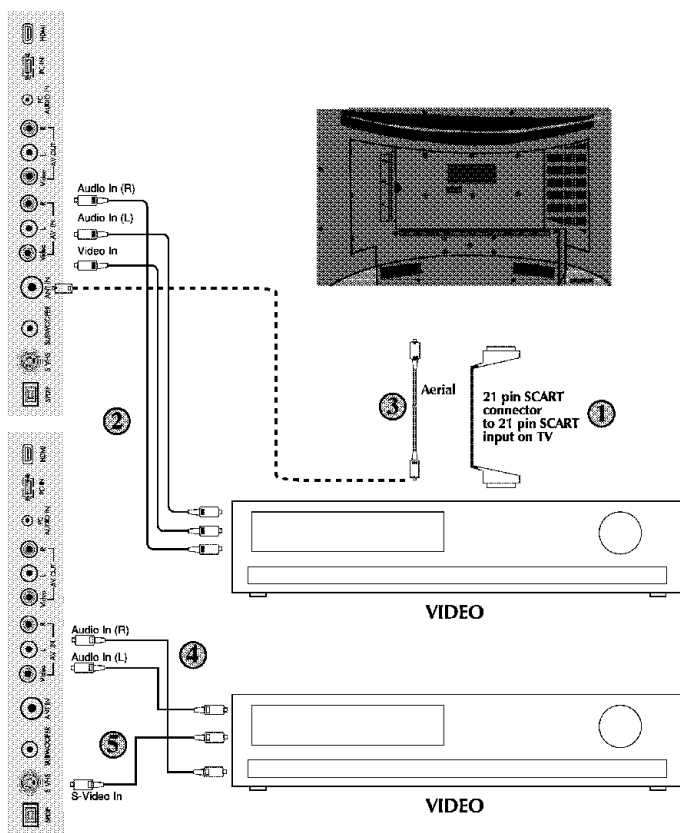

Connecting a DVD/Video player

DVD/Video Diagram

① Via SCART

Make sure the TV and DVD player are both switched off.

Plug one end of the SCART lead (not supplied) into the back of the DVD player and the other end into the SCART socket on the back of the TV.

Switch on the DVD and the TV.

② Via RCA lead

Make sure the TV and DVD player are both switched off.

Plug one end of the RCA lead into the video and audio out sockets on the back of the DVD player and plug the other end into the video and audio in sockets of the TV.

③ Via RCA lead and S-Video socket

You can also connect it through the S-Video socket of the TV.

 
Plug the S-Video plug into the S-Video socket and the audio leads into the audio sockets.

AV Outputs

You can connect any device which has Phono inputs via Phono Video and Audio Out Connect to the back of your TV set using correct AV cable (not available with the set).

The current view from tuner or AV input seen on the main screen except S-VHS, PC or DVI (which is optional) is available as picture and sound signals at Phono Video/Audio outs.

Scart sockets at the back of your TV always give the signals of selected programme from the set Tuner. For further information see Scart2 output on page 18.

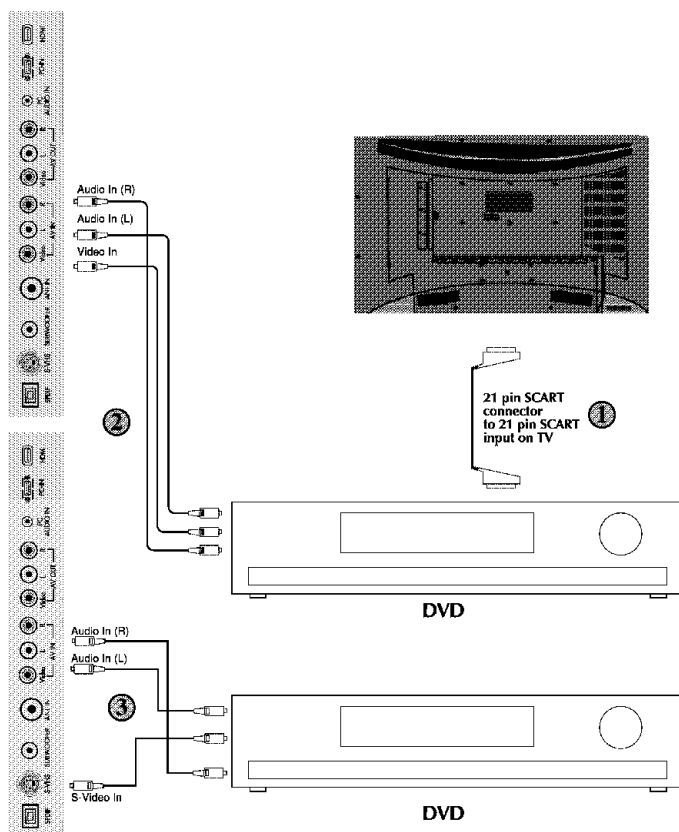




 

INTRODUCTION

Because your LCD-TV equipment is provided with VGA inputs, it may be used as a PC monitor as well. (Pug&Play)






 
Connecting PC:

Connect your PC through the D-Sub connector and an appropriate cable (not included with your TV) to PC-IN input the back of the TV. Again using an appropriate cable you can connect your PC sound output to the AUDIO IN input on the back of the TV and listen to sound.

Transition to the PC mode

In order for the LCD-TV to switch to the monitor (PC) mode, you can press the  button on your remote control and by using the  /  buttons, you must come on the indicator related with PC and then press . In order to switch from the PC mode back to the TV mode, use the  button on your remote control.

PC Input Settings

You can enter the picture setting menu by pressing the  then  while in PC mode. In order to make the necessary adjustments in this menu, you can use the right-left, up-down direction  ,  or  buttons on your remote

control to alter brightness and contrast as well as other adjustments for the monitor listed below.


H.Position: Horizontal position setting

V.Position: Vertical position setting



PHASE: Using the Right/left  or  buttons you can adjust colour and shape.

 





Picture Format: You can select the PC image in the 16:9, 4:3 or 1:1 formats.

You can make your choices without entering the picture menu by using the format button on your remote control.

Automatic Position: The most suitable geometric settings in accordance to the entry mode is configured by this function. For this application, choice the AUTO Position option and press the .


In PC mode you are able to use PIP as mentioned in the sections above.

You can adjust the volume of the device you connect to the Audio-In input at the back of the TV by using the  or  buttons.


	PICTURE	
	Brightness	0 
	Contrast	0 
	H Position	100 
	V Position	0 
	Phase	0 
	Auto Position	

In PC mode, HDMI and YUV modes can't be displayed (PC-HDMI, PC-YUV) for PIP function.

 
Connecting TV with video and satellite/digital receiver

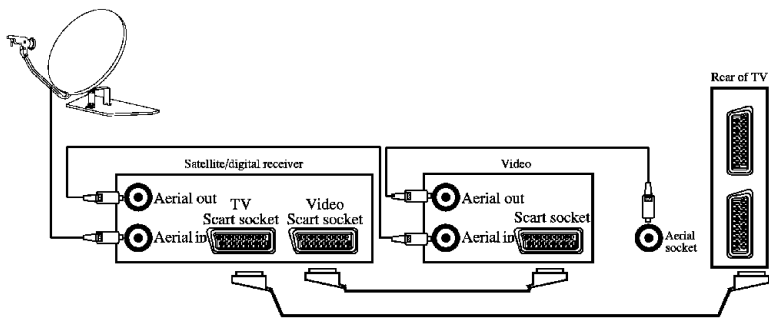

Connecting TV with camcorder

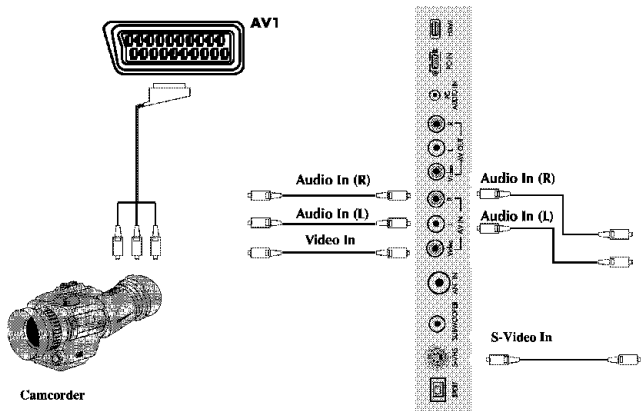 

Connecting TV games and computer

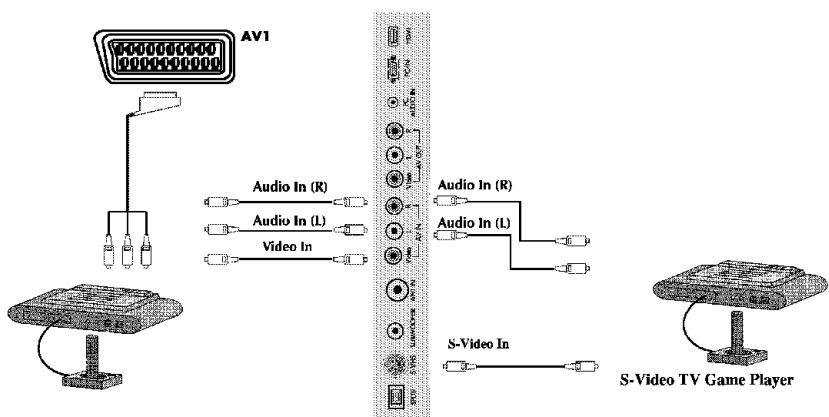 

Help and service tips

The TV does not work

Make sure it is plugged into the mains supply and switched on.

Poor picture

- Is the aerial plugged in?
- If you are using a set top aerial is it properly aligned for the best signal.
- Make sure the aerial is not too close to neon lights, loudspeakers etc.
- Try changing the direction of the outdoor aerial. High buildings and mountains can cause ghost pictures or double images.
- The picture quality may be reduced by connecting two external sources at once. Disconnect one of the sources.
- Adjust the fine tuning.

No picture

- Is the aerial plugged in properly?
- Is the aerial lead damaged?
- Are all the plugs in the aerial lead fitted correctly?
- Have you pressed the correct buttons on the remote control? Is the unit tuned in correctly?
- Is the unit tuned in correctly?
- Are you viewing the correct source?

No sound

- Is the sound muted? Press the Mute button.
- Is the volume turned down?
- Are there headphones connected?
- Is the tv set to the correct system (see tuning).

No response to the remote control

- Try changing the batteries.
- Is there an obstruction between the remote control and the sensor on the TV.
- Is the function required relevant to source selected or mode you are in (i.e Teletext)

If nothing works

If you have tried the above solutions and none seem to work, try switching the unit off and on again.

If this does not work contact your supplier or TV repair technician. Never attempt to repair a defective TV yourself.

Symptoms	Solutions									
	Check if on/off switch is "on"	Try a different channel, if OK, probably station trouble	Check aerial connections on back of set	Check aerial broken wires	Re orientate aerial	Probably local interference, such as an appliance	Adjust fine tuning control	Adjust brightness control	Adjust contrast control	Check if station is broadcasting colour
No picture, no sound	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Poor sound, picture OK	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Poor Picture, sound OK	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Weak picture	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Blurred picture	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Double image	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Lines in picture	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Distorted picture	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Weak reception on some channels	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Horizontal bars	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Picture rolls vertically	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Poor colour	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
No colour	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Remote control not working	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
TV does not accept any command	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Teletext: rolling up/down	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

Technical specifications table

LCD Panel size/type	26" 16:9 active matrix TFT
Sound Output (%10 THD)	2x7 W
Power consumption	125 W
Stand by Power consumption	6 W

General technical specifications

Power Supply

AC:230 V 50 Hz

Number of preset programmes.....100 (Ana.) / 1000 (Dig.)

RF Aerial input75 ohm (unbalanced)

Sound SystemsMono/Stereo/NICAM

Batteries2x UM-4, IEC R03 or AAA 1.5V

Receiving channelsVHF (Band I Channels 2-4)

.....VHF (Band III Channels 5-12)

.....UHF (Channels 21-69)

.....Cable TV (S1-S20/S21-S41)

Receiving broad systemPAL BG

PAL SECAM BG

PAL SECAM BG DK/DK'

PAL SECAM BG LL'

PAL I

Please note: Your TV set is produced to receive only “one” of this colour and sound system options which is based on your countries norms and can not be changed by user except BG/DK and BG/LL’ if both systems are available to receive (BG or DK and BG or LL’). Please refer to “Tuning the TV”. Note for U.K, broadcasts use PAL I.

NOTE:

This is a Class A product. During operation the device can cause radio interference. In this case the user may have to remedy this. Please contact your specialist dealer.



Environmental note

This product has been made from high-quality parts and materials which can be re-used and recycled.

Therefore, do not throw the product away with normal household waste at the end of its life. Take it to a collection point for devices. This is indicated by this symbol on the product, in the operating manual and on the packaging.

Please find out about collection points operated by your local authority. Help protect the environment by recycling used products.

