

HITACHI

Inspire the Next

37LD8500 □

37LD8550 □

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

Instructions for use

GB

Bedienungsanleitung

D

Notice d'utilisation

F

Istruzioni per l'uso

I




HITACHI

Contents

Remote Control Buttons	2	Teletext	18
LCDTV	3	To Operate Teletext	18
Preparation	5	To Select A Page Of Teletext	18
Features	5	To Select Index Page	18
Panel Features	5	To Select Teletext With A TV Programme	18
Safety Precautions	5	To Select Double Height Text	18
Before Switching On Your TV	8	To Reveal "Concealed" Information ...	18
Power Connection	8	To Stop Automatic Page Change	19
Connections To The Aerial Input Socket	8	To Select A Subcode Page	19
How To Connect Other Devices	8	PAT (Picture and Text)	19
Inserting Batteries In The Remote Control Handset	8	To Exit Teletext	19
Switching The TV ON/OFF	8	To Display The Time	19
To switch the TV on:	8	Fastext	19
To switch the TV off:	8	Connect Peripheral Equipment	20
Initial Settings	9	High Definition	20
Initial APS (Automatic Programming System)	9	Via The Scart	20
Operating The TV	9	Via Aerial Input	20
Operating with the buttons on the TV set	9	Decoder	20
Operating With Remote Control	9	TV And Video Recorder	20
Menu System	10	Playback NTSC	20
Picture menu	10	Copy Facility	20
Sound menu	11	Search For And Store The Test Signal Of The Video Recorder	20
Feature menu	12	Camera And Camcorder	21
Install menu	13	Connect The Decoder To The Video Recorder	21
Program menu	14	Connecting Headphones	21
Source menu	15	Connecting Subwoofer	21
PC Mode	15	Aerial Connection	22
Installation	15	Tips	23
Menu System in PC mode	15	Care Of The Screen	23
PC Picture Position Menu	15	Poor Picture	23
PC Picture Menu	16	No Picture	23
Sound Menu	16	Sound	23
Feature Menu	16	Remote Control	23
Source Menu	16	No solution:	23
Sound in PC mode	16	Specifications	24
Other Features	16	Appendix A: PC Input Typical Display Modes	25
TV Status	16	Appendix B: DVD Player Selection	26
Mute Indicator	16	Appendix C: Main and PIP-PAP Picture Combinations	27
PIP and PAP modes	17	UK Guarantee	28
Freeze Picture	17		
Zoom Modes	17		

Remote Control Buttons


- 1 = Stand by On/Off
- 2 = Picture Mode
- 3 = Equalizer Sound Mode
- 4 = Surround Mode
- 5 = Input Source
- 6 = Program Information
- 7 = Sound Mode
- 8 = Sleep Timer
- 9 = PAT (Picture and Text)
- 10 = Subtitle page in TV mode
- 11 = Select active window in PIP mode
- 12 = Only used in Teletext mode
- 13 = Menu On/Off
- 14 = Go back to previous menu
- 15 = Programme Up / Cursor Up
- 16 = Volume Down / Cursor Left
- 17 = Enter
- 18 = Volume Up / Cursor Right
- 19 = Programme Down / Cursor Down
- 20 = Mute On/Off
- 21 = Freeze On/Off
- 22 = Aspect ratio
- 23 = Digit buttons
- 24 = Teletext On/Off
- 25 = PIP / PAP / TV
- 26 = PIP position
- 27 = Sub page
- 28 = Time / Update
- 29 = Hold
- 30 = Index Page
- 31 = Expand
- 32 = Reveal
- 33 = Mix

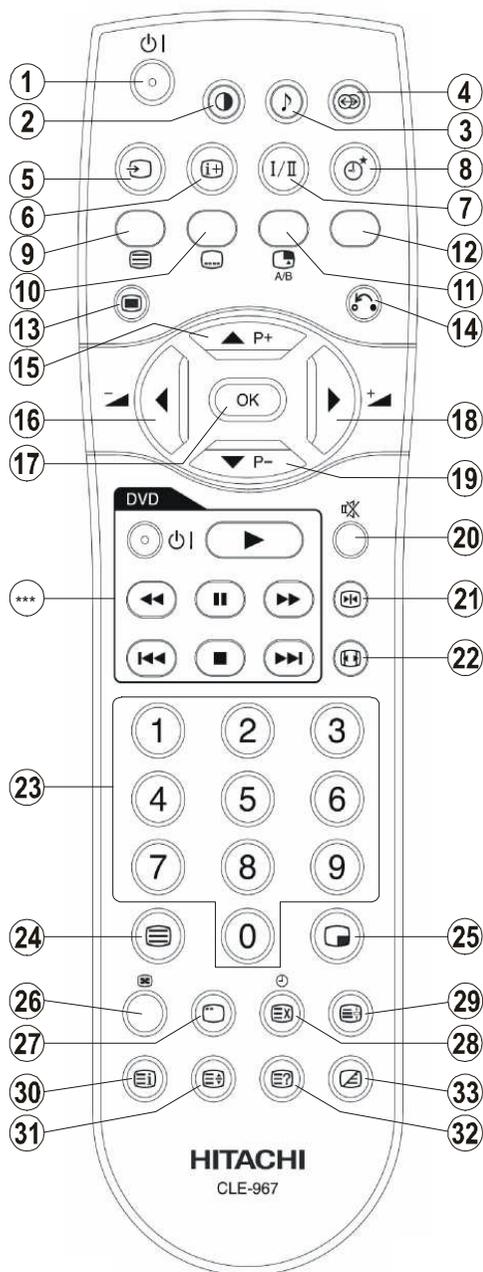


*** These buttons can control most Hitachi DVD Players and Recorders. Please see P26 for details of how to operate with other brands.


LCD TV

FRONT VIEW

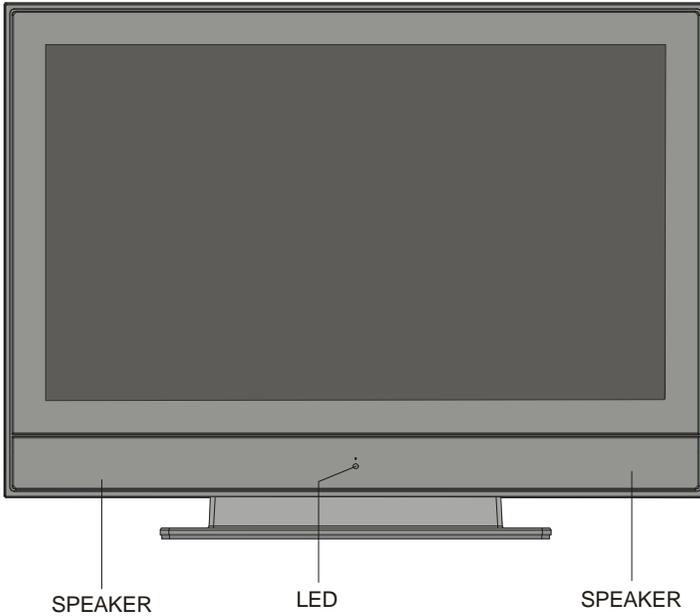

REAR VIEW

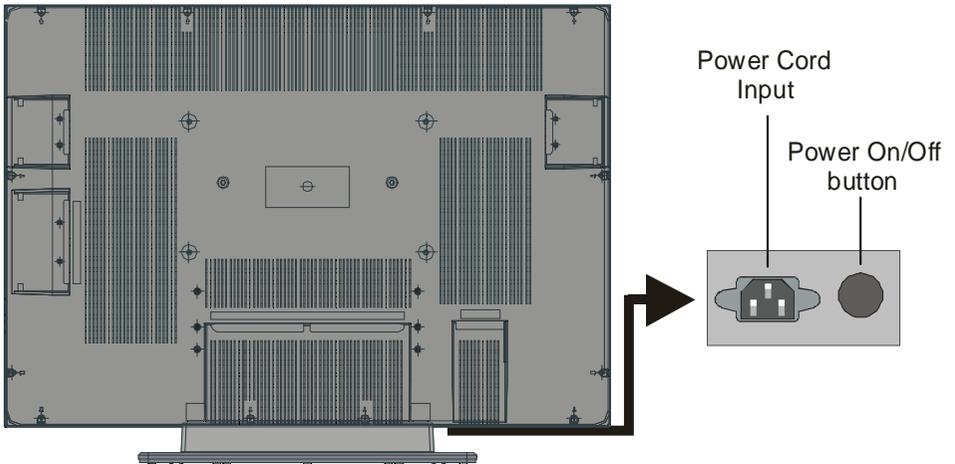

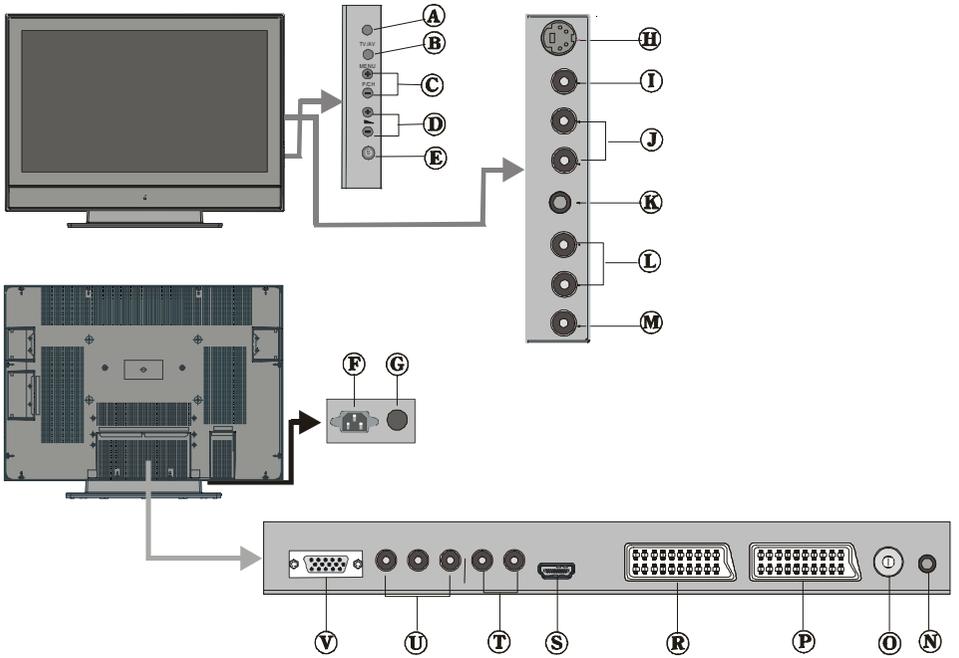

- Ⓐ TV/AV button
- Ⓑ MENU button
- Ⓒ Prog. Up, Prog. Down buttons
- Ⓓ Volume Up, Volume Down buttons
- Ⓔ On/Off switch
- Ⓕ Power cord input
- Ⓖ Power On/Off button
- Ⓗ S-VHS Input EXT-4S
- Ⓘ Video Input ┌───┬───┐ EXT-4
- Ⓝ Audio Inputs ┌───┬───┐
- Ⓚ Headphone
- Ⓛ Audio Line Outs
- Ⓜ Subwoofer Out
- Ⓝ PC Audio Input
- Ⓞ Aerial
- Ⓟ Scart 2 (EXT-2)
- Ⓡ Scart 1 (EXT-1)
- Ⓢ HDMI Input (EXT-5)
- Ⓣ Component Audio Inputs
- Ⓤ Component Video (YPbPr) Inputs ┌───┬───┐ EXT-3
- Ⓥ VGA Input

Preparation

For ventilation, leave a space of at least 10 cm free all around the set. To prevent any fault and unsafe situations, please do not place any objects on top of the set.

Use this apparatus in tropical and/or moderate climates.

Features

- Remote controlled colour television.
- 100 programmes from VHF, UHF bands or cable channels can be preset.
- It can tune cable channels.
- Controlling the TV is very easy by its menu driven system.
- It has 2 Scart sockets for external devices (such as video, video games, audio set, etc.)
- 3DS Virtual Surround Sound
- Stereo sound system (German+Nicam).
- Full function Teletext .
Fastext (1000 Pages), TOP text.
- Headphone connection.
- Direct channel access.
- A.P.S. (Automatic Programming System).
- All programmes can be named.
- Forward or backward automatic tuning.
- Sleep timer.
- Child Lock.
- Automatic sound mute when no transmission.
- NTSC Playback.
- AV in and S-VHS in are available.
- It has VGA connector for external devices such as computer.
- It has an HDMI connector for Digital Video and Audio. This connection is also designed to accept High Definition signals.
- It has PIP / PAP / PAT functions.
- AVL (Automatic Volume Limiting)
- TV Picture in PC
- When no valid signal is detected, after 5 minutes the TV switches itself automatically to stand-by mode.
- PLL (Frequency Search)

- PC Input (Support up to WXGA 1366 x 768)
- Stereo PC Audio Input
- Plug&Play for Windows 9X, ME, 2000, XP
- 3D Comb Filter
- Audio Line Out

Panel Features

- 37-inch TFT LCD display.
- High resolution (1366x768)
- Contrast ratio (800:1 typical)
- Brightness (typical) 500 cd/m².
- Display colour 16.7 Million.

Safety Precautions

Please read the following recommended safety precautions carefully for your safety.

IMPORTANT SAFETY INFORMATION ON OPERATING YOUR TV

Do's and Don'ts

DO's

This Television has been designed and manufactured to meet international safety standards, but like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

DO read the operating instructions before you attempt to use the equipment.

DO consult your dealer if you are in any doubt about installation, operation or safety of your equipment.

DO be careful with glass panels or doors on equipment.

This TV is supplied with a fitted mains plug. This plug must not be cut off as it may contain a special radio interference filter, the removal of which could lead to impaired performance. If you wish to extend the lead, obtain an appropriate safety approved extension lead or consult your dealer.

Observe the manufacturers instructions when connecting extension leads to the TV. Check the fuse rating on the new plug, this should be fitted with a 5 Amp fuse which conforms to either ASTA or BSI (BS1 362) approvals, these

are easily identifiable by either the  or  symbols. If you are in any doubt about the installation of an extension lead, please consult a competent electrician.

DON'Ts

DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way switch off, withdraw the mains plug and consult your dealer.

DON'T place water filled vessels on top of T.V. cabinets.

DON'T remove any fixed cover as this may expose dangerous voltages.

DON'T leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a stand-by mode. Switch off using the switch on the equipment and make sure your family know how to do this. Special arrangements may need to be made for infirm or handicapped people.

DON'T use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety. It is illegal to watch television whilst driving.

DON'T obstruct the ventilation of the equipment, for example with curtains or soft furnishings. Overheating will cause damage and shorten the life of the equipment.

DON'T use makeshift stands and NEVER fix legs or stands to the TV with any screws other than those provided - to ensure complete safety always use the manufacturers approved stand with the fixings provided.

DON'T allow electrical equipment to be exposed to rain or moisture.

ABOVE ALL

- **NEVER let anyone, especially children push anything into holes, slots or any other opening in the case - this could result in a fatal electric shock.**
- **NEVER guess or take chances with electrical equipment of any kind - it is better to be safe than sorry!**

1. Power Source

The set should be operated only from a **220-240V AC, 50 Hz.** outlet. Ensure you select the correct voltage setting for your convenience.

2. Power Cord

Do not place the set, a piece of furniture, etc. on the power cord (mains lead) or pinch the cord. Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Never make a knot in the cord or tie it with other cord. The power cord should be placed in such a way that they are not likely to be stepped on.

A damaged power cord can cause fire or give you an electric shock. When it is damaged and need to be changed, it should be done by qualified personnel.

3. Moisture and Water

Do not use this equipment in a humid and damp place (avoid the bathroom, the sink in the kitchen, and near the washing machine). Do not expose this equipment to rain or water, as this may be dangerous and do not place objects filled with liquids, such as flower vases on top of the set. Avoid from dripping or splashing.

If any solid object or liquid falls into the cabinet, unplug the set and have it checked by qualified personnel before operating it any further.

4. Cleaning

Before cleaning, unplug the set from the wall outlet. Do not use liquid or aerosol cleaners. Use soft and dry cloth.

5. Ventilation

The slots and openings on the back cover are intended for ventilation and to ensure reliable operation. To prevent overheating, these openings must not be blocked or covered in anyway.

6. Heat and Flames

The set should not be placed near to naked flames and sources of intense heat, such as an electric heater. Ensure that no naked flame sources, such as lighted candles, are placed on top of the set.

7. Lightning

In case of storm and lightning or when going on holiday, disconnect the power cord from the wall outlet.

8. Replacement Part

When replacement parts are required, be sure the service technician has used replacement parts which are specified by the manufacturer or have the same specifications as the original one. Unauthorised substitutions may result in fire, electrical shock, or other hazards.

9. Servicing

Please refer all servicing to qualified personnel. Do not remove the cover yourself as this may result in an electric shock.


WARNING: When the device is not in use for a long time, disconnect from power.

Instructions for waste disposal:

- Packaging and packaging aids are recyclable and should principally be recycled. Packaging materials, such as foil bag, must be kept away from children.
- Battery, including those which is heavy metal-free, should not be disposed of with household waste. Please dispose of used battery in an environmentally sound manner. Find out about the legal regulations which apply in your area.
- Cold cathode fluorescent lamp in LCD PANEL contains a small amount of mercury, please follow local ordinances or regulations for disposal.

- The mains plug is used to disconnect the TV from the mains and therefore it shall remain readily operable.

Warning: To prevent injury, this device must be securely attached to the floor/wall in accordance with the installation instructions.

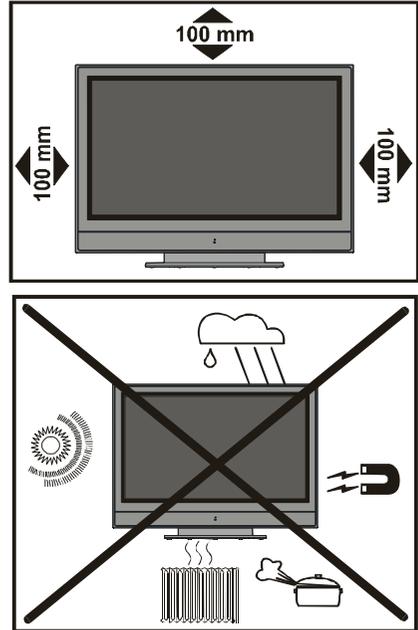

"The LCD panel is very high technology product with about a million thin film transistors, giving you fine picture details. Occasionally, a few non-active pixels may appear on the screen as a fixed point of blue, green or red. Please note that this does not affect the performance of your product."

"DO NOT LEAVE YOUR TV AT STAND-BY OR OPERATING WHEN YOU LEAVE YOUR HOUSE"

Be sure to ground the connection properly.

Connect the ground terminal of TV with the ground terminal provided at the power outlet using the enclosed power cord. If the provided plug does not fit your outlet, consult an electrician for replacement of the obsolete outlet.



Surely connect the ground wire.


Before Switching On Your TV

Power Connection

IMPORTANT: The TV set is designed to operate on **220-240V AC, 50 Hz.**

- After unpacking, allow the TV set to reach the ambient room temperature before you connect the set to the mains.

Connections To The Aerial Input Socket

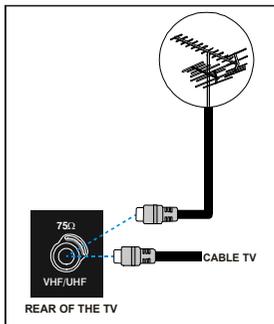

- Connect the aerial or cable TV plug to the Aerial input socket located at the rear of the TV and connect the cable plug coming out from the TV out socket located on the devices (VCR, DVB-T etc.) to this socket as well.


How To Connect Other Devices

IMPORTANT: Switch off the TV before connecting any external device.

Sockets for external connections are at the rear side of the TV. For connection of other devices via Scart refer to the manuals of the related devices.

Inserting Batteries In The Remote Control Handset

- Remove the battery cover located on the back of the handset by gently pulling downwards from the indicated part.
- Insert two **AA/R6** or equivalent type batteries inside. Place the batteries in the right directions.
- Replace the battery cover.

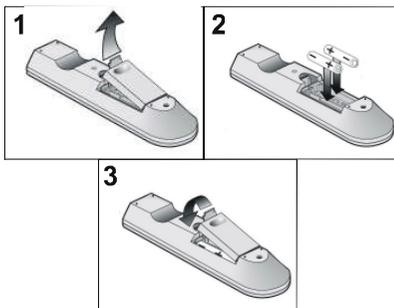

NOTE: Remove the batteries from remote control handset when it is not to be used for a long period. Otherwise it can be damaged due to any leakage of batteries.

Switching The TV ON/OFF

To switch the TV on:

Your TV will switch on in two steps:

- 1- Connect the power supply cord to the system. Press Power On/Off switch "ⓘ" located by the mains input socket. Then the TV switches itself to stand-by mode and the led on the front of the TV becomes Red.
- 2- To switch on the TV from stand-by mode either:

Press a digit button on the remote control so that a programme number is selected,

or,

Press the "**-P/CH**" or "**P/CH+**" button at the right side of the TV or press the "**P-**" or "**P+**" button on the remote control, so that last mode switched off is selected.

By either method the TV will switch on and the led becomes green.

To switch the TV off:

- Press the "ⓘ (stand-by)" button on the remote control or On/Off switch at the right side of the TV, so the TV will switch to stand-by mode and the **GREEN LED** will become **RED**.

To power down the TV completely, press Power On/Off button at the rear side of the TV,


or,

Unplug the power cord from the mains socket.


Initial Settings

Initial APS (Automatic Programming System)

The following menu will be displayed on the screen when you turn your TV on for the first time. APS, searches and sorts all channels and stores them automatically on your TV, according to the transmission of programme systems in your area.

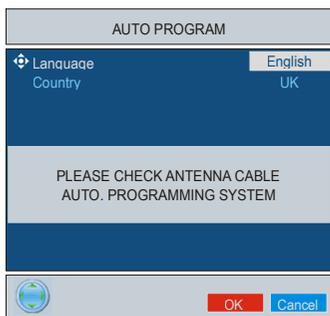

 First of all choose **Language** and **Country** by using \blacktriangle / \blacktriangledown and \blacktriangleleft / \blacktriangleright buttons. This will affect the sort process in APS. To start APS, press the **RED** or “**OK**” button.



After APS is finalized, the programme table will appear on the screen. In the programme table you will see the programme numbers and names assigned to the programmes.

If you do not accept the locations and / or the programme names of programmes, you can change them from the Program Menu. (See page 14)

Operating The TV

You can operate your TV using both the remote control handset and the buttons on the set.

Operating with the buttons on the TV set

Volume setting and programme selection can be made by using the buttons on the control panel at the right side of the TV.

Volume Setting

Press the “ \blacktriangleleft ” button to decrease volume or the “ \blacktriangleright ” button to increase volume, so a volume level scale (slider) will be displayed at the bottom of the screen.

Programme Selecting

Press the “**P/CH+**” button to select the next programme or the “**P/CH-**” button to select the previous programme.

Entering The Menu

Press the “**MENU**” button on the control panel at the side of the TV to enter the menu. “**P/CH+ / -P/CH**” and “ \blacktriangleleft + / - \blacktriangleright ” buttons on the TV are used as navigation buttons in menu.

AV Mode

Press the “**AV**” button on the control panel at the side of the TV to switch your TV to EXT modes.

Operating With Remote Control

The remote control handset of your TV is designed to control all the functions of your TV. The functions will be described in accordance with the menu system of your TV.

Functions of the menu system are described in Menu System section.

Volume Setting

Press the \blacktriangleright button to increase volume. Press the \blacktriangleleft button to decrease volume. A volume level scale (slider) will be displayed at the bottom of the screen.

Programme Selecting

(Previous or next programme)

- Press the “**P-**” button to select the previous programme.

- Press the “**P+**” button to select the next programme.

Programme Selecting (direct access):

Press digit buttons on the remote control handset to select programmes between 0 and 9. The TV will switch to the selected programme after a short delay.

- For a two digit programme number enter the second digit after pressing the first digit within 2 seconds.

Menu System

Your TV has been designed with a menu system to provide easy manipulation of a multifunction system.

Press the  button to enter the menu. Press  button to select a menu title and then  button to select a menu item and  or “**OK**” button to enter the menu item.

- Press the  button to exit the menu.
- Press the  button to return to the previous menu.

Picture menu

By pressing  button, select the first icon. Picture menu appears on the screen.



Mode

By pressing  button, select **Mode**. Press  button to choose one of these options: **Natural**, **Dynamic** and **Cinema**.

Picture mode can be changed directly by pressing the  button.

Contrast

By pressing  button, select **Contrast**. Press  button to increase contrast. Press  button to decrease contrast. Contrast level can be adjusted between 0 and 63.

Brightness

By pressing  button, select **Brightness**. Press  button to increase brightness. Press  button to decrease brightness. Brightness level can be adjusted between 0 and 63.

Sharpness

By pressing  button, select **Sharpness**. Press  button to increase sharpness. Press  button to decrease sharpness. Sharpness level can be adjusted between 0 and 31.

Colour

By pressing  button, select **Colour**. Press  button to increase colour. Press  button to decrease colour. Colour level can be adjusted between 0 and 99.

Hue

This item is displayed in picture menu when the TV receives an NTSC signal. By pressing  button, select **hue**. Press  button to increase hue. Press  button to decrease hue. Hue level can be adjusted between -31 and 31.

Colour Temp

By pressing  button, select **Colour Temp**. Press  button to choose one of these options: **Cool**, **Normal** and **Warm**.

Noise Reduction

This item is used to reduce the image noise and improve the picture quality at weak signals.

By pressing  button, select **Noise Reduction**. Press  button to set **Noise reduction** level to **Off**, **Low**, **Medium** or **High**.

Film Mode

Films are recorded at a different number of frames per second to normal television programmes.

By pressing ▲ / ▼ button, select **Film Mode**. Press ◀ / ▶ button to set this feature On or Off. Turn this feature on when you are watching films to see the fast motion scenes clearly.

3D Comb

3D Comb is used to improve colour transitions and colour quality of pictures.

By pressing ▲ / ▼ button, select **3D Comb**. Press ◀ / ▶ button to set this feature On or Off.

Reset

By pressing ▲ / ▼ button, select **Reset**. Press ◀ / ▶ or "OK" button to reset the picture modes to factory default settings.

Sound menu

By pressing ◀ / ▶ button, select the second icon. Sound menu appears on the screen.



Volume

By pressing ▲ / ▼ button, select **Volume**. Press ▶ button to increase volume level. Press ◀ button to decrease volume level. Volume level can be adjusted between 0 and 63.

Equalizer

By pressing ▲ / ▼ button, select **Equalizer**. Press ◀ / ▶ or "OK" button to enter equalizer menu.



In equalizer menu the sound mode can be changed to **User, Pop, Rock, Jazz, Flat** and **Classic** by pressing ◀ / ▶ button. Equalizer menu settings can be changed only when **Sound Mode** is **User**. Select the desired frequency by ▲ / ▼ button and increase or decrease the frequency gain by pressing ◀ / ▶ button.


Press the ↶ button to return to the previous menu.

Balance

By pressing ▲ / ▼ button, select **Balance**. Press ▶ button to increase balance to the right. Press ◀ button to increase balance to the left. Balance level can be adjusted between -31 and 31.

Headphone

By pressing ▲ / ▼ button, select **Headphone**. Press ◀ / ▶ or "OK" button to enter headphone menu.

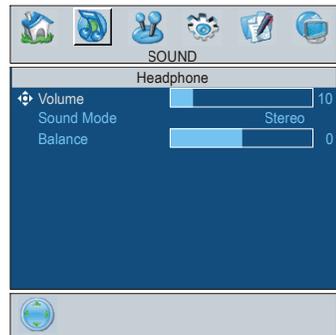

Sound Mode

By pressing ▲ / ▼ button, select **Sound Mode**. Press ◀ / ▶ button to change the mode.

You can select **Mono, Stereo, Dual A** or **Dual B** mode, only if the selected channel supports that mode.

In case of bilingual broadcast (Dual Sound), you can select original or dubbed language using mode option.

AVL

Automatic Volume Limiting (AVL) function adjusts the sound to obtain fixed output level between programs, having different sound levels.

Pressing ◀ / ▶ button will turn this feature on or off.

Effect

You can use this feature to switch the sound effect on or off. If the current sound system is Mono and the sound effect is switched on, then the sound will be heard as if it is Stereo. If the current sound system is Stereo, switching this effect on will give a more spatial effect.

Pressing ◀ / ▶ button will turn this feature on or off.

Dynamic Bass

Dynamic Bass is used to increase bass effect of the TV set.

By pressing ▲ / ▼ button, select **Dynamic Bass**. By pressing ◀ / ▶ button set Dynamic bass to Low, High or OFF. It is not recommended to select High if listening at high volume levels. There is a subwoofer output that can accept an active subwoofer if you wish to create very high levels of Bass.

3DS

This feature is used to create the impression that sound is coming from around the room instead of from the set speakers. Pressing the ◀ / ▶ buttons will turn the feature on or off.

Subwoofer

It is possible to connect an external, active subwoofer to the set to give a much deeper bass effect.

By pressing ▲ / ▼ button, select Subwoofer. Subwoofer can be set to On or Off.

Set Subwoofer to On when you connect an external subwoofer to the set.

Feature menu

By pressing ◀ / ▶ button, select the third icon. Feature menu appears on the screen.



Sleep Timer

By pressing ▲ / ▼ button, select **Sleep Timer**. The timer can be programmed between Off and 2 hours in steps of 10 minutes by pressing ◀ / ▶ button. If sleep timer is activated, at the end of the selected time, the TV goes automatically to stand-by mode.

Child Lock

You can use this feature to prevent children turning the TV on or changing programs or adjustments etc. without remote control.

The child lock feature can be set by ◀ / ▶ button to either **on** or **off**. When **off** is selected, there will be no difference in the operation of your TV. When **on** is selected, the TV can only be controlled by the remote control handset. In this case the control panel buttons, except the Power on/off button, at the rear side of the TV will not work. If one of these buttons is pressed, "Child Lock On" will be displayed on the screen.

Language

By pressing ▲ / ▼ button, select **Language**.
By pressing ◀ / ▶ button, you can select the language.

Ext-2 Out

By pressing ▲ / ▼ button, select **Ext-2 Out**.
You can set **Ext-2 Out** to **TV, EXT-1, EXT-3, EXT-4, EXT-5** or **PC** by pressing ◀ / ▶ button.

Note: Only audio output is available for EXT-3, EXT-5 and PC. The other options have both audio and video outputs.

Default Zoom

By pressing ▲ / ▼ button, select **Default Zoom**. You can set **Default Zoom** to **Panoramic, 4:3** or **14:9 Zoom** by pressing ◀ / ▶ button. If there is no WSS or aspect ratio (picture size) information and zoom mode is selected as **Auto** by pressing the (⏏) button, then the zoom mode will automatically change to Default Zoom setting. See also Zoom Modes on page 17.

Blue Background

You can set the TV to automatically change to a blue screen if the signal is weak or absent, or when there is no input from an external device.

The **Blue Background** feature can be turned on or off by pressing ◀ / ▶ button.

Menu Background

By pressing ▲ / ▼ button, select **Menu Background**. You can change menu background to **Translucent** or **Opaque** by pressing ◀ / ▶ button.

Menu Timeout


By pressing ▲ / ▼ button, select **Menu Timeout**. Press ◀ / ▶ button to change menu timeout to **15 sec, 30 sec** or **60 sec**.

Teletext Language

By pressing ▲ / ▼ button, select **Teletext Language**. Press ◀ / ▶ button to change Teletext Language to **West, East, Cyrillic, Turk/Gre** or **Arabic**. This will normally be set to West for Western Europe.

Install menu

By pressing ◀ / ▶ button, select the fourth icon. Install menu appears on the screen.

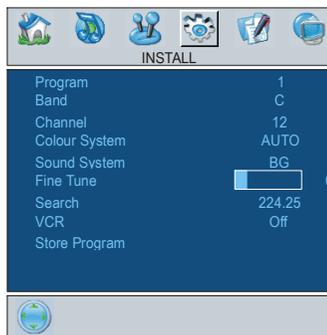

Program

By pressing ▲ / ▼ button, select **Program**. Press ◀ / ▶ button to select the program number. You can also enter a number via digit buttons on the remote control. There are 100 program storage between 0 and 99.

Band

Band can be selected either "C" or "S" by pressing ◀ / ▶ button.

Channel

Channel can be changed by ◀ / ▶ button or Digit Buttons.

Colour System

By pressing ▲ / ▼ button, select **Colour System**. Press ◀ / ▶ button to change the colour system to **PAL, PAL60, SECAM** or **AUTO**.

Note: In EXT mode, you can choose NTSC 3.58 and NTSC 4.43 as well.

Sound System

By pressing ▲ / ▼ button, select **Sound System**. Press ◀ / ▶ button to change the sound system to **BG, DK, I** or **L/L'**.

Fine Tune

By pressing ▲ / ▼ button, select **Fine Tune**. Press ◀ / ▶ button to adjust the tuning.

Search

By pressing ▲ / ▼ button, select **Search**. Press ◀ / ▶ button to start program searching. The searching will stop when a signal is found. You can also enter a frequency value directly by pressing the digit buttons.

VCR (Video Cassette Recorder)

- This item can be seen in **all modes except EXT-3, EXT-5 and PC**.
- If you want to watch a **VCR** source from one of these modes, then it will be better to set **VCR** mode "on". For this, while the cursor is on this item press the ◀ / ▶ buttons to set it "On".
- If you want to watch a **DVD**, then you must set this item "off".

Store Program

By pressing ▲ / ▼ button, select **Store Program**. Press ◀ / ▶ or "OK" button to store the adjustments. "Program Stored" will be displayed on the screen.

Program menu

By pressing ◀ / ▶ button, select the fifth icon. Program menu appears on the screen.



By moving the cursor in four directions you can reach 20 programmes in the same page. You can scroll the pages up or down by pressing the navigation buttons to see all the programmes in TV mode (except the AV mode).

By cursor action, programme selection is done automatically.

Name:

To change the name of a decided programme, select the programme and press the RED button.

The first letter of the selected name starts to blink. Press ▲ / ▼ button to change that letter and ◀ / ▶ button to select the other letters. By pressing the RED button, you can store the name.

Insert:


Select the programme which you want to insert by navigation buttons. Press the GREEN button. By navigation buttons move the selected programme to the decided programme space and press the GREEN button again.

Delete:

To delete a programme, press the YELLOW button. Pressing the YELLOW button again erases the selected programme from the programme list, and the programmes below shift one up.


APS (Automatic Programming System)

When you press the BLUE button for APS, the following warning screen will be displayed.

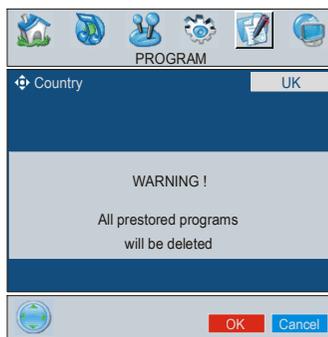

Press the BLUE button to cancel APS if you do not want to delete your existing programme list.

 To continue APS, first select the country by pressing ◀ / ▶ button and then press the RED or "OK" button.



After APS is finalized, the programme table will appear on the screen.

Source menu

By pressing ◀ / ▶ button, select the sixth icon. Source menu appears on the screen.




In source menu, highlight a source by pressing ▲ / ▼ button and switch to that mode by pressing ◀ / ▶ or “OK” button.

PC Mode

Installation

- Power off both Computer and Display before making any connections.
- Set your PC’s resolution correctly before connecting to the TV. See the table on **page 25** for supported modes.
- Use a D-SUB cable to connect the TV’s PC input to the computer’s RGB output terminal.

15 Pin Mini D-Sub Connector

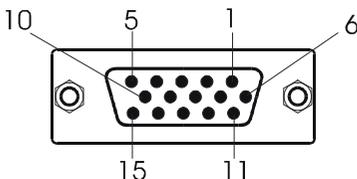


- Tighten the screws of the Display cable until the connectors are fastened securely (finger-tighten only).

Menu System in PC mode

Press the button. The menu will be displayed in the middle of the screen.

PC Picture Position Menu

By pressing ◀ / ▶ button, select the first icon. PC Picture Position menu appears on the screen.

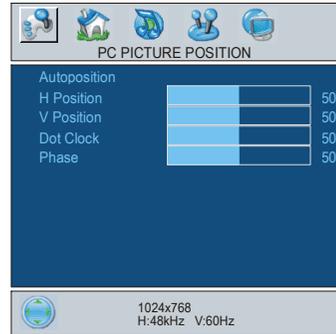

Autoposition

If you shift the picture horizontally or vertically to an unwanted position, use this item to put the picture into correct place automatically.

- Select **Autoposition** item by using ▲ / ▼ buttons.
- Press ▶ or “OK” button.

Warning: Auto position adjustment recommended to be done with the full screen image for the proper adjustment.

H (Horizontal) Position

This item shifts the image horizontally to right hand side or left hand side of the screen.

- Select **H Position** item by using ▲ / ▼ button.
- Use ◀ / ▶ button to adjust the value.

V (Vertical) Position

This item shifts the image vertically towards the top or bottom of the screen.

- Select **V Position** item by using ▲ / ▼ button.
- Use ◀ / ▶ button to adjust the value.

Dot Clock

Dot Clock adjustments correct interference that appear as vertical banding in dot intensive presentations like spreadsheets or paragraphs or text in smaller fonts.

- Use ◀ / ▶ button to adjust the value.


Phase

Depending on the resolution and scan frequency that you input to the TV Set, you may see a hazy or noisy picture on the screen. In such a case you can use this item to get a clear picture by trial and error method.

- Use ◀ / ▶ button to adjust the value.

PC Picture Menu

By pressing ◀ / ▶ button, select the second icon. PC Picture menu appears on the screen.

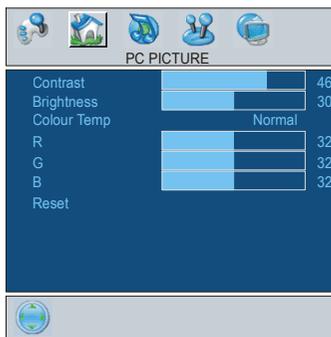

Contrast, Brightness and Colour Temperature adjustments in this menu are identical to adjustments defined in TV picture menu.

When Colour Temp is Manual, you can also adjust the R,G,B items. R, G and B adjust the TV image colour in PC mode. You can change the TV colour to your desired colour: R (Red), G (Green), B (Blue)

Select **Reset** and press ◀ / ▶ or “OK” button to reset the picture modes to factory default settings.

Sound Menu

By pressing ◀ / ▶ button, select the third icon. Sound menu appears on the screen.

The items in this menu are described at **Sound menu** starting **page 11**.

Feature Menu

By pressing ◀ / ▶ button, select the fourth icon. Feature menu appears on the screen.

The items in this menu are described at **Feature menu** starting **page 12**.

Source Menu

By pressing ◀ / ▶ button, select the fifth icon. Source menu appears on the screen.

In source menu, highlight a source by pressing ▲ / ▼ button and switch to that mode by pressing ◀ / ▶ or “OK” button.

Sound in PC mode

- Connect the PC’s Audio output to the TV’s **PC Audio In** socket with an audio cable.

Other Features

TV Status

Programme Number, **Programme Name**, **Sound Indicator** and **Zoom Mode** are displayed on the upper right side of the screen when a new programme is entered or **i+** button is pressed.

Mute Indicator

It is placed in the upper left side of the screen when enabled.



To cancel mute, there are two alternatives; the first one is pressing the **⏏** button and the second one is increasing/decreasing the volume level.

PIP and PAP modes

Press the  button to switch to PIP mode.

At PIP Mode, a small picture (PIP picture) is displayed on the main picture. There are 1 size and 4 positions (upper left, upper right, bottom left and bottom right) available for the PIP window. You can use  button to change the PIP position. Aspect Ratio of the PIP window is fixed and 4:3.

When PIP Mode is entered, the default active window is PIP window and the active window is indicated by a green frame around it. The active window can be changed by pressing the “Yellow” button. The status info OSD belongs to active window. The place of the status OSDs are same for both windows.

For PIP picture restrictions, see table on page 27.

Press the  button twice to switch to PAP mode.

At PAP Mode, two pictures with equal sizes are displayed on the screen. Aspect Ratios of the windows are fixed.

When you switch to PAP Mode, Main window in PIP Mode is displayed on the right side of the screen. The active window can be changed by pressing the “Yellow” button.

Source restrictions of PAP Mode are same as in PIP Mode. It is not possible to show 2 different channels from the TV tuner at the same time.

Freeze Picture

You can freeze the picture on the screen by pressing the  button. At **PIP** and **PAP** layouts; only the main picture can be frozen.

Zoom Modes

Zoom mode can be changed by pressing the  button. You can change the screen size according to the picture aspect ratio. Select the optimum one from the following **ZOOM** modes.

Note: You can only choose 4:3 and FULL in PC mode.

 
Auto:

When a **WSS (Wide Screen Signalling)** signal, which shows the aspect ratio of the picture, is included in the broadcast signal or the signal from an external device, the TV automatically changes the **ZOOM** mode according to the **WSS** signal.

- When the **AUTO** mode does not function correctly due to poor **WSS** signal quality or when you want to change the **ZOOM** mode, change to another **ZOOM** mode manually.

Full:


This uniformly stretches the left and right sides of a normal picture (4:3 aspect ratio) to fill the wide TV screen.



- For 16:9 aspect ratio pictures that have been squeezed into a normal picture (4:3 aspect ratio), use the **Full** mode to restore the picture to its original shape.


16:9 Zoom:

 This zooms up the wide picture (16:9 aspect ratio) to the full screen.



16:9 Subtitle:

 
This zooms up the wide picture (16:9 aspect ratio) with subtitles to the full screen.



“Default Zoom” Modes:


4:3

 Use to view a normal picture (4:3 aspect ratio) as this is its original shape.




14:9 Zoom:

This zooms up the wide picture (14:9 aspect ratio) to the upper and lower limits of the screen.

 

Panoramic:

 This stretches the left and right sides of a normal picture (4:3 aspect ratio) to fill the screen, without making the picture appear unnatural.




The top and bottom of the picture are slightly cut off.

Teletext

Teletext is an information system that displays text on your TV screen. Using the Teletext information system you can view a page of information on a subject that is available in the list of contents (index).

To Operate Teletext

- Select a TV station where Teletext is being transmitted.
- Press the  button. Usually the list of contents (index) is displayed on the screen.

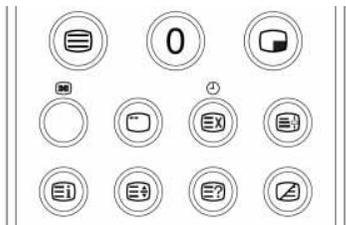

To Select A Page Of Teletext

- Press the appropriate digit buttons for the required Teletext page number.

The selected page number is displayed in the top left corner of the screen. The Teletext page counter searches until the selected page number is located, the desired page is then displayed on the screen.

- Press the  button to move the Teletext screen forward one page at a time.
- Press the  button to move the Teletext screen backward one page at a time.

To Select Index Page

- To select the page number of the index (generally page 100), press the  button.

To Select Teletext With A TV Programme

- Press the  button. The text is now superimposed over the programme on the screen.
- Press the  button again to return to the Teletext page.

To Select Double Height Text

- Press the  button for the top half of the information page to be displayed in double height text.
- Press the  button again for the bottom half of the information page to be displayed in double height text.
- Press the  button once more for the full page of normal height text.

To Reveal “Concealed” Information

- Pressing the  button once will reveal answers on a quiz or games page.
- Pressing the  button again will conceal the revealed answers.

To Stop Automatic Page Change

The teletext page you have selected may contain more information than what is on the screen; the rest of the information will be displayed after a period of time.

- Press the  button to stop the automatic page change.
- Press the  button again to allow the next page to be displayed.

To Select A Subcode Page

Subcode pages are subsections of long Teletext pages that can only be displayed on the screen one section at a time.

- Select the required Teletext page.
- Press the  button.
- Select the required subcode page number by pressing four digit buttons (e.g. 0001).
- If the selected subcode page is not displayed in a short time, press the  button. TV programme will be displayed on the screen.
- Teletext page number will be displayed on the upper left corner of the screen when the selected page is found.
- Press the  button to display the selected Teletext page.

PAT (Picture and Text)

- Press the RED () button to see the programme and teletext at the same time. The screen will be divided into two parts. Teletext will be displayed on the left side of the screen.

To Exit Teletext

- Press the  button. The screen will switch to TV mode.

To Display The Time

- While watching a TV programme with Teletext transmission press the  button. The current time information, captured from Teletext will be displayed on the screen.

- If the programme being watched does not have Teletext transmission, no information will be displayed.

Fasttext

Your TV supports the 1000 page Teletext system. When the page number of any of the 1000 pages in memory is entered, the system will not search for the requested page; instead it will display the page automatically. If the requested page is not in memory, the system will search for the requested page number and save the 1000 pages including the requested page into memory after finding it.

- Press the  button to move the Teletext screen forward one page at a time.
- Press the  button to move the Teletext screen backward one page at a time.

For Fasttext

The subject-heading for the information may have a particular colour.

- Press an appropriate **RED, GREEN, YELLOW** or **BLUE** button in order to reach the relevant page quickly.

For TOP text

TOP text mode of operation will be activated automatically according to the transmission.

- If TOP text transmission is present, colour coded buttons will appear in status row.
- If TOP text transmission is not present, status row will not appear.

The subject-heading for information may be located in coloured box.

In Top mode the  or  commands will request the next or previous page respectively. If TOP text transmission is not available, in case of operation of these commands, wraparound occurs. For example page 100 appears to be one greater than page 199.

Connect Peripheral Equipment

There is a wide range of audio and video equipment that can be connected to your TV.

The following connection diagrams show you where the different (Optional) equipment should be connected at the rear side of the TV.

High Definition

Your Hitachi LCD Television is capable of displaying High Definition pictures from devices such as a High Definition Satellite Receiver or DVD Player. These devices must be connected via the HDMI socket (EXT-5) or Component Socket (EXT-3). These sockets can accept either 720p or 1080i signals.

Via The Scart

LCD TV has 2 Scart sockets. If you want to connect peripherals (e.g. video, decoder, etc.) which have Scart sockets to the TV, use SCART 1 or SCART 2 inputs.

If an external device is connected via the Scart sockets, the TV will be switched to AV mode automatically.

Via Aerial Input

If you want to connect to your TV, peripherals like video recorders or decoders, but the device you want to connect does not have a Scart socket, you should connect it to the Aerial input of the TV.

If the VCR is connected via Aerial input it is suggested to use Programme 0.

Decoder

Cable TV offers you a wide choice of programs. Most of them are free, others are to be paid for by the viewer. This means that you will need to subscribe to the broadcasting organisation whose programmes you wish to receive. This organisation will supply you a corresponding decoder unit to allow the programmes to be unscrambled.

For further information ask your dealer. See also the booklet supplied with your decoder.

Connect a decoder with an aerial socket to the TV

- Connect the aerial cable.

Connect a decoder without an aerial socket to the TV

- Connect the decoder to the TV with a Scart cable to **SCART 1**.

TV And Video Recorder

- Connect the aerial cables.

Better picture quality can be obtained if you also connect a Scart cable to **SCART** sockets.

Playback NTSC

To use this option you can;

- Connect an NTSC VCR player to a Scart socket at the rear side of the TV.
- Connect an NTSC VCR player to RCA Jacks at the rear side of the TV.

Then, press the  button to select appropriate source.

Copy Facility

Source selection for **VCR** recording.

- Select **Feature** menu.
- Select **Ext-2 Out** by pressing ◀ / ▶ button.
- Select a source to copy the picture from that source.

Search For And Store The Test Signal Of The Video Recorder

- Unplug the aerial cable from the aerial socket of your video recorder.
- Switch on your TV and put the video recorder on the test signal. (See the booklet for your video recorder.)
- Enter the **Install** menu and select **search**.
- Search for the test signal of your video recorder in the same way as you searched for and stored the TV signals. Store the test signal under programme number 0.

- Replace the aerial cable in the aerial socket of your video recorder once you have stored the test signal.

Camera And Camcorder

To Connect To AV Input

Connect your camera or camcorder to AV (EXT-4) input at the rear side of the TV.

- Connect your equipment to the TV via **VIDEO** (yellow), **AUDIO R** (red) and **AUDIO L** (white) inputs. You must connect the jacks to the input using the same colour.

To Connect To S-VHS Input

Connect your camera or camcorder S-VHS input at the rear side of the TV.

- Connect your equipment to the TV via S-VHS input and audio inputs of AV inputs by using S-VHS cables.

Connect The Decoder To The Video Recorder

Some video recorders have a special Scart socket for decoder.

- Connect a Scart cable to the Scart socket of your decoder and to the special Scart socket of your video recorder. Refer to the booklet of your video recorder.
- To connect your video recorder to the TV, refer to the TV and Video Recorder section.

If you want to connect more equipment to your TV, consult your dealer.


Connecting Headphones

Use the stereo headphone socket at the rear side of the TV, to connect headphones.



Connecting Subwoofer

Use **Subwoofer Out** socket to connect an external, active subwoofer to the set to give a much deeper bass effect.





Aerial Connection

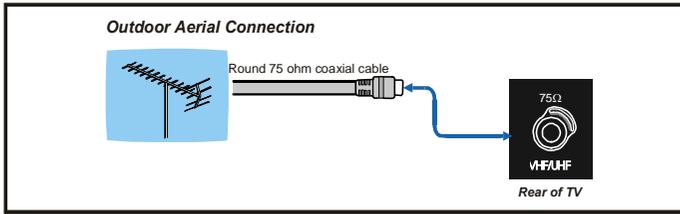

Connect Peripheral Equipment

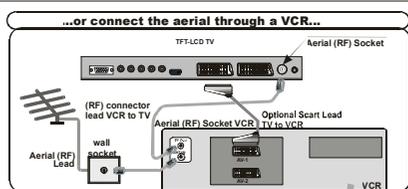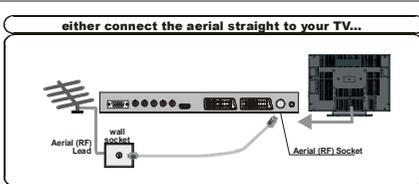

It is recommended that a scart lead should be fitted between your TV and VCR to enhance your picture and sound quality. Scart leads are essential if you have a stereo TV and VCR and wish to obtain stereo sound from your equipment. These leads can be purchased from your Hitachi dealer or any good High Street electrical retailer.

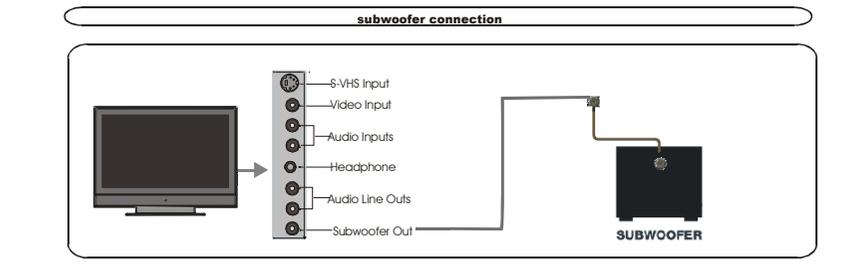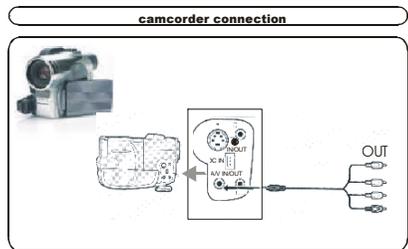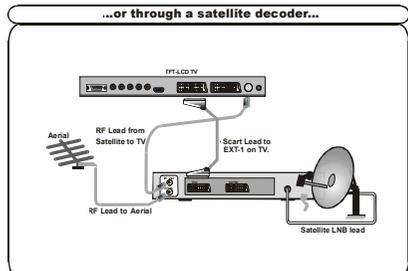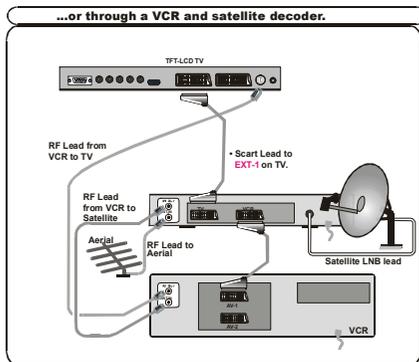

Tips

Care Of The Screen

Clean the screen with a slightly damp, soft cloth. Do not use abrasive solvents as they may damage the TV screen coating layer.

Poor Picture

Have you selected the correct TV system? Is your TV set or house aerial located too close to non-earthed audio equipment or neon lights, etc.?

Mountains or high buildings can cause double pictures or ghost images. Sometimes you can improve the picture quality by changing the direction of the aerial.

Is the picture or Teletext unrecognisable? Check if you have entered the correct frequency.

The picture quality may degrade when two peripherals are connected to the TV at the same time. In such a case, disconnect one of the peripherals.

No Picture

Is the aerial connected properly? Are the plugs connected tightly to the aerial socket? Is the aerial cable damaged? Are suitable plugs used to connect the aerial? If you are in doubt, consult your dealer.

No Picture could mean that your TV is not receiving a transmission. Have you selected the correct button on the remote control? Try once more.

Sound

You can not hear any sound. Did you perhaps interrupt the sound, pressing the  button?

Sound is coming from only one of the speakers. Is the balance set to one extreme? See **Sound** menu.

Remote Control

Your TV no longer responds to the remote control. Perhaps the batteries are exhausted. If so you can still use the local buttons at the bottom of the TV.

Have you selected the wrong menu? Press the  button to return to TV mode or press the  button to return to the previous menu.

No solution:

Switch your TV set off and on. If this does not work, call the service personnel; never attempt to repair it yourself.

Specifications

TV BROADCASTING

PAL/SECAM B/G D/K K' I/I' L/L'

RECEIVING CHANNELS

VHF (BAND I/III)

UHF (BAND U)

HYPERBAND

CABLE TV (S1-S20/ S21-S41)

NUMBER OF PRESET CHANNELS 100

CHANNEL INDICATOR

On Screen Display

RF AERIAL INPUT

75 Ohm (unbalanced)

OPERATING VOLTAGE

220-240V AC, 50 Hz.

AUDIO

German+Nicom Stereo

AUDIO OUTPUT POWER ($W_{RMS.}$) (%10 THD)

2 x 8

POWER CONSUMPTION (W) (max.)

180 W

< 3 W (Stand-by)

PANEL

16:9 display, 37" Screen Size

DIMENSIONS (mm)

DIMENSIONS (mm)			
D	L	H	Weight (kg) (without stand)
106	934	647	27

Information for users applicable in European Union countries



This symbol on the product or on its packaging means that your electrical and electronic equipment should be disposed at the end of life separately from your household wastes. There are separate collection systems for recycling in EU.

For more information, please contact the local authority or the dealer where you purchased the product.

Appendix A: PC Input Typical Display Modes

The display has a maximum resolution of 1366x 768, vertical sync. frequency range of 56-85 Hz and a horizontal sync. frequency range of 30-69 KHz.

The following table is an illustration of some of the typical video display modes.

<i>Mode</i>	<i>Resolution</i>		<i>Frequency</i>	
	<i>Horizontal</i>	<i>Vertical</i>	<i>Hor. (kHz)</i>	<i>Ver. (Hz)</i>
1	640	400	31.5	70
2	640	480	31.5	60
3*	848	480	31.0	60
4	640	480	37.9	72
5	640	480	37.5	75
6	640	480	43.3	85
7	800	600	35.2	56
8	800	600	37.9	60
9	800	600	48.1	72
10	800	600	46.9	75
11	800	600	53.7	85
12	1024	768	48.4	60
13	1024	768	56.5	70
14	1024	768	60.0	75
15	1024	768	68.7	85
16	1152	864	67.5	75
17	1280	1024	64.0	60
18*	1280	768	47.8	60
19*	1280	768	56.1	70
20	1366	768	47.7	60

* Only available in Full and PAP modes, not in 4:3 mode.


Appendix B: DVD Player Selection

You can use this remote control to operate the selected brand of DVD player by pressing the following buttons on the remote control simultaneously.

Brands of DVD Player	Press	Brands of DVD Player	Press
Hitachi	INFO ①	RCA	INFO ③
Pioneer	INFO ②	Mitsubishi	INFO ④
Panasonic	INFO ③	Onkyo	INFO INDEX
Toshiba	INFO ④	Zenith	INFO MIX
Philips	INFO ⑤	Orion	INFO SUB PAGE
JVC	INFO ⑥	Shinco	INFO UPDATE
Samsung	INFO ⑦	Skyworth	INFO REVEAL
Sony	INFO ⑧	Bubuko	INFO TV/TEXT

Example

To operate HITACHI DVD player, press and hold the INFO button, followed by the “1” button.

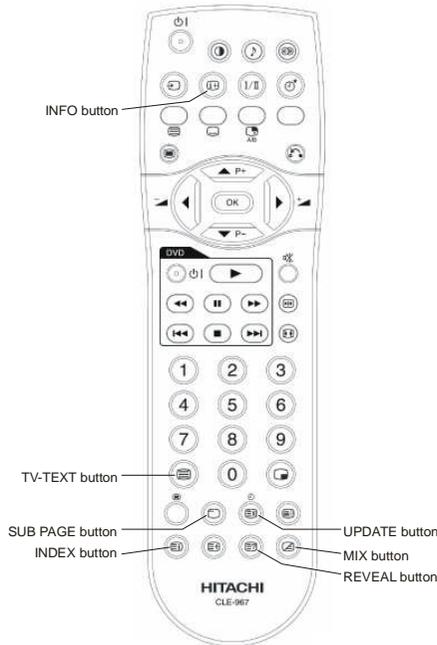

Note: Not all models of the listed brands can be operated using this remote control.

Appendix C: Main and PIP-PAP Picture Combinations

MAIN → PIP/PAP ↓	TUNER	EXT-1 CVBS	EXT-1 RGB	EXT-2 CVBS	EXT-2 RGB	EXT-3 YPbPr	EXT-4S SVHS	EXT-5 HDMI	PC
TUNER	O	O	O	O	O	O	O	N O	O
EXT - 1 CVBS	O	O	O	O	O	O	O	P I P & P A P	O
EXT - 1 RGB	O	X	X	O	O	O	O	I A S	O
EXT - 2 CVBS	O	O	O	O	O	O	O	V A E	O
EXT - 2 RGB	O	O	O	X	X	O	O	I X L T A -	X
EXT - 3 (YPbPr)	X	X	X	X	X	X	X	B 5	O
EXT - 4 CVBS	O	O	O	O	O	O	O	L E	O
EXT - 4S SVHS	O	O	O	O	O	O	O	I F	O
EXT - 5 (HDMI)	X	X	X	X	X	X	X	M M A I N	X
PC	X	X	X	X	X	X	X		X

(X: Not available, O : Available)

UK Guarantee

Your Guarantee of Excellence

Thank you for purchasing this Hitachi Television.

In the unlikely event that this product should develop a fault, we undertake to replace or repair any part of the product which fails due to a manufacturing defect within 12 months of the date of purchase provided that:

- i) The product has been installed and used only in accordance with the instructions supplied with the product
- ii) The product has not been repaired, maintained, or modified by any person other than an Hitachi authorised engineer
- iii) The product serial number has not been removed or altered

This guarantee does not apply to product acquired second hand or for commercial or communal use

This guarantee does not cover the replacement of exhausted batteries, the adjustment of user controls, or aerial alignment.

Any parts replaced under this guarantee shall become the property of Hitachi Europe Ltd.

Please note that evidence of the date of purchase will be required before any service under this guarantee is carried out.


THIS GUARANTEE DOES NOT AFFECT YOUR STATUTORY RIGHTS.

IN ALL CASES OF DIFFICULTY PLEASE CONSULT YOUR HITACHI DEALER

IMPORTANT - If placing TV into cabinet or alcove, ensure there is at least a 100mm (10cm) gap to the sides, rear and top of the TV. This is to allow for adequate ventilation during operation. Please read the main Users Guide for more safety information before installation.

1


insert the batteries into your handset

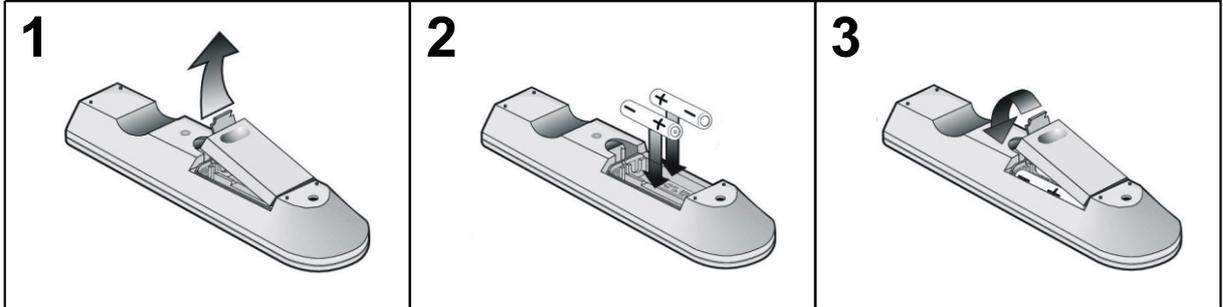

Rear view


2a

either connect the aerial straight to your TV...

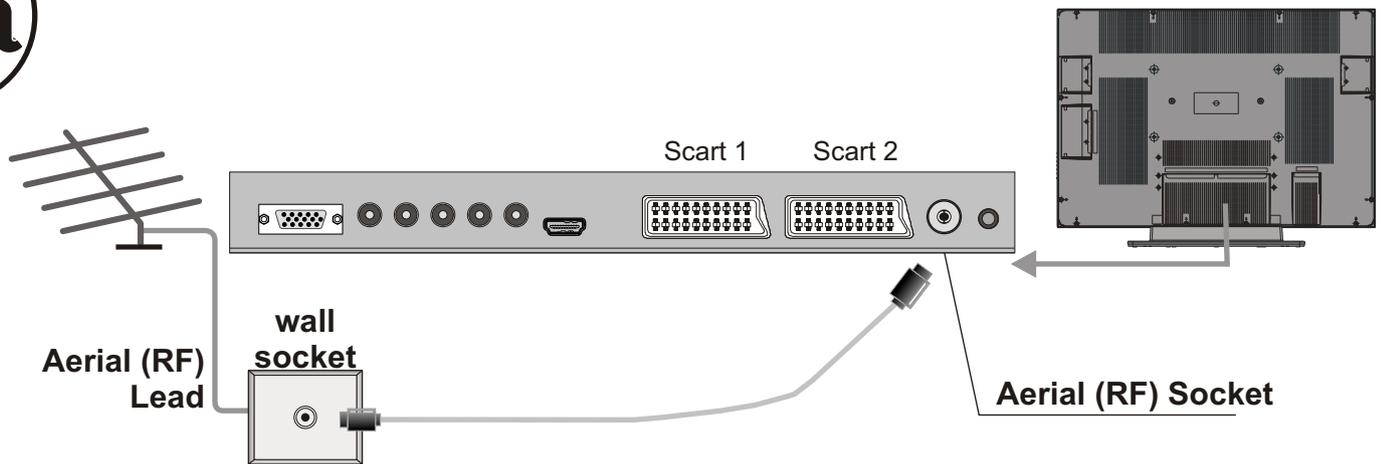

2b

...or connect the aerial through a VCR...

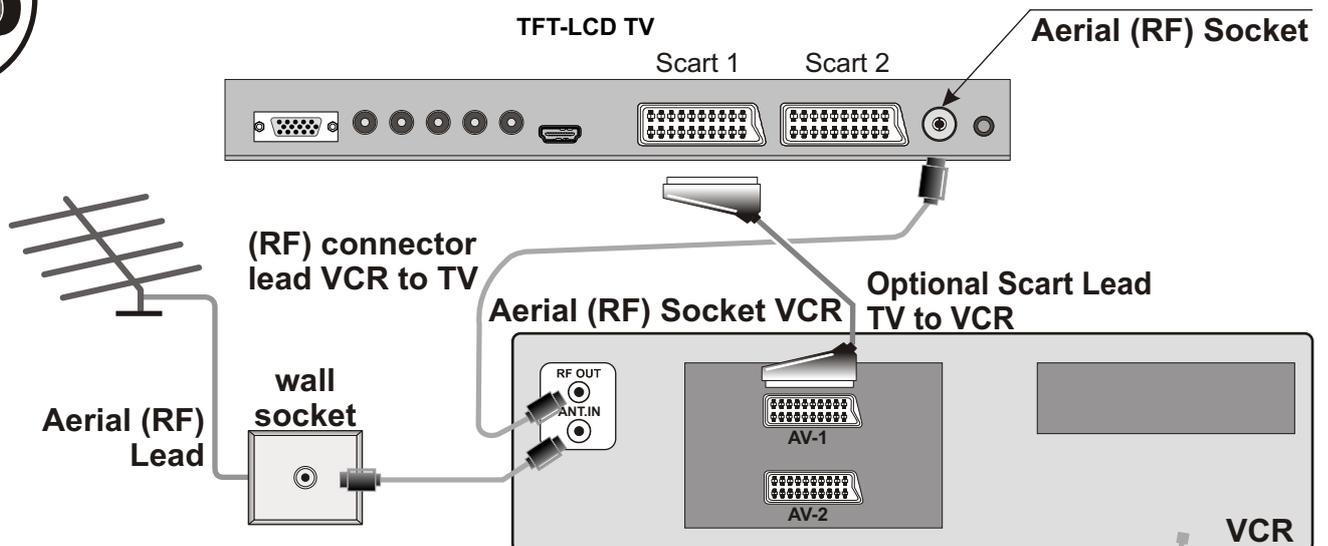


• It is recommended that a scart lead should be fitted between your TV and VCR to enhance your picture and sound quality. Scart leads are essential if you have a stereo TV and VCR and wish to obtain stereo sound from your equipment. These leads can be purchased from your Hitachi dealer or any good High Street electrical retailer.

2c


...or through a satellite decoder...

GB

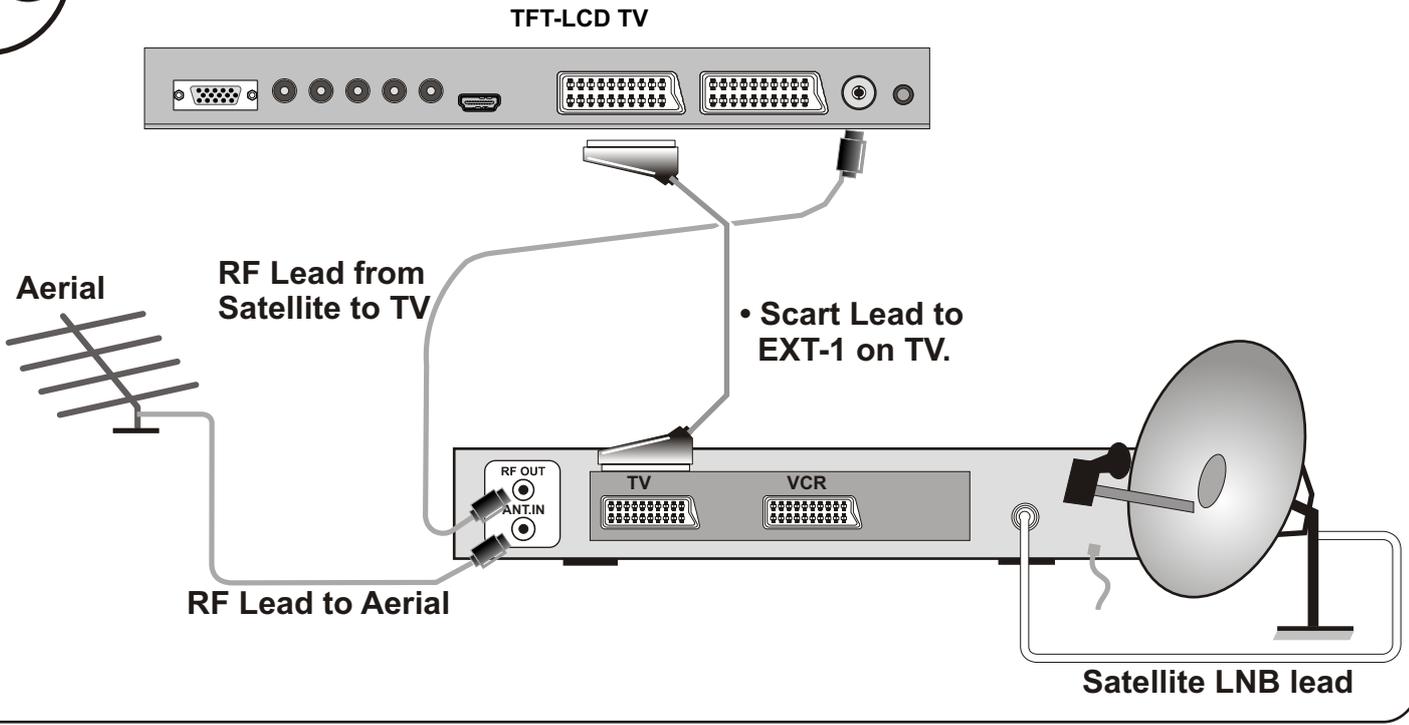

2d




...or through a VCR and satellite decoder.

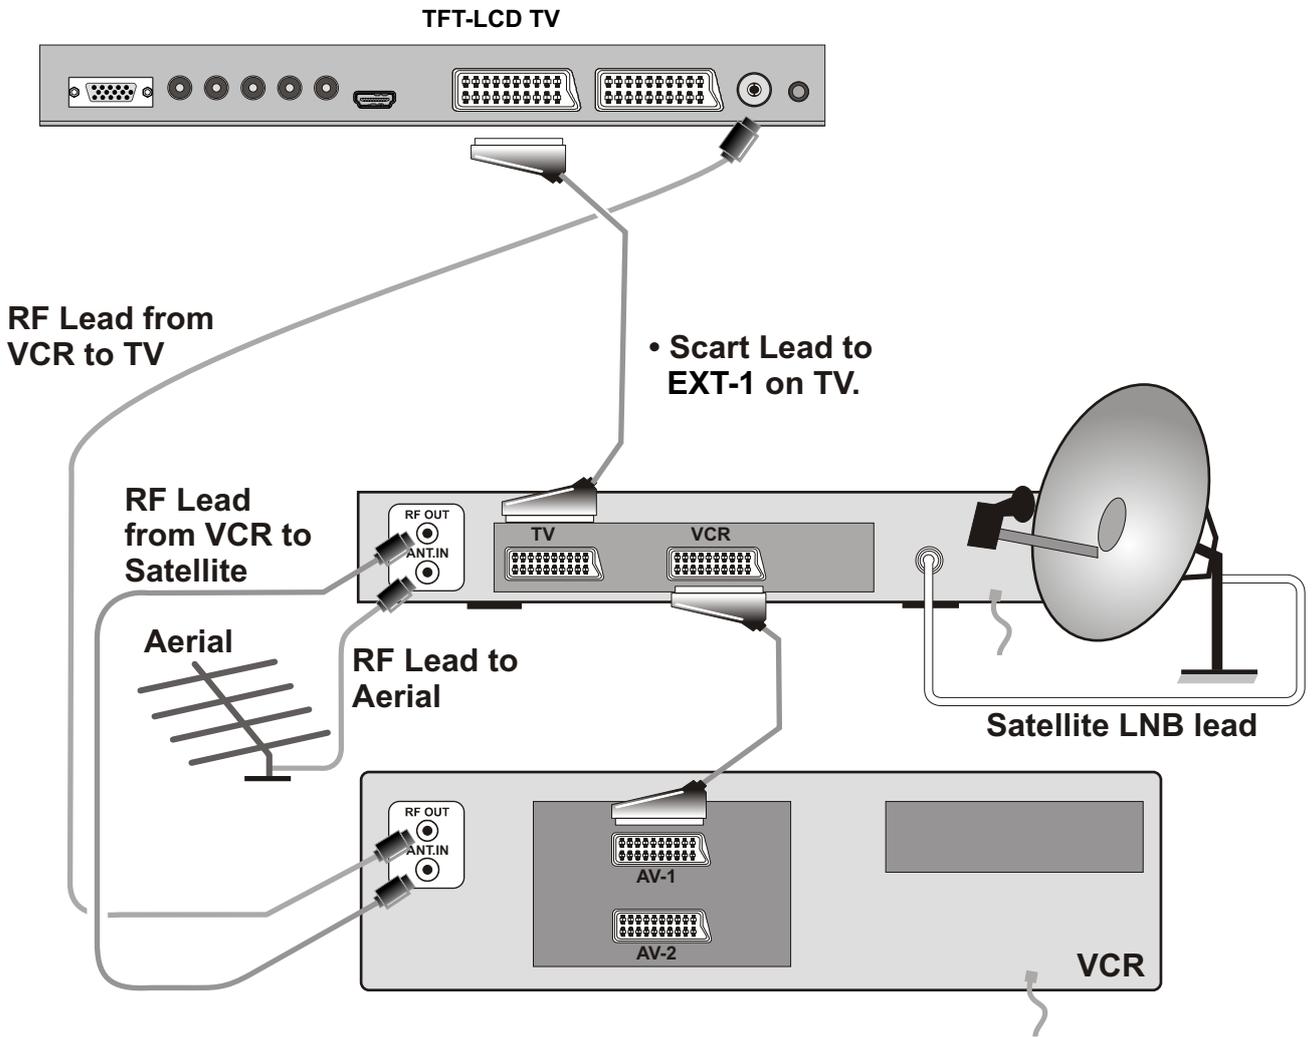

3


connect the TV plug to the mains socket

GB

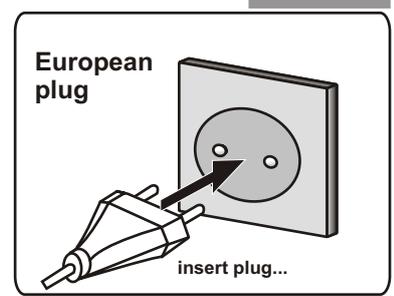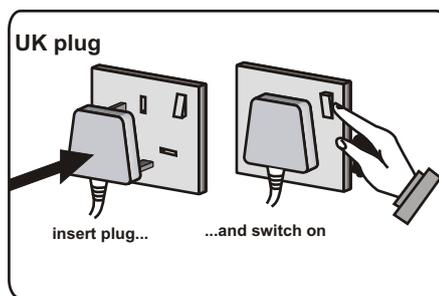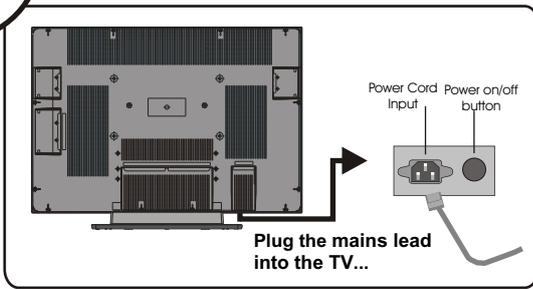


4

switch your TV on by pressing the On/Off button

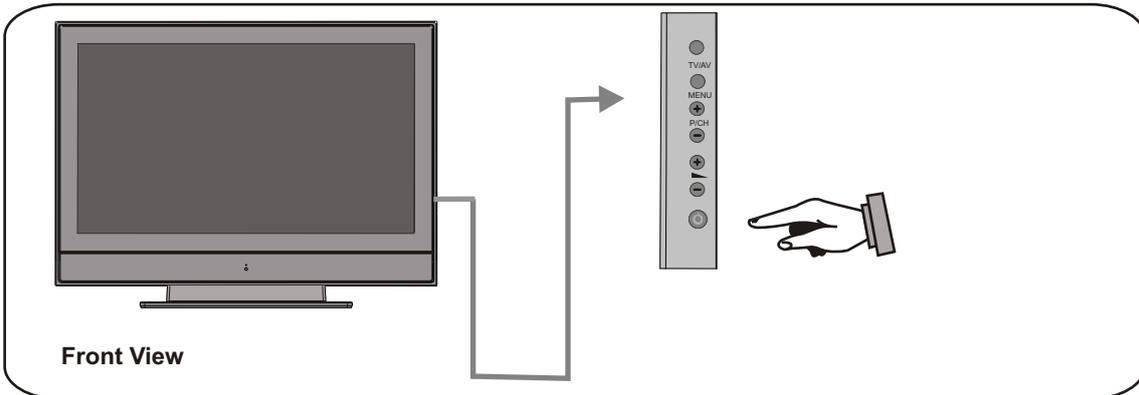

NB: When the set is first switched on, the set will be in standby and the indicator on the front of the set will illuminate red. Press the channel up down (P-, P+) or numeric buttons (1, 2, 3, ...) to operate.

basic functions of remote control

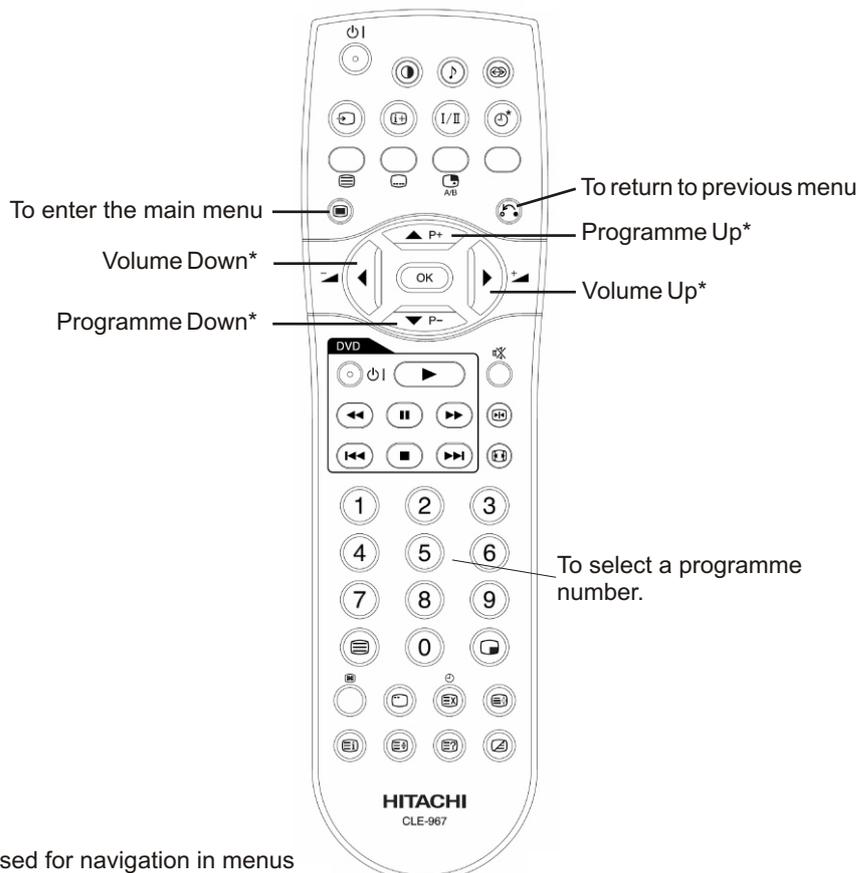

* Also used for navigation in menus

important note before starting Auto Setup



If you have a Video Cassette Recorder or a Satellite receiver connected to your TV please ensure that they are switched on before automatic tuning begins. In the case of a VCR, insert a pre-recorded tape and begin playback of your equipment. These measures ensure that all your external equipment is tuned in during the Auto Setup procedure.

5

start A.P.S. (Auto Programming System)

1 First of all choose **Language** and **Country** by using \blacktriangle / \blacktriangledown and \blacktriangleleft / \blacktriangleright buttons. This will affect the sort process in APS. To start APS, press the RED or "OK" button.

2 Press the  button when search is completed.

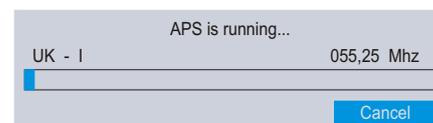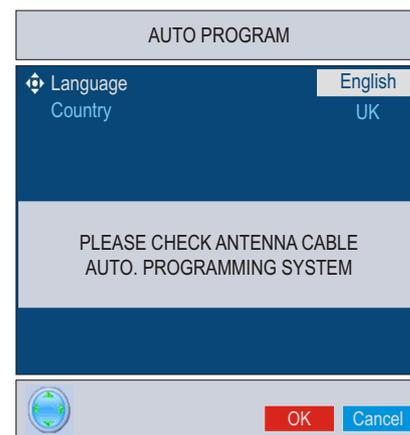

important note.

Once the TV has found all your local stations, they are then automatically assigned a programme number and name, if available from the broadcast.

If you would like to change the programme number or order, please refer to the Program Menu section of the instruction book.

HITACHI

Inspire the Next

Hitachi, Ltd.

Consumer Business Group
Shin-Otemachi Bldg 5f, 2-1, Otemachi 2-Chome,
Chiyoda-Ku, Tokyo 100-0004 Japan

HITACHI EUROPE LTD.

Consumer Affairs Department
PO Box 3007
Maidenhead
Berkshire SL6 8ZE
UNITED KINGDOM
Tel: 0870 405 4405
Email: consumer.mail@hitachi-eu.com

HITACHI EUROPE GmbH

Munich Office
Dornacher Strasse 3
D-85622 Feldkirchen bei München
GERMANY
Tel: 089-991 80-0
Fax: 089 - 991 80 -224
Hotline: 0180 - 551 25 51 (12ct/min.)
Email: dmg-mun.service@hitachi-eu.com

HITACHI EUROPE S.r.l.

Via T. Gulli n.39
20147 MILAN
ITALY
Tel: 02 487861
Fax: 02 48786381
Servizio Clienti
Tel. 02 38073415
Email: customerservice.italy@hitachi-eu.com

HITACHI EUROPE S.A.S

Lyon Office
Digital Media Group
94 Quai Charles de Gaulles, 69006 Lyon
FRANCE
Tel: 04 72 14 29 70
Fax: 04 72 14 29 99
Email: france.consommateur@hitachi-eu.com

HITACHI EUROPE LTD.

Benelux Branche Office
Bergensesteenweg 421
1600 Sint-Pieters-Leeuw
BELGIUM
TEL : 0032/2 363 99 01
FAX: 0032/2 363 99 00
Email : info@hitachi.be

HITACHI EUROPE LTD.

Na Sychrove 975/8
101 27 Pr aha 10 Bohdalec
CZECH REPUBLIC
TEL : 267 212 383
FAX: 267 212 385
Email : dmg.eeu@hitachi-eu.com

HITACHI EUROPE S.A.

364, Kifissias Ave. & 1, Delfon Str.
152 33 Chalandri
Athens
GREECE
Tel: 1-6837200
Fax: 1-6835694
Email: dmgservice.gr@hitachi-eu.com

HITACHI EUROPE S.A.

Gran Via Carles III, 86 Planta 5ª
Edificios Trade - Torre Este
08028 Barcelona
SPAIN
Tel: 93 409 2550
Fax: 93 491 3513
Email: atencion.cliente@hitachi-eu.com

HITACHI EUROPE AB

Box 77
S-164 94 KISTA
SWEDEN
Tel: 08 562 711 00
Fax: 08 562 711 11
Email: csgswe@hitachi-eu.com

HITACHI EUROPE AB

(Norway Branch Nuf)
Strandveien 18
1366 Lysaker
NORWAY
Tel: 67519030
Fax: 67519032
Email: csgnor@hitachi-eu.com

HITACHI EUROPE AB

Egebækvej 98
2850 Nærum
DENMARK
Tel: 43 43 60 50
Fax: 43 43 60 51
Email: csgden@hitachi-eu.com

HITACHI EUROPE AB

Lars Sonckin kaari 16
FIN-02600 ESPOO
FINLAND
Tel: 010-8503085
Fax: 010-8503086
Email: info.finland@hitachi-eu.com