

Quick Start Guide

HITACHI
Inspire the Next

HIT15WDVBDVD
HIT19WDVBDVD

GB

PLEASE NOTE:

By using a SCART lead (not supplied) you can improve the quality of playback and sound. Remember you must still have the aerial lead (not supplied) connected. If you are using a SCART lead you should not have to tune your TV to your video, instead select the SCART channel by pressing the TV/SCART button on the remote control.

1 Insert batteries into Remote Control




Use 2 x AAA size batteries.

2 Connect aerial

Do not connect the TV to the mains supply until you have completed all the connections.

- If you just want to connect your TV to an aerial connect it as shown opposite. *Now go to stage 4.*
- If you want to connect your TV to a VCR go to stage 3a.
- If you want to connect your TV to a VCR and a Satellite/Cable box then go to stage 3b.

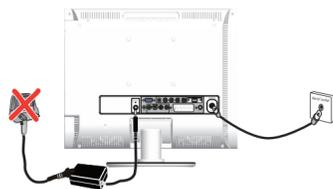

3a Connecting to a VCR

OR 3b Connecting to a VCR and a Satellite/Cable box



Do not connect the TV to the mains supply until you have completed all the connections.

A If you have a SCART lead, connect one end of the lead to the SCART socket on your VCR and connect the other end to the SCART socket marked SCART on the back of your TV.

B Connect one end of the RF lead to the aerial socket on your TV and the other end to the socket marked RF OUT on the back of your VCR.

C Connect your aerial lead to the socket marked RF IN on the back of your VCR.

Now go to stage 4.

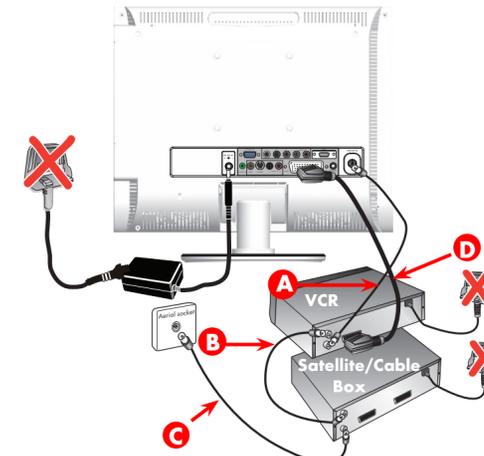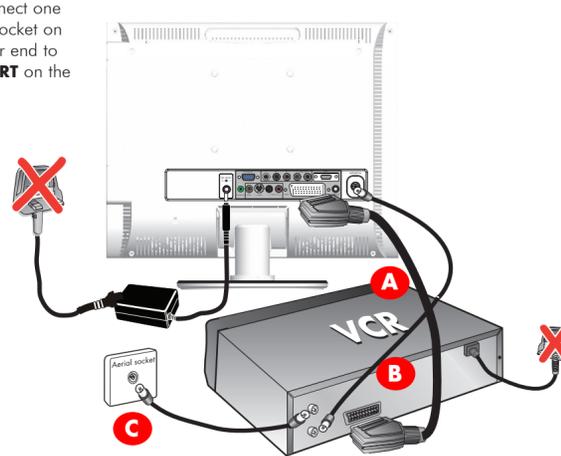

A Connect one end of an RF lead to the aerial socket on your TV and the other end to the socket marked RF OUT on the back of your VCR.

B Connect one end of another RF lead to the aerial socket marked RF IN on your VCR and the other end to the socket marked RF OUT on the back of your Satellite/Cable box.


C Connect your aerial lead to the socket marked RF IN on the back of your Satellite/Cable box.

D If you have SCART leads connect one end to the socket marked SCART on the back of your TV, and connect the other end to the SCART socket on the back of your VCR.

Now go to stage 4.

Other connections

4 Switch on

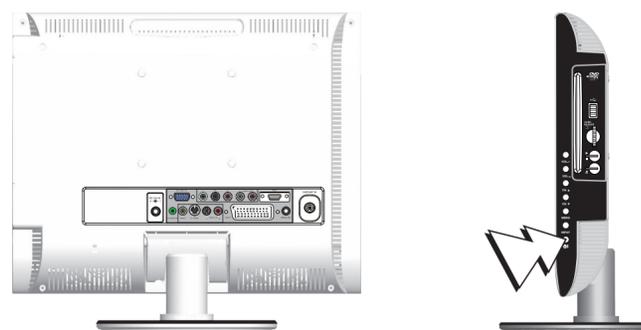

A Plug your TV and any other equipment that you have connected into the mains.

B Then press the **STANDBY** button on the front of your TV to switch on your TV. The screen will be fuzzy.

Note:

- It is recommended to complete the VCR channel set up before the TV tuning process. Connect your VCR to the TV and the antenna, then switch it on. Insert a pre-recorded tape and press PLAY. This can help you to easily find the VCR channel as it will play the pre-recorded tape.
- Before you start up the TV tuning process, the Satellite/Cable channel set up are recommended to complete prior to the TV tuning process. Connect your Satellite/Cable box to the TV and the antenna, and then switch it on. Select a channel that you will easily recognise. This can help you to easily find the satellite/cable channel since the TV will play that selected channel.

5 Select & Start the APS menu



A Turn on the TV. The main menu will appear automatically (as shown above).

B Press **▼/▲** to select **Country**, then press **OK** to enter menu option.


C Press **◀/▶** to select country as you wish, press **OK** to exit the current menu.

D Press **▼/▲** to select the **Start APS**, then press **OK** to start the channel tuning. Your TV will now automatically start to tune in all available channels, including your VCR and Satellite / Cable channel if you connected a VCR or Satellite / Cable box. **Please be patient, the tuning process may take a few minutes.**

Note: Press **OK** to exit when the tuning process is finished.



6 Sorting a channel

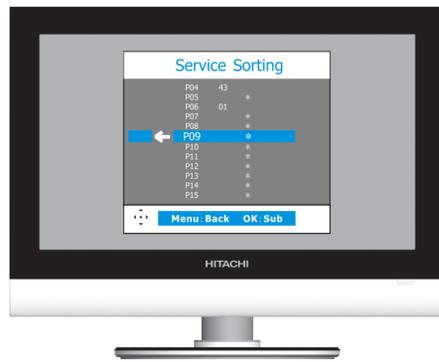

- A** Press the **MENU** button on the remote control to enter the menu option.
- B** Press **◀▶** to select **SETUP**.
- C** Press **▼/▲** to select **CHANNEL SETUP**, press **OK** to enter **CHANNEL SETUP**.
- D** Press **▼/▲** to select **SORT**, press **OK** to display the menu (as shown above).
- E** Press **▼/▲** to select the channel, press **OK** to sort the channel.

7 Skipping a channel



- A** Press the **MENU** button on the remote control to return to the **CHANNEL SETUP**.
- B** Press **▼/▲** to select the **SKIP**, press **OK** to enter menu option.
- C** Press **▼/▲** to select the channel, press **OK** to skip the selected channel.

8 Deleting a channel



- A** Press the **MENU** button on the remote control to return to the **CHANNEL SETUP**.
- B** Press **▼/▲** to select the delete, press **OK** to enter menu option.
- C** Press **▼/▲** to select the channel, press **OK** to be deleted.

9 DTV Scan channel



- A** When the APS process has finished, The DTV scan channel menu will appear (as shown above).
- B** The TV will automatically search and sort the channel.

Your TV is now fully tuned in, and ready to watch.

Note: If you encounter problems receiving digital signals this may be due to having an inadequate aerial (you may have an old "Analogue" aerial). A replacement "Digital" aerial will be required, contact your local aerial installer for further information.

Checklist...

You should have...

- Put the two AAA size batteries in your remote control.
- Connected your TV to an aerial or VCR and/or VCR Satellite/Cable box.
- Switched on your TV and any other connected equipment.
- Tuned in all available channels.

Channel 1	BBC1
Channel 2	BBC2
Channel 3	ITV
Channel 4	CH4
Channel 5	CH5
Channel 6	Satellite/Cable
Channel 7	VCR

Basic functions

- 1 After connecting the aerial to your LCD TV and connecting the mains cable to the TV and mains socket, press **AC SWITCH** on the rear panel of the TV.
- 2 A red LED indicator will show on the front panel of the TV.
- 3 Press the **STANDBY** button, and the red LED indicator will change to green.
- 4 To power off, press the **STANDBY** button again, and the green LED indicator will change to red.

In the interests of safety and to avoid unnecessary energy consumption, never leave your TV in standby while unattended for long periods of time, eg. overnight, while on holiday or while out of the house.

Changing channels

Press the **NUMBER** buttons to go directly to a channel e.g. press the number **1** button to go to channel 1. For a channel number above 9, for instance, channel 12 press the number **1** button quickly followed by the number **2** button. To move up and down the channels in order press the **CH.▲** or **CH.▼** button.

Adjusting the volume

Press the **VOL.+** button to increase the volume. Press the **VOL. -** button to decrease the volume.

Selecting Teletext

Press the  button to select Teletext. Press button again to select MIX. This will let you read the Teletext and still see the picture on your TV. The third time that you press the  button, text will clear from the screen.



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.