

42" Digital LCD Colour Television

# HITACHI

Inspire the Next

Instructions for use

GB

**L42VP01U**

**HDMI™**  
HIGH-DEFINITION MULTIMEDIA INTERFACE

**digital**   
Approved product

**HD**  
**ready**



# HITACHI

# Contents

<b>Safety Precautions .....</b>	<b>3</b>	Installation .....	15
IMPORTANT SAFETY INFORMATION ON		Configuration .....	16
OPERATING YOUR TV .....	3	Timers .....	18
DO's .....	3	RECORDING FROM IDTV .....	18
DON'Ts .....	3	Language .....	18
1.Power Source .....	4	TV Setup .....	19
2.Power Cord .....	4	Common Interface .....	19
3. Moisture and Water .....	4	<b>Menu System .....</b>	<b>20</b>
4.Cleaning .....	4	Picture Menu .....	20
5. Ventilation .....	4	Mode .....	20
6. Heat and Flames .....	4	Contrast/Brightness/Sharpness/Colour/	
7. Lightning .....	4	Hue .....	20
9. Servicing .....	4	Colour Temp .....	20
10. Waste Disposal .....	4	Noise Reduction .....	20
11. Disconnect Device .....	5	Film Mode .....	20
<b>Features .....</b>	<b>6</b>	Store .....	20
<b>Accessories .....</b>	<b>6</b>	Reset .....	20
<b>LCD TV Front View .....</b>	<b>7</b>	Sound Menu .....	20
<b>Rear View and Peripheral Connections .....</b>	<b>7</b>	Volume .....	20
<b>Remote Control Buttons .....</b>	<b>8</b>	Equalizer .....	20
<b>Preparation .....</b>	<b>9</b>	Balance .....	20
<b>Before Switching On Your TV .....</b>	<b>9</b>	Headphone .....	20
Power Connection .....	9	Sound Mode .....	21
Connections To The Aerial Input Socket .....	9	AVL .....	21
Inserting Batteries In The Remote Control		Effect .....	21
Handset .....	9	Dynamic Bass .....	21
Handling the Remote Control .....	9	3DS .....	21
Operating Range for the Remote Control .....	9	SubWoofer .....	21
<b>Switching The TV ON/OFF .....</b>	<b>10</b>	Store .....	21
<b>Navigating the Menu System .....</b>	<b>10</b>	Feature Menu .....	21
<b>Initial Settings .....</b>	<b>10</b>	Sleep Timer .....	21
<b>Basic Operations .....</b>	<b>11</b>	Child Lock .....	21
Operation with the buttons on the TV .....	11	Language .....	21
Volume Setting .....	11	AV-2 Out .....	21
Programme Selection .....	11	Default Zoom .....	22
Entering Main Menu .....	11	Blue Background .....	22
Operation with Remote Control .....	11	Menu Background .....	22
Volume Setting .....	11	Menu Timeout .....	22
Programme Selection (Previous or next		Teletext Language .....	22
programme) .....	11	Install Menu .....	22
Programme Selection (direct access): ...	11	Program .....	22
<b>Everyday Operation .....</b>	<b>11</b>	Band .....	22
Information Banner .....	11	Channel .....	22
Electronic Programme Guide (EPG) .....	12	Colour System .....	22
Displaying The Subtitles .....	12	Sound System .....	22
Digital Teletext .....	13	Fine Tune .....	22
Over Air Download .....	13	Search .....	22
Widescreen .....	13	VCR .....	22
<b>IDTV Menu System .....</b>	<b>13</b>	Store Program .....	22
Channel List .....	13	Program Menu .....	22
Navigating the whole channel list .....	14	A.P.S. (Auto Programming System)	
Deleting the channels in the channel list	14	Country .....	23
Renaming channels .....	14	Install menu in AV modes .....	23
Adding locks to channels .....	14	Source menu .....	23
Setting Favourites .....	15		
On Screen Help Pressing INFO Button ..	15		

<b>PC Mode .....</b>	<b>24</b>	<b>Peripheral Equipment Connections .....</b>	<b>28</b>
Installation .....	24	<b>Aerial Connection .....</b>	<b>28</b>
Menu System in PC mode .....	24	<b>Tips .....</b>	<b>29</b>
Sound Menu/Feature Menu .....	24	Care Of The Screen .....	29
PC Picture Menu .....	24	Poor Picture .....	29
PC Picture Position Menu .....	24	No Picture .....	29
Autoposition .....	24	Sound .....	29
H (Horizontal) Position .....	24	Remote Control .....	29
V (Vertical) Position .....	24	<b>Specifications .....</b>	<b>30</b>
Dot Clock .....	24	<b>Specifications .....</b>	<b>31</b>
Phase .....	24	<b>Specifications .....</b>	<b>32</b>
Sound in PC mode .....	24	S-input connector pin specifications .....	32
<b>Other Features .....</b>	<b>25</b>	HDMI connector pin specifications .....	32
TV Status .....	25	SCART connector pin specifications .....	32
Mute Indicator .....	25	Signal Input .....	32
PIP and PAP modes .....	25	PC RGB Terminal (D-sub 15-pin connector) .....	32
AV Modes .....	25	<b>Appendix A: PC Input Typical</b>	
Freeze Picture .....	25	<b>Display Modes .....</b>	<b>33</b>
Zoom Modes .....	25	<b>Appendix B: AV and HDMI Signal</b>	
Auto: .....	25	<b>Compatibility .....</b>	<b>34</b>
Full: .....	25	<b>Appendix C: Main and PIP-PAP Picture</b>	
4:3 .....	25	<b>Combinations .....</b>	<b>35</b>
Panoramic: .....	26	<b>Appendix D: Source Menu Selction .....</b>	<b>35</b>
14:9 Zoom: .....	26	<b>UK Guarantee .....</b>	<b>36</b>
Cinema: .....	26		
16:9 Subtitle: .....	26		
<b>Teletext.....</b>	<b>26</b>		
<b>Connect Peripheral Equipment .....</b>	<b>27</b>		
High Definition .....	27		
Via The Scart .....	27		
Via Aerial Input .....	27		
Decoder .....	27		
Connect a decoder with an aerial			
socket to the TV .....	27		
Connect a decoder without an aerial			
socket to the TV .....	27		
TV And Video Recorder .....	27		
Playback NTSC .....	27		
Copy Facility .....	27		
Camera And Camcorder .....	27		
To Connect To AV Input .....	27		
To Connect To S-VHS Input .....	27		
Connect The Decoder To The Video			
Recorder .....	27		
Connecting Headphones (optional) .....	27		
Audio Lineout .....	27		
Connecting SubWoofer .....	27		

## Safety Precautions

Please read the following recommended safety precautions carefully for your safety.

### IMPORTANT SAFETY INFORMATION ON OPERATING YOUR TV

#### Do's and Don'ts

##### DO's



This Television has been designed and manufactured to meet international safety standards, but like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

**DO** read the operating instructions before you attempt to use the equipment.

**DO** consult your dealer if you are in any doubt about installation, operation or safety of your equipment.

**DO** be careful with glass panels or doors on equipment.

This TV is supplied with a fitted mains plug. This plug must not be cut off as it may contain a special radio interference filter, the removal of which could lead to impaired performance. If you wish to extend the lead, obtain an appropriate safety approved extension lead or consult your dealer. Observe the manufacturers instructions when connecting extension leads to the TV. Check the fuse rating on the new plug, this should be fitted with a 5 Amp fuse which conforms to either ASTA or BSI (BS1 362) approvals, these are easily

identifiable by either the  or  symbols. If you are in any doubt about the installation of an extension lead, please consult a competent electrician.

##### DON'Ts

**DON'T** continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way switch off, withdraw the mains plug and consult your dealer.

**DON'T** place water filled vessels on top of T.V. cabinets.

**DON'T** remove any fixed cover as this may expose dangerous voltages.

**DON'T** leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a stand-by mode. Switch off using the switch on the equipment and make sure your family know how to do this. Special arrangements may need to be made for infirm or handicapped people.

**DON'T** use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety. It is illegal to watch television whilst driving.

**DON'T** obstruct the ventilation of the equipment, for example with curtains or soft furnishings. Overheating will cause damage and shorten the life of the equipment.

**DON'T** use makeshift stands and **NEVER** fix legs or stands to the TV with any screws other than those provided - to ensure complete safety always use the manufacturers approved stand with the fixings provided.

**DON'T** allow electrical equipment to be exposed to rain or moisture.

##### ABOVE ALL

- **NEVER let anyone, especially children push anything into holes, slots or any other opening in the case - this could result in a fatal electric shock.**
- **NEVER guess or take chances with electrical equipment of any kind - it is better to be safe than sorry!**

#### PE Connection to mains

Be sure to ground the connection properly. Connect the ground terminal of TV with the ground terminal provided at the power outlet using the enclosed power cord. If the provided plug does not fit your outlet, consult an electrician for replacement of the obsolete outlet.



Surely connect the ground wire.

## 1. Power Source

The TV set should be operated only from a 220-240 V AC, 50 Hz outlet. Ensure that you select the correct voltage setting for your convenience.

## 2. Power Cord

- Do not place the set, a piece of furniture, etc. on the power cord (mains lead) or pinch the cord. Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Never make a knot in the cord or tie it with other cords. The power cords should be placed in such a way that they are not likely to be stepped on. A damaged power cord can cause fire or give you an electric shock. When it is damaged and needs to be changed, it should be done by qualified personnel.

## 3. Moisture and Water

Do not use this equipment in a humid and damp place (avoid the bathroom, the sink in the kitchen, and near the washing machine). Do not expose this equipment to rain or water, as this may be dangerous and do not place objects filled with liquids, such as flower vases, on top. Avoid from dripping or splashing.

If any solid object or liquid falls into the cabinet, unplug the TV and have it checked by qualified personnel before operating it any further.

## 4. Cleaning

Before cleaning, unplug the TV set from the wall outlet. Do not use liquid or aerosol cleaners. Use soft and dry cloth.

## 5. Ventilation

The slots and openings on the TV set are intended for ventilation and to ensure reliable operation. To prevent overheating, these openings must not be blocked or covered in anyway.

## 6. Heat and Flames

The set should not be placed near to naked flames and sources of intense heat, such as an electric heater. Ensure that no naked flame sources, such as lighted candles, are placed on top of the TV. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

## 7. Lightning

In case of storm and lightning or when going on holiday, disconnect the power cord from the wall outlet.

## 8. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts which are specified by the manufacturer or have the same specifications as the original one. Unauthorized sub-

stitutions may result in fire, electrical shock, or other hazards.

## 9. Servicing


Please refer all servicing to qualified personnel. Do not remove the cover yourself as this may result in an electric shock.

## 10. Waste Disposal

Instructions for waste disposal:

- Packaging and packaging aids are recyclable and should principally be recycled. Packaging materials, such as foil bag, must be kept away from children.
- Battery, including those which are heavy metal-free, should not be disposed of with household waste. Please dispose of used battery in an environmentally sound manner. Find out about the legal regulations which apply in your area.
- Cold cathode fluorescent lamp in LCD PANEL contains a small amount of mercury; please follow local ordinances or regulations for disposal.

### Information for users applicable in European Union countries

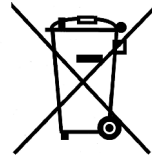

This symbol on the product or on its packaging means that your electrical and electronic equipment should be disposed at the end of life separately from your household wastes. There are separate collection systems for recycling in EU.


For more information, please contact the local authority or the dealer where you purchased the product.

## 11. Disconnect Device

The mains plug is used to disconnect TV set from the mains and therefore it shall remain readily operable.

**12.** Excessive sound pressure from earphones and headphones can cause hearing loss.


**13.** To prevent injury, this device must be securely attached to the wall in accordance with the installation instructions when mounted to the wall (if the option is available).

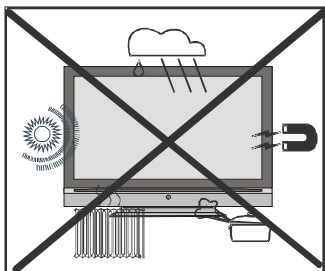

## 14 Connection to a television distribution system (Cable TV etc.) from tuner:

Apparatus connected to the protective earthing of the building installation through the mains connection or through other apparatus with a connection to protective earthing - and to a television distribution system using coaxial cable, may in some circumstances create a fire hazard.


To ground the antenna system properly, be sure that the cable grounding is connected with the building's grounding system. Note that the connection should follow IEC 60364-7-707 and IEC 603646-5-548 standards which require that the grounding should be as close as possible to the cable connection.

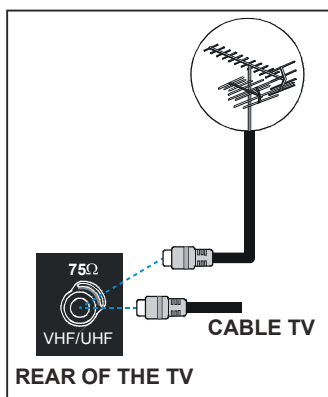

## Features

- Remote controlled colour LCD TV.
- Fully integrated Digital TV (DVB-T)
- Full HD (1920x1080)
- 100 programmes from VHF, UHF bands or cable channels can be preset.
- It can tune cable channels.
- Controlling the TV is very easy by its menu driven system.
- It has 2 Scart sockets for external devices (such as video, video games, audio set, etc.)
- Stereo sound system (German+Nicam)
- Full function Teletext.
- Fastext (1000 pages), TOP text.
- Headphone connection.
- A.P.S. (Automatic Programming System).
- All programmes can be named.
- Forward or backward automatic tuning.
- Sleep timer.
- Child Lock.
- Automatic sound mute when no transmission.
- NTSC Playback.
- AV in and S-Video in are available.
- It has two HDMI connectors for Digital Video and Audio. This connection is also designed to accept High Definition signals.
- It has PIP / PAP / PAT functions.
- AVL (Automatic Volume Limiting)
- When no valid signal is detected, after 5 minutes the TV switches itself automatically to stand-by mode.
- PLL (Frequency Search)
- PC Input
- Plug&Play for Windows 98, ME, 2000, XP, Vista
- Audio Line Out


## Accessories

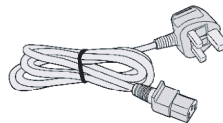

UK Plug



 
Remote Controller  
CLE-984



Batteries  
2 X AA




Instruction Book

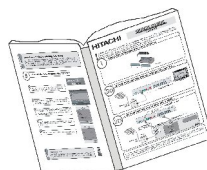


Quick Guide

## LCD TV Front View

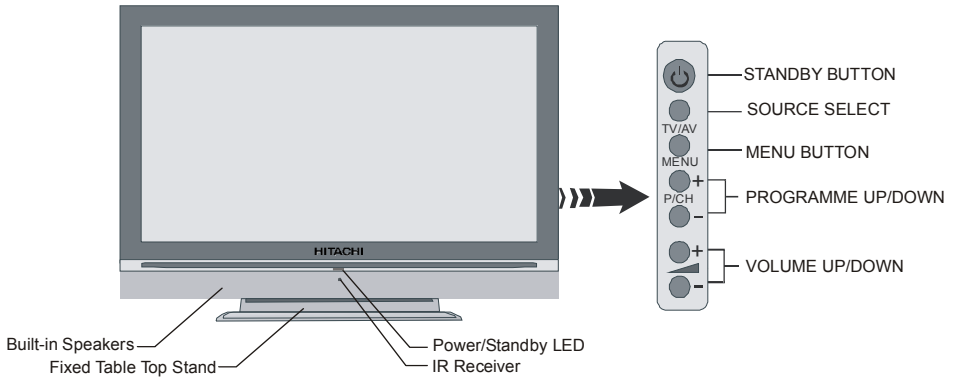

## Rear View and Peripheral Connections

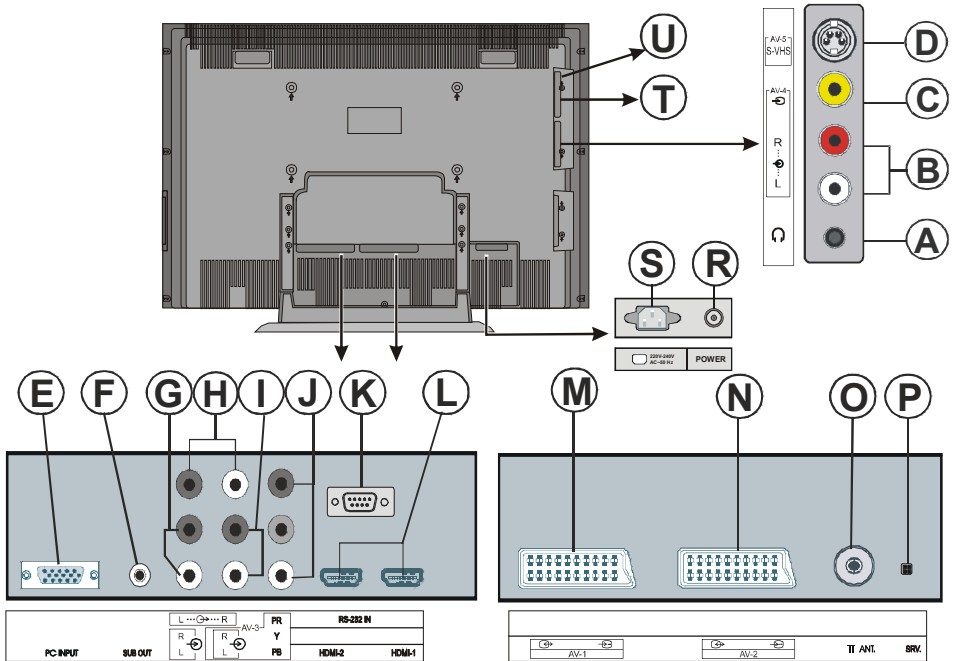

Ⓐ Headphone

Ⓑ Audio Inputs

Ⓒ Video Input (AV-4)

Ⓓ S-VHS Input (AV-5)

Ⓔ VGA Input (PC RGB)

Ⓕ Subwoofer Output

Ⓖ PC Audio Inputs

Ⓑ Audio Line Out

Ⓘ Component Audio Inputs

Ⓙ Component Video (YPbPr) Inputs (AV-3)

Ⓚ For service use only

Ⓛ HDMI Inputs (HDMI 1 & HDMI 2)

Ⓜ Scart 1 (AV-1)

Ⓝ Scart 2 (AV-2)

ⓐ Aerial (TV/DTT)

Ⓟ For service use only

Ⓡ Power On/Off Switch

Ⓢ Power Cord Input


Ⓣ CI Slot

Ⓤ SPDIF Phono Output



## Remote Control Buttons

- 1 = Stand by On/Off
- 2 = Info
- 3 **DVD** = Select DVD
- 4 **TV/DTT** = Selector button for Digital/Analogue mode
- 5 = Hold in teletext mode, Freeze picture
- 6 = Volume Up/ Down
- 7 = Mute On/Off
- 8 **RED** (Page Selection – Teletext mode only)
- 9 **GREEN** (Page Selection – Teletext mode only)
- 10 = Teletext On-Off
- 11 = Time / Teletext & TV
- 12 = Menu On/Off
- 13 = Cursor buttons
- 14 **FUNCTION** = No function
- 15 = Equalizer Sound Mode
- 16 = Aspect ratio
- 17 = No Function
- 18 Control buttons for DVD players/recorders (\*\*)
- 19 = Go back to previous menu
- 20 **OK** = Enter
- 21 **GUIDE** = Index Page / Guide for DTT
- 22 = Subtitle On/Off in DTV; Subpage in teletext mode.
- 23 = Reveal
- 24 **BLUE** (Page Selection – Teletext mode only)
- 25 **YELLOW** (Page Selection – Teletext mode only)
- 26 **P+ / -** = Programme Up/ Down
- 27 **I / II** = Mono/Stereo - Dual A-B
- 28 = PIP, PAP On-Off / PAT
- 29 **0 - 9** = Digit buttons
- 30 **INPUT** = INPUT

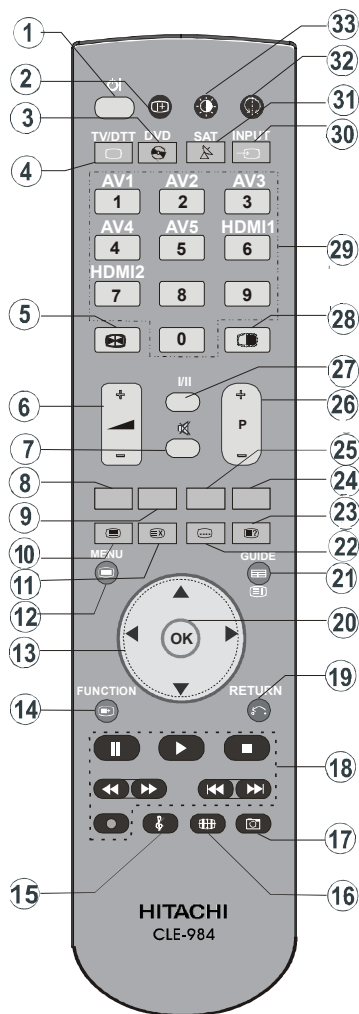

- 31 **SAT** = Select SAT
- 32 = No function
- 33 = Picture mode


For source selection, first press **INPUT** button on the remote controller then source button which you want to switch.

**\*\* These buttons can control most Hitachi DVD Players and Recorders.**

## Preparation

For ventilation, leave a space of at least 10 cm free all around the set. To prevent any fault and unsafe situations, please do not place any objects on top of the set.

Use this apparatus in moderate climates.

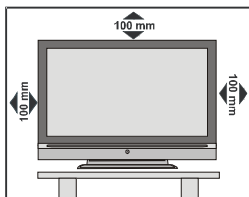

## Before Switching On Your TV

### Power Connection

**IMPORTANT:** The TV set is designed to operate on **220-240 AC, 50 Hz.**

- After unpacking, allow the TV set to reach the ambient room temperature before you connect the set to the mains.


### Connections To The Aerial Input Socket

- Connect the aerial or cable TV plug to the Aerial input socket located at the rear of the TV and connect the cable plug coming out from the TV out socket located on the devices (VCR, DVB etc.) to this socket as well.

### Inserting Batteries In The Remote Control Handset

**WARNING :** Remote control is battery included. A plastic protector is used to disconnect the batteries in order to prevent the battery life from reducing. Please remove the plastic protector before the first use.

- Remove the battery cover located on the back of the handset by gently pulling backwards from the indicated part.
- Insert two **AA/R06** or equivalent type batteries inside. Place the batteries in the right directions and replace the battery cover.

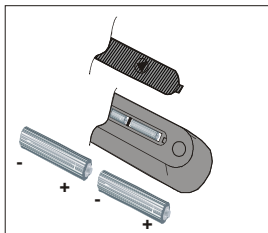


## Handling the Remote Control

- It could cause corrosion or battery leakage and may result in physical injury and/or property damage including fire.
- Never mix used and new batteries in the device.
- Replace all the batteries in a device at the same time.
- Remove the batteries if the remote control is not going to be used for an extended period of time.
- To avoid possible failure, read the following instructions and handle the remote control properly.
- Do not drop or cause impact to the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under the direct sunlight or near sources of excessive heat.

**NOTE:** Remove the battery from remote control handset when it is not to be used for a long period. Otherwise it can be damaged due to any leakage of battery.

## Operating Range for the Remote Control

- Point the top of the remote control toward the LCD TV's remote sensor LED while pressing a button.

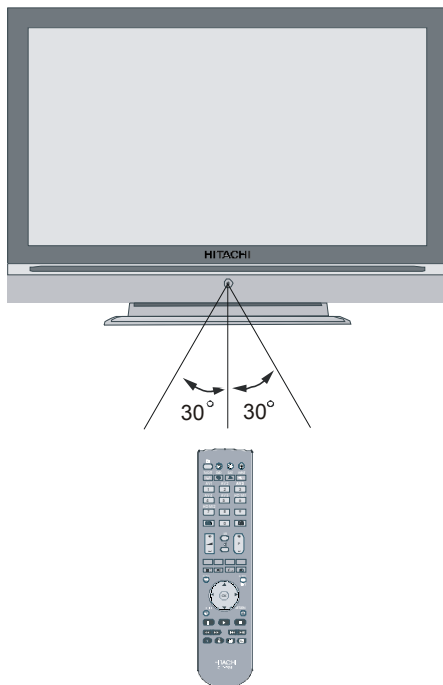

Remote range is approximately 7m/23ft.

## Switching The TV ON/OFF

### To switch the TV on:

Your TV will switch on in two steps:

1- Connect the power cord to the system. Press Power **ON/OFF** switch. Then the TV switches itself to stand-by mode (optional).

2- To switch on the TV from stand-by mode either:

Press a digit button on the remote control so that a programme number is selected, or Press the **"-P/CH"** or **"P/CH+"** button on the TV or press the **P+** or **P-** button on the remote control, so that last mode switched off is selected.

By either method the TV will switch on.

### To switch the TV off:


- Press the **"⏻" (stand-by)** button on the remote control or On/Off switch on the TV, so the TV will switch to stand-by mode.

To power down the TV completely, press On/Off switch

or,

Unplug the power cord from the mains socket.

## Navigating the Menu System

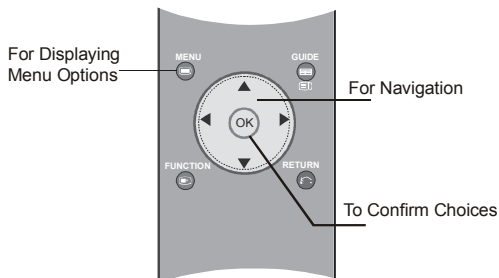

- Press **⏻** to display the menu.
- Press **▼** or **▲** button to select an icon. Press **OK** or **"▶"** to view the menu settings.
- Use **▼** or **▲** button to highlight. Press **▶** for more options in analogue TV mode. Use **OK** in DTV mode for viewing a submenu.
- Press **◀** or **▶** buttons to change the settings. Press **OK** to set as default.
- To exit the menu or return from sub-menu screen, press **⏻**.

*These explanations are available for the navigation of the whole Menu System. To select options that are explained in the following parts, refer to "Navigating The Menu System".*

## Initial Settings

When the TV is turned on for the first time, it is in the digital mode.

Because this is the first time the TV is used, there are no channels stored in the memory and the following message appears on the screen.

Please ensure aerial is plugged in. Do you want to start first time installation?


Yes

No

- To start installation process, select **"Yes"**, to cancel select **"No"**.

- To select an option **"Yes or No"**, highlight the item by using **◀** or **▶** buttons and press the **OK** button.

The IDTV will automatically tune to the UHF transmission channels 21 to 68 looking for digital terrestrial TV broadcasts and displaying the names of channels found. This process will take about five minutes. To cancel searching, you can press the **⏻** button at any time during the process.

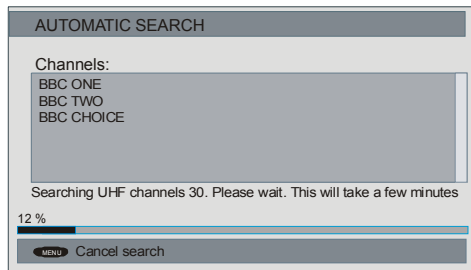

After **Automatic Search** process is completed, the following message asking for analogue channel search appears on the screen. TV switches to the analogue TV mode.

Do you want to search for analogue channels?

Yes

No

To search for analogue channels, select “**Yes**”. The menu below is displayed to search for analogue channels.



Select your Language, Country and Text language by using  $\blacktriangle$  /  $\blacktriangledown$  and  $\blacktriangleleft$  /  $\blacktriangleright$  buttons. Press **OK** button to continue. To cancel, press **BLUE** button.

For more information on this process, see “**Install Menu**” section.

**NOTE:** For proper functioning of digital teletext in DTV mode, you should set **country** as UK in analogue AUTO PROGRAM.

## Basic Operations

*You can operate your TV using both the remote control and onset buttons.*

### Operation with the buttons on the TV

#### Volume Setting

- Press  $\blacktriangleleft$  - button to decrease volume or  $\blacktriangle$  + button to increase volume, so a volume level scale (slider) will be displayed at the middle of the bottom on the screen.

#### Programme Selection

- Press **P/CH** + button to select the next programme or **P/CH** - button to select the previous programme.

#### Entering Main Menu

- Press the **MENU** button to enter Main menu. In the Main menu select sub-menu using **P/CH** - or **P/CH** + buttons and enter the sub-menu using  $\blacktriangleleft$  - or  $\blacktriangle$  + buttons. To learn the usage of the menus, refer to the Menu System sections.

### Operation with Remote Control

The remote control of your TV is designed to control all the functions of the model you selected. The functions will be described in accordance with the menu system of your TV.

Functions of the menu system are described in the following sections.

#### Volume Setting

Press  $\blacktriangle$  button to increase volume. Press  $\blacktriangleleft$  button to decrease volume. A volume level scale (slider) will be displayed in the middle at the bottom of the screen.

#### Programme Selection (Previous or next programme)


- Press **P** - button to select the previous programme.
- Press **P** + button to select the next programme.

#### Programme Selection (direct access):


Press digit buttons on the remote control to select programmes between 0 and 9. TV will switch to the selected programme. To select programmes between 10 - 999 (for IDTV) or 10-99 (for analogue), press the digit buttons consecutively which programme you want to select (eg. for programme 27, first press 2 and then 7). When it is late to press second digit button only the first digit programme will be displayed. The limit of the delay time is 3 seconds.


Press directly the programme number to reselect single digit programmes.

## Everyday Operation

Pressing the  button at any time while watching television programmes will switch the TV set between displaying the digital terrestrial television broadcasting and its normal analogue broadcasting.

#### Information Banner

Whenever you change channel, using the **P** - / **P** + button or the digit buttons, TV displays the channel picture along with an information banner at the bottom of the screen. This will remain on the screen for approximately three seconds. The information banner can also be displayed at any time while watching TV by pressing the  button on the remote control.

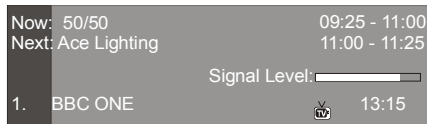

The information banner gives a number of facts on the channel selected and the programmes on it. The name of the channel is displayed, along with its channel list number and an indication of the strength of the signal received on this tuning channel.

#### Hint

**Not all channels broadcast the programme data. If the name and times of the programmes not available then “No Information Available” are displayed in the information banner.**

Icons are also displayed in the information banner and if this channel is a favourite channel:


Favourite channel icon .

If the selected channel is locked, you must enter the correct four digit code to view the channel.

Enter Lock Key

## Electronic Programme Guide (EPG)


Some, but not all, channels send information about the current and next events. Please note that event information is updated automatically. If there is no event information data available in channels, only channel names with **"No Information Available"** banner is displayed.


- Press **GUIDE** button to view the **EPG** menu.
- In EPG Menu, you can easily see the extended help information by pressing  button and by pressing this button again you can close this window.

 



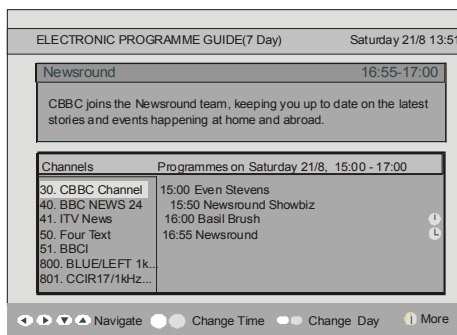
- In the EPG Menu all channels are displayed. Current channel is highlighted. Use **▲** or **▼** buttons to change channels. Also press **GREEN / RED** buttons to make page up/down scroll for the channels.
- If you highlight an event, short event description, extended event description, start and finish times of event are displayed on the screen.
- When the current programme is highlighted, the box is switched to the highlighted channel by pressing the **OK** button.
- If you press the **OK** button when a next event is highlighted, a reminder is set for the highlighted programme and a clock appears across the highlighted channel line.

Programme reminders can be set to signal that a programme is about to start when you are watching another channel. If you set reminder to a programme, then you will be asked for switching to that channel when the reminder time is reached.

- Press the  button to view the 7 day EPG.
- Press **▲** or **▼** button to navigate in Channels or Programmes.
- Press **◀** or **▶** button to navigate through the channel and programme list.

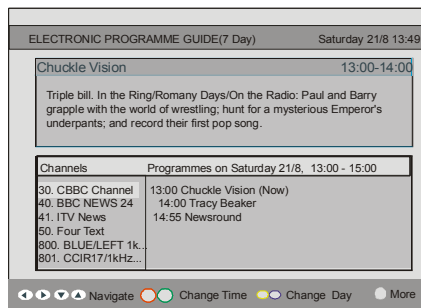





 
- With **RED/GREEN** buttons you can change schedule time. By pressing **YELLOW/BLUE** you can advance the schedule backward / forward of a day.
- If you press  button you can see the detailed help information easily. And by pressing  button again you can exit Help menu.
- The starting time for **EPG** is the current time. You can see the event information for the next two hours. By pressing **▲** or **▼** button, you can go to the next/previous hours while Programmes list is highlighted.
- If you press the **OK** button when a next event is highlighted, a reminder is set for the highlighted programme and a clock appears on the screen. Programme reminders can be set to signal that a programme is about to start when you are watching another channel. If you set reminder to a programme, then you will be asked for switching to that channel when the reminder time is reached.




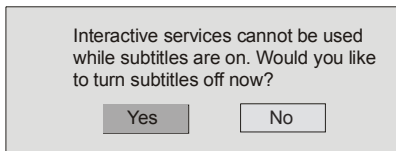
## Displaying The Subtitles

With Digital terrestrial broadcasting (DVB-T), some programmes are broadcast with subtitles. Subtitles can be displayed when watching these programmes.

Press the  button to display the Main menu, highlight the Configuration line using  or  button and press the **OK** button to display the Configuration menu.

Highlight the **“Subtitle”** item in Configuration menu and use  or  button to set Subtitle to off or a language.

If **“Subtitle”** is on via selecting one language option, pressing the  button causes the following warning message display on the screen.



## Digital Teletext

With Digital terrestrial broadcasting (DVB-T), in addition to pictures and sound, you can also watch digital teletext.

Digital teletext is sometimes broadcast at the same time as normal broadcasting.



### 1. Press the button.

The digital teletext information appears.

### 2. Operate it with the coloured buttons, / / / buttons and **OK** button.

The operation method may differ depending on the contents of the digital teletext.

Follow the instructions displayed on digital teletext screen.

- When “Press SELECT” button or similar message appears on the screen, press the **OK** button.
- When the  (Text) button is pressed, the TV returns to television broadcasting.
- With Digital terrestrial broadcasting (DVB-T), in addition to digital teletext broadcasting at the same time as normal broadcasting, there are also channels with just digital teletext broadcasting.
- The aspect ratio when watching a channel with just digital teletext broadcasting is the same as the aspect ratio of the picture watched previously.
- When you press the  (Text) button again, the digital teletext screen is displayed.

## Over Air Download


To ensure that your IDTV always has the most up-to-date information, please ensure that after use it is set to its standby mode. At 3AM each day, the IDTV automatically searches for any new information which

may be broadcast and will download this to your IDTV automatically. This operation will normally take approximately 30 seconds.

If you want to do this, you need to set Automatic Download to **“Enabled”** in Receiver Upgrade setting. For details see [page 17](#).

## Widescreen

Depending on the type of broadcast being transmitted, programmes can be viewed in a number of formats.


Press the  button repeatedly to select between **Auto, Full, 4:3, Panoramic, 14:9 Zoom, Cinema or 16:9 Subtitle**.


When **Auto** is selected, the format being displayed is determined by the picture being broadcast.


**PLEASE NOTE:** Menu size changes depending on the chosen image size.

## IDTV Menu System



The IDTV menu can only be shown when watching

Digital terrestrial broadcasting. Press the  button to turn IDTV on while TV is in analogue mode.

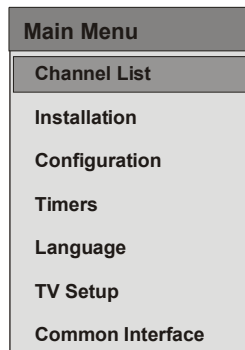Press the  button. The menu below appears on the screen:




## Channel List

Using the  or  button on the remote control in Main menu, make sure that the first item, Channel List, is highlighted and press the **OK** button to display the **Channel List**.

The following operations can be performed in this menu:

1. Navigating the whole list of channels
2. Deleting channels
3. Renaming channels
4. Adding locks to channels
5. Setting favourites

Channel List is the place where the channels are managed.

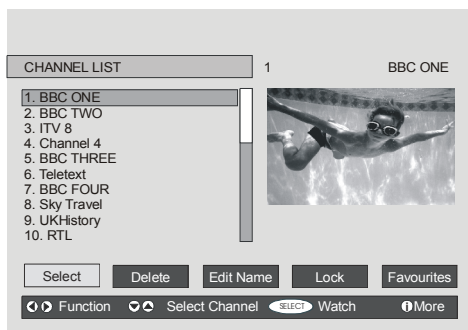

## Navigating the whole channel list

Press **▲** or **▼** button for selecting the previous or next channel. You can press **RED** or **GREEN** button to move page up or page down.


To watch a specific channel, highlight it using **▲** or **▼** button and then press **OK** button, while the “Select” item on Channel List menu is highlighted by using **◀** or **▶** button.

Then the name and number of the selected channel will be displayed in the top-left and top-right of the channel display at the top-right of the screen, respectively.

## Deleting the channels in the channel list

Press **▲** or **▼** button to select the channel that will be deleted.

Press **◀** or **▶** button to select the “Delete” item on Channel List menu. As seen on Channel List menu, **SELECT** is written next to **Delete** item at the bottom of the screen to indicate that press the **OK** button to delete the highlighted channel in the channel list.

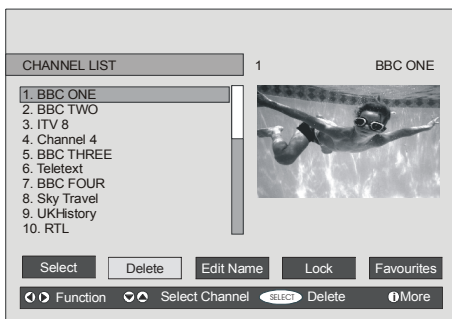

Press the **OK** button to delete the highlighted channel in the channel list. Then the message below appears on the screen.

The selected service will be permanently deleted. Are you sure?


Yes

No

Press **◀** or **▶** button to highlight the desired option. If **OK** button is pressed while “Yes” is highlighted, the highlighted channel is deleted. Selecting “No” cancels the delete operation.

## Renaming channels

To rename a specific channel, the channel must be highlighted via pressing **▲** or **▼** button and then highlight the **Edit Name** item by pressing **◀** or **▶** button. Press the **OK** to activate rename feature.

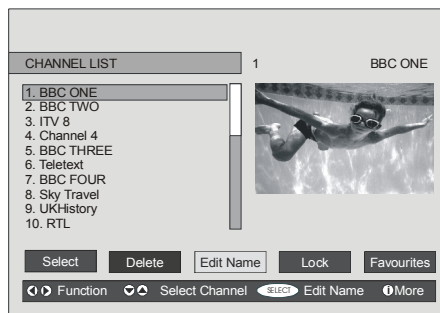

Now pressing **◀** or **▶** button moves to the previous/next character. Pressing **▲** or **▼** button toggles the current character, i.e., ‘b’ character becomes ‘a’ by **▼** and ‘c’ by **▲**. Pressing the numeric buttons ‘0...9’ replaces the highlighted character with the characters printed above the button one by one as the button is pressed.


Press the **ESC** button to cancel the editing or **OK** button to save the new name.

## Adding locks to channels


Channel Locking provides a password-protected access to channels selected by parents. In order to lock a channel you should know the Parental Lock password (default value is set to 0000 in the factory and can only be changed from the **Configuration Menu**).

Select the channel to be locked by highlighting it and select the “Lock” option by pressing **◀** or **▶** button. When the **OK** button is pressed, a password box is displayed.



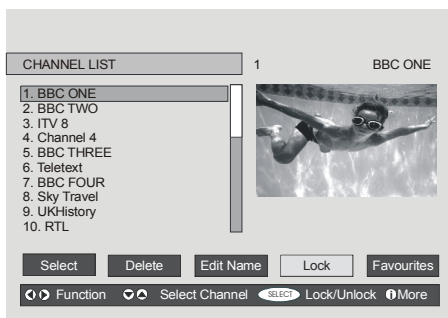

Enter Lock Key


Enter the password using the digit buttons on the remote control. The Lock icon  will now be displayed next to the selected channel. Repeat the same operation to cancel the Lock.

## Setting Favourites


You can set various channels as favourites so that only the favourite channels are navigated. To set a favourite you should highlight the “**Favourites**” item at bottom of the Channel List menu.

Use the ◀ or ▶ button to highlight the “**Favourites**” item at the base of the screen and then, in turn, highlight each channel you want to add to the favourites list, using the ▲ and ▼ buttons (or red / green buttons), and press the **OK** button.

A channel selected as a favourite appears in the main channel list with a favourites icon (😊) against the channel name.

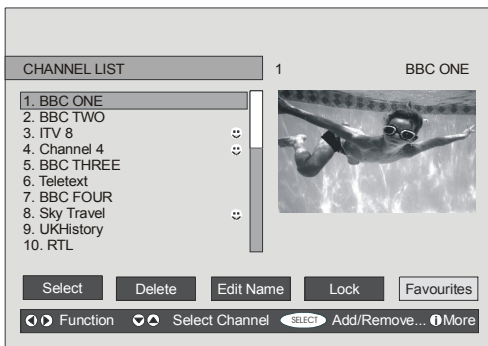

## On Screen Help Pressing INFO Button

For all menus press the  button to display the help information about the menu functions. For **Channel List** menu the following message is displayed on the screen.

Press the **SELECT** button on your remote control to tune to the highlighted channel.  
Press **MENU** to exit this screen.

## Installation

The Installation menu mainly intends to help you for building a **Channel Table** in the most efficient way.



This menu includes the following items:

1. Add New Channels
2. First Time Installation.

### ADD NEW CHANNELS:

This tuning menu consists of two parts:

- Automatic Search
- Manual Search



### Automatic Search:

Automatic search is started by pressing the **OK** button in the auto-search pop up menu. All the services are searched and a channel table is created automatically.

All channels found are stored in a sorted form with respect to their channel numbers. Some services may not appear with the correct channel number. At the time of printing, not all broadcasters are sending their channel number information.

### Manual Search:

 
In manual search, the number of the multiplex is entered manually and only that multiplex is searched for the channels. For every valid channel number, signal level, signal quality and network name are shown at the bottom of the screen.

In both manual and auto search any existing channel in the database is not re-stored to avoid redundant duplicates of that channel.



## FIRST TIME INSTALLATION

The user can use this item to load default settings, which had been loaded to the receiver at the factory. To install factory settings, highlight **"First Time Installation"** menu and press the **OK** button, then you will be asked to confirm for deleting all channels and settings.



Your previous digital channel list will be destroyed. Are you sure you want to delete all digital channels and settings for first time installation?

Yes No

By selecting YES and pressing the **OK** button, the existing channel table will be deleted.

After factory settings is loaded, **"First Time Installation"** menu will be displayed.

Please ensure aerial is plugged in. Do you want to start first time installation?

Yes No

Press the **OK** button to start installation. After search is completed for digital channels, a message asking search for analogue channels appears on the screen.

Do you want to search for analogue channels?


Yes No

Press the **OK** button to search for analogue channels. The following menu appears on the screen for analogue channel search.



Select your Language, Country and Text language by

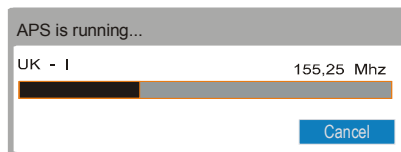

using **▲ / ▼** and **◀ / ▶** buttons. Press **OK** button to continue. To cancel, press **BLUE** button.




After APS is finalized, the programme table will appear on the screen. In the programme table you will see the programme numbers and names assigned to the programmes.


If you do not accept the locations and / or the programme names, you can change them in the Program menu.

## Configuration

Press the  button to display the Main Menu and the **▼** button twice to highlight Configuration, then press the **OK** button to display the Configuration menu. Press the  button to leave the menu.

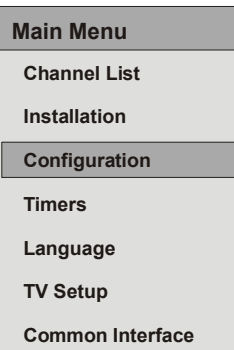

The various configuration functions are displayed in a list, along with a quarter-screen image of the currently selected channel. You can select a function by highlighting the corresponding menu line using the **▲** or **▼** button.

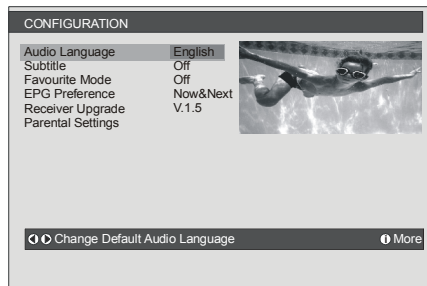

## Audio Language

Digital terrestrial television channels can broadcast simultaneous soundtracks in more than one language.

This function selects which language soundtrack you will hear when switching to a channel broadcasting with the multiple soundtracks.

Highlight the **Audio Language** line in the Configuration menu and use the ◀ or ▶ button to cycle through the language options.

### Subtitle

Digital terrestrial television channels can broadcast subtitles displayed on-screen for the hard-of-hearing. This function selects the desired subtitle language and enables the automatic display of subtitles whenever subtitle information is broadcast.

Highlight the Subtitle line in the Configuration menu and use the ◀ or ▶ button to cycle through “Off” and language options.

### Favourite mode

This function enables or disables the favourite channel list mode. See Channel List menu Favourites on **page 15**.

Use ◀ or ▶ button to turn on/off favourite mode. If the “**Favourite Mode**” is on, in normal operating mode pressing **P+** and **P-** buttons will only navigate through the channels that were previously defined as favourites in Channel List.

### EPG Preference

Digital terrestrial television channels can broadcast simultaneous Next&Now and 7-Day electronic programme.


Highlight the EPG Preference line in the Configuration menu and use the ◀ or ▶ button to select **Next&Now** or **7-Day**.

### Receiver Upgrade

The IDTV can be upgraded via the configuration menu, entered from the main menu.

In the Configuration menu, highlight the “**Receiver Upgrade**” item by pressing ▲ or ▼ button and press the **OK** button to start upgrade process.

There are two possibilities for Receiver software to be upgraded: **automatic** and **manual**.

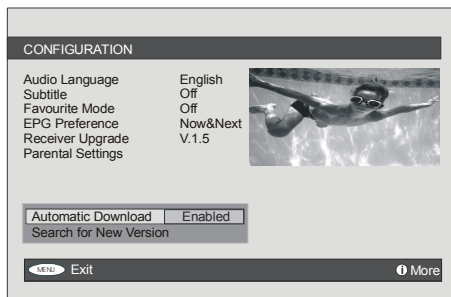

### Automatic Download (Automatic upgrade)


**Automatic Download** can be enabled or disabled by pressing ◀ or ▶ button. If it is enabled, then there are two ways for automatic upgrade. The first one is checking the existence of a new software every time the IDTV goes to standby. The second one is waking up at 03:00 a.m. every night, provided that the IDTV is left in standby mode. Both automatic upgrade methods result in standby mode either upgraded or not.

If the automatic upgrade is set to “Disabled” then this function will not work.

### Search For New Version (Manual upgrade)

Manual upgrade starts if the “**Search for New Version**” item is highlighted by using ▲ or ▼ button and activated via pressing the **OK** button.

After “**Search for New Version**” is activated, the IDTV tunes to each frequency that have been stored in its database and looks for the new software.

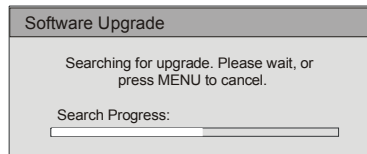

### Parental Settings

 
Some channels broadcast material which you do not want younger members of the family to watch. Any channel can be ‘locked’ so that it cannot be selected for viewing without first a four-digit PIN code being entered. In this way any channel not suitable for younger viewers can be protected.

This function enables or disables the menu protection system and allows the PIN code to be changed.


Use ▲ or ▼ button to go to Parental Settings option. Press the **OK** button to enter Parental Settings Menu. A box asking for the lock key is displayed.



There is only one key which is set to “0000” initially. Enter lock key. If wrong Lock key is entered, the following message is displayed on the screen and it is returned back.



 If it is correct, the Parental Settings Menu including following items is displayed:



There you can set/reset locking for the Main Menu, or the Installation Menu to restrict access. If the menu lock is disabled, there will be free access to the menu system. Also in this menu you can change the lock key and set/change parental lock mode.

**Disabled:** All menus are unlocked.


**Main Menu:** Main menu is accessible only with the correct lock key. So the user cannot add, delete, re-name, move channels, cannot set timers.


**Installation:** Installation menu is locked, so the user cannot add channels.

Changes will be updated after exiting Configuration Menu.

## Timers



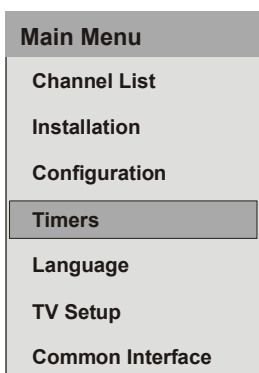

You can set a timer to switch the TV to any channel without your intervention. This is also for making video recordings of programmes when you are out.

Display the Main Menu by pressing the  button. Highlight the **Timers** line by pressing **▲** or **▼** button and press the **OK** button to display the Timer menu.



Up to five separate timer events can be set and each is displayed in the Timer screen, showing the event number, the channel to be selected, the start time, end time, date and the mode - whether that event is active (and will be acted on) or not.

TIMER MENU						
No	Channel Name	Start	End	Date	Mode	
1.	ITV 1	20:00	21:00	12/05/2005	Active	
2.	BBC ONE	00:00	00:00	01/01/2005	Inactive	
3.	BBC ONE	00:00	00:00	01/01/2005	Inactive	
4.	BBC ONE	00:00	00:00	01/01/2005	Inactive	
5.	BBC ONE	00:00	00:00	01/01/2005	Inactive	
6.	BBC ONE	00:00	00:00	01/01/2005	Inactive	

 Toggle Mode 
  Exit 
  Edit Timer 
  More

- To set an event, highlight its mode button using the **▲** or **▼** button and press the **OK** button to display the timer entry window.

Name:	3. ITV 1
Start:	00:00
End:	00:00
Date:	03/06/2005
Mode:	Once

- Here the five settings of channel name, start time, end time, date and frequency mode can be set. You can move freely between each setting using the **▲** or **▼** buttons.

- The channel name is set using the **◀** or **▶** button to display the channel which broadcasts the programme.

- The start time, end time and date are each set with the digit buttons on the remote control in 24-hour format.

- The frequency mode determines how often the receiver operates this event and is set with the **◀** or **▶** button to be either **Once**, **Daily**, or **Weekly**.

If an invalid number for the start or end times or the date is entered, "Entered time is not valid" message appears on the menu.

If timer action occurs while the TV is watched, the TV switches to the selected channel. When timer expires, the TV switches to the channel which it is switched from.

Selected digital channel will be output via Scart-2. You should connect your VCR to Scart-2 for recording digital broadcast.

## RECORDING FROM IDTV

Connect your VCR to AV-2 via a scart lead.

Set the AV-2 OUT in the feature menu to DDT, as illustrated and described on **page 27**.

Set the time as described above.

Set your TV to standby using the remote control. Set your VCR to correspond with the time set on your TV and select external input (refer to your VCR instruction book).


*NB. If you switch on your TV whilst the timer recording is active and then switch back to standby, the timer recording will be cancelled; the timer setting will be deleted and the desired programme will not be recorded.*


## Language

Some programmes are broadcast in two or more languages simultaneously. The language heard can be selected from the Language Menu.

- Press the  button to display the Main Menu and use

▲ or ▼ button to highlight the Language line and press the **OK** button.

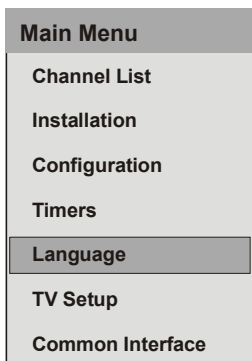


• Use the ▲ or ▼ button to highlight the soundtrack language required and press the **OK** button. Normal viewing, with the required language soundtrack, can be resumed by pressing the  button.



## TV Setup


To be able to go through TV functions, you can use this item.


The digital TV Setup menu screen is accessed from the main menu. Press the  button to display the main menu and use ▲ or ▼ button to highlight “**TV Setup**”, press the **OK** button to display TV Setup menu screen.



Detailed information about Sound, Picture and Feature menus are in *Analogue TV Menu System* section on **page 20**.

## Common Interface

• Press the  button to display the Main Menu and use the ▲ or ▼ button to highlight the “**Common Interface**” line and press the **OK** button.

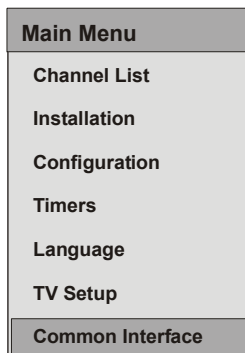

It is required to subscribe to a pay channel company to view the pay channels of the Digital Terrestrial broadcasting.

Obtain the Conditional Access Module (CAM) and the Viewing card by subscribing to a pay channel company, then insert those to the Television using the following procedure.


- 1. Switch off the TV and unplug from the mains.**
- 2. Insert the CAM, then Viewing Card to the slot that is located in the terminal cover at the left-hand side of the TV (from front view).**

• The CAM should be correctly inserted, it is impossible to insert fully if reversed. The CAM or the TV terminal may be damaged if the CAM is forcefully inserted.

- 3. Connect the TV to the mains supply, switch on and then wait for few moments until the card is activated.**

• Some CAMs may require the following set up. Please set the CAM by entering the IDTV menu, Common Interface then pressing the **OK** button. (CAM set up menu is not displayed when it is not required.)

• To see the viewing contract information:

Enter IDTV; press the  button, then highlight **Common Interface** and press the **OK** button.

• When no module is inserted, “**No Common Interface module detected**” message appears on the screen.

• Refer to the module instruction manual for details of the settings.

# Menu System

## Picture Menu



### Mode

By pressing ▲ / ▼ button, select **Mode**. Press ◀ / ▶ button to choose from one of these options: **Cinema**, **Dynamic** and **Natural**.

### Contrast/Brightness/Sharpness/Colour/Hue

By pressing ▲ / ▼ button, select the desired Option. Press ◀ / ▶ button to set the level.

*Hint: Hue is displayed in picture menu when the TV receives an NTSC signal.*

### Colour Temp

By pressing ▲ / ▼ button select **Colour Temp**.

Press ◀ / ▶ to choose from one of these options: **Cool**, **Normal** and **Warm**.

### Noise Reduction

By pressing ▲ / ▼ button select **Noise Reduction**. Press ◀ / ▶ to choose from one of these options: **Low**, **Medium**, **High** or **Off**.

### Film Mode

Films are recorded at a different number offrames per second to normal television programmes.

By pressing ▲ / ▼ button, select **Film Mode**.

Press ◀ / ▶ button to set this feature On or Off. Turn this feature on when you are watchingfilms to see the fast motion scenes clearly.

### Store

- By pressing ▲ / ▼ button select **Store**.
- Press ▶ or **OK** button to store the adjustments. "Stored" will be displayed on the screen.

## Reset

By pressing ▲ / ▼ button, select **Reset**. Press ◀ / ▶ or **OK** button to reset the picture modes to factory default settings.

## Sound Menu



### Volume

By pressing ▲ / ▼ select **Volume**. Press ◀ / ▶ button to change the level of the Volume.

### Equalizer

By pressing ▲ / ▼ button, select **Equalizer**. Press ◀ / ▶ or **OK** button to enter equalizer menu.

In equalizer menu the sound mode can be changed to **User**, **Music**, **Movie**, **Speech**, **Flat** and **Classic** by pressing ◀ / ▶ button. Select the desired frequency by ▲ / ▼ button and increase or decrease the frequency gain by pressing ◀ / ▶ button.

Press the  button to return to the previous menu.

**NOTE:** Equalizer menu settings can be altered only when the Equalizer Mode is in User.

### Balance

By pressing ▲ / ▼ select **Balance**. Press ◀ / ▶ button to change the level of the balance. Balance level can be adjusted between -32 and + 32.

### Headphone

By pressing ▲ / ▼ button, select **Headphone**. Press ▶ button to enter hedphone menu.

#### volume

By pressing ▲ / ▼ button, select **Volume**. Press ▶ button to increase hp volume level. Press ◀ button to decrease hp volume level. Headphone volume level can be adjusted between 0 and 63.

## balance

By pressing ▲ / ▼ button, select **Balance**. Press ► button to increase balance to the right. Press ◀ button to decrease balance to the left. Balance level can be adjusted between -32 and +32.

Press the  button to return to the previous menu.

## Sound Mode

By pressing ▲ / ▼ select **Sound Mode**. Press ◀ / ► button, you can select Mono, Stereo, Dual I or Dual II mode, only if the selected channel supports that mode.

## AVL

By pressing ▲ / ▼ select **AVL**. Press ◀ / ► button to set the AVL as on or off.

## Effect

By pressing ▲ / ▼ select **Effect**. Press ► button to set Effect as on or off.

## Dynamic Bass

**Dynamic Bass** is used to increase bass effect of the TV set.

By pressing ▲ / ▼ button, select Dynamic Bass. By pressing ◀ / ► button set Dynamic bass to Low, High or Off. It is not recommended to select High if listening at high volume levels.

## 3DS

By pressing ▲ / ▼ button select **3DS**. Press ◀ / ► button to set **3DS** as on or off.

## SubWoofer

It is possible to connect an external, active subwoofer to the set to give a much deeper bass effect.

By pressing ▲ / ▼ button, select Subwoofer. Subwoofer can be set to On or Off.


Dynamic Bass is not available if Subwoofer is set to On. Set Subwoofer to On when you connect an external subwoofer to the set.

## Store

By pressing ▲ / ▼ button select **Store**.

Press ► or **OK** button to store the adjustments. “**Stored**” will be displayed on the screen.

## Feature Menu

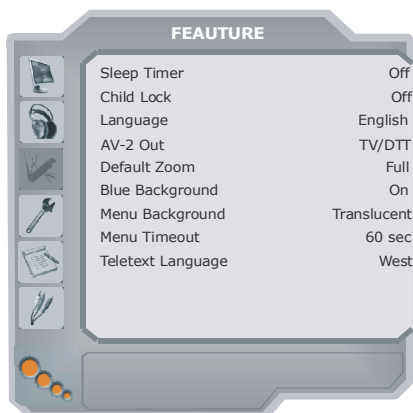

## Sleep Timer

By pressing ▲ / ▼ select **Sleep Timer**. Press ◀ / ► button to set the **Sleep Timer**.

The timer can be programmed between Off and 120 minutes in steps of 10 minutes.

## Child Lock

By pressing ▲ / ▼ select **Child Lock**.

Press ◀ / ► button to set the Child Lock on or off. When on is selected, the TV can only be controlled by the remote control handset. In this case the control panel buttons will not work (except for the **STANDBY** button). Hence, if one of these buttons is pressed, “Child Lock On” will be displayed on the screen when the Menu screen is not visible.

## Language

By pressing ▲ / ▼ button, select **Language**. Use ◀ / ► button to select the language.

Available language options are; English, German, French, Turkish, Spanish, Danish, Swedish, Dutch, Italian, Greek, Portuguese, Norwegian, Finnish, Polish, Czech, Hungarian, Russian, Slovak, Slovenian, Rumanian, Bulgarian, Croatian, Serbian.

## AV-2 Out

By pressing ▲ / ▼ select **AV-2 Output**. Use ◀ / ► button, to set Ext-2 Out to **TV/DTT**, **AV-1**, **AV-3**, **AV-4**, **HDMI-1**, **HDMI-2** or **PC RGB**.

**NOTE:** Only audio output is available for **AV-3**, **AV-6**, **AV-7** and **PC RGB**. The other options have both audio and video outputs.

*If currently watched source is analogue TV, a connected device displays analogue TV source as well. If this source is set to digital mode, connected device displays digital source. In order to avail this function, **AV-2 Out** should be set to **TV/DTT**.*

## Default Zoom

By pressing ▲ / ▼ button, select **Default Zoom**. You can set **Default Zoom** to **Full**, **Panoramic**, **4:3** or **14:9 Zoom** by pressing ◀ / ▶ button.

## Blue Background

By pressing ▲ / ▼ button, select **Blue Background**. Press ◀ / ▶ button to set Blue Background as on or off.

## Menu Background

By pressing ▲ / ▼ button, select **Menu Background**. You can change menu background to **Translucent** or **Opaque** by pressing ◀ / ▶ button.

## Menu Timeout

By pressing ▲ / ▼ button, select **Menu Timeout**. Press ◀ / ▶ button to change menu timeout to 15 sec, 30 sec or 60 sec.

## Teletext Language

By pressing ▲ / ▼ button, select **Teletext Language**. Press ◀ / ▶ button to change **Teletext Language** to West, East, Turk/Gre, Cyrillic or Arabic.

## Install Menu



## Program

By pressing ▲ / ▼ button, select **Program**. Press ◀ / ▶ button to select the program number. You can also enter a number via digit buttons on the remote control. There are 100 program storage between 0 and 99.

## Band

Band can be selected either **C** or **S** by press ◀ / ▶ button.

## Channel

Channel can be changed by ◀ / ▶ button or Digit Buttons.

## Colour System

By pressing ▲ / ▼ button, select **Colour System**. Press ◀ / ▶ button to change the colour system to **PAL**, **SECAM** or **AUTO**.

If Sound System is set to **I**, **SECAM** is not available for the Colour System.

**NOTE:** In **EXT** mode, you can choose **NTSC 3.58**, **NTSC 4.43** or **PAL60** as well.

## Sound System

By pressing ▲ / ▼ button, select **Sound System**. Press ◀ / ▶ button to change the sound system to **BG**, **I**, **DK**, **L** or **LP**.

## Fine Tune

By pressing ▲ / ▼ button, select **Fine Tune**. Press ◀ / ▶ button to adjust the tuning.

## Search

By pressing ▲ / ▼ button, select **Search**. Press ◀ / ▶ button to start program searching. You can also enter the desired frequency via digit buttons when search item is highlighted.

## VCR

This item can be seen in **all modes except YPbPr, HDMI and PC**.


If you want to watch a **VCR** source from one of these modes, then it will be better to set **VCR** mode "on". For this, while the cursor is on this item press the ◀ / ▶ buttons to set it **On**.

If you want to watch a **DVD**, then you must set this item **Off**.

## Store Program

By pressing ▲ / ▼ button, select **Store Program**. Press ► or **OK** button to store the adjustments. "Program Stored" will be displayed on the screen.

## Program Menu

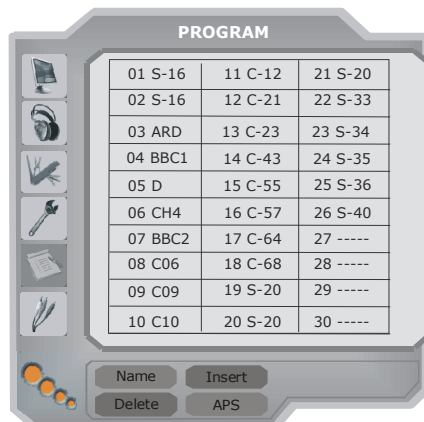

By moving the cursor in four directions you can reach 20 programmes in the same page. You can scroll the pages up or down by pressing the navigation buttons to see all the programmes in TV mode (except the AV mode). By cursor action, programme selection is done automatically.

### Name:

To change the name of a decided programme, select the programme and press the **RED** button.

The first letter of the selected name will be highlighted. Press **▲** / **▼** button to change that letter and **◀** / **▶** button to select the other letters. By pressing the **RED** button, you can store the name.

### Insert:

Select the programme which you want to insert by navigation buttons. Press the **GREEN** button. By navigation buttons move the selected programme to the decided programme space and press the **GREEN** button again.

### Delete:

To delete a programme, press the **YELLOW** button. Pressing the **YELLOW** button again erases the selected programme from the programme list, and the programmes below shift one up.

### APS (Auto Programming System)


When you press the **BLUE** button for APS, Auto Programming System Menu will appear on the Screen.



### A.P.S. (Auto Programming System) Country

Press **◀** / **▶** button to select your country. If you want to exit from A.P.S. function, press the **BLUE** button.

When you press **OK** or **RED** button for starting APS, all stored programs will be erased and the following screen will be displayed:

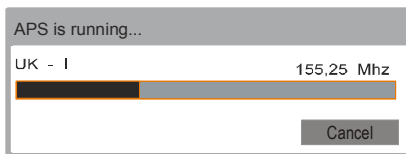

Whenever you press the **BLUE** button, A.P.S. function stops and Program Table appears on the screen.

If you wait until the end of A.P.S., Program Table is displayed with the programmes found and located.

### Install menu in AV modes

The following screen appears in the install menu:



### Colour System

By pressing **▲** / **▼** select **Colour System**. By pressing **◀** / **▶** button, you can change the colour system to **PAL**, **SECAM**, **PAL 60**, **NTSC 4,43**, **NTSC 3,58** or **AUTO**.

### VCR

By pressing **▲** / **▼** select **VCR**. By pressing **◀** / **▶** button, you can set the **VCR** to **ON** or **OFF**.


### Store Program

By pressing **▲** / **▼** button, select Store Program. Press **▶** or **OK** button to store the adjustments. "Program Stored" will be displayed on the screen.

### Source menu

By pressing **▲** / **▼** button, select the sixth icon and press **▶** or **OK** button. Source menu appears on the screen.



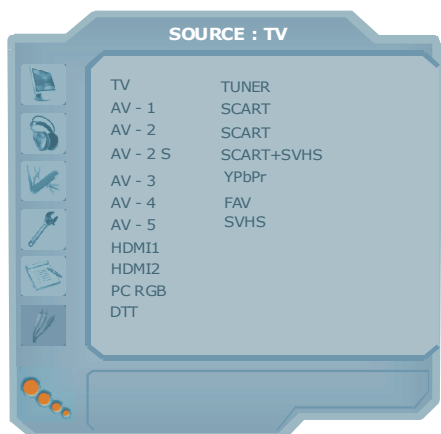

In source menu, highlight a source by pressing ▲ / ▼ button and switch to that mode by pressing ► or **OK** button. Source options are; **TV, AV-1, AV-2, AV-2 S, AV-3, AV-4, AV-5, HDMI1, HDMI2, PC RGB** and **DTT**.

## PC Mode

### Installation

- Power off both computer and display before making any connections.
- Set your PC's resolution correctly before connecting to the TV. See the table on Appendix A on **page 33**.
- Use 15-pin display cable to connect a PC to the LCD TV.

### Menu System in PC mode

#### Sound Menu/Feature Menu

The items in these menus are described at **Sound & Feature Menu** explained in "Menu System".


#### PC Picture Menu

By pressing ▲ / ▼ button, select the second icon. PC Picture menu appears on the screen.

Brightness, Contrast and Colour Temperature adjustments in this menu are identical to adjustments defined in TV picture menu in "Analogue TV Menu System".

#### PC Picture Position Menu

By pressing ▲ / ▼ button, select the first icon and press ► or **OK** button. PC Picture Position menu appears on the screen.

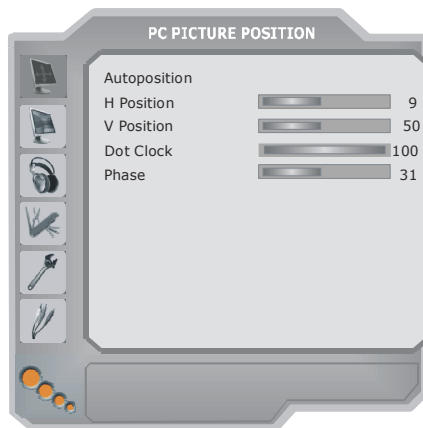

### Autoposition

If you shift the picture horizontally or vertically to an unwanted position, use this item to put the picture into correct place automatically.

- Select Autoposition item by using ▲ / ▼ buttons. Press or **OK** button.

**Warning:** Auto position adjustment recommended to be done with the full screen image for the proper adjustment.

### H (Horizontal) Position

This item shifts the image horizontally to right hand side or left hand side of the screen.

- Select H Position item by using ▲ / ▼ button.
- Use ◀ / ▶ button to adjust the value.

### V (Vertical) Position

This item shifts the image vertically towards the top or bottom of the screen.

- Select V Position item by using ▲ / ▼ button.
- Use ◀ / ▶ button to adjust the value.

### Dot Clock

Dot Clock adjustments correct interference that appear as vertical banding in dot intensive presentations like spreadsheets or paragraphs or text in smaller fonts.

- Use ◀ / ▶ button to adjust the value.

### Phase

Depending on the resolution and scan frequency that you input to the TV Set, you may see a hazy or noisy picture on the screen. In such a case you can use this item to get a clear picture by trial and error method.

 
- Use ◀ / ▶ button to adjust the value.

### Sound in PC mode

- Connect the PC's Audio output to the TV's **PC Audio In** socket with an audio cable.

## Other Features


### TV Status

**Programme Number**, **Programme Name**, **Sound Indicator** and **Zoom Mode** are displayed on the screen when a new programme is entered or  button is pressed.


### Mute Indicator

It is placed in the upper side of the screen when enabled.

 



To cancel mute, there are two alternatives; the first one is pressing the  button and the second one is increasing the volume level.

### PIP and PAP modes



Press the  button to switch to PIP mode.

At PIP Mode, a small picture (PIP picture) is displayed on the main picture. Aspect Ratio of the PIP window is fixed and 4:3.

When PIP Mode is entered, the default active window is PIP window and the active window is indicated by a white frame around it. The active window can be changed by pressing  /  button. The status info OSD belongs to active window. The place of the status OSDs are same for both windows.

Press the  button again to switch PAP mode.

  At PAP Mode, two pictures with equal sizes are displayed on the screen. Aspect Ratios of the windows are fixed.

When you switch to PAP Mode, Main window in PIP Mode is displayed on the right side of the screen. The active window can be changed by pressing  /  button.


Press the  button again to exit the PAP mode.


**NOTE:** In all HDMI modes, Pip and PAP are not visible. In YPbPr 1080i, Pip is not visible.

**NOTE:** See Appendix C for all PIP/PAT modes.


### AV Modes

 You can switch your TV to **AV** modes by using related buttons on the remote control.

 
First, press  button till **INPUT** OSD is displayed on the screen. You can then use; **AV1**, **AV2**, **AV3**, **AV4**, **AV5**, **HDMI1** or **HDMI2** buttons on your remote control to select the desired source (except being in teletext).

Note that in PIP/PAP modes, pressing  button will directly change sources.

### Freeze Picture

You can freeze the picture on the screen by pressing the  button. At PIP and PAP layouts, only the main picture can be frozen.

### Zoom Modes

Zoom mode can be changed by pressing the  **Aspect ratio** button. You can change the screen size according to the picture aspect ratio. Select the optimum one from the following **ZOOM** modes.

**NOTE:** In YPBPR and HDMI modes, while in 720 and 1080 resolutions, **Full 1** and **Full 2** modes will be visible.

**NOTE:** When in "Full 1" mode; if picture defects in top and bottom lines occur because of the broadcast, switch to "Full 2" mode to avoid. If such defects in the edges of picture are not experienced, it is advised that you watch in "Full 1" mode.

**NOTE:** You can only choose 4:3 and FULL in PC mode.

 
#### Auto:

When a **WSS (Wide Screen Signalling)** signal, which shows the aspect ratio of the picture, is included in the broadcast signal or the signal from an external device, the TV automatically changes the **ZOOM** mode according to the **WSS** signal.

- When the **AUTO** mode does not function correctly due to poor **WSS** signal quality or when you want to change the **ZOOM** mode, change to another **ZOOM** mode manually.

#### Full:

This uniformly stretches the left and right sides of a normal picture (4:3 aspect ratio) to fill the wide TV screen.



- For 16:9 aspect ratio pictures that have been squeezed into a normal picture (4:3 aspect ratio), use the **Full** mode to restore the picture to its original shape.


#### 4:3

 Use to view a normal picture (4:3 aspect ratio) as this is its original shape.



## Panoramic:


This stretches the left and right sides of a normal picture (4:3 aspect ratio) to fill the screen, without making the picture appear unnatural.



The top and bottom of the picture are slightly cut off.


## 14:9 Zoom:

This zooms up the wide picture (14:9 aspect ratio) to the upper and lower limits of the screen.

 


## Cinema:

 This zooms up the wide picture (16:9 aspect ratio) to the full screen.



## 16:9 Subtitle:

 This zooms up the wide picture (16:9 aspect ratio) with subtitles to the full screen.



## Teletext

Teletext system transmits information such as news, sports and weather on your TV. Note that if the signal becomes insufficient, some text errors may occur or the teletext mode may be quitted. **Teletext function buttons** are listed below:

### **Teletext On-Off / PAT Mode**

Activates teletext mode when pressed once. Pressing this button again will split the screen into two windows, one displaying the teletext and the other displaying the current channel. Press again to exit.

### **Index**

Selects the teletext index page.

### **Reveal**

Shows hidden information (solutions of games, for example).

### **Hold**

Holds a text page when convenient. Press again to resume.

### **Subcode Pages / Time**

Selects subcode pages if available when the teletext is activated. When the teletext is not activated, displays time info if the programme has teletext transmission.

### **P+ / P- and numbers (0-9)**

Press to select a page.

**NOTE:** Most TV stations use code **100** for their index pages.

### **Coloured buttons (RED/GREEN/YELLOW/BLUE)**

Your TV supports both **FASTEXT** and **TOP text** systems. When these systems are available, the pages are divided into groups or topics.

When **FASTEXT** system is available, sections in a teletext page will become colour-coded and can be selected by pressing the coloured buttons. Press a coloured button that corresponds with your needs.

The coloured writings will appear, showing you which coloured buttons to use when **TOP text** transmission is present. Pressing **P -** or **P +** commands will request the next or previous page respectively.

## Connect Peripheral Equipment

### High Definition

Your LCD Television is capable of displaying High Definition pictures from devices such as a High Definition Satellite Receiver or DVD Player. These devices must be connected via the HDMI sockets or Component Socket. These sockets can accept either 720p or 1080i signals. Also, only HDMI modes accept 1080p signals.

### Via The Scart

The TV has 2 **SCART** sockets. If you want to connect peripherals (e.g. video, decoder, etc.) which have Scart sockets to the TV, you can use **SCART** sockets of the TV.

**NOTE:** *If an external device is connected via the Scart sockets, the TV will automatically switch to AV mode. If both sockets are employed at the same time, SCART 1 becomes the preferential.*

### Via Aerial Input

If the device you want to connect does not have a Scart socket, you should connect it to the Aerial input of the TV.

**If the VCR is connected via Aerial input, it is suggested to use Programme 0.**

### Decoder

If you are subscribed to cable TV offers, the organisation will supply you a corresponding decoder unit to allow the programmes to be unscrambled.

*For further information consult your dealer.*

#### Connect a decoder with an aerial socket to the TV

- Connect the aerial cable.

#### Connect a decoder without an aerial socket to the TV

- Connect the decoder to the **EXTERNAL** socket of TV with a RCA cable. Through the **SCART/RCA** socket of the decoder, you may attain a better display resolution.

### TV And Video Recorder

- Connect the aerial cables.

Better picture quality can be obtained if you also connect a Scart cable to **SCART** sockets.

### Playback NTSC

- Connect NTSC VCR player to a Scart socket of the TV. Then, select the related source from the **SOURCE** menu.

### Copy Facility

Source selection for **VCR** recording.

- Select **Feature** menu.
- Select **AV-2 Out** by pressing ▲ / ▼ button.
- For copying the picture that comes from the tuner, select **AV-1**.

### Camera And Camcorder

#### To Connect To AV Input

Connect your camera or camcorder to AV input of the TV.

- Connect your equipment to the TV via **VIDEO** (yellow), **AUDIO R** (red) and **AUDIO L** (white) inputs. You must connect the jacks into the input with the same colour.

#### To Connect To S-VHS Input

Connect your camera or camcorder S-VHS input of the TV.

- Connect your equipment to the TV via S-VHS input and audio inputs of AV inputs by using S-VHS cables.

### Connect The Decoder To The Video Recorder

Some video recorders have a special Scart socket for decoder.

- Connect a Scart cable to the Scart socket of your decoder and to the special Scart socket of your video recorder. Refer to the booklet of your video recorder.

### Connecting Headphones (optional)

Use the stereo headphone socket of the TV, to connect headphones.

**NOTE:** *If you want to connect more equipment to your TV, consult your dealer.*

### Audio Lineout


To connect the external speakers to your TV, use Line Outs of the TV.

**NOTE:** *While watching HDMI source, Lineout selection could only be the current source.*


### Connecting SubWoofer

Use SubWoofer Out socket to connect an external, active subwoofer to the set to give a much deeper bass effect.

# Peripheral Equipment Connections

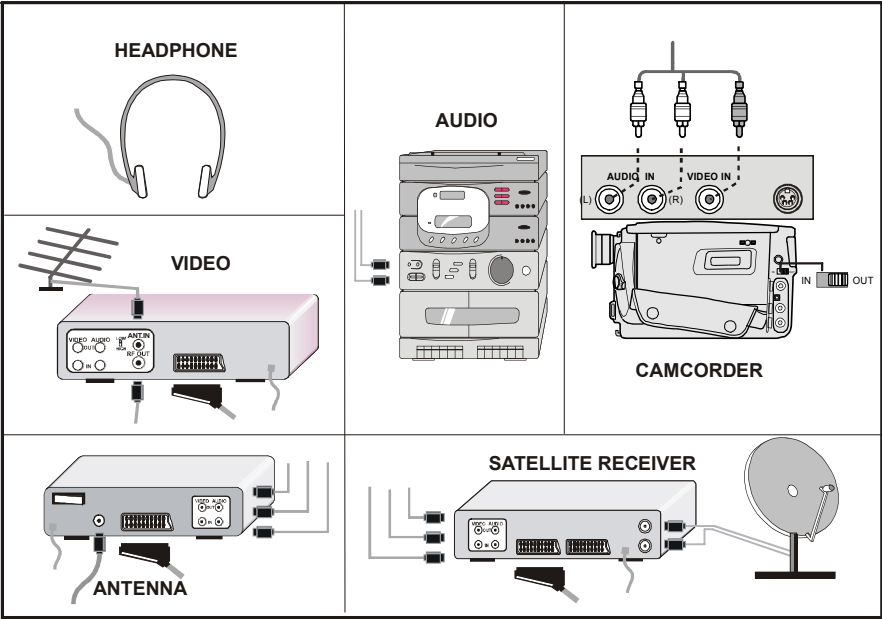

## Aerial Connection

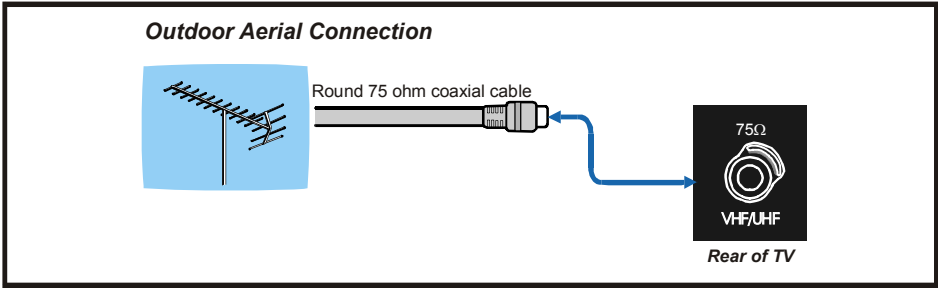

## Tips

### Care Of The Screen

Clean the screen with a slightly damp, soft cloth. Do not use abrasive solvents as they may damage the TV screen coating layer.

### Poor Picture

Have you selected the correct TV system? Is your TV set or house aerial located too close to non-earthed audio equipment or neon lights, etc.?

Mountains or high buildings can cause double pictures or ghost images. Sometimes you can improve the picture quality by changing the direction of the aerial.

Is the picture or Teletext unrecognisable? Check if you have entered the correct frequency.


The picture quality may degrade when two peripherals are connected to the TV at the same time. In such a case, disconnect one of the peripherals.

### No Picture

Is the aerial connected properly? Are the plugs connected tightly to the aerial socket? Is the aerial cable damaged? Are suitable plugs used to connect the aerial? If you are in doubt, consult your dealer.

**No Picture** means that your TV is not receiving a transmission. Have you selected the correct button on the remote control? Try once more.

### Sound

You can not hear any sound. Did you perhaps interrupt the sound, pressing the  button?

Sound is coming from only one of the speakers. Is the balance set to one extreme? See **Sound** menu.

### Remote Control

Your TV no longer responds to the remote control. Perhaps the batteries are exhausted. If so you can still use the local buttons at the bottom of the TV.

# Specifications

## DISPLAY

Size/Diagonal	42" (16:9 Display)
Viewable size / Diagonal	93.02 x 52.32 (cm) / 106.73 (cm)

## VIDEO STANDARDS

Video	PAL/NTSC/SECAM
TV Tuner (Analog)	PAL/SECAMB/G D/K K' I' L/L' VHF (BAND I/III) UHF (BAND U) HYPERBAND CABLE TV (S1-S20 / S21-S41) 100 PRESET CHANNELS
TV Tuner (Digital)	MHEG-5 ENGINE compliant with ISO/IEC 13522-5 Ukengine Profile 1 Object carousel support compliant with ISO/IEC 135818-6 and UK DTT profile Frequency range: 470 MHz - 858 MHz Transmission standard: DVB-T. MPEG-2 Demodulation: COFDM with 2K/8K FFT mode FEC: all DVB modes Video: MP@ML, PAL, 4:3/16:9 Audio: MPEG Layer I&II 32/44.148kHz.
Formats	4:3, Panoramic, 14:9 Zoom, Cinema, 16:9 Subtitle, Auto, Full

AUDIO	German + Nicam Stereo
-------	-----------------------

## FREQUENCY RANGE PC

Horizontal Frequency:	64 Khz (max)
Vertical Frequency:	75 Hz (max)
Clock Frequency:	108 Mhz (max)
Resolutions:	1360 x 768 (max)
Formats:	4:3, 16:9

## INPUT CONNECTIONS

PC	D-SUB 15 (VGA)
VIDEO	TV TUNER: IEC 75 Ohms input resistance SCART1: CVBS, RGB SCART2: CVBS, S CVBS: 1 x RCA Y/C (S-Video) MiniDIN YPbPr: 3 x RCA HDMI x 2: Multimedia Interface
AUDIO	SCART1: Audio L/R SCART2: Audio L/R Y/C or CVBS: Audio Phono L/R YPbPr: Audio Phono L/R PC: Audio Phono L/R Headphones: 3.5mm Jack Stereo

# Specifications

RS232 In 9 pin mini D-sub

## OUTPUT CONNECTIONS

Line Out	Audio Phono L/R
Subwoofer	1 x Phono (Mono)
SPDIF Digital Out	1 x Phono
Audio Speaker Output	2x8 W RMS
Synchronization	Sync on green, composite sync with automatic detection separate H and V sync.

**Operator Control Keys** On/Off, Standby, Vol+, Vol-, Prog +, Prog -, Menu, TV/AV.

## OPERATING CONDITIONS

Temperature	0°C ~40°C (in operation)
Air Humidity	20%~80% (no condensation)
Atmospheric Pressure	800~1114 HPa

## POWER SUPPLY

Voltage Supply	220-240V AC
Mains Frequency	50Hz
Power Consumption	235W, 1 W (Standby)

## DIMENSIONS AND WEIGHT

Display with stand D x L x H:	270 x 1036 x 750 (mm)
Display without stand: D x L x H:	125 x 1036 x 698 (mm)
Weight Display:	24.5 kg
Weight Stand:	3.5 kg
Weight (net):	28 kg




# Specifications

## Signal Input

### PC RGB Terminal (D-sub 15-pin connector)

Pin	Input signal
1	R
2	G or sync on green
3	B
4	No connection
5	No connection
6	R.GND
7	G.GND
8	B.GND
9	No connection
10	GND
11	No connection
12	[SDA]
13	H.sync or H/V composite sync
14	V.sync. [V.CLK]
15	[SCL]

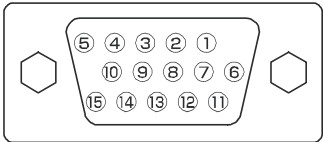


- When different kinds of input signals are simultaneously input to the monitor via a graphics board or the like, the monitor will automatically select the signals in the following priority order:

Sync signal type	Priority
H/V separate sync.	1
H/V composite sync.	2
sync.on Green *	3

- Even in the case of the recommended signals shown on the following page, there may be instances when correct display is not possible. In this case, use H/V separate sync, H/V composite sync.


### S-input connector pin specifications

Pin	Input signal
1	Y
2	Y-GND
3	C
4	C-GND
Frame	GND

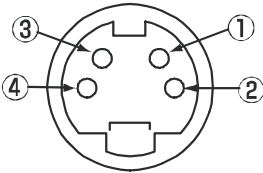


### HDMI connector pin specifications

 Pin	Input signal	Pin	Input signal
1	TMDS Data2+	11	TMDS Clock Shield
2	TMDS Data2 Shield	12	TMDS Clock-
3	TMDS Data 2-	13	CEC
4	TMDS Data 1+	14	Reserved (N.C. on device)
5	TMDS Data1 Shield	15	SCL
6	TMDS Data1-	16	SDA
7	TMDS Data0+	17	DDC/CED Ground
8	TMDS Data0 Shield	18	+5V Power
9	TMDS Data0-	19	Hot Plug Detect
10	TMDS Clock+		



### SCART connector pin specifications

 Pin	Input signal	Pin	Input signal
1	AUDIO OUT (RIGHT)	12	Not used
2	AUDIO IN (RIGHT)	13	RGB-R GND
3	AUDIO OUT (LEFT/MONO)	14	GND
4	AUDIO GND	15	RGB-R / S.VHS CHROMINANCE IN
5	RGB-B GND	16	BLANKING SIGNAL
6	AUDIO IN (LEFT/MONO)	17	COMPOSITE VIDEO GND
7	RGB-B IN	18	BLANKING SIGNAL GND
8	AUDIO / RGB SWITCH / 16:9	19	COMPOSITE VIDEO OUT
9	RGB-G GND	20	COMPOSITE VIDEO / S.VHS LUMINANCE IN
10	Not used	21	GND / SHIELD (CHASSIS)
11	RGB-G IN		



## Appendix A: PC Input Typical Display Modes

The display has a maximum resolution of 1360 x 768, frequency range of 56-85 Hz.

The following table is an illustration of some of the typical video display modes.

Mode	Resolution		Frequency	
	Horizontal	Vertical	Hor.(kHz)	Ver.(Hz)
1	640	480	31,5	60
2	640	480	37,9	72
3	640	480	37,5	75
4	800	600	35,2	56
5	800	600	37,9	60
6	800	600	48,1	72
7	800	600	46,9	75
8	800	600	53,7	85
9	1024	768	48,4	60
10	1024	768	56,5	70
11	1024	768	60	75
12	1280	1024	64	60
13	1280	768	47,8	60
14	1360	768	47,7	60

## Appendix B: AV and HDMI Signal Compatibility

Source	Supported Signals		Available
<b>AV-1</b> <b>(SCART 1)</b>	PAL 50/60		<b>O</b>
	NTSC 60		<b>O</b>
	RGB 50		<b>O</b>
	RGB 60		<b>O</b>
<b>AV-2</b> <b>(SCART-2)</b>	PAL 50/60		<b>O</b>
	NTSC 60		<b>O</b>
	S-VHS 50		<b>O</b>
	S-VHS 60		<b>O</b>
<b>AV-3</b> <b>(YPbPr)</b>	480I	60Hz	<b>O</b>
	480P	60Hz	<b>O</b>
	576I	50Hz	<b>O</b>
	576P	50Hz	<b>O</b>
	720P	50Hz	<b>O</b>
	720P	60Hz	<b>O</b>
	1080I	50Hz	<b>O</b>
	1080I	60Hz	<b>O</b>
<b>AV-4</b> <b>(FAV)</b>	PAL 50/60		<b>O</b>
	NTSC 60		<b>O</b>
<b>AV-5</b> <b>(S-Video)</b>	PAL 50/60		<b>O</b>
	NTSC 60		<b>O</b>
<b>HDMI1</b> <b>HDMI2</b>	480I	60Hz	<b>O</b>
	480P	60Hz	<b>O</b>
	576I	60Hz	<b>O</b>
	576P	60Hz	<b>O</b>
	720P	60Hz	<b>O</b>
	720P	50Hz	<b>O</b>
	1080I	50Hz	<b>O</b>
	1080I	50Hz	<b>O</b>
	1080P	50Hz	<b>O</b>
	1080P	60Hz	<b>O</b>
	1080P	24 HZ	<b>O</b>

**(X: Not Available, O: Available)**

**Note:** In some cases a signal on the LCD TV may not be displayed properly. The problem may be a inconsistency with standards from the source equipment (DVD, Set-top box, etc...). If you do experience such a problem please contact your dealer and also the manufacturer of the source equipment.

## Appendix C: Main and PIP-PAP Picture Combinations

### Main and PIP, PAP picture combinations

MAIN → PIP_PAP ↓	TUNER	AV-1 CVBS	AV-1 RGB	AV-2 CVBS	AV-2 RGB	AV-3 YPBPR	AV-4 CVBS	AV-5 SVHS	HDMI 1	HDMI 2	PC RGB
TUNER / DTV *	O	O	O	O	O	O	O	O	NO PIP&PAP AVAILABLE IF MAIN IS AV-5	NO PIP&PAP AVAILABLE IF MAIN IS AV-6	O
AV-1 CVBS	O	O	X	O	O	O	O	O			O
AV-1 RGB	O	X	O	O	O	O	O	O			O
AV-2 CVBS	O	O	O	O	X	O	O	O			O
AV-2 RGB	O	O	O	X	O	O	O	O			O
AV-3 YPBPR	X	X	X	X	X	X	X	X			X
AV-4 CVBS	O	O	O	O	O	O	O	O			O
AV-5 SVHS	O	O	O	O	O	O	O	O			O
HDMI 1	X	X	X	X	X	X	X	X			X
HDMI 2	X	X	X	X	X	X	X	X			X
PC RGB	X	X	X	X	X	X	X	X			X

(X: Not available, O : Available)

\* DTV pip-pap options are the same as the TUNER input. TV and DTV cannot be in pip-pap mode together.

## Appendix D: Source Menu Selction

The following is a key to the AV inputs:

Remote Control	Source Menu	Input Sockets Labelling
TV/DTT	TV	Not applicable
TV/DTT	DTT	Not applicable
AV1	AV-1	AV1 (scart 1)
AV2	AV-2	AV2 (scart 2)
*	AV-2S	(not marked see note below)
AV3	AV-3	AV-3 (Y, Pb, Pr, L, R)
AV4	AV-4	AV4 (CVBS)
AV5	AV-5	AV-5 (S-VHS)
HDMI1	HDMI-1	HDMI-1
HDMI2	HDMI-2	HDMI-2
(there is no PC button )	PC RGB	PC INPUT

Inputs can be selected by either using the appropriate buttons on the remote control or by selecting an input on the source menu.

\*For AV-2S, select from the menu.

NB. AV-2S can be used by the use of an S-VHS to scart converter plug (not supplied) or a device which has scart output with S-video can be connected

PC can only be selected using the source menu.

### Your Guarantee of Excellence

Thank you for purchasing this Hitachi Television.

In the unlikely event that this product should develop a fault, we undertake to replace or repair any part of the product which fails due to a manufacturing defect within 12 months of the date of purchase provided that:

- i) The product has been installed and used only in accordance with the instructions supplied with the product
- ii) The product has not been repaired, maintained, or modified by any person other than an Hitachi authorised engineer
- iii) The product serial number has not been removed or altered

This guarantee does not apply to product acquired second hand or for commercial or communal use

This guarantee does not cover the replacement of exhausted batteries, the adjustment of user controls, or aerial alignment.

Any parts replaced under this guarantee shall become the property of Hitachi Europe Ltd.

Please note that evidence of the date of purchase will be required before any service under this guarantee is carried out.

**THIS GUARANTEE DOES NOT AFFECT YOUR STATUTORY RIGHTS.**


**IN ALL CASES OF DIFFICULTY PLEASE CONSULT YOUR HITACHI DEALER**



**IMPORTANT** - If placing TV into cabinet or alcove, ensure there is at least a 100mm (10cm) gap to the sides, rear and top of the TV. This is to allow for adequate ventilation during operation. Please read the main Users Guide for more safety information before installation.

### 1


#### insert the batteries into your handset

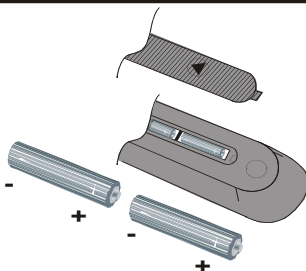

Rear view


### 2a

#### either connect the aerial straight to your TV...

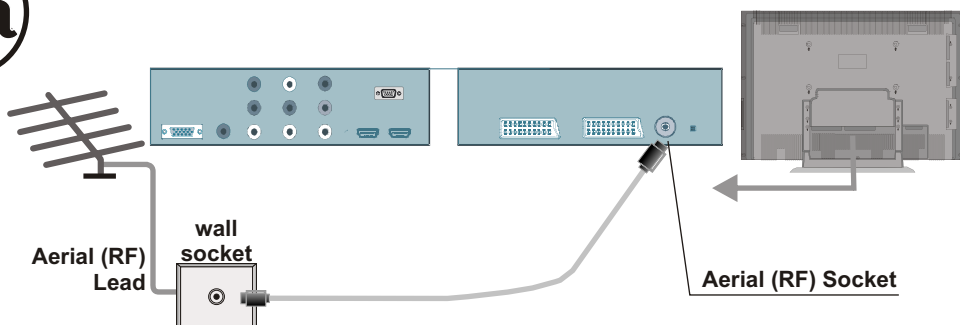

### 2b


#### ...or connect the aerial through a VCR...

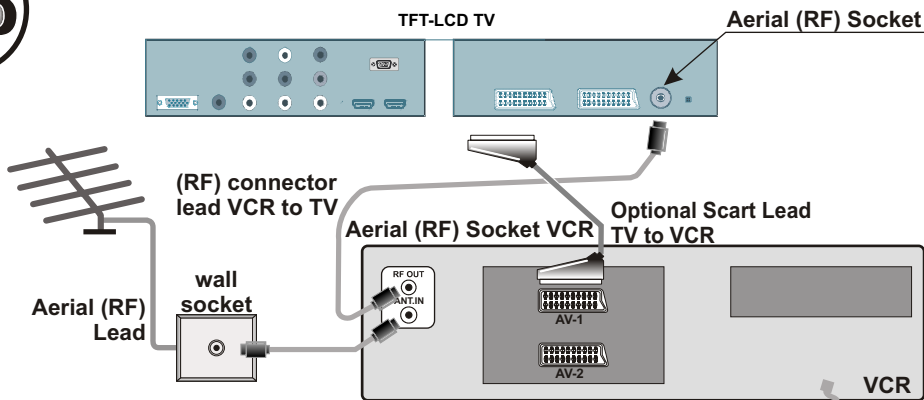

• It is recommended that a scart lead should be fitted between your TV and VCR to enhance your picture and sound quality. Scart leads are essential if you have a stereo TV and VCR and wish to obtain stereo sound from your equipment. These leads can be purchased from your Hitachi dealer or any good High Street electrical retailer.

# 2c

## ...or through a HDMI and YPBPr products (DVD-RW)

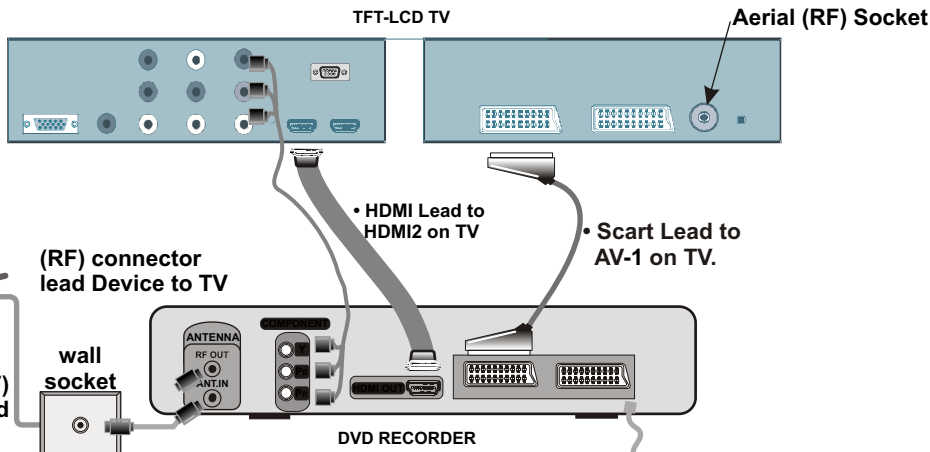


### • High Definition

Your LCD Television is capable of displaying High Definition pictures from devices such as a High Definition Satellite Receiver or DVD Device. These devices must be connected via the HDMI socket or Component Socket. These sockets can accept either 720p or 1080i signals. Switch to these sources from the "Source Menu". Also 1080 progressive mode can be available if your TV model supports Full HD (Optional).




# 2d

## ...or through DVD-R, VCR and satellite decoder.

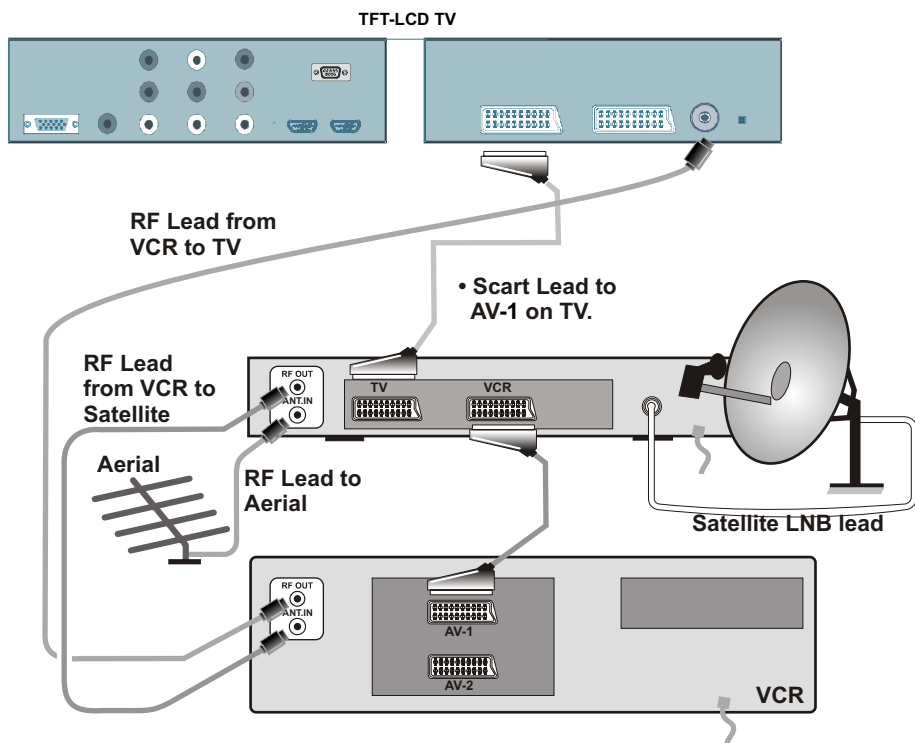


# 3

## connect the TV plug to the mains socket

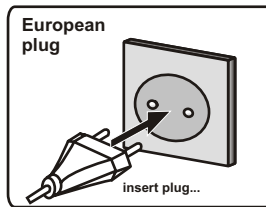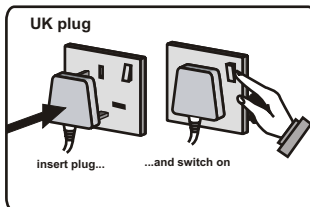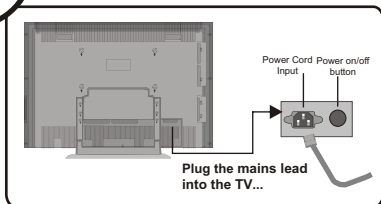


# 4

## switch your TV on by pressing the On/Off button

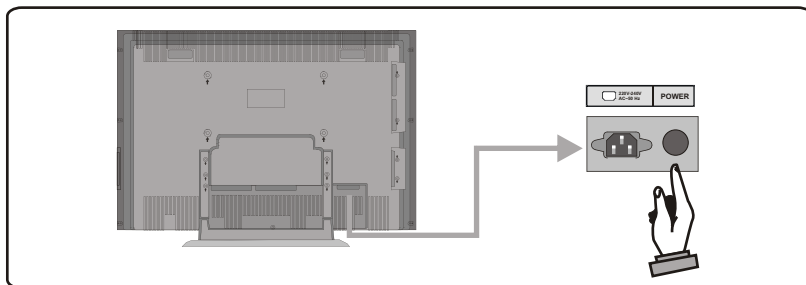

**NB:** When the set is first switched on, the set will be in standby and the indicator on the front of the set will illuminate red. Press the channel up down (P-, P+) or numeric buttons (1, 2, 3, ...) to operate.

## basic functions of remote control

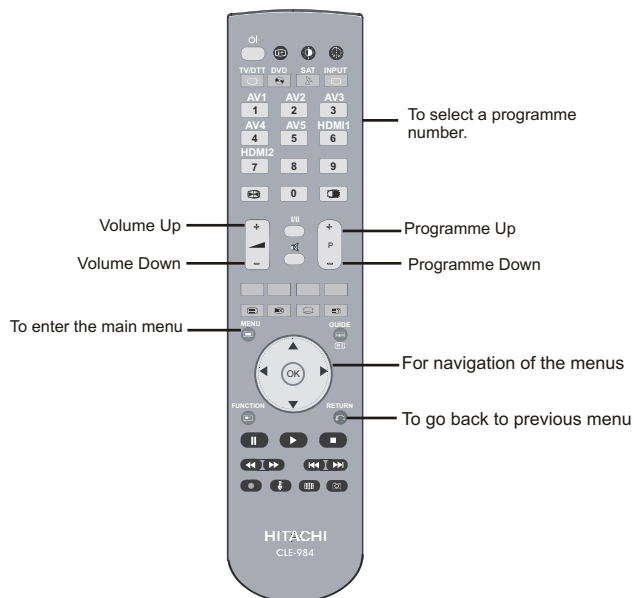



## important note before starting Auto Setup

If you have a Video Cassette Recorder or a Satellite receiver connected to your TV please ensure that they are switched on before automatic tuning begins. In the case of a VCR, insert a pre-recorded tape and begin playback of your equipment. These measures ensure that all your external equipment is tuned in during the Auto Setup procedure.


# 5

## start A.P.S. (Auto Programming System)

1

When the TV is turned on for the first time, it is in the digital mode. Because this is the first time the TV is used, there are no channels stored in the memory and the following message appears on the screen.

2

To start installation process, select “**Yes**”, to cancel select “**No**”. This process will take about five minutes. To cancel searching, you can press “” button at any time during the process.

3

After **Automatic Search** process is completed, a message asking for analogue channel search appears on the screen. To continue Auto Program, first set the language, country and teletext language by using ◀ / ▶ button and then press the RED or “**OK**” button

4

After APS is finalized, the programme table will appear on the screen. In the programme list you will see the programme numbers and names assigned to the programmes.

5

For details, please refer to the **Install Menu** section of the instruction book.

Please ensure aerial is plugged in. Do you want to start first time installation?

Yes

No


### AUTOMATIC SEARCH

Channels:

BBC ONE  
BBC TWO  
BBC CHOICE

Searching UHF channels 30. Please wait. This will take a few minutes

12 %

 Cancel searching

### AUTO PROGRAM

Language

English

Country

UK

Text language

West

PLEASE CHECK ANTENNA CABLE  
AUTO. PROGRAMMING SYSTEM

OK

Cancel

APS is running...

UK - 1

155,25 Mhz

Cancel

## important note.

Once the TV has found all your local stations, they are then automatically assigned a programme number and name, if available from the broadcast.

If you would like to change the programme number or order, please refer to the Program Menu section of the instruction book.

# HITACHI

## Inspire the Next

Hitachi, Ltd.  
Consumer Business Group  
Shin-Otemachi Bldg 5f, 2-1, Otemachi 2-Chome,  
Chiyoda-Ku, Tokyo 100-0004 Japan

### HITACHI EUROPE LTD.

Consumer Affairs Department  
PO Box 3007  
Maidenhead  
Berkshire SL6 8ZE  
**UNITED KINGDOM**  
Tel: 0870 405 4405  
Email: consumer.mail@hitachi-eu.com

### HITACHI EUROPE GmbH

Munich Office  
Dornacher Strasse 3  
D-85622 Feldkirchen bei München  
**GERMANY**  
Tel: 089-991 80-0  
Fax: 089 - 991 80 -224  
Hotline: 0180 - 551 25 51 (12ct/min.)  
Email: dmg-mun.service@hitachi-eu.com

### HITACHI EUROPE S.r.l.

Via T. Gulli n.39  
20147 MILAN  
**ITALY**  
Tel: 02 487861  
Fax: 02 48786381  
Servizio Clienti  
Tel. 02 38073415  
Email: customerservice.italy@hitachi-eu.com

### HITACHI EUROPE S.A.S

Lyon Office  
Digital Media Group  
94 Quai Charles de Gaulles, 69006 Lyon  
**FRANCE**  
Tel: 04 72 14 29 70  
Fax: 04 72 14 29 99  
Email: france.consommateur@hitachi-eu.com

### HITACHI EUROPE LTD.

Benelux Branche Office  
Bergensesteenweg 421  
1600 Sint-Pieters-Leeuw  
**BELGIUM**  
TEL : 0032/2 363 99 01  
FAX: 0032/2 363 99 00  
Email : info@hitachi.be

### HITACHI EUROPE LTD.

Na Sychrove 975/8  
101 27 Praha 10 Bohdalec  
**CZECH REPUBLIC**  
TEL : 267 212 383  
FAX: 267 212 385  
Email : dmg.eeu@hitachi-eu.com

### HITACHI EUROPE S.A.

364, Kifissias Ave. & 1, Delfon Str.  
152 33 Chalandri  
Athens  
**GREECE**  
Tel: 1-6837200  
Fax: 1-6835694  
Email: dmgservice.gr@hitachi-eu.com

### HITACHI EUROPE S.A.

Gran Via Carles III, 86 Planta 5ª  
Edificios Trade - Torre Este  
08028 Barcelona  
**SPAIN**  
Tel: 93 409 2550  
Fax: 93 491 3513  
Email: atencion.cliente@hitachi-eu.com

### HITACHI EUROPE AB

Box 77  
S-164 94 KISTA  
**SWEDEN**  
Tel: 08 562 711 00  
Fax: 08 562 711 11  
Email: csgswe@hitachi-eu.com

### HITACHI EUROPE AB

(Norway Branch Nuf)  
Strandveien 18  
1366 Lysaker  
**NORWAY**  
Tel: 67519030  
Fax: 67519032  
Email: csgnor@hitachi-eu.com

### HITACHI EUROPE AB

Egebækvej 98  
2850 Nærum  
**DENMARK**  
Tel: 43 43 60 50  
Fax: 43 43 60 51  
Email: csgden@hitachi-eu.com

### HITACHI EUROPE AB

Lars Sonckin kaari 16  
FIN-02600 ESPOO  
**FINLAND**  
Tel: 010-8503085  
Fax: 010-8503086  
Email: info.finland@hitachi-eu.com