

User's Manual

FOXSAT-HDR



Thank you for purchasing a Humax Foxsat-HDR (Digital Television Recorder) Your Foxsat-HDR supports freesat+ provided by the freesat service.

Freesat+ explained:

- **Accurate Recording** – the product will track the start and end times of scheduled recordings meaning the recording will start and stop at the times sent by the broadcasters. If a programme starts early or runs late the record time will automatically be adjusted to record the whole programme*.
- **Series Recording** – if a programme you wish to record is in a series, you can now record the whole series.
- **Schedule Tracking** - If the programme changes to a different time or day the changes will be detected and the programme will still record.
- **Alternate Instances** - if a scheduled recording(s) overlap with other programmes already set to record, you will be given the option to record one of the programmes if it is repeated.
- **Split Recordings** - if a programme has two parts split by another programme in the Guide (e.g. a film divided in to two parts by a News programme) both parts will record.

Note: The above freesat+ features are available on channels where the correct and accurate data is being broadcast. Some channels may not support some/all services.

- ❖ Accurate recording is only available when the Record > Early Start Time & Late End Time options are set to **On Time**.

Notice



Thank you for purchasing a HUMAX product. Please read this user's manual carefully to be able to safely install, use and maintain the product at maximum performance. Keep this user's manual next to your product for future reference. The information in this user's manual is subject to change without notice.

Copyright (Copyright © 2008 HUMAX Corporation)

Not to be copied, used or translated in part or whole without HUMAX's prior consent in writing except approval of ownership of copyright and copyright law.

Warranty

The warranty does not cover parts which may become defective due to misuse of the information contained in this manual.

Trademarks

- Manufactured under license from Dolby Laboratories.
Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Warnings, Cautions and Notes

Throughout the whole manual, pay special attention to the following marks that indicate hazardous situations.

- **Warning**
Indicates a hazardous situation which could result in serious injury.
- **Caution**
Indicates a situation which could damage the equipment or other apparatus.
- **Note**
Indicates additional information to make the user aware of possible problems and information of any importance to help understand, use and maintain the installation.

Meaning of Symbols



To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



This symbol indicates **dangerous voltage** inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

Notice



Instruction about the 'WEEE' Symbol



This product should not be disposed with other household wastes at the end of its working life. Please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. This will prevent possible harm to the environment or human health from uncontrolled waste disposal.

- **Domestic users:**
Please contact either the retailer where you purchased this product or their local government office for details of where and how they can take this item for environmentally safe recycling.
- **Business users:**
Contact your supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Safety Warning



This product has been manufactured to comply with international safety standards. Please read the following safety precautions carefully.

Safety Instructions and Precautions

1. MAINS SUPPLY

90-250V a.c., 50/60Hz

- Operate this product only from the type of power supply indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your local power company.
- Disconnect the product from the mains before you start any maintenance or installation procedures.

2. OVERLOADING

- Do not overload a wall outlet, extension cord or adapter as this may result in electric fire or shock.

3. LIQUID

- The product should not be exposed to liquid of any kind. In addition, no objects filled with liquid should be placed on the apparatus.

4. CLEANING

- Disconnect the product from the wall outlet before cleaning.
- Use a light damp cloth (no solvents) to dust the product.

5. VENTILATION

- The slots on top of the product must be left uncovered to allow proper airflow into the unit.
- Do not stand the product on soft furnishings or carpets.
- Do not stack electronic equipments on top of the product.

6. ATTACHMENTS

- Do not use any unsupported attachments as these may be hazardous or cause damage to the product.

7. CONNECTION TO THE SATELLITE DISH LNB

- Disconnect the product from the mains before connecting or disconnecting the cable from the satellite dish. Failure to do so can damage the LNB.

8. CONNECTION TO THE TV

- Disconnect the product from the mains before connecting or disconnecting the cable from the TV. Failure to do so can damage the TV.

9. EARTHING

- The LNB cable must be earthed to the system earth for the satellite dish.

10. LOCATION

- Place the product indoors to avoid exposing it to lightning, rain or sun.
- Do not place it near a radiator or heat register.
- We recommend that the product has 10 cm clearance from any other appliances susceptible to electromagnetic influences, such as a TV or a VCR.
- Do not block the openings with any object, and do not place the product on a bed, sofa, rug, or other similar surface.
- If you place the product on a rack or a bookcase, ensure that there is adequate ventilation and that you have followed the manufacturer's instructions for mounting.
- Do not place the product on an unstable cart, stand, tripod, bracket, or table where it can fall.
- A falling product can cause serious injury to a child or adult, and serious damage to the appliance.

Safety Warning



11. LIGHTNING, STORM OR NOT IN USE

- Unplug the product from the wall outlet and disconnect the antenna during a thunderstorm or when left unattended and unused for long periods of time. This will prevent damage to the unit due to lightning and power-surges.

12. EXTRANEIOUS OBJECTS

- Do not insert anything through the openings in the unit, where they can touch dangerous voltage points or damage parts.

13. REPLACEMENT OF PARTS

- When replacement of parts is required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorised substitution may result in additional damage to the unit.

Warning

1. To avoid damage of the power cord or plug;

- Do not modify or process the power cord or plug arbitrarily.
- Do not bend or twist the power cord.
- Make sure to disconnect the power cord holding the plug.
- Keep heating appliances as far as possible from the power cord in order to prevent the cover vinyl from melting.
- The mains plug, as a disconnection device, shall remain readily accessible by the user.

2. To avoid electrical shock;

- Do not open the main body.
- Do not insert metal or inflammable objects inside the product.
- Do not touch the power plug with wet hands.
- Disconnect the power cord in case of lightning.

3. To avoid damage of product;

- Do not use the product when it is out of order. If you continue to use the product when defective, serious damage can be caused to it. Make sure to contact your local retailer if the product is out of order.

4. Hard Disk Drive

- Do not move the product or turn the power off suddenly while the hard disk drive is running. The company shall not be liable for any corruption of data on the hard disk drive caused by the carelessness or misuse of users.

5. Standby Mode

- It is recommended to leave the product in Standby mode during long periods when not being used e.g. Over night. The product will record any schedules set while in Standby mode.

Contents




1. Before Using the Product	GB8
1.1 Package Contents	GB8
1.2 Front Panel	GB9
1.3 Conditional Access	GB10
1.4 Rear Panel	GB11
1.5 Remote Control	GB12
1.6 Remote Control Batteries	GB15
2. Connections	GB16
2.1 Connecting the Antenna	GB16
2.2 Connecting the TV and VCR	GB17
2.3 Powering On	GB21
3. First Installation	GB22
3.1 User Settings	GB22
3.2 Freesat Detection	GB22
3.3 Postcode	GB23
3.4 Search Channels	GB23
3.5 Result	GB24
3.6 Installation Checklist	GB24
4. Basic Operation	GB25
4.1 Switching Channel	GB25
4.2 Volume Control	GB25
4.3 Resolution	GB25
4.4 Wide	GB26
4.5 Audio	GB26
4.6 Subtitle	GB27
4.7 Text and Interactive Services	GB27
4.8 Programme Information (i-plate)	GB28
4.9 Option List	GB29
5. Channel List	GB30
5.1 My TV List	GB30
5.2 Favourite List	GB31
5.3 HD TV List	GB31
5.4 Genre List	GB32
5.5 Non-freesat Channel List	GB32
6. TV Guide	GB33
6.1 Using TV Guide	GB33
6.2 List Guide	GB35
6.3 Schedule	GB35
6.4 Find	GB36

Contents



7. Settings	GB37
7.1 TV Setup	GB37
7.2 Language	GB40
7.3 Time	GB41
7.4 Parental Control	GB42
7.5 Recording	GB44
7.6 Other	GB45
7.7 STB Mode	GB46
8. Edit Channels	GB47
8.1 Edit Channel List	GB47
8.2 Edit Favourite List	GB49
8.3 Edit Customisable Channels	GB50
9. Setup	GB51
9.1 Freesat Tune	GB51
9.2 Manual Tune	GB52
9.3 Software Update	GB53
9.4 Factory Reset	GB54
10. System	GB55
10.1 Diagnostics	GB55
10.2 Network	GB55
10.3 HDD Control	GB56
10.4 Common Interface	GB56
11. Media List	GB57
11.1 Video	GB57
11.2 Radio	GB60
11.3 Music	GB61
11.4 Photo	GB63
12. Personal Video Recorder (PVR)	GB65
12.1 Play bar	GB65
12.2 Time Shifted Recording (TSR) and Playback	GB66
12.3 Recording	GB67
12.4 Bookmark	GB69
13. Software Update	GB70
13.1 OTA (Over the Air)	GB70
14. Appendix	GB71
14.1 Menu Map	GB71
14.2 Trouble Shooting	GB72
14.3 Error Message	GB74
14.4 Specification	GB75
14.5 Glossary	GB77
14.6 Service and Support	GB79


1. Before Using the Product

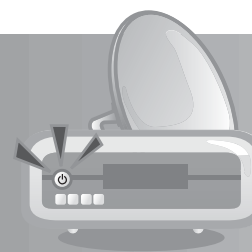

This chapter provides detail instructions on the product and its accessories.

1.1 Package Contents

Please check all package contents before using your product.

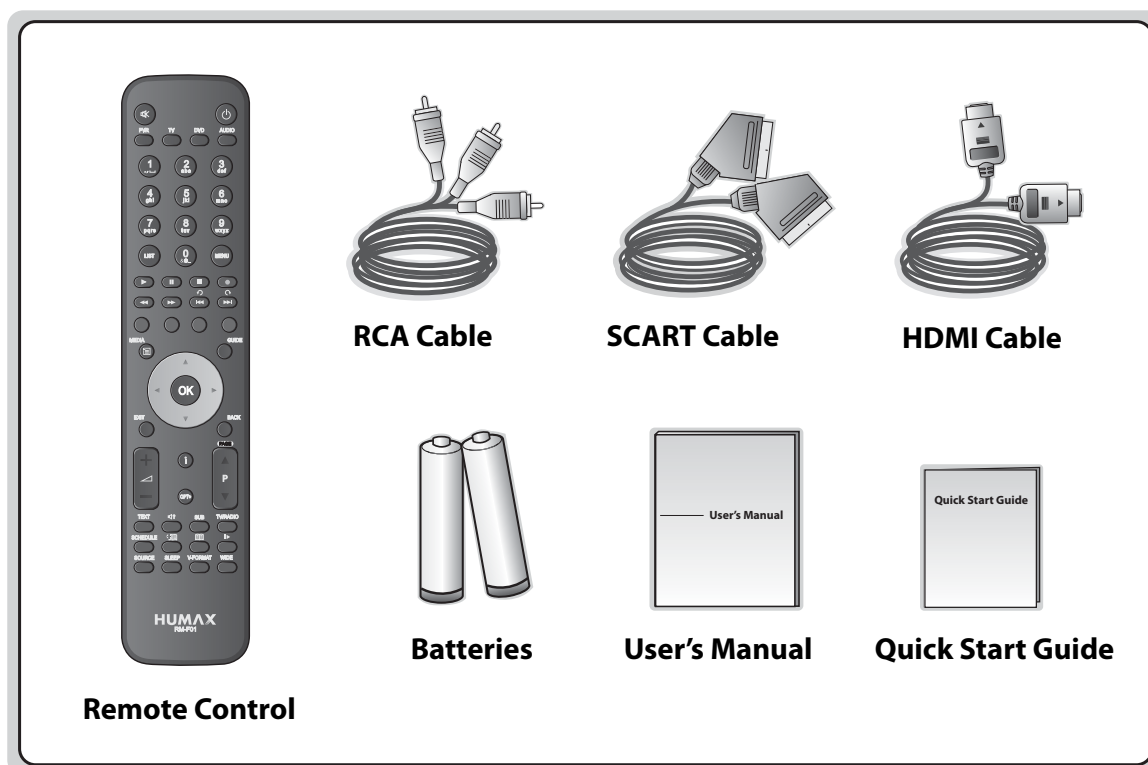


Note:

- Faults may occur if the remote control is left without battery for a long time. Always keep the battery inserted in the remote control.
- Package contents may vary according to area.


Caution:

- The company shall not be liable for problems caused by changing hard disk drive by user.

1. Before Using the Product

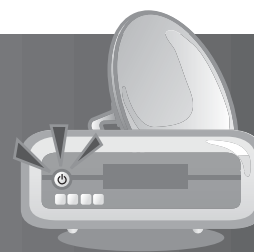

1.2 Front Panel

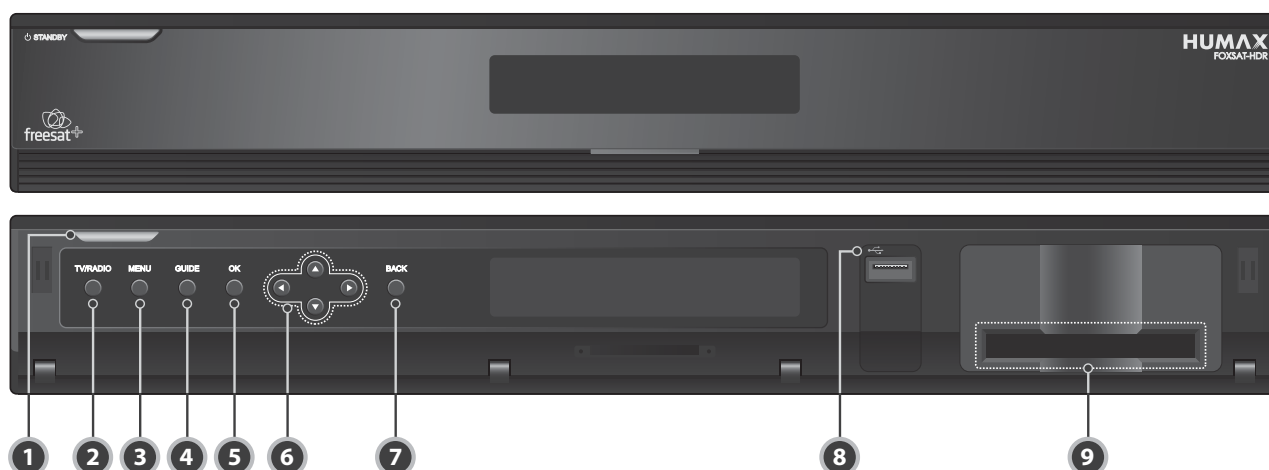

1. STANDBY BUTTON

Switches between operation and standby modes.

2. TV/RADIO BUTTON

Switches between TV and radio modes.

3. MENU

Displays the main menu.

4. GUIDE

Displays the programme guide.

5. OK

Selects a menu or confirms the selected operation.

6. ARROW BUTTONS

◀/▶: Replays or skips scenes.

▲/▼: Moves the TV/radio channel up or down.

7. BACK

Closes and returns to the previous menu and screen.

8. USB Port


Connect a USB Pen drive or external USB HDD (for archiving recordings, or transfer of MP3 or JPEG files).

9. CI-MODULE SLOT

A slot for a CI-Module. Module is not supplied.

Note: The front of the product is subject to change without notice.

1. Before Using the Product

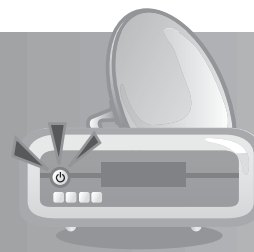


1.3 Common Interface

Although some TV and radio services are free to air, others are available on a subscription basis and can only be enjoyed via a Conditional Access component.


Inserting a CI (with Smartcard)

A CI-Module looks like a PC map (PCMCIA) for laptops. There are different kinds of CI-Modules, suitable for different coding systems; Irdeto, Conax and more. Additionally to the CI-Module, a Smartcard is needed to decode the channels.


1. Open the right-hand flap on the front panel of the product to expose the card slot.
2. Follow the instructions of the module and insert the Smartcard into the CI-Module.
3. Keep the CI-Module (with the Smartcard) horizontal.
4. Insert the CI-Module into the slot.

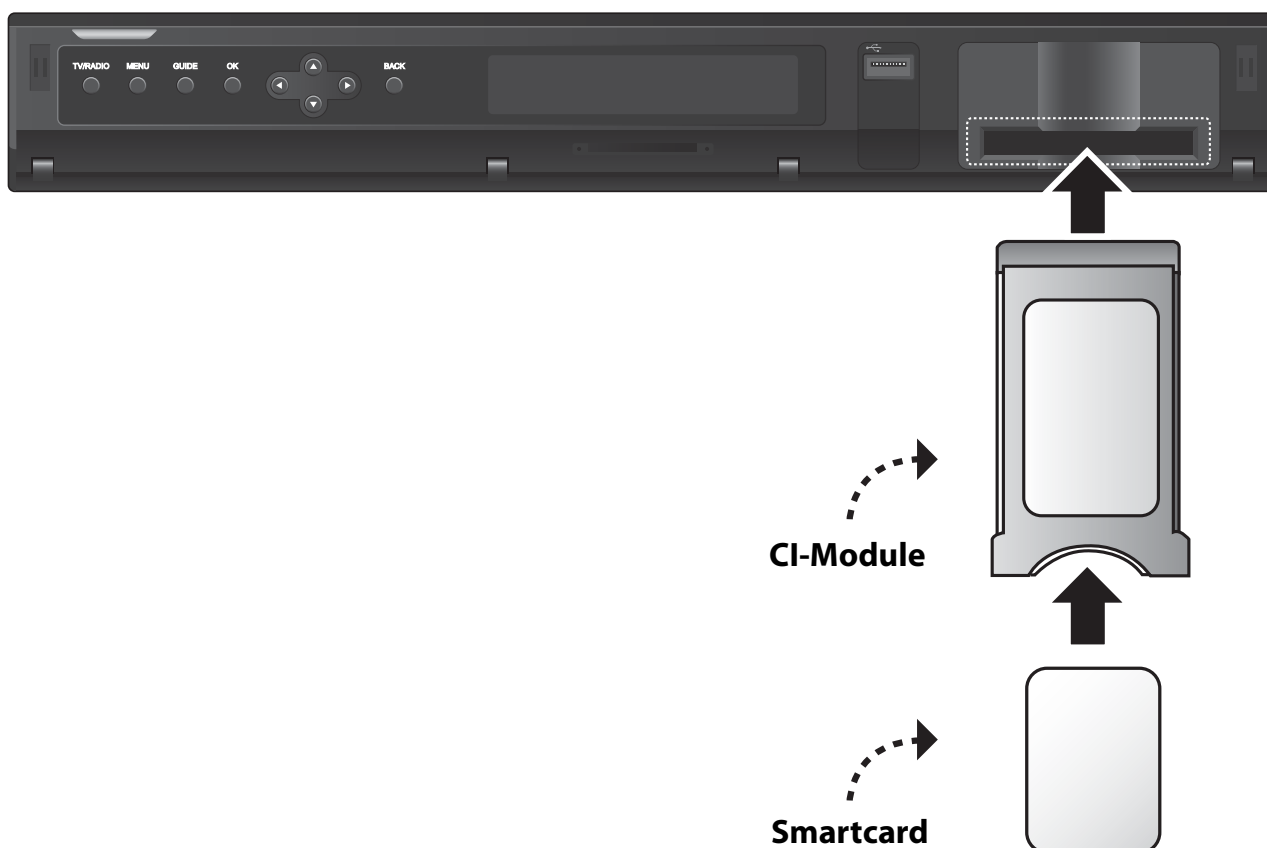

1. Before Using the Product

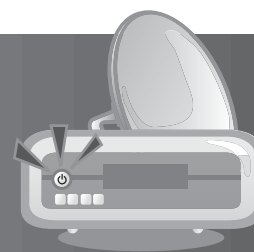

1.4 Rear Panel

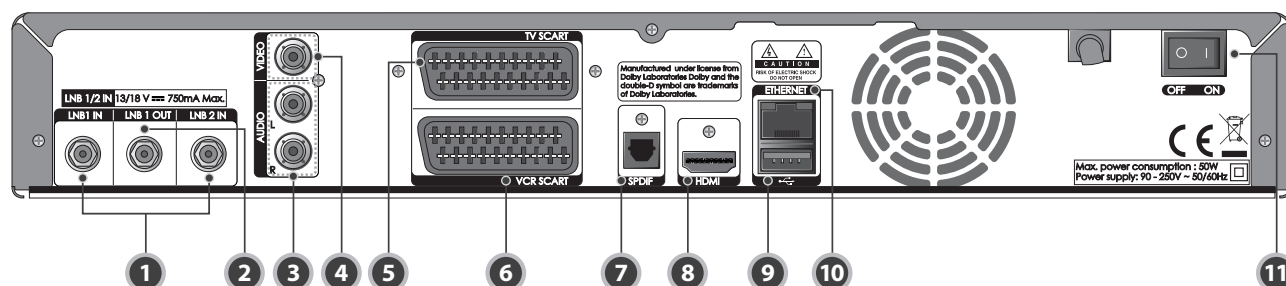

1. LNB 1 IN, LNB 2 IN

Connects a satellite antenna cable. Up to two cables can be connected.

2. LNB 1 OUT

Connects another digital satellite receiver.

3. AUDIO

Connects to the TV or VCR using an RCA cable.

4. VIDEO

Connects to the TV or VCR using an RCA cable.

5. TV SCART

Connects to the TV using a TV SCART cable.

6. VCR SCART

Connects to the VCR or DVD using a VCR SCART cable.

7. SPDIF

Connects to the audio system using an S/PDIF cable. (digital audio)

8. HDMI

Connects to the TV using an HDMI cable.

9. USB Port

Connect a USB Pen drive or external USB HDD (for archiving recordings, or transfer of MP3 or JPEG files).

10. ETHERNET

Ethernet port (for future use).

11. ON/OFF


Powers on/off.

Note:

- The rear panel of the product is subject to change without notice.
- The LNB ratings of LNB 1 and LNB 2 are different.


LNB 1 IN: Max. 13/18V 250mA, **LNB 2 IN:** Max. 13/18V 500mA

1. Before Using the Product

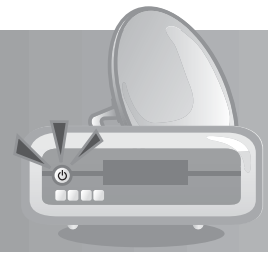

1.5 Remote Control

Note: The remote control of the product is subject to change without notice.

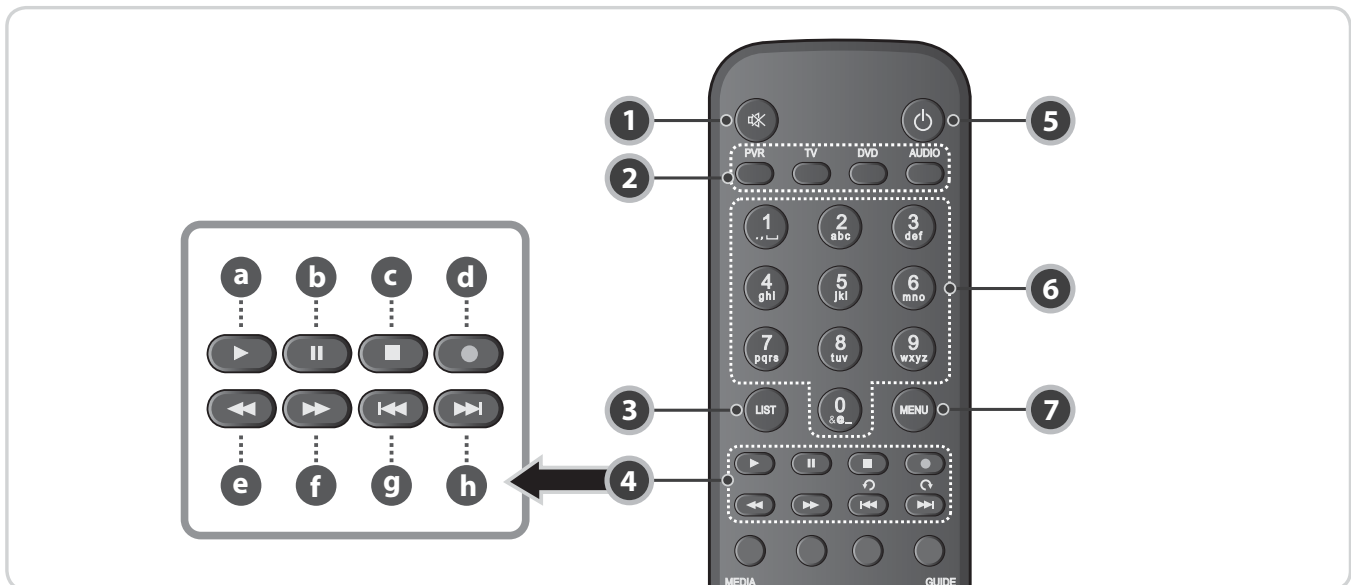

1. MUTE

Mutes or unmutes the audio temporarily.

2. PVR/TV/DVD/AUDIO

Changes the mode.

3. LIST

Display the channel list.

4. PLAYBACK CONTROL BUTTONS

a. PLAY

Plays at normal speed or resumes.

b. PAUSE

Pauses the live programme or recording.

c. STOP

Stops a recording or goes to the live programme.

d. RECORD

Records programme.

e. FAST BACKWARD

Rewinds at high speed. Each time you press this button, the rewind speed is increased.

f. FAST FORWARD

Fast forwards at high speed. Each time you press this button, the fast forward speed is increased.

g. PREVIOUS (REPLAY)

Goes to the previous scene.

h. NEXT (SKIP)

Goes to the next scene.

5. STANDBY

Switches between operation and standby modes.



6. NUMERIC(0-9) BUTTONS

Enters a TV/radio channel number or menu option number.

7. MENU

Displays the main menu.

1. Before Using the Product

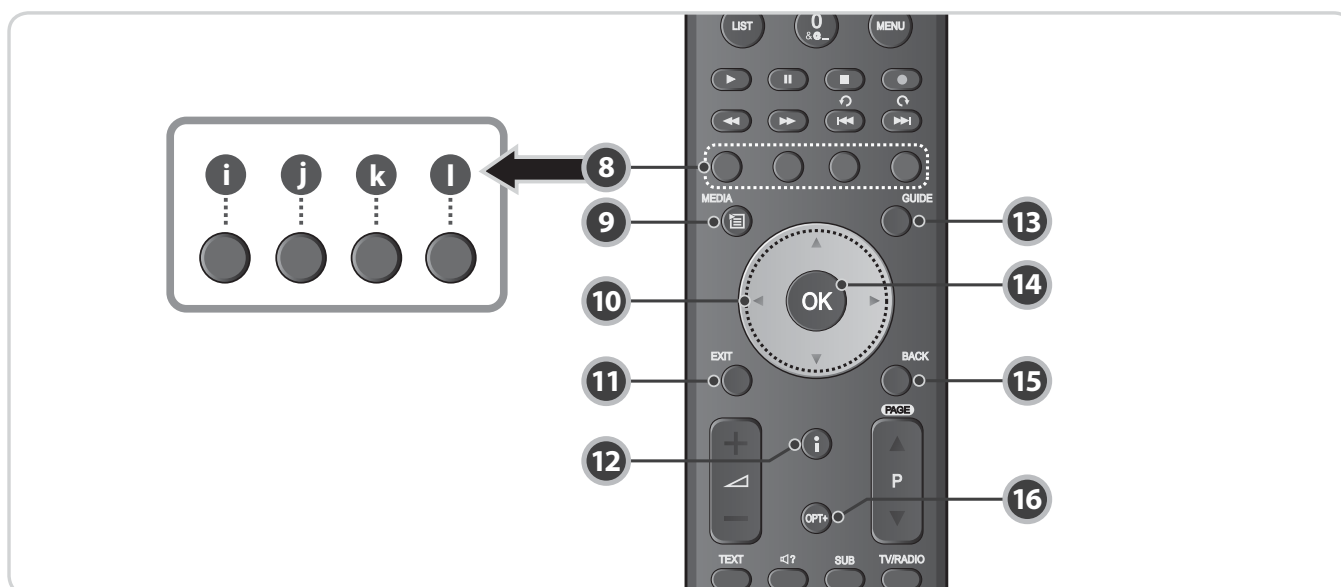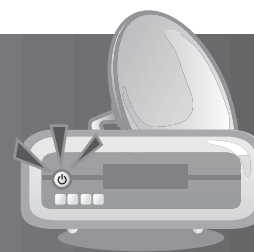

8. COLOUR BUTTONS(R/G/Y/B)

Select the colour keys for interactive applications.

i. RED

Displays the channel list in normal viewing mode.

j. GREEN

Displays the favourite channel list in normal viewing mode.

k. YELLOW

Displays the HD TV channel list in normal viewing mode.

l. BLUE

Displays the genre channel list in normal viewing mode.

9. MEDIA

Displays the media list.

10. ARROW BUTTONS

Changes the channel or moves the cursor up, down, left or right.

11. EXIT

Exits all On-Screen Display (OSD) screens.

12. i (INFORMATION)

Displays the channel and programme information.

13. GUIDE

Displays the programme guide.

14. OK

Selects a menu or confirms the selected operation.



15. BACK

Returns to the previous channel.

16. OPT+

Displays the channels attributes while watching a programme.

1. Before Using the Product

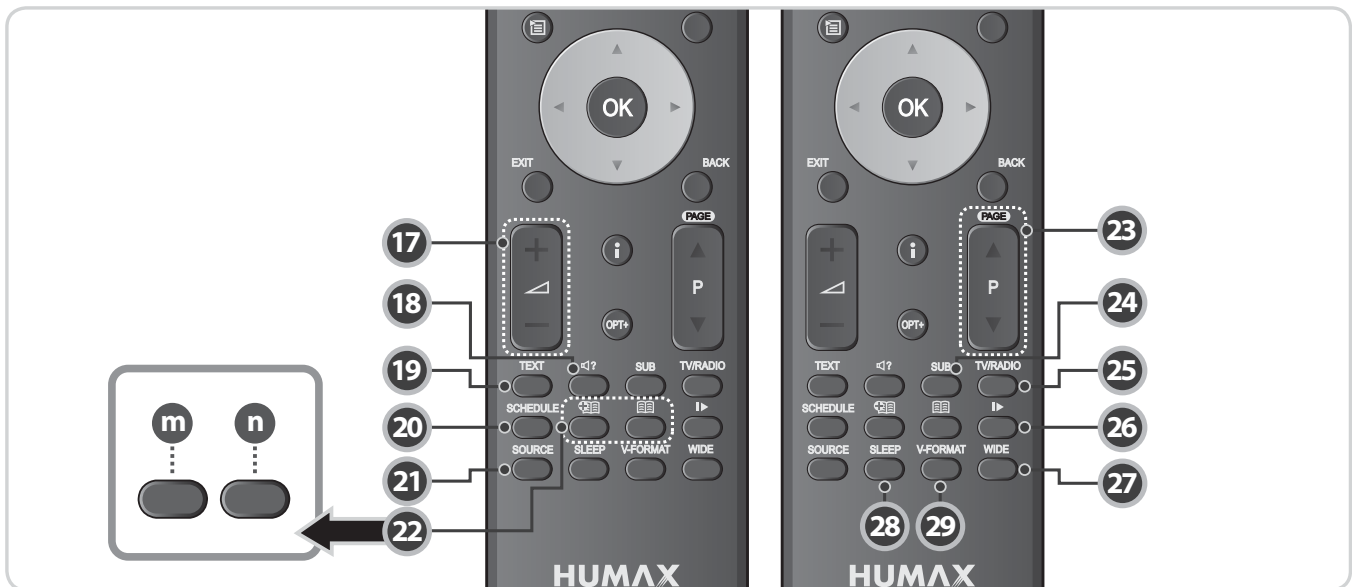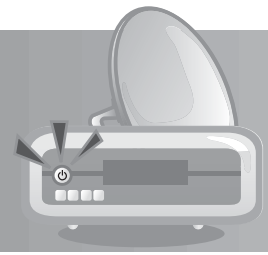

17. VOLUME

Adjusts the audio volume.

18. AUDIO

Displays the audio list.

19. TEXT

Enters the digital text service.

20. SCHEDULE

Displays the schedule in programme guide.

21. SOURCE

Controls the output of TV SCART.

22. BOOKMARK

m. ADD BOOKMARK

Saves the current viewing position as a bookmark during playback.

n. BOOKMARK LIST

Displays the list of saved viewing positions during playback.

23. P+/P-

Changes the channel or page.

24. SUB

Displays the subtitle language list.

25. TV/RADIO

Switches between TV and radio modes.

26. SLOW

Plays the programme in slow motion.

27. WIDE

Sets the display format.

28. SLEEP

Sets the sleep time.

29. V-FORMAT


Changes the resolution of video.

1. Before Using the Product




1.6 Remote Control Batteries

1. Press down the top of the battery cover and slide the cover off.
2. Insert the new batteries. Make sure the plus (+) ends meet the plus markings on the battery case.
3. Slide the cover back into place.

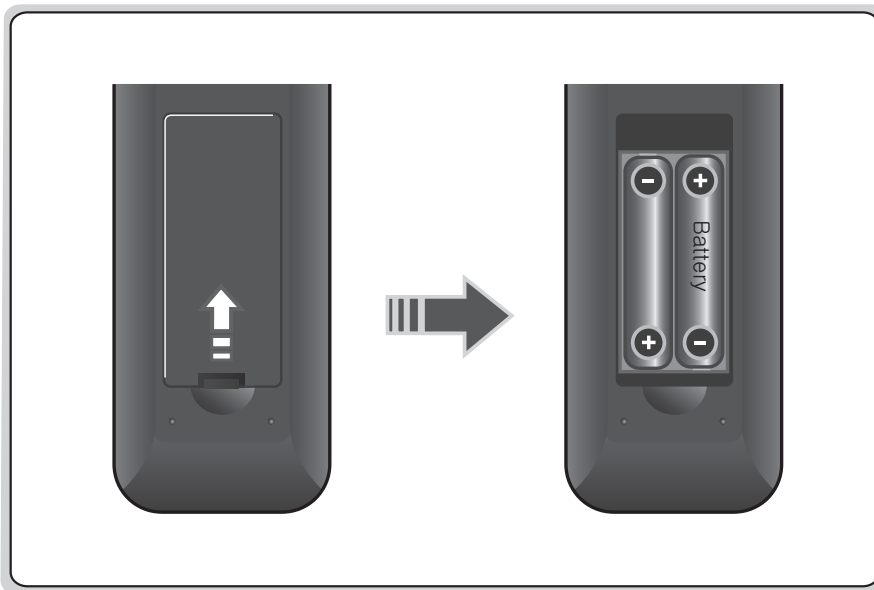

2. Connections

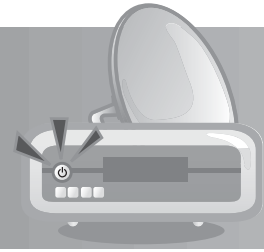

This chapter describes how to connect your product to the TV with the particular equipments for gaining optimum signal quality. The product provides various interfaces to connect to the TV, VCR or other devices. Select the most appropriate procedure depending on the equipment you have.

Note: If you encounter any problems setting up your product, please contact your local retailer or Humax Customer Helpline.

2.1 Connecting the Antenna

You can select one of the following antenna connections depending on the equipment you have. The product has two antenna modes according to setting. Change this to the first option.


1. Connecting Two Satellite Cables

Connect the two cables from your satellite dish to the LNB 1 IN and LNB 2 IN connections on the rear of the product.

Note:

Connecting with 2 cables from the same satellite dish will allow you to:

- View and Record different channels
- Record 2 channels at the same time

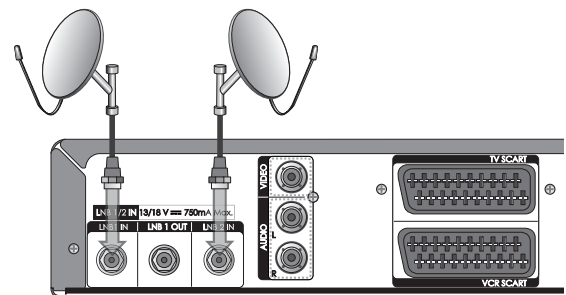


2. Single Cable Using Loop Through

1. Connect the cable from your satellite dish to LNB 1.
2. Connect a cable from the LNB 1 OUT to the LNB 2 IN connection.

Note:

- If connecting with a single cable using loop through you will have limited functionality. While recording a channel you will be limited to the second channel you can view. Visit www.humaxdigital.com/freesat for further information.
- When using a Motorised System, SCD Antenna (also known as Unicable), or SMATV please connect the cable to LNB 1 IN.

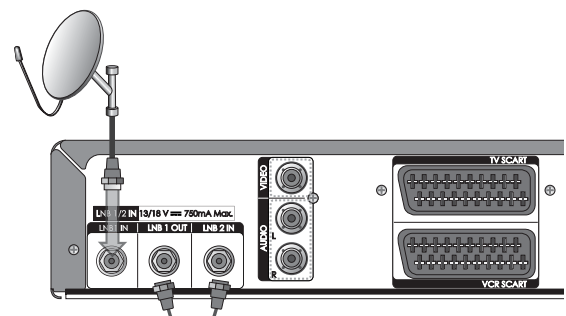


2. Connections



2.2 Connecting the TV and VCR

1. Using HDMI Cable


The HDMI connection, a special all-digital interface that provides the highest picture quality, is suitable for Digital TV. If the TV has a HDMI input, connect the product & TV using a HDMI cable as follows.

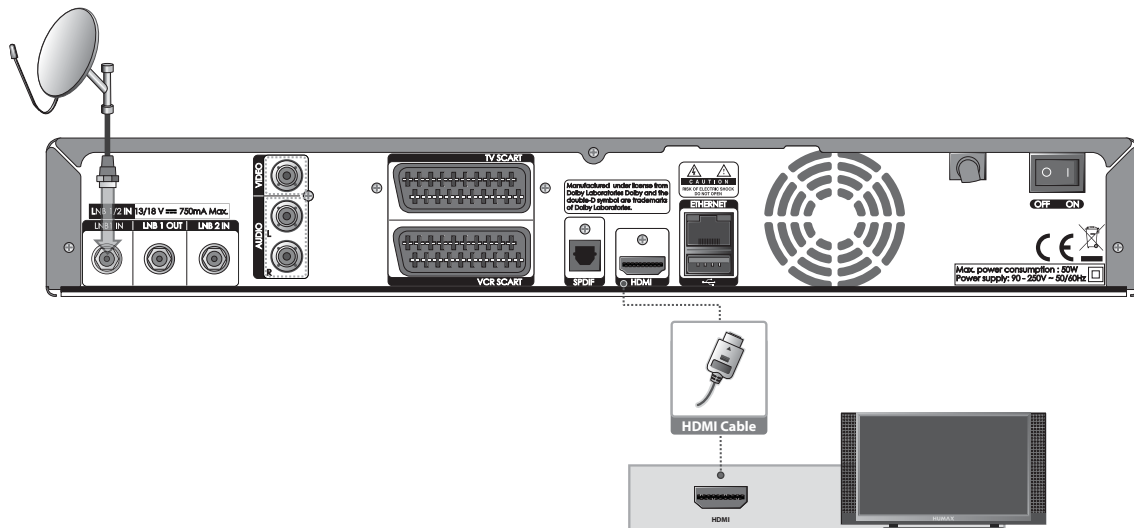

Important:

- When connecting the product to a TV with a HDMI cable no other connection is required.
- If you connect using a HDMI cable please switch your TV set to the correct channel/input for HDMI (refer to your TVs manual for details).

2. Connections

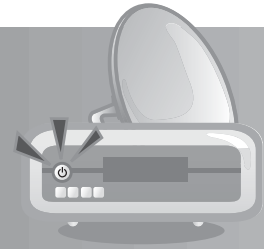


2. Using DVI Connector

The DVI connection using an HDMI to DVI converter is suitable for Digital TV. If the TV has the DVI input connector only, connect the product to the TV with an HDMI cable using an HDMI to DVI converter as follows.


When equipped with an A/V receiver,

1. Connect one end of the HDMI cable to the HDMI input on the product and the other end to the HDMI to DVI converter.
2. Connect the DVI converter to the TV.
3. Connect the product and the Dolby Digital decoder using an S/PDIF cable.

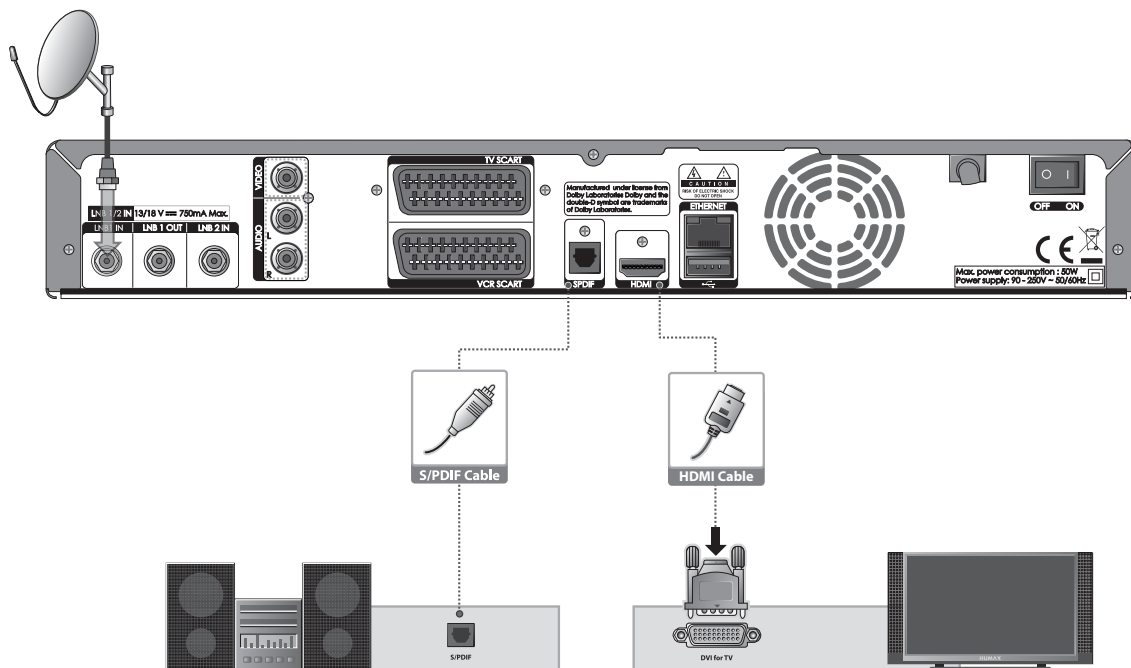

Important: If you connect using a DVI cable please switch your TV set to the correct channel/input for the HDMI (refer to your TV's manual for details).

2. Connections

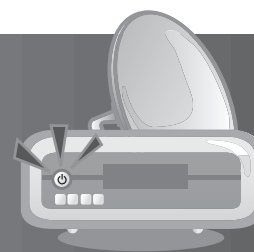


When there is no A/V receiver available,

1. Connect the product and the TV using an RCA cable.
2. Connect one end of the HDMI cable to the HDMI input on the product and the other end to the HDMI to DVI converter.
3. Connect the DVI converter to the TV.


Note: You can also connect the product to the TV using the **3.5 Stereo Jack Cable to 2 RCA Y Cable**.

Caution: DO NOT CONNECT TO HEAD PHONE CONNECTOR ON TV!

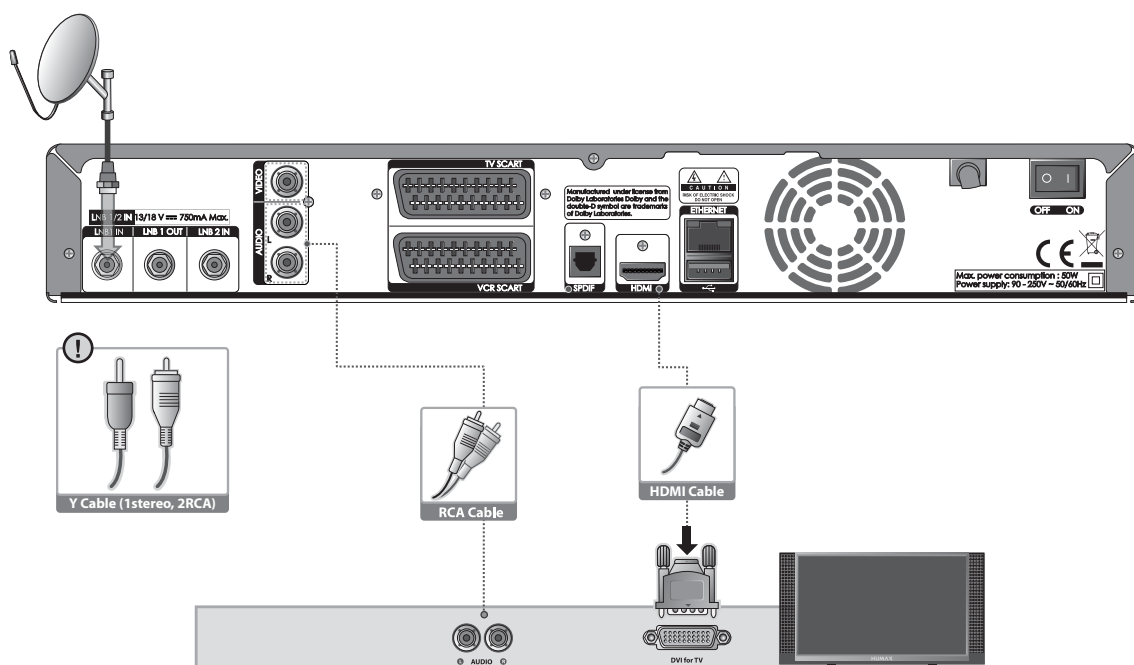

Important: If you connect using a DVI cable please switch your TV set to the correct channel/input for the DVI connection (refer to your TV's manual for details).


2. Connections

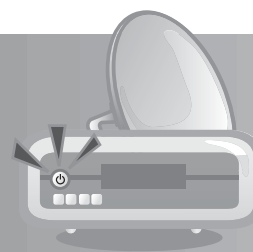

3. Using SCART Cable


A SCART cable connection is recommended for analogue TV or VCR.

1. Connect the product and the TV using a SCART cable.
2. Connect the product and the VCR using a SCART cable.

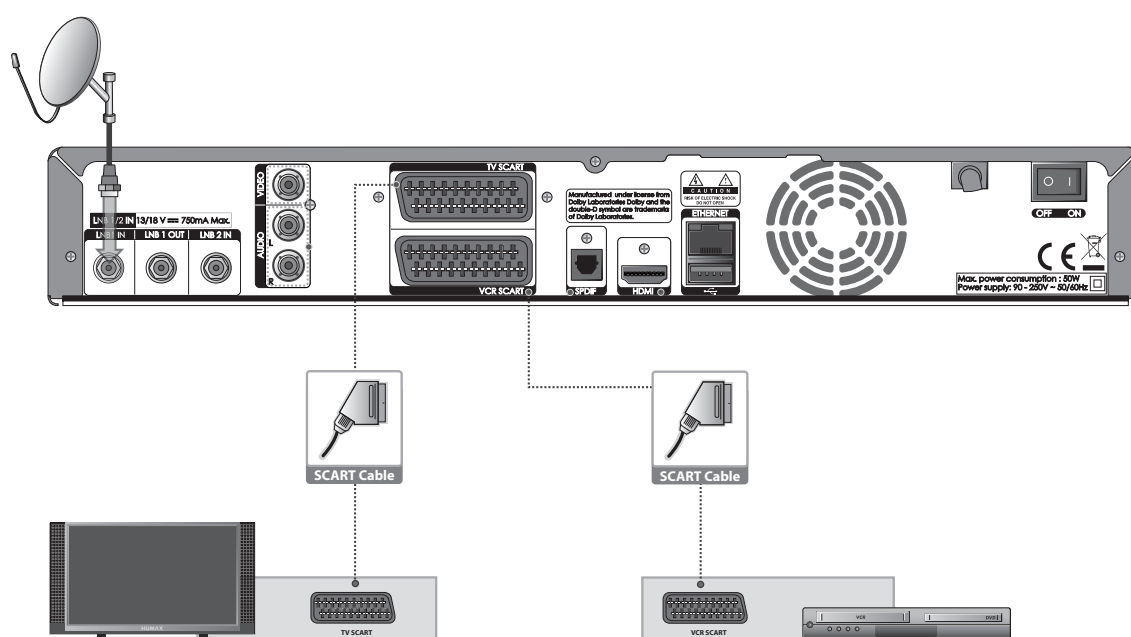


Important: If you connect using a SCART cable please switch your TV set to the correct channel/input for the scart connection (refer to your TV's manual for details).

2. Connections

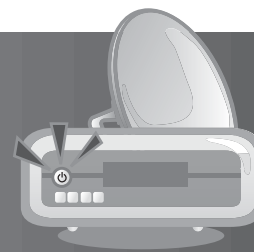

2.3 Powering On

1. Connect the power cord of the product to a wall outlet.
2. Ensure the ON/OFF switch at the rear of the product is switched to ON.
3. Power on by pressing the **STANDBY** button on the remote control or the **STANDBY** button at the front of the product.

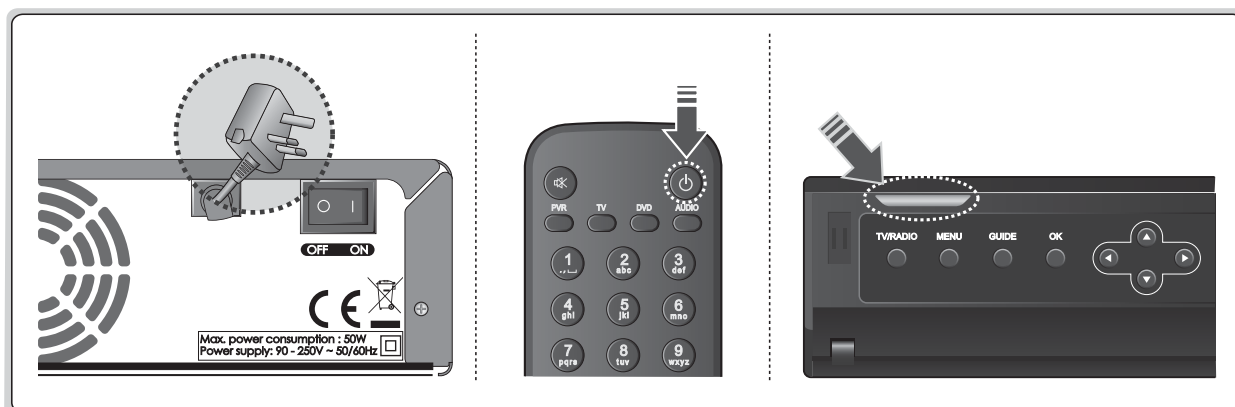

3. First Installation



When powering on your product for the first time after purchase, the First Time Installation will appear. If nothing appears on your TV set please check the following:

- Your TV set is switched ON.
- Please check that the cables between the TV and product are connected correctly.
- Your TV set is switched to the correct channel/input for the connection method/cable you are using.

Tip:

- The default password is **0000**.
- If you have forgotten your password, please contact Humax Customer Support.

3.1 User Settings

User Settings allows you to set the language, screen ratio, display format and resolution.

Select the value for **Preferred Language**, **Screen Ratio**, **Display Format** and **Resolution**.

Select **Next** and press the **OK** button.

Note: Not all resolutions may work (or be available) with the type of connection (or TV Set) your are using. If you experience problems please select a different resolution.



3.2 freesat detection

1. Confirm the satellite cable(s) are connected and press the **OK** button.
2. Please wait until the freesat detection is complete.
3. When the freesat signal is detected, press the **OK** button to go to the next step.

Note:

- If the freesat detection fails please check that the satellite cable(s) are connected correctly.
- For further help see the **14. Trouble Shooting** section of the manual.

Warning: To prevent electric shock, always POWER OFF all devices during setting up the connection.



3. First Installation



3.3 Postcode

Enter your full postcode (including a space) using the **NUMERIC(0-9)** buttons on the remote control. To use on-screen keyboard, press the **OPT+** button. Press the **1** button to enter a space. Press **OK** after entering your postcode.

Note: Use the left arrow on the remote to delete an incorrect entry.

If the **Invalid Postcode** message appears please re-enter your postcode.

If your postcode is correct then see the **14. Trouble Shooting** section.



3.4 Search Channels

Search Channels will activate and the results will appear.

To stop the channel search, select **Stop** and press the **OK** button. Select **Save** and press the **OK** button to go to the next step.



3. First Installation



3.5 Result

After all setting is complete, you can view the result screen.

Select **Finish** and press the **OK** button to complete the first installation.



3.6 Installation Checklist

Before using the product, please make sure that you have completed the following steps.

Step	Page	Done?
Is the antenna connected correctly?	GB15	
Is the product connected to your TV?	GB16	
Is the power cord plugged in the wall outlet?	GB20	
Is the product in operation mode (not Standby mode)?	GB20	
Have you performed channel search in the first installation?	GB21	

Note: If you exit the first installation without fully completing the channel searching procedure, you may not have all of the channels available. Please select the **Freesat Tune** option in the **Setup** menu to search for the channels again.

For information on the latest channels from freesat visit www.freesat.co.uk.

4. Basic Operation



This chapter describes the basic functions the product provides such as switching channel, volume control and other common features.

4.1 Switching Channel

You can change channels by:

- Pressing the **P-/P+** buttons
- Entering the channel number using the **NUMERIC(0-9)** buttons.
Press the **TV/RADIO** button to switch between TV and radio channels.

Note: You can also change channels using the Channel list (**LIST**) or Programme Guide (**GUIDE**).

4.2 Volume Control

You can adjust the audio volume. Press the **V-/V+** button to adjust the audio volume. Press the **MUTE** button to stop the audio temporarily.

Note: The mute function remains set while you switch channels.



4.3 Resolution

You can set the resolution of the screen. Press the **V-FORMAT** button while watching a programme. The current resolution will be displayed. Each time you press the **V-FORMAT** button, the resolution changes in the following sequence: 576i→576p→720p→1080i→Original.

Note: Not all resolutions may work (or be available) with the type of connection (or TV Set) your are using. If you experience problems please select a different resolution.



4. Basic Operation



4.4 Wide

You can set the display format.

Press the **WIDE** button while watching a programme to change the display format.

Each time you press the **WIDE** button, the display format changes.

Note: For more information about display format, refer to **7.1.7 Display Format**.




4.5 Audio

If multiple audio languages/options are available the you can select the one you require from the audio list.

1. Press the **AUDIO** button.
2. Use the arrows to select the audio option you require.
3. Select the audio direction (left, right, stereo) using the ◀/▶ buttons.
4. Press **EXIT** to close.

Note:

- You can also change between the audio options by pressing the **AUDIO** button multiple times.
- For Dolby Digital broadcasts it is not possible to change the direction.

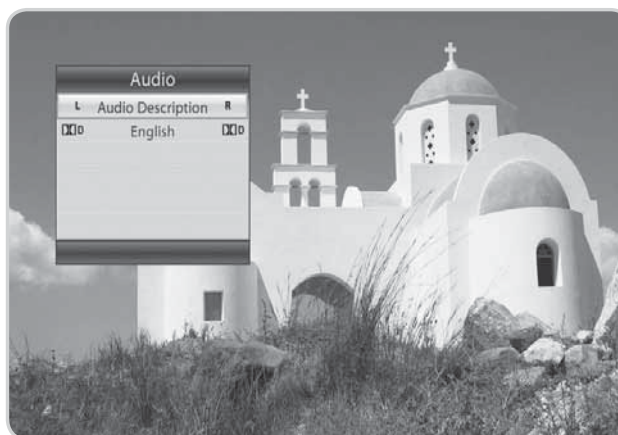

4. Basic Operation




4.6 Subtitle

If multiple subtitle languages/options are available you can select the one you require from the subtitle list.

1. Press the **SUB** button.
2. Use the arrows to select the subtitles you require and press **OK**.

Note:

- You can also change between the subtitle options by pressing the **SUB** button multiple times.
- If no subtitles are available a message will inform you on screen; not all programmes broadcast will contain subtitle information.

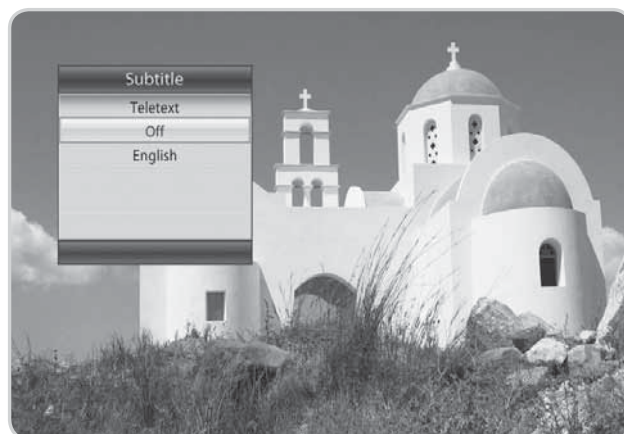

4.7 Text and Interactive Services

If your chosen channel has digital teletext features, you can access them. Teletext services often load automatically shortly after the digital teletext window is displayed. In which case, simply follow the on screen instructions (press color buttons).

1. Press the **TEXT** button to access digital teletext.
2. Press the **TEXT** button again to return to normal viewing.
3. Press the **P+/P-** button to exit this service.

Note:

- Interactive service (MHEG) is not available when subtitles are displayed. The channel and volume cannot be controlled using the arrow buttons in interactive mode.
- For information regarding the Digital Text or interactive services available please contact the broadcaster. Not all channels on freesat will provide these services.

4. Basic Operation



4.8 Programme Information (i-plate)


The i-plate is always displayed for a certain period of time whenever you switch channels. You can view the programme information by pressing the **i** button while watching a programme. Press the **EXIT** button to hide the i-plate.

After switching to a channel, press the **◀/▶** button to display navigation mode. Press the **◀/▶** button to view the previous/next programme information. Press the **▲/▼** button to view the programme information of other channels.

1. General Information

The general information is displayed on the screen as the following.

Note: If programme information is not available on all channels please access the **GUIDE** to allow the information to download fully.

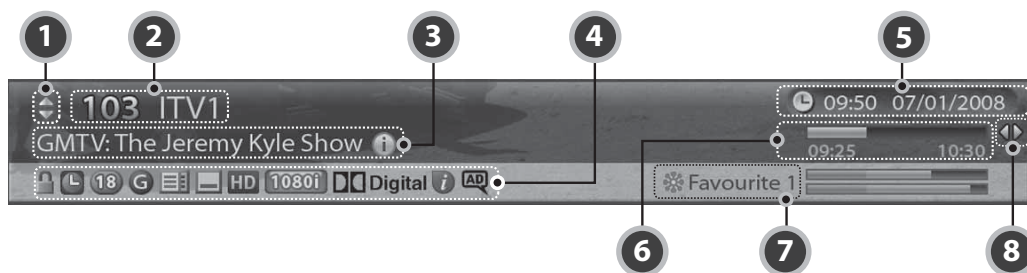

1. Next/previous channel
2. Channel number and name
3. Programme name
4. Icons

- Displayed only when the channel is a locked channel.
- Displayed only if the programme is reserved for watching.
- Represents parental level. Indicates the minimum level of age for viewing the programme.
- Displayed only when there is any teletext information.
- Displayed only when subtitle information is available.
- Displayed only when the channel provides HD programmes.
- Displays the resolution of the current programme.
- Displayed only when the programme is broadcast in Dolby Digital.
- Displayed only when audio description is available.
- Displayed only when the interactive service is available.
- Displayed only when there is any guidance information.

4. Basic Operation



5. Current time & date
6. Programme broadcasting time and progress bar: Displays programme playing time and progress bar.
7. Group name: Displays the group the channel belongs to.
8. Previous/Next programme information: Displayed if previous/next programme information is provided. Press the ◀/▶ button to display previous/next programme information.

Note: If there is no programme information available, programme information is not displayed.

2. Detailed Programme Information

You can see the detailed information about the current programme.

Press the **i** button when the i-plate is displayed to view detailed information. Press the **i** button once more to hide the i-plate.

Note: If the detailed programme information is over one page, use the ▲/▼ button to move to the previous or next page.

4.9 Option List

You can view and confirm detailed information about the current channel and change the information if necessary.

Tip: The default password is **0000**.

1. Press the **OPT+** button.
2. To add the channel to the favourite group, select **Favourite Group**. Select the group using the ▲/▼ button and press the **OK** button.
3. To lock the channel, select **Lock** and press the **OK** button.
4. To delete the channel, select **Delete** and press the **OK** button. A popup will appear. Select **Yes** and press the **OK** button.
5. To rename the channel in non-freesat channel mode, select **Rename** and press the **OK** button. Enter the name directly using the keyboard on the screen. Press the **YELLOW** button to complete.



Note: In non-freesat channel mode, you cannot add the channel to the favourite group.

5. Channel List



This chapter will help you use the various channel lists available. To display the channel list press the **LIST** button while viewing a programme.

Four types of channel lists are available for quick and easy navigation.

My TV (RED)	The list of all TV channels. The list of all radio channels. The list of the recently viewed channels.
Favourite (GREEN)	The list of the favourite channels in five groups.
HD TV (YELLOW)	The list of all HD TV channels.
Genre (BLUE)	The list of channels including the sports, drama, movie and other genres.

Note:

- Press the **EXIT** button to remove the channels list.
- The favourite channel list will only be available after favourites groups have been setup.
- To sort the channels numerically or alphabetically press **i** button while the channel list is on screen.

5.1 My TV List

My TV List is the list of all channels available including TV, radio and recent channels.

1. Press the **LIST** button while watching a programme to display the channel list.
2. Press the **RED** button to display **My TV** if not already selected.
3. Select the channel you wish to view and press the **OK** button. You can also enter the channel number using the **NUMERIC(0-9)** buttons.
4. Press the **RED** button again and select a sub group using the **◀/▶** button.
5. Select a channel and press the **OPT+** button. To add the channel to the favourite group, select **Favourite Group**. Select the group using the **◀/▶** button and press the **OK** button. To lock the channel, select **Lock** and press the **OK** button. To delete the channel, select **Delete** and press the **OK** button. A popup will appear. Select **Yes** and press the **OK** button.



Note: You can switch between TV and radio by simply pressing the **TV/RADIO** button.

5. Channel List



5.2 Favourite List

Favourite List is the list of the favourite channels you can select yourself from the entire channel list. There are five favourite groups in total.

1. Press the **LIST** button while watching a programme.
2. Press the **GREEN** button to display the list of favourite groups.
3. Press the **GREEN** button again and select a subgroup using the ◀/▶ button.



5.3 HD TV List

HD TV List is the list of all HD TV channels.

1. Press the **LIST** button while watching a programme.
2. Press the **YELLOW** button to display the HD TV list.



5. Channel List



5.4 Genre List

Genre List allows you to view the channels by genre (e.g. Movies, Sports, Entertainment, etc).

1. Press the **LIST** button while watching a programme.
2. Press the **BLUE** button to display the genre list.
3. Press the **BLUE** button again and select a sub group using the **◀/▶** button.



5.5 Non-freesat Channel List

Four types of channel lists are provided for quick and easy channel search in the non-freesat channel list.

My TV (RED)	The list of all TV channels. The list of all radio channels. The list of HD TV channels. The list of the recently viewed channels.
Favourite (GREEN)	The list of the most viewed channels.
Satellite (YELLOW)	The lists of channels classified by satellites.
Scramble (BLUE)	The lists of channels classified by CAS types.

6. TV Guide



The **TV GUIDE** displays the programmes for the next 7 days sent by the broadcaster.

Note: Press the **GUIDE** or **EXIT** button to exit the TV guide screen.


6.1 Using TV Guide

You can view the programme information of all channels in time and date order.

1. Press the **GUIDE** button.
2. Select the channel genre using the **▲/▼** button and press the **OK** button.
3. Press the **RED** button.

1. Table Guide

1. Move to the previous/next programme within the same channel using the **◀/▶** button.
2. Move to another channel using the **▲/▼** button. If the contents are more than one page, use the **P-/P+** button to skip to the next page. Enter the number of the channel you wish to move using the **NUMERIC(0-9)** buttons.
3. Jump back/ahead two hours using the **FAST BACKWARD/FAST FORWARD** button.
4. Move to the previous/next day using the **PREVIOUS/NEXT** button.
5. If the programme is currently on press the **OK** button to view the programme.
6. If the programme is on in the future you can reserve it to view or record. Press the **OK** button on the highlighted programme and select from the following:

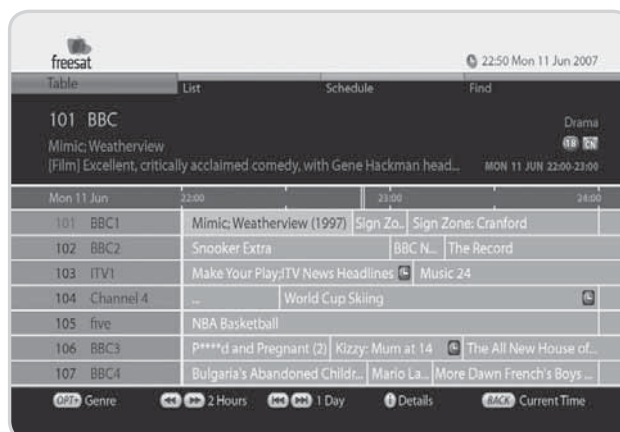

Record Whole Series	This option will appear if the programme is in a series; select this option to record this programme and all future programmes within the same series.
Record One Programme	Select this option to record this programme only.
Watch	Select this option is you wish to view this programme (Not record).

7. Select a reserved programme and press the **OK** button to cancel the reservation.
8. Press the **OPT+** button to display the channel genre and choose another genre.



2. Instant Reservation

1. Select a programme in the EPG and press the **RECORD** button on the remote. The selected programme only will be reserved to record.
2. To cancel the reservation, select the programme and press the **STOP** button. The reservation will be cancelled immediately.

Note:

- You cannot reserve new programmes when the HDD is already full. Please delete another recorded programme.
- Press the **i** button to view the programme information.
- In non-freesat mode, you cannot select the channel genre. Select the group using the **OPT+** button.
- You cannot reserve the programmes in non-freesat mode.

6. TV Guide



6.2 List Guide

1. Press the **GREEN** button.
2. You can view the programme information for the next 7 days. The features are similar as in **6.1 Table Guide**.

Note: Press the **OPT+** button to go to channel genre.

The screenshot shows the Freesat TV Guide interface. At the top, it displays 'freesat' and the date '15:12 THU 27 MAR 2008'. Below this, there are tabs for 'Table', 'List', 'Schedule', and 'Find'. The main content area shows '110 BBC HD' and 'All Channels HD'. Below this, it says 'BBC HD Preview' and 'Preview of upcoming programmes in HD from the BBC - live s...'. The main part of the screen is a table of programmes for 'THU 27 MAR':

Channel	Programme	Date	Time	Programme
103	ITV1 LONDON			
108	BBC THREE			
109	BBC FOUR	WED 26/03		
110	BBC HD	Today	00:00	BBC HD Preview
112	ITV2	FRI 28/03	20:00	Holby Blue
113	ITV2+1	SAT 29/03	21:00	That Mitchell and Webb Look
114	ITV3	SUN 30/03	21:30	Jam and Jerusalem

At the bottom, there is a 'Genre' button.

6.3 Schedule

Schedule displays the list of the programmes you have reserved. You can modify, delete or make manual reservations.

1. Press the **YELLOW** button to display the schedule of reservations.
2. Select a reservation and press the **OPT+** button to delete the reservation.

Note:

- Press the **LIST** button to sort the list in time or alphabetical order.
- You cannot reserve programmes in non-freesat mode.

The screenshot shows the Freesat Schedule interface. At the top, it displays 'freesat' and the date '22:50 Mon 11 Jun 2007'. Below this, there are tabs for 'Table', 'List', 'Schedule', and 'Find'. The main content area shows '41 Boomerang' and 'Dastardly and Muttley'. Below this, it says 'MON 11 JUN 22:00-23:00'. The main part of the screen is a table of reservations for 'Schedule List':

Date	Time	Programme	Channel
26/04	13:30-13:55	Breakfast	11/199
26/04	14:00-14:25	Homes Under the Hammer; BBC News; Weather	
26/04	14:30-16:15	To Buy or Not to Buy	
26/04	17:00-17:30	Cash in the Attic; BBC News; Weather	

At the bottom, there are buttons for 'Edit', 'Delete', 'Sort', and 'Details'.

1. Editing Reservations

1. Select a reservation you want to edit and press the **YELLOW** button. The reservation popup will appear.
2. Select **Channel** and press the **OK** button to display the channel list. Select the channel.
3. Select **Date** and press the **OK** button to view the calendar. Select the date.
4. Select **Start Time** or **End Time** and enter the time using the **NUMERIC(0-9)** buttons.
5. Select **Repeat** and change the repeat frequency using the **◀/▶** button.
6. Select **Mode** and select **Record** or **Watch**.
7. Select **OK** and press the **OK** button.

6. TV Guide



2. New Reservation

1. Select the blank reservation at the bottom of the schedule list and press the **OK** button.
2. The reservation popup will appear. Enter the channel number, date, start/end time, repeat frequency and mode and then press the **OK** button.


Note:

- Reservations for deleted channels or past programmes are automatically deleted.
- If the channel number has changed the reservation will need to be setup again.

6.4 Find

Find allows you to search for programmes by entering a keyword (part or all of the programme name) and selecting the genre, time and day of the programme.

1. Press the **BLUE** button.
2. Enter the keyword, genre, time & day of the programme and select **Search** and then press the **OK** button.
3. The search result of the entered values will appear.
4. To reserve a programme, select a future programme and press the **OK** button.

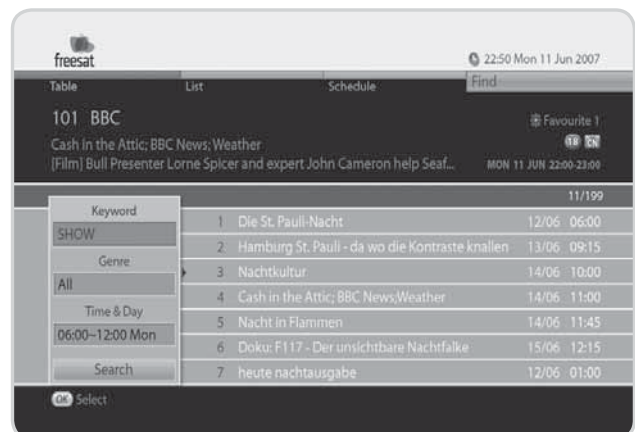

1. Search by Keyword

1. Press the **OK** button while the cursor is on **Keyword**.
2. **Keyword List** will appear. Select **<NEW>** and press the **OK** button to enter a new keyword.
3. A keyboard will appear. Enter the keyword.
4. Press the **YELLOW** button to complete.

2. Search by Genre

1. Press the **OK** button while the cursor is on **Genre**.
2. The list of genres will appear. Select the genres and press the **OK** button. You can select up to two genres.

3. Search by Time and Day

1. Press the **OK** button while the cursor is on **Time & Day**.
2. The time & day popup will appear. Select the time and day using the **OK** or **◀/▶** button.
3. Select **OK** and press the **OK** button.

GB36

7. Settings



In this chapter you can set options for TV Setup, Language, Time, Parental Control, Recording and Other.

Note: Pressing the **EXIT** button will save any changes you have made automatically and return you to the previous menu. Press the **MENU** button to exit all the menus.

7.1 TV Setup

You can configure the audio and video output settings.

1. Press the **MENU** button.
2. Select **Settings** using the **▲/▼** button and press the **OK** button.
3. Select **TV Setup** using the **▲/▼** button and press the **OK** button.



1. TV SCART

You can select the TV SCART output option.

1. Select **TV SCART** and press the **OK** button.
2. Select **RGB**, **CVBS**, or **S-Video** and press the **OK** button.



7. Settings



2. VCR SCART

You can select the VCR SCART output option.

1. Select **VCR SCART**.
2. Select **CVBS** or **S-Video** using the **OK** or **◀/▶** button.

3. Audio

You can select the audio output option.

1. Select **Audio**.
2. Select **Stereo** or **Mono** using the **OK** or **◀/▶** button.

4. Dolby Digital

You can set Dolby Digital soundtrack option. If you select **On**, the Dolby Digital audio will be selected automatically (when broadcast) and outputted via S/PDIF.

1. Select **Dolby Digital**.
2. Select **On** or **Off** using the **OK** or **◀/▶** button.

5. Lip-Sync

You can adjust the sound difference of audio and video.

1. Select **Lip-Sync** and press the **OK** or **▶** button.
2. Adjust the sync using the **◀/▶** button.
3. Press the **BACK** button to complete.

Note: Lip-Sync will be applied to all channels when this option is adjusted.

6. Screen Ratio

You can select the screen ratio option.

1. Select **Screen Ratio** and press the **OK** button.
2. Select **16:9 – Widescreen TV** or **4:3 – Traditional TV** using the **OK** or **◀/▶** button.

7. Settings



7. Display Format

You can select the display format according to the screen ratio.

1. Select **Display Format** and press the **OK** button.
2. When choosing **16:9 – Widescreen TV** as screen ratio, select among **Auto, 4:3 Pillar Box, 14:9 Pillar Box, 16:9 Centre Cut Out, Anamorphic** and press the **OK** button.
3. When choosing **4:3 – Traditional TV** as screen ratio, select among **16:9 Letterbox, 14:9 Letterbox, Centre Cut Out, Auto** and press the **OK** button.

8. HDCP Default

You can enable or disable HD copy protection for programmes with no copy protection sent by the broadcaster.

1. Select **HDCP Default** and press the **OK** button.
2. Select **Enable** or **Disable** using the **OK** or **◀/▶** button.

7. Settings



7.2 Language

Language enables you to set the basic language and subtitle options.

1. Press the **MENU** button.
2. Select **Settings** using the ▲/▼ button and press the **OK** button.
3. Select **Language** using the ▲/▼ button and press the **OK** button.



1. Preferred Language

Preferred Language allows you to choose from the languages available.

1. Select **Preferred Language** and press the **OK** button.
2. Select the language you want and press the **OK** button.

2. Subtitle Display

Subtitle Display allows you to enable the subtitles to appear automatically if they are provided by the broadcaster.

1. Select **Subtitle Display**.
2. Select **Enable** or **Disable** using the **OK** or ◀/▶ button.

3. Subtitle Font

Subtitle Font enables you to select the font of the subtitle.

1. Select **Subtitle Font**.
2. Select **Variable** or **Fixed** using the **OK** or ◀/▶ button.

Variable	Uses the horizontally variable subtitle font of the on-screen display.
Fixed	Uses the fixed subtitle font as in TEXT.

7. Settings



4. Audio Description

Audio description allows the user to select the narration of onscreen visuals, which is used for visually impaired viewers. Setting the **Audio Description** option to **Enable** will automatically select the **Audio Description** option when you change to a channel.

1. Select **Audio Description**.
2. Select **Enable** or **Disable** using the **OK** or **◀/▶** button.

Note: Not all channels/programmes will provide Audio Description; for further information please contact the broadcaster.

7.3 Time

Time allows you to set the time you want the product to turn ON (Wakeup) or OFF (Sleep) each day.

1. Press the **MENU** button.
2. Select **Settings** using the **▲/▼** button and press the **OK** button.
3. Select **Time** using the **▲/▼** button and press the **OK** button.



1. Power ON

You can set the time the product turns on automatically.

1. Select **Power ON** and press the **▶** button.
2. Enter the powering on time using the **NUMERIC(0-9)** buttons or select **Disable** using the **◀/▶** button.

2. Power On Channel

You can select a channel you want the product to turn ON to each day.

1. Select **Power On Channel** and press the **OK** button to display the channel list.
2. Select the channel and press the **OK** button.

3. Power OFF

You can select the time the product turns off automatically.

1. Select **Power OFF** and press the **▶** button.
2. Enter the powering off time using the **NUMERIC(0-9)** buttons or select **Disable** using the **◀/▶** button.

7. Settings



7.4 Parental Control

Parental Control allows you to set password control for live or recorded content, change the password, and lock the setup menu.

Tip: The default password is **0000**.

1. Press the **MENU** button.
2. Select **Settings** using the **▲/▼** button and press the **OK** button.
3. Select **Parental Control** using the **▲/▼** button and press the **OK** button.
4. You will be prompted to enter your password. Enter the password using the **NUMERIC(0-9)** buttons.



1. Guidance Policy

Enabling the **Guidance Policy** option will mean any programmes (or recordings) that have guidance information will require the password to be entered to view them. The guidance information is sent by the broadcasters for some programmes.

1. Select **Guidance Policy** and press the **OK** button.
2. Select **Enable** or **Disable** using the **OK** or **◀/▶** button.

Note: Guidance information is only available in freesat mode.

2. Age Limit

Age Limit enables you to place certain restrictions on the viewers by setting age limits. A password must be entered to view the content.

1. Select **Age Limit** and press the **OK** button.
2. Select the age limit you wish to set.

Note: Age Limit is only available in non-freesat mode and will require the age classification information to be sent by the broadcasters.

7. Settings



3. Change Password

Change Password allows you to change the current password.

1. Select **Change Password** and press the **OK** button.
2. Enter the password in **New Password** using the **NUMERIC(0-9)** buttons.
3. Enter the password again in **Verify Password** to confirm.

4. Installation Lock

Installation Lock allows you to block access to the setup menu; the password will be required to enter the menu when this option is enabled.

1. Select **Installation Lock**.
2. Select **Enable** or **Disable** using the **OK** or **◀/▶** button.

7. Settings



7.5 Recording

Recording allows you to set the recordings auto-padding, and the settings for the instant replay and skip forward buttons.

1. Press the **MENU** button.
2. Select **Settings** using the **▲/▼** button and press the **OK** button.
3. Select **Recording** using the **▲/▼** button and press the **OK** button.

Note:

- On Time - the broadcasters signal will be used for accurate recording when broadcast.
- 1,2,3,5 Mins - The minutes you select to the start and/or end times will be included where possible to the recordings.



1. Recording Start Time

You can set the amount of time you want the recordings to start before the schedule billed time in the EPG.

1. Select **Recording Start Time** and press the **OK** button.
2. Select the padding time using the **OK** or **◀/▶** button

2. Recording End Time

You can set the amount of time you want to add to the end of a recordings billed time in the EPG.

1. Select **Recording End Time** and press the **OK** button.
2. Select the padding time using the **OK** or **◀/▶** button

3. Instant Replay

You can set the length of time the video is replayed when pressing the **REPLAY** button.

1. Select **Instant Replay** and press the **OK** button.
2. Select the time using the **OK** or **◀/▶** button

4. Skip Forward

You can set the length of time the video is skipped when pressing the **SKIP** button.

1. Select **Skip Forward** and press the **OK** button.
2. Select the time using the **OK** or **◀/▶** button


7. Settings



7.6 Other

You can configure other settings such as info display time, OSD transparency, power saving in standby and automatic standby.

1. Press the **MENU** button.
2. Select **Settings** using the **▲/▼** button and press the **OK** button.
3. Select **Other** using the **▲/▼** button and press the **OK** button.

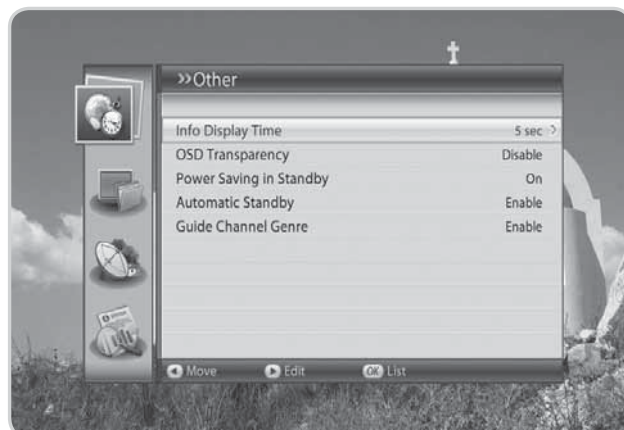

1. Info Display Time

You can set the time the information box is displayed on screen when changing channels.

1. Select **Info Display Time** and press the **OK** button.
2. Select a value between **Disable, 1~20** seconds and press the **OK** button.

Note: When set to **Disable**, the i-plate will not be displayed when you switch the channel.

2. OSD Transparency

You can set the transparency of the On-Screen Display.

1. Select **OSD Transparency** and press the **OK** button.
2. Select among **Disable, 25%, 50%** and **75%** and press the **OK** button.

Disable	Fully opaque screen
25%, 50%, 75%	The higher the % the more transparent the On-Screen Display.

7. Settings



3. Power Saving in Standby

You can select whether the product switches to power saving mode in standby.

1. Select **Power Saving in Standby**.
2. Select **On** or **Off** using the **OK** or **◀/▶** button.

Note:

When set the following will be disabled:

- Front display panel will not show the time
- LNB loop-through
- SCART loop-through

When **Power Saving in Standby** is enabled any schedule recordings you have set will record as the product will switch on to record the programme and go back to standby when completed.

4. Automatic Standby

When **Automatic Standby** is set to **Enable** the product automatically switches to standby mode after a period of inactivity to help reduce the amount of electricity used.

1. Select **Automatic Standby**.
2. Select **Enable** or **Disable** using the **OK** or **◀/▶** button.

5. Guide Channel Genre

You can choose to display the Genre List when accessing the Guide.

1. Select **Guide Channel Genre** and press the **OK** button.
2. Select **Enable** or **Disable** using the **OK** or **◀/▶** button.

7.7 STB Mode

1. Press the **MENU** button.
2. Select **Settings** using the **▲/▼** button and press the **OK** button.
3. Select **STB Mode** using the **▲/▼** button and press the **OK** or **▶** button to select **freesat** or **Non-freesat**.

Note: **STB Mode** will only appear when non-freesat channels have been tuned and saved using the **Manual Tune** option in the setup menu.



8. Edit Channels



This chapter provides information on the channel editing options available for the main channel lists and the favourites lists you create.

Note:

- Press the **EXIT** button to save the changes and return to the previous menu. Press the **MENU** button to exit the menu screen.
- Press the **TV/RADIO** button to change between the TV and radio channel lists.

8.1 Edit Channel List

Edit Channels List enables you to delete, select and lock/unlock the channels in the edit channel list conveniently.


1. Press the **MENU** button.
2. Select **Edit Channels** using the **▲/▼** button and press the **OK** button.
3. Select **Edit Channel List** using the **▲/▼** button and press the **OK** button.

Note: It is not possible to move or rename channels in freesat mode. When in non-freesat mode you can rename and move the channels.



1. Deleting Channels

1. Select the channels you want to delete and press the **OK** button. You can select more than one channel.
2. Press the **RED** button to delete the chosen channels.

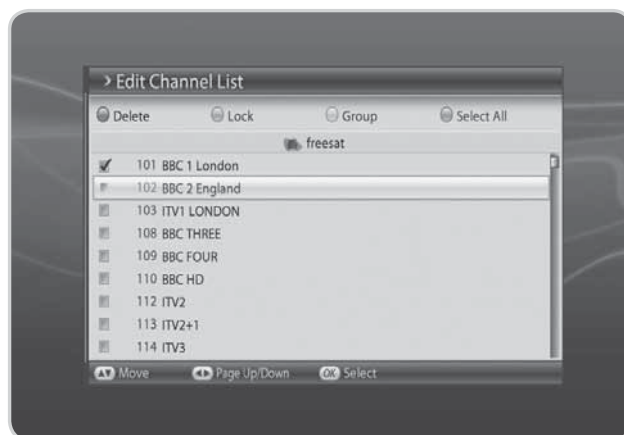

8. Edit Channels



2. Locking/Unlocking Channels

Tip: The default password is **0000**.

1. Select the channel you want to lock and press the **OK** button.
2. Press the **GREEN** button.
3. Select **Lock** and press the **OK** button.

Note:

- When channels are locked, the **Lock** option will change to **Unlock**. Following the same procedure on these channels will unlock them.
- To watch locked channels, you must enter the password using the **NUMERIC(0-9)** buttons.

3. Selecting a Channel Group

1. Press the **YELLOW** button to display the list of groups.
2. Select the group you want and press the **OK** button.

4. Select All/Release All

1. Press the **BLUE** button.
2. Select **Select All** and press the **OK** button.
3. To release one or more channels from select all, press the **OK** button while the cursor is on the selected channel.

8. Edit Channels



8.2 Edit Favourite List

You can add or remove channels from the favourite groups, move favourite channels and rename favourite groups.


1. Press the **MENU** button.
2. Select **Edit Channels** using the **▲/▼** button and press the **OK** button.
3. Select **Edit Favourite List** using the **▲/▼** button and press the **OK** button.

Note: **Edit Favourite List** is only available for freesat channels.

1. Adding/Removing Channels

1. Select the channels you want to add to the favourite channel list and press the **OK** button.
2. Press the **RED** button to add the channels to the favourite list you have chosen.
3. To remove channels from the favourite list, select the channels from the list and press the **RED** button.

Note: When the cursor is on the left column, the red button is used to **Add** channels. When the cursor is on the right column, the red button is used to **Remove** channels.

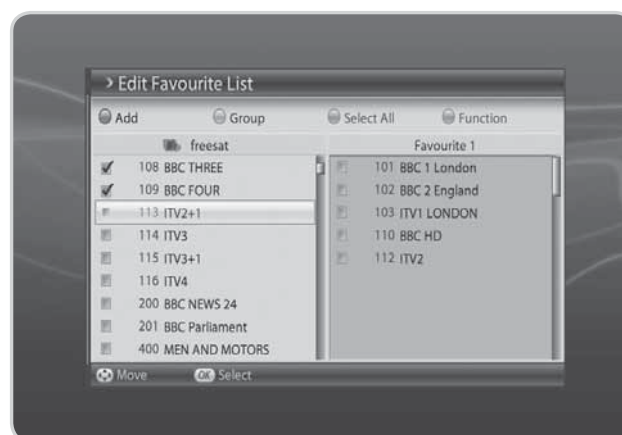

2. Selecting Favourite Groups

1. Press the **GREEN** button to display the list of groups.
2. Select the favourite group you want and press the **OK** button.

3. Select All/Release All

1. Press the **YELLOW** button to select all channels in the favourite list.
2. To release all channels, press the **YELLOW** button again.

4. Renaming Favourite Groups

1. Select the favourite group you want to rename and press the **OK** button.
2. Press the **BLUE** button.
3. Select **Rename Group** and press the **OK** button.
4. A keyboard will appear. Enter the name of the favourite group using the keyboard.
5. Press the **YELLOW** button to complete.

Note: The **YELLOW** and **BLUE** buttons become activated only when the cursor is placed on the right column.

8. Edit Channels



5. Moving Favourite Channels

1. Select the favourite channel you want to move in the favourite list and press the **OK** button.
2. Press the **BLUE** button.
3. Select **Move** and press the **OK** button.
4. Move the cursor to the position required using the **▲/▼** button, and press the **OK** button.
5. The selected channel is moved to the new location.

8.3 Edit Customisable Channels

You can customise the regional channels broadcast by freesat, allowing you to select different regions from those detected by your postcode.

1. Press the **MENU** button.
2. Select **Edit Channels** using the **▲/▼** buttons and press the **OK** button.
3. Select **Edit Customisable Channels** using the **▲/▼** buttons and press the **OK** button.

Note: This feature may not be available for all regional channels.



1. Customising Channels

1. Select a channel from the left column.
2. Move the cursor to the right column and select an alternative channel of the region you want and press the **OK** button.
3. The selected channel will be customised as the default channel of the chosen channel number.

9. Setup



In this chapter you can configure Installation settings and search for channels. Freesat Tune, Manual Tune, Software Update and Factory Reset are included in this section.

Note: Press the **EXIT** button to save the changes and return to the previous menu. Press the **MENU** button to exit the menu screen.

9.1 Freesat Tune

1. Press the **MENU** button.
2. Select **Setup** using the **▲/▼** button and press the **OK** button.
3. Select **Freesat Tune** using the **▲/▼** button and press the **OK** button.
4. Enter your postcode. Use the **◀** arrow to delete the current postcode.
5. Please note that once you perform **Freesat Tune**, all freesat channels will be deleted. Select **Yes** and press the **OK** button to delete all freesat channels.
6. Select **Search** and press the **OK** button to search channels.
7. The channel search will start.
8. To stop the search, press the **OK** button during channel search.
9. The results will appear. Select **Save** and press the **OK** button.

Note: Any schedules setup for recording will be removed if the **Freesat Tune** is carried out. If no channels are available a popup message will be displayed.



9. Setup



9.2 Manual Tune

1. Press the **MENU** button.
2. Select **Setup** using the **▲/▼** button and press the **OK** button.
3. Select **Manual Tune** using the **▲/▼** button and press the **OK** button.
4. Select **Search** and press the **OK** button. The channel search will start.
5. To stop the search, press the **OK** button during channel search.
6. The results will appear. Select **Save** and press the **OK** button.



Transponder	Select All to search for all transponders in the list. Press OK to display the list of transponder, select the transponder you require and press the OK button to search for it only. If the transponder you require is not listed, select User Defined and enter the transponder details you require.
Network Search	Select Disable or Enable using the OK or ◀/▶ button.
Scrambled Type	Select All or FTA and press the OK button.
Channel Type	Select among All , TV and Radio and press the OK button.

Note: Searching for channels using **Manual Tune** will activate the STB mode option in the **Settings** menu. The channels detected and displayed in non-freesat mode will only display the Now and Next programmes in the **TV Guide**. If there are no channels available, a message indicating the result will pop up.

9. Setup



9.3 Software Update

Software Update allows you to update the system software to maintain proper performance of the product.

1. Press the **MENU** button.
2. Select **Setup** using the **▲/▼** button and press the **OK** button.
3. Select **Software Update** using the **▲/▼** button and press the **OK** button.

Note: For more information about the software update, refer to **11. Software Update**.

1. Automatic Update

1. Select **Automatic Update** and press the **OK** button.
2. When new software is detected, you can choose to download the software immediately or save for later.
3. When there is no new software to update, a popup will appear.



2. Manual Update

1. Select **Manual Update** and press the **OK** button.
2. Enter the values for **Satellite, Frequency, Polarization, Symbol Rate** and **FEC**.
3. Select **Search** and press the **OK** button.
4. When new software is detected, you can choose to download the software immediately or save for later.

Note:

- When there is no new software to update, a popup will appear.
- Software updates for products will be detected using the **Automatic Update** option. For details to use different transponder details in the future (where applicable) please visit www.humaxdigital.com/freesat.

9. Setup



9.4 Factory Reset

Factory Reset enables you to restore the product to the factory default.

Warning: Please note that once you perform **Factory Reset**, all data such as the antenna setting information, channel list and all user configured data will be deleted.

1. Press the **MENU** button.
2. Select **Setup** using the **▲/▼** button and press the **OK** button.
3. Select **Factory Reset** using the **▲/▼** button and press the **OK** button.
4. Select **Yes** and press the **OK** button to restore all setting to factory default. To return to the previous menu, select **No** and press the **OK**.
5. Enter your password to proceed with the **Factory Reset**.
6. When the factory reset is completed the product will restart and the First Time Installation will appear on screen.



Tip: The default password is **0000**.

Note: For detailed information about the first installation, refer to **Chapter 3. First Installation**.


10. System



10.1 Diagnostics

You can view system status information.

1. Press the **MENU** button.
2. Select **System** and press the **OK** button.
3. Select **Diagnostics** and press the **OK** button.
4. The system status information will be displayed.

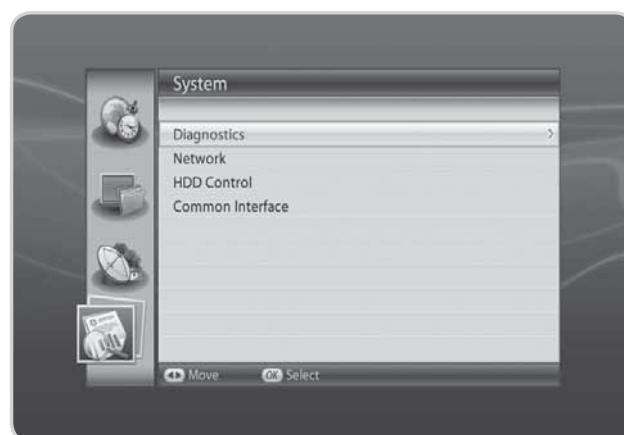

10.2 Network

You can view the network information.

1. Press the **MENU** button.
2. Select **System** and press the **OK** button.
3. Select **Network** and press the **OK** button.
4. The network information will be displayed.
5. Select **Configure Ethernet** and press the **OK** button. Select **Configure IP** and press the **OK** or **◀/▶** button to select **DHCP** or **Manual**. When selecting **Manual**, you can enter the value for the network information. Select **Apply** and press the **OK** button to save the changes.

Note: For information on the **Network** options on the product please visit www.humaxdigital.com/freesat in the future.

10. System



10.3 HDD Control

You can format the hard disk drive.

1. Press the **MENU** button.
2. Select **System** using the ▲/▼ button and press the **OK** button.
3. Select **HDD Control** using the ▲/▼ button and press the **OK** button.

1. Format HDD

To format the hard disk drive, select **Format HDD** and press the **OK** button. Select the partition you want to format, select **OK** and press the **OK** button. Select **Yes** and press the **OK** button. Enter the password to complete.

10.4 Common Interface

You can view the CI-Module information.

1. Press the **MENU** button.
2. Select **Common Interface** and press the **OK** button.
3. The common interface information will be displayed.

11. Media List



The product supports 4 types of Media lists. Press the **MEDIA** button and then the coloured buttons on the remote control to access each list.

Video (RED)	TV programmes that have been recorded
Radio (GREEN)	Radio programmes that have been recorded
Music (YELLOW)	MP3 (Music) files you have transferred
Photo (BLUE)	Jpeg (Photos) files you have transferred

11.1 Video

When the Media List is on screen press the **RED** button to select **Video** if not already selected. A list of the TV programmes you have recorded will appear.

Note:

- Press the **LIST** button to sort the files in file name, time, channel number order.
- Press the **i** button to display the programme information of the selected recording.
- The icon (▶) will be displayed when the file is being played.
- When a support USB device is connected via the front or rear USB ports press the **RED** button to change between the HDD and the USB device.



1. Video Setting

Press the **OPT+** button in video list. A popup will appear to display the setting option.

- **Sort:** Select the sorting order.
- **List Type:** Select between **Simple** or **Normal** list types.
- **File Manager:** Go to file manager.



11. Media List



2. Play Option

Select a recorded file you want to playback and press the **OK** button. A popup will appear to display the play option.

- **Play from the last played position:** Play the recorded file from the point it has been stopped.
- **Play from the start:** Play the recorded file from the beginning.
- **Delete a file:** Delete the file. Select **Yes** and press the **OK** button.
- **Rename:** Rename the file. Enter the name directly using the keyboard displayed on the screen. Press the **YELLOW** button to complete.
- Select a still image and press the **◀/▶** button to select the chapter you wish to view.



Note:

- You can also press the **PLAY** button to play the file from the last played position.
- A chapter is made automatically by dividing a file into eight smaller files and capturing a still image of each smaller file. Chapters are used in play option by pressing the **PREVIOUS** and **NEXT** buttons.

3. Making Playlist

You can playback the chosen files in the order you want.

1. Press the **OPT+** button. A popup will appear to display the setting option.
2. Select **File Manager** and press the **OK** button to display File Manager.
3. Press the **BLUE** button and select **Make Playlist** and press the **OK** button. A playlist will appear.
4. Select a file in the playlist and press the **OK** button to play the selected file.
5. Select a file in the playlist and press the **RED** button to delete the file from the playlist and renumber the list.
6. Select a file in the playlist and press the **GREEN** button to move the file. Move the file within the list using the **▲/▼** button. Press the **OK** button to complete.



Note: If all files of the playlist are deleted, the playlist disappears.

11. Media List



4. Editing Playlist

After making a playlist, you can view the playlist in video list.

Select the playlist and press the **OK** button.

- **Play:** Play the playlist.
- **Delete:** Delete the playlist.
- **Edit:** Edit the playlist.



5. File Manager

You can delete files or copy files to/from external devices.

1. Press the **OPT+** button. A popup will appear to display the setting option.
 2. Select **File Manager** and press the **OK** button to display File Manager.
- **Delete:** Select the file to delete and press the **RED** button.
 - **Copy:** Select the file to copy and press the **GREEN** button.
 - **Edit Mode:** You can edit multiple files. Press the **YELLOW** button to go to edit mode. Press the **YELLOW** button again to go back to normal mode.
 - **Function:** Press the **BLUE** button.



Select All	Press the OK button to select all or release all.
Make Folder	Enter the name of the folder directly using the keyboard displayed on the screen. Press the YELLOW button to complete.
Rename	Enter the name directly using the keyboard displayed on the screen. Press the YELLOW button to complete.
Lock/Unlock	Press the OK button to lock or unlock file.



Note: You can rename only one file at a time.

11. Media List



6. Connecting External Devices

1. Connect the device to the recorder. The detected device will appear.
2. Press the **OPT+** button and select **File Manager**.
3. Press the **OPT+** button while the cursor is in the right column to switch the device. Select the device and press the **OK** button.



11.2 Radio

When the Media List is on screen press the **GREEN** button to select **Radio** if not already selected. A list of the radio programmes you have recorded will appear.

Note: The features available in the radio list are the same as the video list in section **11.1 Video**.



11. Media List



11.3 Music

When the Media List is on screen press the **YELLOW** button to select **Music** if not already selected. A list of the MP3 (Music) files you have transferred will appear.

Note:

- Press the **LIST** button to sort the files in file name or time order.
- Press the **i** button while playing a music file to view the file information.



1. Music Setting

Press the **OPT+** button in music list. A popup will appear to display the setting option.

- **Sort:** Select the sorting order.
- **Repeat:** Select the repeat option.
- **Shuffle:** Enable or disable shuffle mode.
- **File Manager:** Go to file manager.



2. Music Player

1. Select the music file you want to play and press the **OK** or **PLAY** button to play.
2. Press the **STOP** button to stop playing.
3. Press the **PAUSE** button to pause.
4. Press the **◀/▶** button to go back or go forward.
5. Press the **OPT+** button to display Music Setting.
6. Press the **EXIT** button to stop and go to live radio.



11. Media List



3. File Manager

You can delete files or copy files to/from external devices.

1. Press the **OPT+** button. A popup will appear to display the setting option.
2. Select **File Manager** and press the **OK** button to display File Manager.
 - **Delete:** Select the file to delete and press the **RED** button.
 - **Copy:** Select the file to copy and press the **GREEN** button.
 - **Edit Mode:** You can edit multiple files. Press the **YELLOW** button to go to edit mode. Press the **YELLOW** button again to go back to normal mode.
 - **Function:** Press the **BLUE** button.

Select All	Press the OK button to select all or release all.
Make Folder	Enter the name of the folder directly using the keyboard displayed on the screen. Press the YELLOW button to complete.
Rename	Enter the name directly using the keyboard displayed on the screen. Press the YELLOW button to complete.

Note: You can rename only one file at a time.

4. Connecting External Devices

1. Connect the device to the recorder. The detected device will appear.
2. Press the **OPT+** button and select File Manager.
3. Press the **OPT+** button while the cursor is in the right column to switch the device. Select the device and press the **OK** button.

11. Media List



11.4 Photo

When the Media List is on screen press the **BLUE** button to select **Photo** if not already selected. A list of the Jpeg (Photos) files you have transferred will appear.

Note:

- Press the **LIST** button to sort the files in file name or time order.
- Press the **i** button in the photo list to view the file information.



1. Photo Setting

Press the **OPT+** button in photo list. A popup will appear to display the setting option.

- **Sort:** Select the sorting order.
- **Display Time:** Select the display time.
- **Aspect Ratio:** Select **Auto** or **Original**.
- **Music:** Select the music option.
- **File Manager:** Go to file manager.



2. Photo Viewer

1. Press the **OK** or **PLAY** button to view the photos in slideshow.
2. Press the **OK** button to display the photo playbar.
3. Press the **◀/▶** button to view the previous/next photo.
4. Press the **PAUSE** button to stop the slideshow. Press the **PAUSE** button again or press the **PLAY** button to continue the slideshow.
5. Press the **PREVIOUS/NEXT** button to move back/forward five photos
6. Press the **OPT+** button to display Photo Setting.
7. When music player is playing, press the **FAST BACKWARD/FAST FORWARD** button to move to the previous/next music file.
8. Press the **EXIT** button to stop the music player.

11. Media List



3. File Manager

You can delete files or copy files to/from external devices.

1. Press the **OPT+** button. A popup will appear to display the setting option.
2. Select **File Manager** and press the **OK** button to display File Manager.
 - **Delete:** Select the file to delete and press the **RED** button.
 - **Copy:** Select the file to copy and press the **GREEN** button.
 - **Edit Mode:** You can edit multiple files. Press the **YELLOW** button to go to edit mode. Press the **YELLOW** button again to go back to normal mode.
 - **Function:** Press the **BLUE** button.

Select All	Press the OK button to select all or release all.
Make Folder	Enter the name of the folder directly using the keyboard displayed on the screen. Press the YELLOW button to complete.
Rename	Enter the name directly using the keyboard displayed on the screen. Press the YELLOW button to complete.

Note: You can rename only one file at a time.

4. Connecting External Devices

1. Connect the device to the recorder. The detected device will appear.
2. Press the **OPT+** button and select **File Manager**.
3. Press the **OPT+** button while the cursor is in the right column to switch the device. Select the device and press the **OK** button.

12. Personal Video Recorder (PVR)



The product automatically buffers the channel you are viewing to the Hard Drive (2 hour period), this enables you to pause live TV, rewind to the point you changed to the channel, and fast forward.

Note: The buffer will be cleared whenever you change channels.

12.1 Play bar

Press the **PLAY** button while watching a recording to display the play bar. Play bar displays the current operation status, the time gap between the broadcasting point and watching point and the amount of temporarily saved programme.



- | | |
|------------------------------|-------------------------------------|
| 1. Play status | 4. Present time |
| 2. Start time | 5. Play pointer |
| 3. Amount of saved programme | 6. Total time (present time in TSR) |

To move to the specified time point directly, enter the time you want using the **NUMERIC(0-9)** buttons. To move the watching point bar to the time point you want, press the **◀/▶** button while playing back and then press the **OK** button to play the programme from the specified time point. If you do not press the **OK** button after moving the watching point, it will move automatically. Press the **STOP** button to stop the current file and go to live TV.

12. Personal Video Recorder (PVR)



12.2 Time Shifted Recording (TSR) and Playback.

You can perform Time Shifted Recording (TSR) and other VCR functions within TSR using the playback control buttons while playing a programme.

1. Playback

You can view the recorded files in the **Media List**→**Video**. Press the **MEDIA** button to access the recorded file list easily.

1. Press the **REPLAY** button to jump back and play from that point. Press the **STOP** button to return to live video.
2. Press the **SKIP** button to jump ahead and play from that point. Press the **STOP** button to return to live point.

Note:

- Enter the **NUMERIC(0-9)** buttons during playback and press the **OK** button to move to that specific time point.
- For more information about playback, refer to **11.1.1 Play Option**.

2. TSR

You can perform fast backward, fast forward, slow motion and pause while playing back a recorded file from the media list.

Fast Forward

1. Press the **FAST FORWARD** button to fast forward the programme.
2. Each time you press the **FAST FORWARD** button, the speed increases (x2, x4, x16, x32, x64).
3. If you press the **PLAY** button, the fast forward operation stops and the programme is played at normal speed.

Note: The **Fast Forward** operation is only available during playback of a recording or when you are behind live TV (if you have paused live TV, used slow motion, or fast backward). You are only able to fast forward to the live TV point; when this is reached the programme will play at normal speed automatically.



12. Personal Video Recorder (PVR)



Fast Backward

1. Press the **FAST BACKWARD** button to go back during a recording or the buffer.
2. Each time you press the **FAST BACKWARD** button, the speed increases (x2, x4, x16, x32, x64).
3. If you press the **PLAY** button, the fast backward operation stops and the programme is played at normal speed.

Note: You can fast backward back to the start of a recording or to the start of the buffer. When you reach the start point the programme will play at normal speed automatically.



Slow Motion

1. Press the **SLOW** button to playback in slow motion.
2. Each time you press the **SLOW** button, the playback speed becomes slower.
3. Press the **PLAY** button to play the programme at normal speed.

Pause

1. Press the **PAUSE** button to pause the current programme.
2. If you press the **PAUSE** button once again, the programme is resumed from that point.

Note: Pressing **PAUSE** while watching live TV will increase the delay from the point you have paused to the live broadcast. You will be able to use the **FAST FORWARD** or **SKIP FORWARD** functions during this time. To go directly to the live broadcast press the **STOP** button.



12.3 Recording

Using the built-in hard disk drive, you can record a programme without external media devices such as a VCR.

Note:

- Ensure that sufficient disk space is available before recording, the recording will either fail or not record fully if there is insufficient disk space.
- A one hour recording may require 2-3 GB of space depending on the broadcast.
- Radio programmes can be recorded.
- Pressing the **STANDBY** button while recording will not stop the recording. The product will go to standby mode after completing recording.
- Press the **i** button to display the the channel currently recording and i-plate.

12. Personal Video Recorder (PVR)



1. General Recording

1. Press the **RECORD** button to record the programme you are currently viewing. The recording will stop at the programme's end time in the Guide.
2. Press the **RECORD** button again while recording to adjust the recording end time. You can adjust the recording end time using the ◀/▶ button.

Warning: When using **INSTANT RECORD** please check the end time of the recording and amend where necessary to ensure you record for the amount of time required.



2. Multi-Channel Recording

1. To record another channel, change channels while recording and press the **RECORD** button again.
2. You can record two channels simultaneously.
3. If you change to a third channel and press the **RECORD** button you will be prompted to select one of the other two recordings to cancel.

Note: Recording 2 channels may be limited depending on your connections from the satellite dish; 2 feeds from the dish are required to record 2 channels without limitations.



3. Stop Recording

1. Press the **STOP** button to stop recording one of the two channels.
2. You will be prompted to select one among the current recordings. Select the channel you want to stop recording using the ▲/▼ button.
3. Select **OK** and press the **OK** button.

12. Personal Video Recorder (PVR)



12.4 Bookmark

1. Adding Bookmark


You can jump to a position directly using the bookmark feature in recorded file playback. Use bookmarks to search a specific scene quickly and conveniently.

Press the **ADD BOOKMARK** button at the location you want to set a bookmark while playing back a recorded file. The bookmark icon is displayed at the lower right of the screen.

Note: The bookmark function is available for recorded files only.

2. Bookmark List

1. Press the **BOOKMARK LIST** button after adding a bookmark.
2. Select the location you wish to view using the ◀/▶ button. The bookmark image is displayed at the lower right of the screen.
3. Press the **BOOKMARK LIST** button again to return to the play bar.
4. To delete a location, select the location you want to delete and press the **ADD BOOKMARK** button.

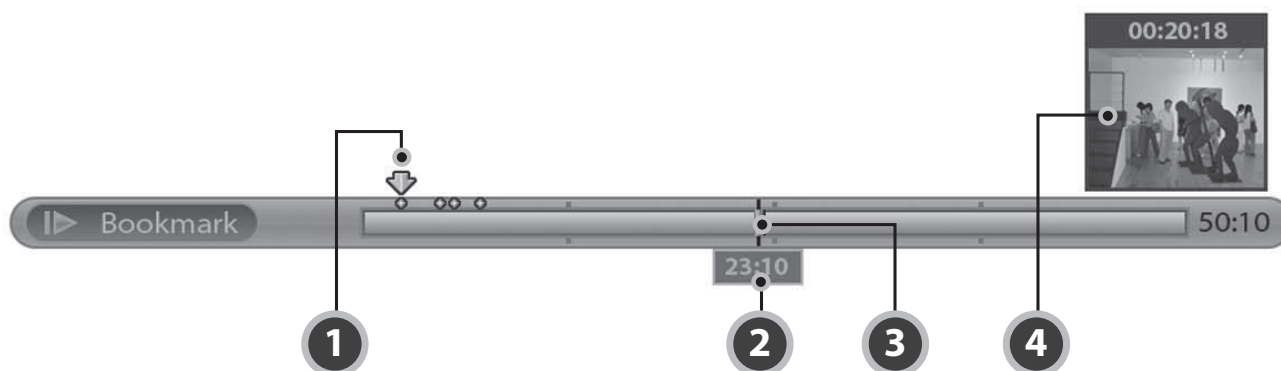

1. Bookmark cursor
2. Watching point time

3. Watching point
4. Bookmark icon

13. Software Update



In order to maintain proper performance of the product, it is essential to have the most up-to-date software. Visit the Humax website to check the latest news and newly released software versions (<http://www.humaxdigital.com/freesat>). It is recommended that you periodically check for the availability of software update.

13.1 OTA (Over the Air)

OTA - Over the Air Software Updates will be broadcast via satellite for the product when new updates are available. Humax reserves the right for deciding when the software updates will be released. Follow below to ensure that you receive the OTA Software Updates when they are released:

1. You are connected to a suitable satellite dish and are receiving the all of the freesat service.
2. The signal strength and quality are at a high level; if you are experiencing problems with the signal then please do not continue with the download.
3. The product is in Standby mode each night allowing it to detect, download, and install the updates when broadcast.

Caution:

- Please do not unplug the product from the mains during the software update procedure; this can cause the product not to operate.
- Please do not remove the antenna cable from the dish from the product during the update as this can cause the product not to operate.

Note:

- For information on the release of new software or the changes made please visit www.humaxdigital.com/freesat.
- The download can take between 5 - 10 minutes to complete.
- During the update process you will not be able to use the product.
- During the software update scheduled recordings will not take place.
- You cannot schedule programmes during software update.





1. Software update while watching a programme

When new software is detected, you can choose to download the software immediately or save for later. In case there is no software currently available, select **Next** and press the **OK** button to proceed to the next step.

14. Appendix



14.1 Menu Map

	<ol style="list-style-type: none">1. TV Setup2. Language3. Time4. Parental Control5. Recording6. Other7. STB Mode
Settings	
	<ol style="list-style-type: none">1. Edit Channel List2. Edit Favourite List3. Edit Customisabel Channels
Edit Channels	
	<ol style="list-style-type: none">1. Freesat Tune2. Manual Tune3. Software Update4. Factory Reset
Setup	
	<ol style="list-style-type: none">1. Diagnostics2. Network3. HDD Control4. Common Interface
System	

14. Appendix



14.2 Trouble Shooting

For more troubleshooting and advice please visit www.humaxdigital.com/freesat or contact the Humax Customer Helpline.

1. Freesat Detection Fails / Invalid Postcode

- Unplug the Foxsat-HDR from the mains and unplug the cable from your dish which is connected to the LNB IN connection.
- Check that the "F-type" connector is firmly on the end of the cable.
- Power on the and follow the Installation Wizard again.

2. If still not Detecting the signal or verifying postcode

- Select NEXT through the Installation Wizard and then FINISH at the end.
- Press the **OK** button to enter the SETUP menu and Select Manual Tune.
- Select the following Transponder (11428 H 27500 A) from the list of Transponders.
- Check that you are receiving stable levels for both Signal Strength & Signal Quality or >50%.
- If you are not receiving sufficient Signal on this Transponder then you may require an installer to check your Dish Alignment, LNB, cabling, or connectors.

3. No message displayed on the front panel (the product will not switch on)

- Check the main power cable and make sure it is plugged into a suitable power outlet.
- Check that the mains supply is switched on.
- Connect the power cable to a different power outlet.

4. No picture on TV set

- Make sure that the product is powered on and in operation mode. (Press the **STANDBY** button)
- Make sure that the AV cable is firmly connected to the TV.
- Make sure that the antenna cable is properly connected to the product.
- Make sure that the antenna setting in the menu is correct.
- Check the brightness level of the TV.
- Check if the channel is currently on air. Contact the broadcaster to ensure that the channel is running.
- Press the **SOURCE** button if the product is in external input mode.

5. Poor picture/sound quality

- Install the antenna in an obstacle-free place.
- Make sure there is no mobile phone or microwave oven near the product.
- Keep the power and the antenna cable for the satellite apart from each other.
- Check the signal levels and adjust your antenna if the level is too low. The signal level may be affected by weather conditions.

Note: If the antenna is covered with snow or the RF is weakened by heavy rain, the condition of the sound and picture may temporarily be poor. However, the poor sound and picture quality due to weather conditions cannot be accepted as a malfunction of product.

- Check that your dish alignment is correct.
- Change the satellite dish for a larger one as this will increase the signal levels received.
- Replace the LNB with a lower noise factor in cases where the noise factor is too high.
- Replace the LNB with a new one in case it is damaged or out of order.

14. Appendix



6. No or poor sound

- Check that your AV cable is connected correctly.
- Check the volume levels of your TV set and the product.
- Check if the product or TV is on mute.
- Check audio type or soundtrack option in the AV menu.

7. Remote control does not operate.

- To control the product, the top end of the remote control should point directly towards the receiving part of the product.
- Remove and reinsert the batteries in the remote control.
- Replace the batteries in the remote control for a new set.

8. Cannot make reservations.

- Check that no previous reservations are conflicting with the new reservation.

9. No password information is given.

- The default password is always **0000**.

10. Channel search does not work.

- Make sure that the antenna setting in the menu is correct.

11. Cannot update new software.

- If there is no message displayed requesting an update, there is no software available for your product at that time.

12. Cannot record programmes.

- The hard disk is full. Delete unnecessary programmes and make space for new recording.
- Check if recording is overlapped with another channel. Stop the current recording or wait until the recording is finished.
- Check that the product is switched on when starting recording.

13. Cannot operate the TSR (Time Shifted Recording).

- The TSR may not be available during the recording. Wait until the recording is finished.
- Delete unnecessary programmes and make space for new recording.

14. The product makes a humming noise.

- The noise is from the fan; the hard disk is operating normally. This kind of noise is inevitable but seldomly noticeable.

15. Cannot playback.

- To play back the recorded file of a scrambled channel, use the Smartcard. In case it has been a long time since you last recorded, this may not work. Contact the product distributor.
- The signal during the recording may be weak or the hard disk too full.

16. Cannot change channel while recording.

- Certain channels may not be changed due to restriction of the tuner or connection type.

14. Appendix



14.3 Error Message

Error message	Possible causes	What to do
No or bad signal	The satellite dish is not pointing at the satellite.	Adjust dish alignment.
	Signal is too weak.	Increase the LNB voltage or connect a signal amplifier.
	Satellite dish is too small.	Change to a larger dish.
	Problem with LNB.	Change the LNB.
	Wrong antenna setting.	Set the antenna correctly.
The channel is scrambled or not available.	The channel has a signal, but no audio or video is provided.	Confirm whether the channel is currently on air.
	The channel has not been deleted by broadcasting company.	Remove the channel from the channel list and check for new transponder details.
	The channel is for data broadcasting.	The channel can only be viewed with the appropriate model that supports data channels.
Audio not available.	The channel has a video signal, but no audio is provided.	Press the audio button on your remote control to confirm that the channel has audio options.
Short LNB	LNB cable is short.	Replace LNB Cable.
	LNB is internally short.	Replace LNB.
	Alien substance is inserted in LNB IN Port and port may be damaged.	Remove the alien substance and contact local Service centre in case damaged has occurred.

14. Appendix



14.4 Specification

Tuner & Channel	
Input Connector	F-Type, IEC 169-24, Female
Frequency Range	950MHz to 2150MHz
Signal Level	-25 to -65dBm
LNB Power & Polarisation	<ul style="list-style-type: none">Vertical : +13.3V(+14.3V at high voltage)Horizontal : +18.3V(+19.3V at high voltage)LNB Rating : LNB 1 IN: Max. 13/18V 250mA LNB 2 IN: Max. 13/18V 500mA
22KHz Tone	Frequency : 22 ± 4 KHz Amplitude : 0.7 ± 0.2 V
DiSEqC Control	Version1.0, 1.2, USALS, SCD (Single Cable Distribution)
Demodulation	QPSK, 8PSK
Input Symbol Rate	<ul style="list-style-type: none">DVB-S : 2-45MS/sDBV-S2 : 10-30MS/s(QPSK/8PSK)
FEC Mode	DVB-S: Auto,1/2,2/3,3/4,5/6,7/8 DVB-S2: Auto,1/2,3/5,2/3,4/5,5/6,8/9,9/10 (QPSK) Auto,3/5,2/3,3/4,5/6,8/9,9/10 (8PSK)
MPEG Transport Stream A/V Decoding	
Transport Stream	MPEG-2 ISO/IEC 13818 Transport Stream Specification
Profile Level	MPEG-2 MP@ML, MPEG4 HD HP@L4, PAL
Input Rate	15MB/s Max
Video Format	4:3, 16:9
Video Resolution	1080i, 720p, 576p, 576i
Audio Decoding	MPEG-1 Layer II, Dolby-AC3 Audio
Audio Mode	Single channel/Dual channel/Joint stereo/Stereo

14. Appendix



Memory	
Flash Memory	16MB
RAM	256MB
EEPROM	8KB
Audio/Video	
Video	TV-SCART(CVBS,S-Video,RGB) VCR-SCART(CVBS, S-Video) RCA-Type(CVBS), HDMI/HDCP
Audio	TV-SCART, VCR-SCART, Audio L/R, S/PDIF(Digital Audio Output)
Data Port	
USB	USB 2.0 Host (5 V $\overline{=}$ 500mA Max.)
Power Supply	
Input Voltage	90-250V a.c., 50/60Hz
Type	SMPS
Power Consumption	Max. 50W
Protection	Separate internal fuse. The input should be protected against lightning.
Physical Specification	
Size	380mm \times 55mm \times 252mm
Weight (Net)	3.1kg
Operating Temperature	0 $^{\circ}$ C to +45 $^{\circ}$ C
Storage Temperature	-10 $^{\circ}$ C to +70 $^{\circ}$ C

14. Appendix



14.5 Glossary

- 1. DiSEqC (Digital Satellite Equipment Control)**
A DiSEqC compatible receiver relies on a switching box which detects the 22kHz tone pulsing rapidly on and off. In this way, a specially designed receiver can control numerous LNBs through a DiSEqC switching box.
- 2. Dolby Digital**
An encoding system that digitally compresses up to 5.1 discrete channels of audio (left front, centre, right front, left surround, right surround) into a single Bitstream. A low frequency effect (LFE) channel is included providing the sound needed for special effects.
- 3. DVB (Digital Video Broadcasting)**
Set of standards that define digital broadcasts using satellite, cable or terrestrial systems.
- 4. EPG (Electronic Programme Guide)**
An electronic equivalent to a printed television listings magazine; it is an application used with digital set-top boxes and digital television sets to list current and scheduled programs that are or will be available on each channel, including a short summary or commentary for each program. The information supplied in the EPG is sent and updated by the channel broadcaster.
- 5. FEC (Forward Error Correction)**
A technique for error control of data transmission.
- 6. Frequency**
The property of a signal measured in cycles per second (=Hz).
- 7. FTA (Free- To-Air)**
An unscrambled broadcaster allowing customers to view channels or services without paying any subscription.
- 8. HDD (Hard Disk Drive)**
The primary computer storage medium, which is made of one or more aluminum or glass platters, coated with a ferromagnetic material.
- 9. Hi-Fi (High Fidelity)**
The characteristics of audio devices that can play back all the audio frequencies a person can detect, which is the range of 16Hz~20KHz. Sometimes it is used to indicate good quality of audio devices such as stereo tape recorders.
- 10. LNB (Low Noise Block)**
A device that is mounted on an arm facing your satellite dish, focusing on satellite signals. A LNB converts signals received from satellite to a lower frequency and sends them to a satellite receiver via coaxial cable.
- 11. OSD (On Screen Display)**
OSD displays the basic information necessary for the users to configure monitor or TV settings. OSD information may include brightness, contrast, tuning, RGB adjustment, and screen size and position.

14. Appendix



12. OTA (Over the Air)

A standard for the transmission of software for equipment, through a broadcast system. Manufacturers reserve the right for deciding the release of the software for their products.

13. Polarisation

The direction of the electrical and magnetic fields of a signal. Satellites use both vertical and horizontal polarisation so a frequency can be used twice.

14. PVR (Personal Video Recorder)

Video recorder that can record and playback programmes directly using the embedded hard disk drive(s).

15. PID (Packet Identifier)

A set of numbers identifying stream packets contained within a single data stream.

16. QPSK (Quaternary Phase Shift Keying)

Digital modulation technique in which the carrier phase can have one of four possible values.

17. RF (Radio Frequency)

Television signals are modulated onto RF signals and are then demodulated by your television's or STB's tuner.

18. SCART

A 21-pin connector standard to connect two pieces of Audio-Visual equipment such as a TV and a VCR. Each device will have a 21-pin female connection; a cable with male connection at both ends is used for connecting the devices.

19. S/PDIF (Sony/Philips Digital Interface format)

A standard format for the transfer of digital audio signals. It allows the transfer of digital audio between two devices without any conversion to and from analogue, which could degrade the signal quality.

20. S-Video (Super-Video)

Sometimes referred to as Y/C video; a technology for transmitting video signals via a cable. It is a video signal transmission in which the luminance (brightness) and the chrominance (colour) signals are transmitted separately to achieve superior picture clarity.

21. Transponder

A satellite is divided up in parts called transponders. A transponder is one distribution section of the satellite. Each transponder can be used for distribution of several channels or services.

22. Trick-Play

Pause, Fast Forward/Fast Backward, Slow Motion, Instant Replay, Commercial Skip, Repeat A-B.

23. TSR (Time Shifted Recording)

A function that records the present programme temporarily to support trick-play.

14. Appendix



14.6 Service and Support

Information concerning troubleshooting, software upgrade and product support is provided in the following websites and call centres. Should your product require warranty service, please contact your local retailer to obtain the appropriate authorization.

UK

Tel:	0844 669 8800
Opening Hours:	Mon-Fri: 09:00-17:30 Excluding bank holidays Calls charged at local rate from a BT landline. Other operators may vary.
E-mail:	freesat@humax-digital.co.uk
Website:	www.humax-digital.co.uk / www.freesat.co.uk
Language:	English

14. Appendix



14.7 Using the Universal Remote Control

1. Select the mode (TV, PVR, DVD, AUDIO) you want to set by pressing the corresponding button on the remote control. The button will blink once.
2. Keep pressing the button for 3 seconds until the button lights on.
3. Enter the 4-digit code. Every time a number is entered, the button will blink. When the fourth digit is entered, the button will blink twice.
4. If a valid 4-digit code is entered, the product will power off.
5. Press the **OK** button and the mode button will blink three times. The setup is complete.
6. If the product does not power off, repeat the instruction from 3 to 5.

Note:

- When no code is entered for one minute the universal setting mode will switch to normal mode.
- Try several setting codes and select the code that has the most functions.

Remote Control Function List

The keys on the remote control function as in the list below.

Note: Some keys may not function depending on the product.

Key	TV	DVD	AUDIO
	MUTE	MUTE	MUTE
	STANDBY	POWER	POWER
PVR	PVR	-	-
TV	TV	-	-
DVD	DVD	-	-
AUDIO	AUDIO	-	-
1	1	DIGIT 1	1
2	2	DIGIT 2	2
3	3	DIGIT 3	3
4	4	DIGIT 4	4
5	5	DIGIT 5	5
6	6	DIGIT 6	6
7	7	DIGIT 7	7
8	8	DIGIT 8	8
9	9	DIGIT 9	9
0	0	DIGIT 0,11	0
LIST	LIST	-	LIST
MENU	MENU	MENU	MENU




14. Appendix



Key	TV	DVD	AUDIO
▶	PLAY	TEXT EXPAND	PLAY
⏸	PAUSE	TEXT HOLD	PAUSE
■	STOP	PIP INPUT	STOP
●	RECORD	PIP MOVE	RECORD, OPEN CLOSE
⏮	FAST BACKWARD	PIP OFF	REWIND, SEARCH REVERSE; SCAN -
⏭	FAST FORWARD	PIP	FAST FORWARD, SEARCH FORWARD; SCAN +
⏪	PREVIOUS(REPLAY)	TEXT MIX	SKIP -, TRACK -, CHAPTER -
⏩	NEXT(SKIP)	TEXT OFF, TV	SKIP, TRACK +, CHAPTER +
RED	RED	RED	RED
GREEN	GREEN	GREEN	GREEN
YELLOW	YELLOW	YELLOW	YELLOW
BLUE	BLUE	BLUE	PROGRAMME
MEDIA	MEDIA	-	-
GUIDE	GUIDE	GUIDE	GUIDE
OK	OK	OK	OK
UP	UP	UP	UP
LEFT	LEFT	LEFT	LEFT
RIGHT	RIGHT	RIGHT	RIGHT
DOWN	DOWN	DOWN	DOWN
EXIT	EXIT	EXIT	EXIT, RETURN
BACK	BACK	LAST, RECALL; PP; LAST CHANNEL	CLEAR
VOL+	VOL+	VOL+	VOL+
VOL-	VOL-	VOL-	VOL-
i	I	INFO, OSD; DISPLAY	INFO, OSD; DISPLAY
OPT+	OPT+	-	-
P+	P+	P+	P+
P-	P-	P-	P-
TEXT	TEXT	TEXT	PVR MENU
🔊?	AUDIO	-	AUDIO, LANGUAGE

14. Appendix



Key	TV	DVD	AUDIO
SUB	SUB	SUBTITLE, LANGUAGE; CC	SUBTITLE
TV/RADIO	TV/RADIO	TV/DTV ATV/DTV; D/A; DTV/TV; DTV; DIGITAL	HDD, DVD/HDD
SCHEDULE	SCHEDULE	ANALOG TV, ATV	DVD
	ADD BOOKMARK	TEXT SUBPAGE TEXT TIME	-
	BOOKMARK	TEXT INDEX	TITLE
	SLOW	TEXT POSITION TEXT CANCEL; TEXT UPDATE	SLOW; STEP
SOURCE	SOURCE	SOURCE, AV, 55INPUT; TV/AV	SOURCE, TV/DVD, TV/DISK
SLEEP	SLEEP	SLEEP	SLEEP
V-FORMAT	V-FORMAT	TEXT SIZE; TEXT EXPAND; FTB	-
WIDE	WIDE	WIDE, FORMAT, 16:9, ASPECT; ZOOM	ZOOM

14. Appendix



1. TV Code List

Brand	Code
A.R. Systems	0556, 0037, 0455, 0352, 0374
Accent	0037
Acer	1339, 1403, 1509
Acoustic Solutions	1149, 1523, 1545, 1667, 1727, 1865, 2055
Acura	0009
ADL	1217
Admiral	0264, 0087, 0093, 0163
Advent	0876, 1613
Adyson	0216, 0217
AEG	1163, 1324, 1556, 2096
Agashi	0264, 0216, 0217
AGB	0516
Agef	0087
Aiko	0037, 0361, 0264, 0433, 0009, 0035, 0072, 0191, 0216, 0217, 0371
Aim	0037, 0805
Airis	1531, 1833, 2050
Aiwa	0701, 0705, 1916
Akai	0556, 0037, 0548, 0714, 0715, 0606, 0361, 0264, 0433, 0729, 1259, 1413, 0648, 0631, 2021, 0602, 2025, 2096, 0516, 0480, 0473, 0371, 0217, 0216, 0208, 0191, 0163, 0072, 0035, 0009, 0745, 1537
Akiba	0037, 0218, 0455, 0282
Akito	0037, 0272
Akura	0037, 0714, 0668, 1037, 0264, 0218, 0009, 0171, 0282, 0412, 1498, 1556, 1687, 1982
Alaron	0216
Alba	0037, 0714, 0668, 1037, 0487, 0370, 0218, 0036, 0587, 2050, 1997, 1935, 1731, 0551, 0480, 0443, 0418, 0371, 0355, 0247, 0216, 0163, 0009
AlfaView	1206
All-Tel	0865, 1269
Allorgan	0206, 0217
Allstar	0037
Amitech	0655, 1281
Amoi	1529
Amplivision	0370, 0217, 0320
Amstrad	0037, 1037, 0264, 0218, 0433, 0009, 0163, 0171, 0362, 0371, 0412, 0516, 0648, 1820, 1890, 1982

Anam	0037, 0009
Anam National	0037, 0650
Andersson	1149, 1163
Anglo	0264, 0009
Anitech	0037, 0264, 0009, 0282
Ansonic	0037, 0668, 0370, 0009, 0104, 0163, 0259, 0292, 0374, 0411, 1437
AOC	0625, 1365, 1588
Apollo	0473
Apro	1846
Arc En Ciel	0109
Arcam	0216, 0217
Ardem	0037, 0714
Arena	0037
Aristona	0556, 0037
ART	1037
Arthur Martin	0163
ASA	0070, 0087, 0104, 0105, 0346
Asberg	0037
Asora	0009
Asuka	0264, 0218, 0216, 0217, 0282
Atec	1606, 1728
Atlantic	0037, 0206, 0216, 0259, 0320
Atori	0009
Auchan	0163
Audiosonic	0037, 0714, 0486, 0715, 0264, 0370, 0218, 0009, 0109, 0217, 0374, 0865, 1308, 1800, 2050
Audioton	0486, 0264, 0370, 0217
Audiovox	0451
Aumark	0060
Autovox	0087, 0206, 0217, 0247, 0349, 0544
AVC	2044
Avious	1634
Awa	0606, 0036, 0108, 0009, 0011, 0217, 0451, 1376
Axxent	0009
Baier	0876
Baird	0072, 0073, 0109, 0193, 0208, 0217, 0343, 1196

14. Appendix



Bang & Olufsen	0087, 0565, 0619, 0620
Barco	0163
Basic Line	0556, 0037, 0668, 1037, 0218, 0455, 0009, 0163, 0217, 0282, 0339, 0374, 1163
Bastide	0217
Bauer	0805, 1615
Baur	0037, 0195, 0361, 0191, 0349, 0512, 0535, 0544, 0554
Bazin	0217
Beaumark	0178
Beko	0037, 0714, 0486, 0715, 0606, 0370, 0418, 0808, 1652, 1800
Belson	0698, 0894, 1191
Belstar	1037
BenQ	1212, 1562, 1574
Bensten	1326, 1890, 1893
Beon	0037, 0418
Berthen	0668
Best	0370
Bestar	0037, 0370, 0374
Bestar-Daewoo	0374
Binatone	0217
Black Diamond	1909, 1037, 0614, 1163
Black Star	0247
Blackway	0218, 0282
Blaupunkt	0195, 0036, 0455, 0170, 0191, 0200, 0327, 0535, 0554
Blue Media	1606, 1728
Blue Sky	0556, 0037, 0714, 0668, 1037, 0715, 0487, 0218, 0455, 0499, 0624, 0282, 1191, 1243, 1314, 1363, 1521, 1652, 1709, 1916
Blue Star	0282
BlueH	1745
Boca	1652
Boman	1324
Bondstec	0247
Boots	0009, 0217, 0272
Bork	1363
Bosch	0320
Boxlight	0736
BPL	0037, 0208, 0282, 0896
Brandt	0625, 0714, 0560, 0109, 0287, 0335

Brimax	1709
Brinkmann	0037, 0668, 0486, 0418, 0519
Briovvega	0037, 0087, 0362
Britannia	0216, 0217
Brother	0264
Bruns	0087
BSR	0163
BTC	0218
Bush	0556, 0037, 0714, 0668, 1037, 0698, 0487, 0361, 0264, 0218, 0036, 0587, 1687, 1682, 1667, 1652, 1645, 1634, 1556, 1731, 1869, 1870, 1871, 1900, 1954, 1982, 2050, 2053, 2055, 2056, 0009, 0208, 0217, 0272, 0282, 0349, 0355, 0371, 0374, 0519, 0614, 0660, 0661, 0778, 1149, 1166, 1243, 1259, 1308
Canton	0218
Capsonic	0264
Carad	0668, 1037, 0610
Carena	0037, 0455
Carrefour	0037, 0036, 0070
Carver	0170
Cascade	0037, 0009
Casio	0037
Cat	1682, 2155
Cathay	0037, 1727
CCE	0037
cello	1770, 1820, 1844, 1845, 1846
Centrum	1037
Centurion	0037
Century	0087, 0247
CGE	0370, 0074, 0163, 0247, 0418
Changhong	0821
Chimei	2052, 1837
Cimline	0218, 0009
Cineral	0451
Cinex	0648, 1166, 1556
Citizen	0060
City	0009
Clarivox	0037, 0070, 0418
Classic	0499
Clatronic	0037, 0714, 0264, 0370, 0218, 0009, 0217, 0247, 0320, 0371, 1324

14. Appendix



Clayton	1037
CMS	0216
CMS Hightec	0217
Concorde	0009
Condor	0037, 0264, 0370, 0009, 0216, 0247, 0282, 0320, 0411, 0418
Conia	0820, 0894, 1498, 1687
Conrac	0808
Contec	0037, 0036, 0009, 0216
Continental Edison	0487, 0109, 0287
Cosmel	0037, 0009
Crosley	0074, 0087, 0163, 0247
Crown	0037, 0714, 0668, 1037, 0486, 0715, 0487, 0606, 0712, 0370, 1652, 0672, 0418, 0412, 0339, 0208, 0009
Crown Mustang	0672
CS Electronics	0218, 0216, 0247
CTC	0247
CTX	1756
Curtis Mathes	0060, 0093, 0145, 0166, 0451
Cybertron	0218
Cytronix	1298
D-Vision	0556, 0037, 1982
Daewoo	0556, 0037, 0634, 1909, 0218, 1902, 1812, 1612, 1598, 1376, 1307, 0880, 0876, 0865, 0778, 0661, 0624, 0499, 0451, 0374, 0217, 0216, 0009
Dainichi	0218, 0216
Daitsu	1267
Dansai	0037, 0036, 0009, 0035, 0208, 0216, 0217
Dansette	0412
Dantax	0714, 1037, 0486, 0715, 0370, 1652, 1916, 1981
Datsura	0208
Davis	0736
Dawa	0037
Daytek	1207, 1374, 1376
Dayton	0009, 1207, 1374
Daytron	0037, 0009, 0374
De Graaf	0548, 0044, 0163, 0208
DEC	1326
Decca	0037, 0072, 0217, 0272, 0516, 0621

Dell	1264, 1403
Denko	0264
Denon	0145
Denver	0037, 0587, 1189, 1324, 1634, 1820, 1988, 2050, 2096
DER	0193
Desmet	0037, 0009, 0087, 0320
DGM	1890
Diamant	0037
Diamond	0825
DiBoss	1474
Digatron	0037
Digihome	1149, 1667
Digiline	0037, 0668, 0105
Digimate	0890
Digital Device	1606
Digitek	1521, 1709
Digitrex	2056
Digix Media	0880
Dixi	0037, 0009, 0087, 0217, 0247
DL	0891, 1326
DMTech	1338, 1898, 1964, 1994, 2001
Domeos	0668
Domland	0394
Dream Vision	1704
DTS	0009
Dual	0037, 1037, 1137, 0217, 0259, 0343, 0349, 0352, 0394, 0519, 0544, 0778, 1149, 1202, 1267, 2032
Dual Tec	0217
Dumont	0070, 0072, 0087, 0104, 0217
Durabrand	1437, 1652, 1988
Dux	0037
Dynatech	0217
Dynatron	0037
e-motion	1709
E:max	1324, 1531
Easy Living	1248, 1553, 1783
Ecco	0773
ECE	0037

14. Appendix



Edison-Minerva	0487
Eiki	0735
Elba-Sharp	0516
Elbe	0556, 0037, 0610, 0218, 0191, 0217, 0259, 0292, 0362, 0411, 0435, 0516, 0551, 0630
Elcit	0087, 0163, 0247, 0516
Elekta	0264, 0282
Element	1687
Elfunk	1037, 1208
ELG	0037
Elin	0037, 0548, 0361, 0009, 0104, 0349
Elite	0037, 0218, 0320
Elta	0264, 0009
Emco	0247
Emerson	0037, 0714, 0668, 1909, 0486, 0361, 0370, 0070, 0087, 0178, 0247, 0282, 0320, 0371, 0624
Emperor	0282
Envision	1365
Epson	0881, 1290, 0833, 0840
Erae	1371
Erres	0037
ESC	0037, 0217
Etron	0009, 0163
Eurofeel	0264, 0217
Euroman	0037, 0264, 0370, 0216, 0217
Europa	0037
Europhon	0037, 0217, 0516
Evesham	1248, 1606, 1667, 1719, 1728
Evesham Technology	1728
Evolution	1756
Excors	2031
Expert	0163, 0206, 0259
Exquisit	0037, 0247
FairTec	1373
Fenner	0009, 0374
Ferguson	0037, 0625, 0548, 0560, 0195, 1037, 0073, 0109, 0193, 0287, 0335, 0343, 0443, 1471, 1935, 2053
Fidelity	0037, 0361, 0264, 0163, 0171, 0193, 0216, 0371, 0412, 0512, 0544
Filsai	0217

Finlandia	0548, 0361, 0072, 0163, 0208, 0346
Finlux	0556, 0037, 0714, 0715, 1585, 1556, 0808, 0631, 0621, 0516, 0492, 0480, 0473, 0411, 0346, 0217, 0163, 0105, 0104, 0087, 0072, 0070
Firstline	0556, 0037, 0714, 0668, 1037, 0361, 1612, 1371, 1363, 1308, 1191, 0808, 0624, 0544, 0411, 0374, 0349, 0321, 0247, 0217, 0216, 0208, 0072, 0009
Fisher	0361, 0370, 0036, 0045, 0072, 0087, 0104, 0208, 0217, 0349, 0544
Flint	0037, 0610, 0264, 0218, 0455, 0072
Force	1149
Forgestone	0193
Formenti	0037, 0087, 0163, 0216, 0320
Formenti-Phoenix	0216, 0320
Fortress	0087, 0093
Fraba	0037, 0370
Friac	0037, 0610, 0370, 0009, 0499
Frontech	0264, 0009, 0163, 0217, 0247
Fujimaro	0865
Fujitsu	0009, 0072, 0206, 0217, 0259, 0683, 0809, 0853
Fujitsu General	0009, 0206, 0217, 0683
Fujitsu Siemens	0808, 1163, 1248, 1298, 1373, 1666
Funai	0714, 0668, 0264, 1394, 1595, 1666, 1817
Galaxi	0037
Galaxis	0037, 0370
Gateway	1755
GBC	0218, 0009, 0163, 0374
GE	0093, 0178, 0282, 0335, 0451, 0735, 1907
GEC	0037, 0361, 0072, 0163, 0217, 0349, 0516
Geloso	0009, 0163, 0247, 0374
General	0109, 0287, 0471
General Technic	0009
Genexxa	0037, 0218, 0009, 0163, 0412
Gericom	0808, 0865, 0880, 1206, 1217, 1298, 1606, 1731
Go Video	0060
Gold	1770, 1833, 2077, 2081
Goldfunk	0668
GoldHand	0216
GoldStar	0037, 0714, 0715, 0606, 0361, 0001, 0044, 0109, 0163, 0178, 0216, 0217, 0247, 0290, 0377

14. Appendix



Gooding	0487
Goodmans	0556, 0037, 0625, 0714, 0560, 0668, 0634, 1909, 1037, 0487, 0264, 0218, 0036, 2056, 1163, 1259, 2055, 1308, 2053, 1376, 1916, 1645, 1667, 1682, 1900, 1687, 1719, 1720, 1727, 0009, 0035, 0072, 0217, 0290, 0335, 0343, 0371, 0374, 0480, 0499, 0516, 0624, 0630, 0661, 0808, 0880, 1149
Gorenje	0370
GPM	0218
Gradiente	0037, 0170, 1053
Graetz	0714, 0487, 0361, 0163, 0339, 0371, 1163
Gran Prix	0648
Granada	0037, 0548, 0560, 0036, 0108, 0226, 0072, 0163, 0208, 0217, 0339, 0343, 0356, 0469, 0473, 0516, 0045
Grandin	0556, 0037, 0714, 0668, 1037, 0715, 0610, 0218, 0455, 1377, 1375, 1374, 1298, 1206, 1191, 0880, 0865, 0624, 0374, 0320, 0282, 0163, 0009
Gronic	0217
Grundig	0556, 0037, 0195, 0487, 0706, 0036, 0587, 2127, 2053, 1954, 1935, 1916, 1869, 1800, 1667, 1376, 1371, 1308, 1223, 0672, 0630, 0070, 0554, 0535, 0191, 0443
Grunkel	1163
H & B	0808, 2001
Haier	0698, 1615, 1748, 1604
Halifax	0264, 0216, 0217
Hallmark	0178
Hampton	0216, 0217
Hanimex	0218, 1908
Hanns.G	1783
Hannspree	1348, 1351, 1352, 1613, 1776, 1783, 2027
Hanseatic	0556, 0037, 0625, 0714, 0634, 0361, 0370, 0808, 0661, 0544, 0519, 0499, 0394, 0377, 0349, 0320, 0292, 0282, 0217, 0087, 0009
Hantarex	0037, 0009, 0516, 0865, 1338, 1465
Hantor	0037
Harsper	0865
Harwa	0773, 1196, 1269
Harwood	0037, 0487, 0009, 0412
Hauppauge	0037
Havermy	0093
HCM	0037, 0264, 0218, 0009, 0217, 0282, 0412, 0418
Hema	0009, 0217

Hemmermann	0349, 0544
Hifivox	0109
Higashi	0216
Highline	0037, 0264
Hikona	0218, 1983
Hinari	0037, 0264, 0218, 0036, 0009, 0208, 0355, 0443, 1908
Hisawa	0714, 0610, 0218, 0455, 0282
Hisense	0556, 0508, 0780, 1314, 1363, 1660, 2098
Hit	0087
Hitachi	0037, 0548, 0634, 1037, 1137, 0036, 0108, 0225, 0719, 0737, 0744, 0777, 0797, 0877, 0884, 0044, 1045, 1149, 1194, 1225, 1481, 1484, 1576, 1691, 1772, 1854, 2074, 0109, 0145, 0163, 0178, 0217, 0343, 0349, 0356, 0441, 0469, 0473, 0480, 0481, 0492, 0499, 0516, 0105, 0576, 0578, 0072
Hitachi Fujian	0108
Hitsu	0610, 0218, 0455, 0009
HMV	0087
Hoeher	0714, 0865, 1163, 1556
Home Electronics	0606
Hornyphon	0037
Hoshai	0218, 0455, 0282
Huanyu	0216, 0374
Hugoson	0890, 1217
Humax	2181, 1501, 4000, 4001, 1295, 1535, 1539, 1821, 1873, 2057,
HYD	1376
Hygashi	0216, 0217
Hyper	0009, 0216, 0217, 0247
Hypersonic	0361
Hypson	0556, 0037, 0714, 0668, 1037, 0486, 0715, 0264, 0455, 0217, 0282, 0621
Hyundai	0778, 0865, 0876, 1281, 1294, 1376, 1468, 1532, 1598, 1606, 1612, 1899
Iberia	0037
ICE	0037, 0264, 0218, 0216, 0217, 0371
ICeS	0218, 0216
iDEAL	1556
Igo	1224
IISonic	1376, 1513, 1613
Iiyama	0877, 0890, 1217

14. Appendix



Imperial	0037, 0370, 0074, 0247, 0349, 0418, 0630, 2089
Indiana	0037
InFocus	0736, 0752, 1164, 1206, 1430, 1516
Ingelen	0714, 0610, 0487, 0163
Ingersol	0009
Inno Hit	0218, 0009, 0072, 0217, 0247, 0282, 0290, 0516, 1163
Innovation	0519
Innowert	0865, 1298
Interbuy	0037, 0264, 0009, 0247
Interfunk	0037, 0361, 0087, 0109, 0163, 0200, 0247, 0327, 0349, 0512
Internal	0556, 1909, 0624
Intervision	0037, 0486, 0487, 0264, 0218, 0455, 0009, 0217, 0247, 0282, 0377, 0394, 0519
Irradio	0037, 0218, 0009, 0247, 0290, 0371, 0724
Isukai	0037, 0218, 0455, 0282
ITC	0217, 0320
ITS	0037, 0264, 0218, 0216, 0282, 0371
ITT	0548, 0610, 0361, 0163, 0193, 0208, 0339, 0346, 0349, 0473, 0480, 0544
ITT Nokia	0548, 0610, 0606, 0361, 0163, 0208, 0339, 0346, 0349, 0473, 0480
ITV	0037, 0264, 0247, 0374
JDV	1982
Jean	0036, 1511, 1513
JEC	0035
JMB	0556, 0634, 0443, 0499
JNC	1702
Jocel	0712
Jouge	1435
Jubilee	0556
JVC	0606, 0218, 0036, 0650, 0653, 0093, 0193, 0371, 0418, 0683, 0731, 1053, 1352, 1653, 1818, 2118
Kaisui	0037, 0218, 0455, 0009, 0216, 0217, 0282
Kamp	0216
Kapsch	0361, 0104, 0163, 0206, 0259
Karcher	0714, 0610, 0606, 0264, 0370, 0282, 0778, 1556, 1982
Kathrein	0556, 0880
Kawa	0371

Kawasho	0216
KB Aristocrat	0163
Kendo	0037, 1037, 0610, 0370, 0247, 0362, 0377, 0411, 0519, 0551, 0648, 1149, 1437, 1585
Kennedy	0163, 0206, 0435
Kennex	1037
Keymat	1326, 1504, 1771, 1890, 1893
Kingsley	0216
Kioto	0706
Kiss	0800
Kiton	0037, 0668
Kneissel	0556, 0037, 0610, 0370, 0259, 0292, 0362, 0374, 0411, 0435, 0499
Kobra	1467
Kolster	0037, 0218, 0247, 0349
Konig	0037, 0101
Konka	0037, 0714, 0218, 0371, 0418, 0641, 0754, 0894
Kontakt	0487
Korpel	0037
Korting	0370, 0087, 0320
Kosmos	0037
Kotron	0412, 1900
Koyoda	0009
Kreisen	0876, 1474
KTV	0217
Kuba	0349
Kyoshu	0412, 0418
Kyoto	0163, 0216, 0217
L&S Electronic	0714, 0808, 0865
LaSAT	0486
Lava	1474
Lavis	1037
Leader	0009
Lecson	0037
Lemair	0411
Lenco	0037, 0587, 0104, 0374, 1634, 1983
Lenoir	0009, 1189
Lentec	1531
Lesla	0247

14. Appendix



Lexsor	1196, 1507
Leyco	0037, 0264, 0072
LG	0556, 0037, 0714, 0715, 0698, 0361, 0370, 1305, 1423, 1637, 1663, 1664, 1721, 1768, 1840, 1842, 1859, 1860, 1191, 1148, 0377, 0290, 0247, 0217, 0216, 0178, 0163, 0009, 0001, 1265, 1325
Liesenk & Tter	0037
Liesenkotter	0037, 0327
Lifetec	0037, 0714, 0668, 1037, 1137, 0218, 0009, 0374, 0519, 0683
Lloyd's	0009
Local India TV	0009, 0208, 0602, 1413
Lodos	1037, 1149
Loewe	0037, 0370, 0087, 0292, 0512, 0516, 0633, 0655, 0790, 1836, 1884
Logic	2107
Logik	1037, 0001, 0011, 0193, 0773, 0880, 1217, 1471, 1687, 2028, 2029, 2030
Logix	0668, 0519
Luker	1982
Luma	1037, 0009, 0163, 0206, 0259, 0362, 0374, 0411
Lumatron	0037, 0264, 0073, 0163, 0206, 0217, 0259
Lux May	0037, 0009
Luxor	0548, 1037, 0361, 0163, 0208, 0217, 0290, 0346, 0349, 0356, 0473, 0480, 0631, 1163
LXI	0156
M Electronic	0037, 0714, 0634, 0195, 0361, 1652, 0661, 0512, 0492, 0480, 0411, 0374, 0349, 0346, 0343, 0287, 0247, 0217, 0216, 0163, 0109, 0105, 0104, 0009
Madison	0037
MAG	1498, 1687
Magnadyne	0087, 0163, 0247, 0516, 0544
Magnafon	0073, 0216, 0516
Magnavox	0036, 0011
Magnin	1907
Magnum	0037, 0714, 0715, 0648, 1289
Mandor	0264
Manesth	0037, 0264, 0035, 0217, 0320
Manhattan	0037, 0668, 1037, 0778, 0876, 1267, 1474
Maqma	1467, 1606, 1702, 1789
Marantz	0556, 0037, 0412, 0704, 1398, 1532
Marelli	0087

Mark	0037, 0714, 0715, 0009, 0216, 0217, 0374
Marks and Spencer	1846
Marquant	2056
Mascom	1556, 1871
Master's	0499
Masuda	0218
Matsui	0556, 0037, 0714, 0195, 1037, 0487, 0036, 0455, 0433, 0744, 0880, 0544, 0516, 1666, 1916, 0443, 1935, 0371, 0355, 0349, 0335, 0272, 0217, 0208, 0191, 0072, 0045, 0035, 0011, 0009
Matsushita	0650
Maxent	1755, 0762
Maxim	1166, 1556, 1982
Medialine	1206, 1964
Mediator	0556, 0037
Medion	0556, 0037, 0714, 0668, 1037, 0698, 1137, 0808, 0880, 0512, 0245, 1149, 1166, 1202, 1248, 1437, 1556, 1667, 1900, 2001
Megas	0610
Megatron	0145, 0178
MEI	1037
Memorex	1037, 0009, 0060, 0178
Memphis	0009, 0072
Mercury	0037, 0009
Metronic	0625
Metz	0037, 0668, 0195, 0587, 0087, 0191, 0367, 0388, 0447, 0535, 0554, 0746, 1163, 1533
MGA	0178, 1907
Micromaxx	0037, 0668, 1037, 0630, 0808, 1324, 2001
Microspot	1614
Microstar	0808
Mikomi	1037, 0744, 1149
Minato	0037
Minerva	0195, 0487, 0108, 0070, 0191, 0516, 0535, 0554
Minoka	0037, 0412
Mirai	1666, 1852, 2072
Mirror	1900
Mistral Electronics	0193
Mitsai	1556
Mitsubishi	0556, 0037, 1037, 0036, 0108, 0087, 0093, 0178, 0512, 0535, 0868, 1522

14. Appendix



Mivar	0216, 0217, 0290, 0292, 0516, 0609
Mogen	1683, 1820
Monaco	0009
Morgan's	0037
Motorola	0093
MTC	0370, 0060, 0216, 0349, 0512
MTEC	0272
MTlogic	0714, 2050
Multibroadcast	0193
Multitec	0037, 0668, 1037, 0486, 1556
Multitech	0037, 0486, 0264, 0370, 0009, 0216, 0217, 0247
Murphy	0104, 0163, 0216
Musikland	0218, 0247
Mx Onda	1498, 1687
MyCom	1376
Myrica	1666
Myryad	0556
NAD	0037, 0361, 0865
Naiko	0037, 0606, 0753, 1982
Nakimura	0037, 0374
Narita	1982
NAT	0226
National	0226
NEC	0036, 0009, 0011, 0170, 0217, 0245, 0320, 0374, 0704, 1270, 1704
Neckermann	0556, 0037, 0370, 0087, 0191, 0200, 0247, 0320, 0327, 0349, 0411, 0418, 0554
NEI	0037, 1037, 0371
Neon	1267, 1732
Neovia	0865, 0876, 1206, 1338, 1371, 1373, 1376, 1384, 1964, 1994
Nesco	0247
Nesx	1732
Netsat	0037
NetTV	0762
Neufunk	0556, 0037, 0714, 0610, 0218, 0009
New Tech	0556, 0037, 0009, 0217, 0343
New World	0218
Nextier	1598
NFREN	0800

Nicam	0544
Nicamagic	0216
Nikkai	0037, 0264, 0218, 0036, 0009, 0035, 0072, 0216, 0217
Nikkei	0714
Nikko	0178
Nobliko	0070, 0216
Nogamatic	0109
Nokia	0548, 0610, 0606, 0361, 0163, 0208, 0320, 0339, 0346, 0349, 0374, 0473, 0480, 0492, 0631
Norcent	1365, 1588
Nordic	0217
Nordmende	0037, 0714, 0560, 0195, 0109, 0287, 0343, 1289, 1413, 2129
Normerel	0037
Northern Star	1206
Novatronic	0037, 0105, 0374
Novita	1384
Oceanic	0548, 0361, 0163, 0208, 0473
Odeon	0264
Okano	0037, 0264, 0370, 0009, 0072
Olidata	1376
Omega	0264
Onida	1053, 1224
Onimax	0714
Onn	1709, 2029, 2055, 2112, 2125, 2130, 2133
Onwa	0218, 0433, 0371, 0602
Onyx	1709, 1770
Opera	0037
Optimus	0650, 0166
Optoma	1263, 1622, 1674
Orbit	0037
Orcom	1504
Orion	0556, 0037, 0714, 1037, 2031, 2007, 2005, 2001, 1954, 1916, 1908, 1722, 1196, 0880, 0655, 0544, 0516, 0443, 0412, 0355, 0321, 0320, 0011
Orline	0037, 0218
Ormond	0668, 1037
Orsowe	0516
Osaki	0556, 0037, 0264, 0218, 0072, 0217, 0272, 0355, 0374, 0412

14. Appendix



Osio	0037, 0290
Oso	0218
Osume	0037, 0218, 0036, 0072
Otic	1498, 1687
Otto Versand	0556, 0037, 0195, 0361, 0036, 0226, 0191, 0109, 0217, 0247, 0320, 0343, 0349, 0093, 0512, 0535, 0544, 0554
Pacific	0556, 0714, 1037, 1137, 0443, 1324
Packard Bell	1314, 1474
Pael	0216
Palladium	0556, 0037, 0714, 0370, 1137, 0200, 0217, 0247, 0327, 0349, 0191, 0411, 0418, 0519, 0554, 0163, 0630, 0655, 0087
Palsonic	0037, 0698, 0264, 0001, 0217, 0418, 1196, 1269, 1507
Panama	0037, 0264, 0009, 0216, 0217, 0247
Panasonic	0037, 0548, 0361, 0650, 0226, 0163, 0367, 0516, 0853, 1310, 1480, 1636, 1650, 1410, 1510
Panavision	0037, 0411
Pathe Cinema	0163, 0216, 0292, 0320
Pathe Marconi	0109
Pausa	0009
Penney	0060, 0156, 0178, 1907
Perdio	0037, 0072, 0163, 0216, 0282, 0320
Perfekt	0037
Petters	0037
Philco	0037, 0370, 0074, 0087, 0145, 0247, 0418
Philex	0193
Philharmonic	0217
Philips	0556, 0037, 0361, 2015, 1887, 1867, 1756, 1521, 1506, 1495, 1304, 0772, 0639, 0605, 0554, 0423, 0374, 0343, 0200, 0193, 0087, 0009
Phocus	0714, 1289, 1308, 1652, 1800
Phoenix	0037, 0486, 0370, 0072, 0087, 0163, 0216, 0320
Phonola	0556, 0037, 0087, 0193, 0216
Pilot	0706
Pioneer	0037, 0486, 0361, 0370, 0109, 0163, 0166, 0287, 0423, 0512, 0679, 0760, 1260, 1398, 1457, 1717
Pionier	0486, 0370, 1556
Plantron	0037, 0264, 0009
Playsonic	0037, 0714, 0715, 0217, 0339, 1652, 1800

Polaroid	1498, 1523, 1645, 1687, 1720, 1741, 1276
Poppy	0009
Portland	0374, 0624
Powerpoint	0037, 0698, 0487, 0894
Prandoni-Prince	0361, 0247, 0516
Precision	0217
Premier	0891
Prima	0264, 0009, 0412, 1196, 1269, 1507
PrimeView	1606
Prinston	1037, 0715
Prinz	0361, 0072, 0349, 0544
Profex	0361, 0009, 0163
Profi	0009
Profilo	1556
Profitronic	0037
Proline	0037, 0625, 0634, 1037, 0072, 0321, 0411, 0621, 0630, 1376, 1545, 1727, 1981
Proscop	0156
Prosonic	0037, 0714, 0668, 0370, 0216, 0217, 0371, 0374, 1732, 1787, 1865, 1893, 2031, 2085
Protech	0037, 0668, 1037, 0486, 0264, 0009, 0217, 0247, 0282, 0349, 0418
Proton	0178
ProVision	0556, 0037, 0714, 1324
Proxima	0735, 0737
Pvision	0876, 1521, 2001
Pye	0556, 0037, 0087, 0349, 0374, 0554
Pymi	0009
QONIX	1634
Quadral	0218
Quasar	0009, 0247, 0865
Quelle	0037, 0668, 0195, 1037, 0361, 0554, 0544, 0535, 0512, 0349, 0327, 0247, 0200, 0191, 0109, 0104, 0074, 0070, 0011
Questa	0036
R-Line	0037
Radialva	0218, 0163
Radiola	0556, 0037, 0217
Radiomarelli	0037, 0087, 0247, 0516
RadioShack	0037, 0178
Radiotone	0037, 0668, 1037, 0264, 0370, 0009, 0412, 0418, 0648

14. Appendix



Rank	0070
Rank Arena	0036
RBM	0070
RCA	0625, 0093, 1907
RealTV	1267
Reality	1267
Recor	0037
Rectiligne	0037
Rediffusion	0548, 0361, 0036, 0346
Redstar	0037
Reel Multimedia	1424
Reflex	0037, 0668, 1037
Relisys	0865, 0876, 0877, 0878, 1206, 1207, 1376, 1521, 1585, 1598, 1612, 1645, 1741
Remotec	0037, 0093, 0145, 0171
Reoc	0714
Revox	0037
Rex	0264, 0163, 0206, 0247, 0259, 0411, 0551
RFT	0037, 0264, 0072, 0087
Roadstar	0037, 0714, 0668, 1037, 0715, 0264, 0218, 0009, 0282, 0418, 1189, 1900
Robotron	0087
Rolson	0819, 1371
Rover	0877
Royal Lux	0370, 0335, 0412
Saba	0625, 0548, 0714, 0560, 0361, 0087, 0109, 0163, 0287, 0335, 0343, 0498, 0516, 1588
Sagem	0610, 0455, 0830, 1313, 1596
Saisho	0264, 0009, 0011, 0163, 0217, 0516, 0544
Saivod	0037, 0668, 1037, 0712, 1163, 1556, 1982
Sakai	0163
Salora	0548, 0361, 0163, 0208, 0290, 0349, 0356, 0480, 0516, 0621, 0631, 1166, 1202, 1556
Salsa	0335
Sambers	0516
Sampo	1755, 0762
Samsung	0556, 0037, 0264, 0370, 0587, 0618, 1249, 1312, 1395, 1458, 1584, 1619, 1630, 1632, 1678, 1907, 2051, 2094, 2097, 2103, 1235, 0814, 0812, 0644, 0519, 0290, 0217, 0216, 0208, 0178, 0163, 0072, 0060, 0009
Sandra	0216, 0217
Sansui	0037, 0706, 0655, 0729, 0861, 1371, 1553

Santon	0009
Sanyo	1037, 0370, 0036, 0108, 1907, 1667, 1654, 1649, 1648, 1647, 1208, 0893, 0735, 0704, 0544, 0339, 0292, 0217, 0216, 0208, 0170, 0163, 0104, 0072, 0045, 0011, 0009, 1276
SBR	0556, 0037, 0193
Schaub Lorenz	0548, 0714, 0486, 0606, 0361, 0349, 0374, 1191, 1324, 1371
Schneider	0556, 0037, 0714, 0668, 1037, 0361, 1137, 0218, 1982, 1981, 1474, 0648, 0544, 0519, 0394, 0371, 0352, 0349, 0343, 0259, 0247, 0217, 0163, 0070
Scotch	0178
Scotland	0163
Scott	1189
Sears	0156, 0171, 0178
Seaway	0634
Seelver	1037
SEG	0037, 0668, 1037, 0487, 0264, 0218, 0036, 1437, 1163, 1149, 0624, 0362, 0349, 0247, 0217, 0216, 0009
SEI	0037, 0087, 0163, 0206, 0349, 0516, 0544
Sei-Sinudyne	0037, 0087, 0206, 0516, 0544
Seleco	0163, 0206, 0259, 0346, 0362, 0371, 0411, 0435, 0551
Semp	0156
Sencora	0009
Sentra	0035
Serino	0610, 0455, 0093, 0216
Sharp	0036, 0653, 1193, 0093, 0193, 0200, 0491, 0516, 0818, 1393, 1586, 1659, 1819, 0787, 1459
Shintoshi	0037
Shivaki	0037, 0443
Siarem	0087, 0163, 0516
Siemens	0037, 0195, 0191, 0200, 0327, 0535, 0554
Siera	0556, 0037
Siesta	0370
Silva	0037, 0361, 0216, 0648
Silva Schneider	0037, 1166, 1556, 1982
Silvano	0587
Silver	0715, 0361, 0036
SilverCrest	1037
Singer	0037, 0433, 0009, 0087, 0247, 0335, 0435
Sinotec	0773

14. Appendix



Sinudyne	0037, 0361, 0087, 0163, 0206, 0349, 0516, 0544
Skantic	0356
SKY	0037, 0880, 1376, 1504, 1511, 1513, 1606, 1612, 1613, 1614, 1615, 1745, 1775, 1848
SKY Brazil	0880
Sliding	0800, 0865, 0880, 1324, 1374, 1375, 1377
SLX	0668
Smaragd	0487
Soemtron	0865, 1298
Sogera	0320
Sogo	1376, 2050
Solavox	0037, 0548, 0361, 0072, 0163
Sonawa	0218
Soniko	0037
Sonitron	0370, 0208, 0217, 0339
Sonix	1376, 1732
Sonneclair	0037
Sonoko	0037, 0264, 0009, 0217, 0282
Sonolor	0548, 0361, 0163, 0208, 0282
Sontec	0037, 0370, 0009
Sony	0037, 1505, 0036, 1925, 1825, 1751, 1685, 1651, 1625, 1551, 1317, 1010, 0834, 0810, 0353, 0074, 0011
Sound & Vision	0218, 0374
Soundesign	0178
Soundwave	0037, 1037, 0715, 0320, 0418, 1846
Spectra	0009
Squareview	0171
Ssangyong	0009
Standard	0037, 1037, 0218, 0009, 0217, 0320, 0374, 1709
Starlite	0037, 0264, 0009, 0163
Stenway	0218, 0282
Stern	0264, 0163, 0206, 0259, 0411, 0551
Strato	0037, 0264, 0009, 1787
Strong	1149, 1163
Stylandia	0217
SunBrite	1435
Sungoo	2037
Sunkai	0610, 0487, 0218, 0455, 0321, 0355, 0865

Sunstar	0037, 0264, 0009, 0371
Sunstech	2001
Sunwood	0037
Superla	0216, 0217, 0516
SuperTech	0556, 0037, 0218, 0009, 0216
Supra	0009, 0374
Susumu	0218, 0287, 0335
Sutron	0009
SVA	0587, 0865
Swedx	1606
Swissflex	2062
Swisstec	2062, 2059, 1849, 1848, 1776, 1775, 1745, 1615, 1614, 1613, 1612, 1606, 1513, 1511, 1504, 1376, 0880, 0865
Sydney	0216, 0217
Sylvania	0171, 1394, 1864
Sysline	0037
Sytong	0216
T+A	0447
Tactus	0272
Tandberg	0361, 0109, 0367
Tandy	0218, 0072, 0093, 0163, 0217, 0247
Targa	1267, 1371
Tashiko	0036, 0163, 0170, 0216, 0217
Tatung	0037, 0011, 0072, 0217, 0272, 0516, 0621, 1191, 1248, 1324, 1371, 1553, 1556, 1719, 1720, 1756
TCL	0706, 1537
TCM	0714, 0808, 1289, 2001
Teac	0037, 0714, 0668, 0698, 0712, 0264, 0455, 0009, 0170, 0171, 0178, 0349, 0512
Tec	0037, 0009, 0217, 0247, 0259, 0335, 0471
Tech Line	0037, 0668, 1163, 1437
Tech Lux	1189
Techica	0218
Technema	0320
Technica	0621, 1982
Technics	0556, 0650
Technika	1849, 1865, 2029, 2032, 2059, 2106
TechniSat	0556, 0655, 1267
Technisson	0714, 1289, 1652

14. Appendix



Technosonic	0556, 0625, 0499, 0880, 1324, 1326, 1890, 1893, 1982, 2032
Technotrend	1531, 1702
Techwood	1037, 1163
Teckton	1376
Tecnimagen	0556
Teco	1040
Tedelex	0009, 0217, 1709
Teiron	0009
Tek	0795
Teknika	0060
TELE System	0876
Teleavia	0287, 0343
Telecor	0037, 0218, 0163, 0217, 0259, 0394
Telefunken	0037, 0625, 0714, 0560, 0486, 1536, 0896, 0566, 0498, 0471, 0346, 0343, 0335, 0287, 0109, 0101, 0074, 0073, 1626
Telefusion	0037
Telegazi	0037, 0264, 0218, 0163, 0259
Telemagic	0735
Telemeister	0037, 0320
Telesonic	0037
Telestar	0556, 0037
Teletech	0037, 0668, 1037, 0009, 0247
Teleton	0036, 0206, 0217, 0259, 0349
Televideon	0163, 0216, 0320
Teleview	0037
Tempest	0009
Tennessee	0037
Tensai	0037, 1037, 0715, 0218, 0009, 0104, 0105, 0217, 0247, 0320, 0371, 0374, 0377
Tenson	0009, 0320
Tevion	0556, 0037, 0714, 0668, 1037, 1137, 2032, 1800, 1787, 1687, 1645, 1556, 1498, 1298, 1289, 1259, 1248, 0808, 0648
Texet	0218, 0009, 0216, 0217, 0374
Texla	0780
Thes	2031, 2036, 2038
Thomson	0037, 0625, 0560, 0109, 0287, 0335, 0343, 0349, 0471, 1588
Thorn	0037, 0361, 0036, 0553, 0535, 0512, 0499, 0343, 0335, 0272, 0193, 0109, 0104, 0074, 0073, 0072, 0035

Thorn-Ferguson	0073, 0193, 0335, 0343, 0499
Time	1702, 1994, 1997
Tiny	1269
Tiny Digital	0660
TMK	0178
Tobishi	1521
Tokai	0037, 0668, 1037, 0009, 0072, 0163, 0217, 0374
Tokaido	1037
Tokyo	0035, 0216
Tomashi	0218, 0282
Topline	0668, 1037
Toshiba	0195, 1037, 0036, 0618, 0650, 0508, 1935, 1656, 1524, 1508, 1289, 1164, 1163, 0832, 0736, 0553, 0241, 0156, 0109, 0070, 0060, 0035, 1265, 1325
Tosumi	1982
Towada	0217, 0349
Toyoda	0009
Trakton	0264
TRANS-continents	0556, 0037, 0668, 1037, 0217, 0621, 0865, 1374, 1377
Transonic	0037, 0587, 0009
Transtec	0216
Trident	0217, 0516
Trio	1498, 1687
Tristar	0264, 0218, 0193
Triumph	0556, 0037, 0346, 0516
Tsoschi	0282
TVTEXT 95	0556
TWF	1871
Uher	0037, 0486, 0370, 0206, 0259, 0320, 0374, 0418, 0480
Ultravox	0037, 0087, 0163, 0216, 0247, 0374
UMC	1513, 1606, 1614, 1745, 1775, 1849, 2059, 2062, 2106
Unic Line	0037, 0455, 0473
United	0037, 0714, 1037, 0715, 0587, 1770, 1916, 1982
Universal	0037
Universum	0037, 0668, 0195, 1037, 0361, 0264, 0370, 0036, 0618, 0411, 0418, 0473, 0480, 0492, 0512, 0535, 0544, 0554, 0631, 0808, 1163, 1437, 0362, 0349, 0346, 0327, 0290, 0247, 0217, 0200, 0170, 0109, 0105, 0104, 0074, 0070, 0011, 0009

14. Appendix



Univox	0037, 0087, 0163
V2max	0865
V7 Videoseven	0880, 1217, 1267, 1376, 1666, 1755
Venturer	1545, 1727, 1865
Vestel	0037, 0668, 1037, 0217, 1163, 1585, 1667
Vexa	0037, 0009
Vibrant	0272
Victor	0036
Videocon	0508
Videologic	0218, 0216
Videologique	0218, 0216, 0217
Videosat	0247
VideoSystem	0037
Videotechnic	0216, 0217, 0320, 0374
Videoton	0163, 0356
Vidikron	0735, 1398
Vidtech	0178
Viewpia	0876
Viewsonic	1511, 1513, 1542, 1588, 1627, 1745, 1755, 1330, 1578
Visiola	0216
Vision	0037, 0217, 0320
Vistar	0206
Vistron	1363, 2019
Vivax	1308, 1326
Vivid	1308
Vortec	0037
Voxson	0037, 0087, 0163, 0418
Waltham	0037, 0668, 1037, 0109, 0217, 0356, 0418, 0443
Wards	0060, 0156, 0166, 0178
Watson	0037, 0714, 0668, 1037, 0218, 0009, 0163, 0320, 0394, 0519, 1376, 1437
Watt Radio	0163, 0216, 0349, 0544
Wega	0037, 0036, 0087
Wegavox	0009
Welltech	0714, 1625
Weltblick	0217, 0320
Weltstar	1037
Westinghouse	0890

Wharfedale	0556, 0037, 0519, 0861, 1324, 1556, 1667, 1983, 1988, 2055, 2134
White Westinghouse	0037, 0216, 0320, 0624
Wilson	0556
Windsor	0668, 1037
Windstar	0282
Windy Sam	0556
World-of-Vision	0865, 0877, 0880, 0890, 1217, 1289, 1298, 1606, 1732
X-View	1191
Xenius	0634, 0661
XLogic	0860
Xomax	1770
Xoro	1196, 1217, 1243, 1507, 1789, 2146
Xrypton	0037
Yakumo	1613
Yalos	1771
Yamaha	0797, 1526, 1576, 0833
Yamishi	0037, 0218, 0455, 0217, 0282
Yokan	0037
Yoko	0037, 0264, 0370, 0218, 0009, 0216, 0217, 0247, 0339
Yorx	0218
Ytaiwai	1531
Zanussi	0206, 0217
Zenith	0624, 1265
Zenor	0339
TV/VCR Combo	
Aiwa	1916
Amstrad	0171
Beko	0486
Black Diamond	1909
Blue Sky	0624, 1916
Daewoo	1909, 0624
Dantax	1916
Emerson	1909, 0624
Ferguson	0625, 0073
Fidelity	0171
Finlux	0104
Firstline	0624

14. Appendix



GE	0093, 1907
GoldStar	0037
Goodmans	1909, 0374, 0624, 1916
Grandin	0624
Grundig	0556, 0037, 0195, 0554, 1916
Hanimex	1908
Hinari	0036, 1908
Internal	1909, 0624
Irradio	0724
LG	0178
Magnin	1907
Matsui	1916
MGA	1907
Mitsubishi	0556, 0093
Orion	1908, 1916
Penney	1907
Philips	0556, 0037
Portland	0624
Radiola	0556
RCA	0093, 1907
Saba	0625

Samsung	1907
Sanyo	1907
Schneider	0556, 0037
SEG	0624
Sharp	0093
Siemens	0037
Sony	1505, 1925
Teac	0171
Technics	0556
Telefunken	0074
Thomson	0625
United	1916
Universum	0105
White Westinghouse	0624
TV/VCR/DVD Combo	
Bush	1954
Ferguson	1935
Grundig	1954
Matsui	1935
Orion	1954

2. DVD Code List

Brand	Code
DVD Player	
3D LAB	0539
4Kus	1158
A-Trend	0714
Acoustic Solutions	0730, 0713, 1242, 2082, 2195
AEG	0770, 0790, 0675, 0788, 1233, 1923
AFK	1152, 1923
Airis	0672, 0826, 1224, 1321, 2256
Aiwa	0533, 1243
Akai	0790, 0788, 0898, 1115, 1233, 1695, 2236
Akira	1620
Akura	0898, 1140, 1233, 1493
Alba	0539, 0695, 0730, 0672, 0713, 0717, 1140, 1530, 1695, 1994, 2256
Alize	1151

Altacom	1224
Amitech	0770, 0122, 0850
Amstrad	0770, 0790, 0713, 1151, 1493
Amuseer	1351
AMW	0872
Ansonic	0831, 0759, 1351, 1493
Apex Digital	0672, 1004, 1254, 1480
Arena	1115
Aristona	0539, 0646, 2241
ASCOMTEC	1923
Asono	1224
Atacom	1224
Audiola	1620, 2335
Audiosonic	1923, 2256
Audix	0713

14. Appendix



Autovox	0713
Auvio	0843
Axion	0730
Basic Line	0713, 1994
Baze	0898
BBK	1224
Bellagio	1004
Bellwood	0826
Belson	1493, 1923
Belsonic	1493
Berthen	1643
Binatone	1923
Biostek	1601
Black Diamond	0713
Blu:sens	1233, 1321
Blue Nova International	1321
Blue Sky	0695, 0651, 0790, 0672, 0713, 0843
BlueTinum	1493
Boghe	1004
Boman	0898
Bose	2023
Brainwave	0770, 1115
Brandt	0503, 0551, 0651
Broksonic	0695
Bush	0730, 0831, 0672, 0713, 0717, 0723, 1140, 1351, 1419, 1436, 1530, 1695, 1832, 2256, 2261
Cambridge Audio	0751
Cat	0789, 1923
CCE	0730
cello	1730, 2112, 2186
Centrum	0675, 0713, 0789, 1227, 1923, 1994
CGV	0751, 1115
Chili	1492, 1493
Cinea	0841
Cinetec	0713, 0872
CJ Digital	1643, 2173
Classic	0730, 1730
Clatronic	0672, 0675, 0788, 1233, 1923
Clayton	0713

CMX	1643
Coby	0730, 1351
Codex	1233
Commax	1321, 1492
Compacks	0826, 2235
Contel	0788
Continental Edison	0831, 0872
Crown	0770, 0713, 1115
Cybercom	0831
CyberHome	0714, 0816
Cytron	0651, 0705, 1347
D-Vision	1115
Daenyx	0872
Daewoo	0770, 0213, 0705, 0714, 0832, 0872, 1436, 1441, 1663
Dalton	1036
Dansai	0770, 1115, 1695
Dantax	0539, 0790, 0713, 0723, 1358
Daytek	0872
Dayton	0872, 1158
DCE	0831
Decca	0770, 1115
Denon	0490, 0634, 1634
Denver	0672, 0788, 0898, 1321, 1420, 1493, 1601, 1923, 2256
Denzel	0665
Desay	0843
Dgtec	0672
Diamond	0651
Difrnce	2235
Digihome	0713
DigiLogic	0713, 1663
Digitech	1832
Digitek	0122
Digitrex	2261
Digix Media	0826
DiK	0831
Dinamic	0788
Disney	0831
DiViDo	0705

14. Appendix



DK Digital	0831, 1254
Dragon	0831
DreamX	1151
DSE	1730
Dual	0730, 0831, 0651, 0790, 0665, 0713, 1436, 1530
Durabrand	0831, 0675, 0713, 1420, 1530, 1663
E:max	0330, 1233, 1321, 1643, 1670
eBench	1152
ECC	0730
Eclipse	0723, 0751
Elfunk	0713, 0850
Elin	0770
Ellion	0122, 0850
Elta	0770, 0672, 0788, 0850, 1115, 1151, 1233, 1670, 2173
Eltax	1233, 1321, 1620
Emerson	0591, 0705
Enterprise	0591
EuroLine	0675, 0788, 1115, 1233, 1351, 1444, 1643
F&U	2172
Fenner	0651
Ferguson	0695, 0651, 0713, 0898, 1695, 1730
Finlux	0741, 0591, 0770, 0672, 0751
Fintec	1530
Firstline	0713, 0843, 0869, 1530
Fisher	0670
Funai	0695, 0675
Gateway	1158
GE	0717
Global Link	1224
Global Solutions	0768
Global Sphere	1152
Go Video	0869
Gold	2112
GoldStar	0741, 0591
Goodmans	0730, 0651, 0790, 0713, 0723, 1004, 1140, 1152, 1254, 1530, 1730, 1923, 2261
GoWell	1643
GPX	0741

Graetz	0665
Gran Prix	0831, 0898
Grandin	0713, 1233, 1254, 2173
Greenhill	0717
Grundig	0539, 0551, 0695, 0651, 0790, 0670, 0705, 0713, 0775, 1004, 1036, 1436, 1643, 1695, 1730, 1832
Grunkel	0770, 0831, 0790, 1493
GVG	0770
H & B	0122, 0713, 0841, 0850, 1233, 2173
Hanseatic	0741, 0790
Harman/Kardon	0702, 1229, 1492
Harwa	2235
HCM	0788
HDT	0705
HE	0730, 1923
Henss	0713
Hikona	1383
HiMAX	0843
Hitachi	0573, 0664, 0713, 1994
Hiteker	0672, 1923
Hoeher	0831, 0651, 0713, 0826, 1004, 1224, 1530
Home Electronics	0770, 0730
Home Tech Industries	1224, 1643, 1923
HotMedia	1152
Humax	0646, 2338
HYD	1233
Hyundai	0850
Ingelen	0788
Inno Hit	0713
International	1663
Irradio	0869, 1115, 1224, 1233
ISP	0695
it's	0717
Jamo	1036
Jaton	0665
JDB	0730
JGC	1530
JMB	0695
JVC	0623, 0539, 0503, 1164, 1597, 1901

14. Appendix



Kansas Technologies	1233, 1530
Kazuki	1493
Kendo	0831, 0672, 0713
Kennex	0770, 0713, 0898
Kenwood	0490, 0534
KeyPlug	1643
Kiiro	0770
King Vision	1493, 1643
Kiss	0665, 0841
KXD	0857, 1321, 1492, 1923
Lawson	0768
Leiker	0872
Lenco	0770, 0651, 0713, 1383
Lexia	0768
LG	0741, 0591, 0790, 0869, 1544, 1906, 2002
Lifetec	0831, 0651, 1347
Limit	0768
LiteOn	1158, 1416, 1644, 1738
LM	1643
Lodos	0713
Loewe	0539, 0741
Logic	2304
Logik	0713
Logix	0705
Lumatron	0741, 0695, 0705, 0713, 1115, 1321, 1832, 2252
Lunatron	0741
Luxman	0573
Luxor	0713, 0717, 1004, 1695, 1730
Magnat	1923
Magnavox	0539, 0503, 0646, 0675, 0713, 1140
Magnex	0723
Magnum	1436
Majestic	1620, 2335
Manhattan	0705, 0713
Manta	1493
Marantz	0539
Mark	0713
Marquant	0770, 2261

Matsui	0695, 0651, 0672, 0713, 1004, 1695, 1730
Maxim	0713, 0872, 1242
MBO	0730, 1730
MDS	0713
Mecotek	0770
Mediencom	0751
Medion	0741, 0630, 0831, 0651, 1347, 1644
MEI	0790
Memorex	0831
Metz	0571, 0525, 0713, 1994
MiCO	0723, 0751, 1254
Micromaxx	0695, 1695
Micromedia	0539, 0503
Micromega	0539
Microsoft	0522, 1708, 2083
Microstar	0831
Minax	0713
Minoka	0770, 1115
Mitsubishi	0713
MixSonic	1130
Mizuda	0770
Monyka	0665
MPX	0843
MTlogic	2256
Mustek	0730, 1601, 1730
Muvid	1493, 1643, 2173
Mx Onda	0651, 0751, 1254
Myryad	1254
Mystral	0831
NAD	0741
Naiko	0770, 1004
Neom	1493, 1643
Neon	0122
Neufunk	0665
Nevir	0770, 0831, 0672
Nexius	0790
Next Base	1667
NFREN	0826

14. Appendix



Nikkai	1923
Nikkei	1254
Norcent	1923
Nordmende	0831
Nortek	2173
Oasis-Media	1601
Olidata	0672
Onkyo	0503, 0627, 1769
Onn	2316
Onyx	2112
Oopla	1158
Opera	2252
Optim	0843
Optimus	0525
Orbit	0872, 1643
Orion	0695, 0713, 1233, 1419, 1695
Oritron	0651
Ormond	0713
Pacific	0831, 0768, 0790, 0713, 0759
Packard Bell	0831, 1321, 1648
Palladium	0695, 0713, 1906
Panasonic	0490, 1579, 1641, 1834, 1905, 1908
Panda	0789, 1492
peeKTon	0898, 1224
Philips	0539, 0503, 0646, 0675, 1158, 1340, 1354, 1506, 1755, 1813, 1846, 2049, 2056, 2084, 2093, 2225, 2205
Pioneer	0571, 0525, 0142, 0631, 1460, 1531, 1571, 1900, 1965, 2279
PJ	1923
Play It	1643
Plu2	0850
Polaroid	1480
Powerpoint	0872
Prinz	0831
Prism	0831, 0705
ProCaster	1004, 2123
Proline	0651, 0672, 1004, 1358, 1738, 2082
Proscan	0522
Proson	0713

Prosonic	1441, 2195
ProVision	0730, 1321, 1493, 1923
Pye	0539, 0646
QONIX	0790
Quartek	1648
Radionette	0741, 0869, 1906
Radiotone	0713
Raite	0665
RCA	0522, 1759
REC	0490
Redstar	0770, 0759, 0788, 0898, 1394, 1923
Relisys	1347
Reoc	0768, 0875
Revoy	0841
Richmond	1233
Roadstar	0730, 0672, 0713, 0898, 1227, 1832
Ronin	0872
Rotel	0623
Rowa	0717
Rownsonic	0789
Saba	0551, 0651, 2173
Saivod	0831, 0759
Salora	0741
Sampo	1321
Samsung	0490, 0573, 0199, 0298, 0744, 1075, 1635, 1748, 1932, 2107, 2113, 2269, 0820
Sansui	0695, 0122, 0751
Sanyo	0670, 0713
Scan	0705, 0850
ScanMagic	0730, 1730
ScanSonic	1695
Schaub Lorenz	0770, 0788, 1115, 1151, 1643
Schneider	0539, 0831, 0646, 0651, 0790, 0705, 0713, 0788, 0869, 1227, 1358, 2241
Schoentech	0713
Scientific Labs	0768
Scott	0651, 0672, 1036, 1233, 1394, 1923
Seeltech	1224, 1643
SEG	0665, 0713, 0872, 1530, 1994, 2252
Shanghai	0672

14. Appendix



Sharp	0630, 0675, 0713, 0869, 1419
Sherwood	0741, 0717
Shinco	0717
Siemssen	1382
Sigmatek	1224, 2123
Siltex	1224
Silva	0788, 0898
Silva Schneider	0741, 0831, 0869, 0898
SilverCrest	0126, 0131, 1152
Sinudyne	1254
Sistemas	0672
Skantic	0539, 0713
SKY	0122
Skymaster	0730, 0768
Skyworth	0898
Sliding	1115
SM Electronic	0730, 0768, 1152
Smart	0705, 0713
Sogo	1493, 2172, 2256
Sontech	1444
Sony	0533, 0864, 1033, 1070, 1516, 1536, 1633, 1824, 1903, 1981, 2020, 2043, 2132, 2138
Sound Color	1233
Soundmaster	0768
Soundwave	0713, 1530
Standard	0831, 0768, 0651, 0788, 0898
Star Clusters	1152, 1227
Starmedia	1224
Stein	1601
Strato	1152, 1382
Strong	0713
Sunkai	0770, 0850
Sunstech	0831, 1601, 1620
Sunwood	0788, 0898
Supervision	0768, 1152
Supratech	2172, 2238
SVA	0672
Swisstec	2187, 2263
Sylvania	0675, 2194

Symphonic	0675
Synn	0768
Syscom	0826
Sytech	1601, 2123
Tamashi	1394
Tandberg	0713, 1695, 1994
Tangent	1321
Targa	1227, 1644, 1906
Tatung	0770, 1695
Tchibo	0741
TCM	0741, 0790
Teac	0741, 0768, 0705, 0717, 0759, 1227
Tec	0898
Technica	1695
Technics	0490, 1905
Technika	0770, 0831, 1115, 1530, 1695, 2187, 2195, 2263, 2302
Technisson	1115
Technosonic	1115
Techwood	0713, 1530, 1994
Telefunken	0551
Teletech	0768, 0713
Tensai	0770, 0651
Tevion	0651, 0898, 1036, 1227, 1382, 1444, 1730, 1923, 2252
Textorm	1493
Theta Digital	0571
Thomson	0551, 0522, 1254, 1667, 1759
Time	0122
Tokai	0790, 0665, 0788, 0898, 1233
Tom-Tec	0789, 1601
Top Suxess	1224
Toshiba	0503, 0695, 1459, 1510, 1637, 1639, 1769, 2006
TRANS-continent	0831, 0826, 0872, 1233, 1321
Tredex	0843
Trevi	0831
TSM	1224
TVE	0713
Umax	1151

14. Appendix



UMC	2187, 2263, 2302
United	0695, 0730, 0675, 0713, 0788, 0826, 1115, 1152, 1233, 1351, 1444, 1643, 1832, 2112
Universum	0741, 0591, 0790, 0713, 0869, 1227, 1530
Vecatech	1493
Venturer	0790, 1769, 2082, 2195
Vestel	0713, 1530, 1994
Vieta	0705
Voxson	0730, 0831
Waitec	0730, 1151, 1224, 1233
Walkvision	0717
Waltham	0713, 1530
Welkin	0831
Wellington	0713
Weltstar	0713
Wharfedale	0790, 0713, 0751, 1115, 1383, 1832
Wilson	0831, 1233
Windsor	0713
Windy Sam	0573
Wintel	1130
Woxter	1151, 1224
Xbox	0522, 1708, 2083
Xenius	0790
Xomax	2112
Xoro	1183, 2341
Yakumo	1004
Yamada	0872, 1004, 1151, 1158, 1416, 1492, 1493
Yamaha	0490, 0539, 0646, 0817
Yamakawa	0665, 0872, 2252
Yukai	0730, 1730
Zenith	0503, 0591

TV/DVD Combo	
Acoustic Solutions	2082, 2195
Airis	2256
Akai	2236
Alba	2256
Audiosonic	2256
Bush	0713, 2256, 2261
cello	2112, 2186
Dantax	1358
Denver	1420, 2256
Digitrex	2261
Gold	2112
Hikona	1383
Logic	2304
Marquant	2261
MTlogic	2256
Onn	2316
Onyx	2112
Philips	2225
Proline	2082
Prosonic	2195
Sliding	1115
Sogo	2256
Swisstec	2263
Technika	2195, 2302
UMC	2302
Venturer	2082, 2195
TV/VCR/DVD Combo	
Ferguson	0695
Matsui	0695

3. Audio & AUX Code List

Brand	Code
Audio Amplifier	
Acoustic Solutions	1446, 1470, 1501, 1601
Cambridge Audio	1730
Curtis Mathes	0300
Denon	0272

Durabrand	1561, 1568
Goodmans	1590
Hitachi	1561
JBL	1177
Logitech	1408
Magnat	1177

14. Appendix



Magnum	1601
Mustek	1590
Optimus	0300, 0823
Pacific	1601
Pioneer	0300, 0823
RCA	0300
Sven	1568
Tevion	1601
Trice	1568
upXus	1446
Vieta	1177
Yamaha	0354, 0848
Audio Accessory	
Apple	1115
Sony	0159
Yamaha	2021, 2116
Audio Receiver	
Acoustic Solutions	1546
AEG	1389, 1390
AFK	1389
Aiwa	0121, 1405
Akai	0115, 0609, 1390, 1546
Alba	1546, 1554
All-Tel	1390
Amstrad	0744, 1390
Anam	0609
Arcam	1212
ASCOMTEC	1389
Audiolab	1189
Audiosonic	1389
Audiotronic	1189
Bang & Olufsen	0799
Basic Line	1554
Belson	1389
Binatone	1389
Blue Sky	1390, 1546
Bose	1229, 1629
Bush	0797
Cambridge Audio	1455, 1647

Cat	1389
CCE	1352
Centrum	1220, 1389
Clatronic	0797, 1389
Cosmotron	0797
Daewoo	1436
Dantax	0463, 1390
Denon	1360, 0771, 1104, 1434, 2857, 2861
Denver	1389
Digeo	2857, 2861
DiK	0797
Dual	1220, 1390
eBench	0744, 0797
Elta	0744, 0797, 1390
EuroLine	1625
Fine Arts	1189
Firstline	0797
Garrard	0286, 0463
Genexxa	0186
Global Sphere	1625
Goodmans	0609, 0744, 0797, 1389, 1390
Grundig	1189, 0286, 0797, 1089, 1546
Grunkel	0744, 1390
Hanseatic	1390
Harman/Kardon	1189, 1304, 0110, 0208, 1306, 1310
Harwood	0744
HCM	1390
HE	1389
Hitachi	1554
Hitech	0744
Hiteker	1389
Home Tech Industries	1389
Hyundai	1546
Inkel	0502
Intersound	0744
JBL	1304, 1306
JVC	0074, 0464, 1374
Kenwood	1027, 1313, 1569, 0186
Kioto	0797

14. Appendix



Kompernass	0797
KXD	1389
LG	1293, 1524, 2197
Lifetec	0797
LXI	0744
Magnat	1389
Magnavox	1189, 1089
Marantz	1189, 1269, 0891, 1089, 1289
Matsui	0744, 0797
MBO	1352
Medion	0797, 1546
MEI	1390
Metz	1554
Micromega	1189
Microstar	0797
MTlogic	1546
Musicmagic	1089
Mustek	1352
Mx Onda	0744, 0797
Myryad	1189
NAD	0320, 0609
Nexius	1390
Nikkai	1389
Nikkei	0744
Norcent	1389
NTDE Geniesom	0744
Onkyo	0135, 1320, 1805
Optimus	1023, 0186, 0744
Orient Power	0744
Orion	0463
Palladium	0797, 1220, 1293, 1390, 1524
Panasonic	1763, 1518, 1308, 1309, 1316, 1765, 1766, 1779, 2967
Paramount Pictures	1220
PCCW	2967
Philips	1189, 1269, 0891, 1089, 1266, 1289, 1654, 1673, 1831
Phonotrend	0502
Pioneer	1284, 1023, 0186, 1123, 1459, 1623
PJ	1389

Polk Audio	1289
Prima Electronic	0797
Proline	0797, 1390
ProVision	1389
QONIX	1390, 1546
Radionette	1293, 1634
Recco	0797
Redstar	1389
Revox	0140, 0186, 1089
Roadstar	0797
Rotel	0793
Samsung	0286, 1295, 1868, 2137, 1500
Sansui	0609, 1089, 1625
Sanyo	0744
Schneider	0110, 0744, 1220, 1390
Scott	1389
SEG	1554
Sharp	0186, 0653, 1386, 1634
Sherwood	0502, 0653
Siemens	0609
Silva Schneider	0797, 1390, 1524
SilverCrest	1546
Sony	1158, 1058, 1258, 1658, 1758, 1112, 1358, 1441, 1454, 1622, 1759, 1822, 1858, 2172
Soundwave	0609
Stereophonics	1023
Sumida	0744
Sunfire	1313
T+A	1270, 1686
TAG McLaren	1189
Tandberg	1554
Targa	1293
TCM	0797
Teac	0463, 0609
Technics	1763, 1518, 1308, 1309, 0208, 1765
Techwood	1554
Tedelex	1625
Tevion	1389
Thorens	1189

14. Appendix



Thorn	0744
Tokai	1390
Toshiba	1572
United	1390, 1625
Universum	0286, 0609, 0744, 0797, 1220, 1390, 1436, 1609
Venturer	0797, 1390
Vestel	1554
Victor	0074
Waitec	1352
Watson	0797
Wellfund	0744
Welltech	0797
Wharfedale	1390
Xenius	1390
Yamaha	0176, 0082, 0186, 0376, 0712, 1176, 1276, 1331, 1376, 1776, 1815, 1949
Yukai	1352
Zenith	0744

www.humaxdigital.com



ROHS/MANUAL/FOXSAHDR/100GB



20000-00091PT