


# **iKASU**

INSTRUCTION MANUAL

## **26" Wide screen LCD TV with DVD & Freeview**

**Model No.: DV089955**

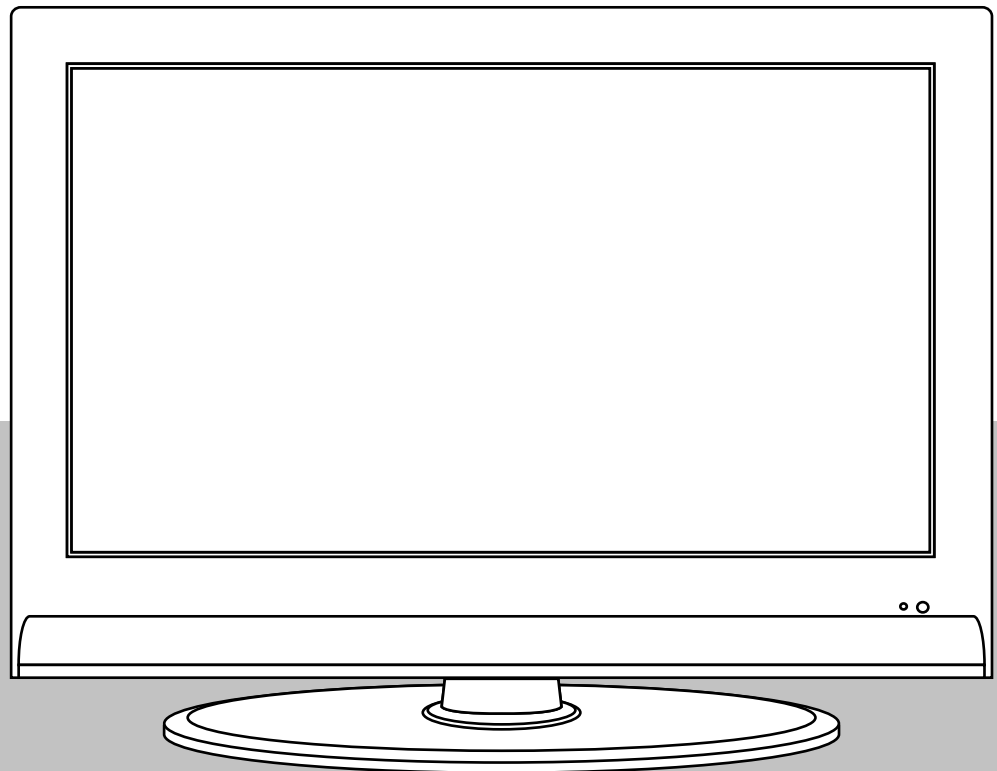



# CONTENTS

## Safety Precautions

- Caution ..... 1
- Safety Information ..... 2

## User Guidance Information

- Unit and Accessories ..... 3
- Getting Started ..... 4
- Names of each part ..... 5
- Mounting on a desktop ..... 6
- Installing an antenna ..... 7
- Remote control ..... 8~9
- Precautions / How to use remote control ..... 10

## Basic Use

- Powering the LCD TV / Selecting input source ..... 12

## Application

- Operating the Menu ..... 13
- Customizing the CHANNEL Settings ..... 13~14
- Customizing the PICTURE Settings ..... 15
- Customizing the SOUND Settings ..... 16
- Customizing the TIMER Settings ..... 17
- Customizing the SETUP Settings ..... 18
- Customizing the LOCK Settings ..... 19-20
- DVD operation ..... 21~26
- Disc care ..... 27

## Maintenance and Service

- Trouble shooting ..... 28
- Specifications ..... 29

## Caution



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of un-insulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to the persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



### **Correct disposal of this Product**

(Waste Electrical & Electronic Equipment (WEEE))

Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste.

Please dispose of this equipment at your local community waste collection/recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!



This unit complies with European safety and electrical interference directives.

To ensure reliable and safe operation of this equipment, please read carefully all the instructions in this user guide, especially the safety information below.


### Electrical safety

- The TV set should only be connected to a mains supply which matches that stated on the label on the mains adaptor
- To prevent overload, don't share the same mains supply socket with too many other items of equipment.
  - Do not place any connecting wires where they may be stepped on or tripped over.
  - Do not place heavy items on the leads, which may damage them.
  - Hold the Mains plug, not the wires, when removing from a socket.
  - During a thunderstorm or while leaving the TV for long periods, disconnect the aerial (if outdoor) and mains adaptor from the supply.
  - Do not allow water or moisture to enter the TV or mains adaptor. Do NOT use in wet or moist areas such as Bathrooms, steamy kitchens or near swimming pools.
- Pull the plug out immediately, and seek professional help if:
  - the mains plug or cable is damaged
  - liquid is spilt onto the set, or if it is accidentally exposed to water or moisture
  - anything accidentally penetrates the ventilation slots
  - the set does not work normally.
  - Do NOT remove the safety covers. There are no user serviceable parts inside. You may invalidate the warranty. Qualified personnel only are permitted to service this apparatus.
  - To avoid battery leakage, remove exhausted batteries from the remote control handset, or when not using for a long period.
  - Do NOT break open or throw exhausted batteries on a fire.

### Physical safety

- Do NOT block ventilation slots in the back cover. You may place the TV in a cabinet, but ensure at least 5cm (2") clearance all around the unit.
- Do NOT tap or shake the TV screen, you may damage the internal circuitry. Take good care of the remote control, do not drop it or allow it to come into contact with liquids.
- To clean the TV use a soft dry cloth. Do NOT use solvents or petrol based fluids. For stubborn stains, you may use a damp soft cloth with diluted detergent.


Unit and Accessories

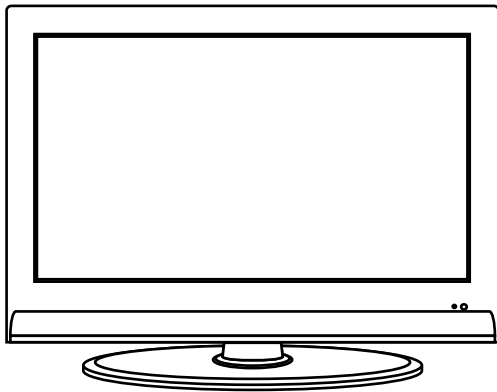


TV set



 
Remote Control



 Batteries for Remote Control (Size AA x 2 pcs)




User's Manual

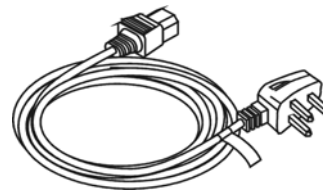

Power Cable

Front view

Please insert a 12cm disc according to the silk

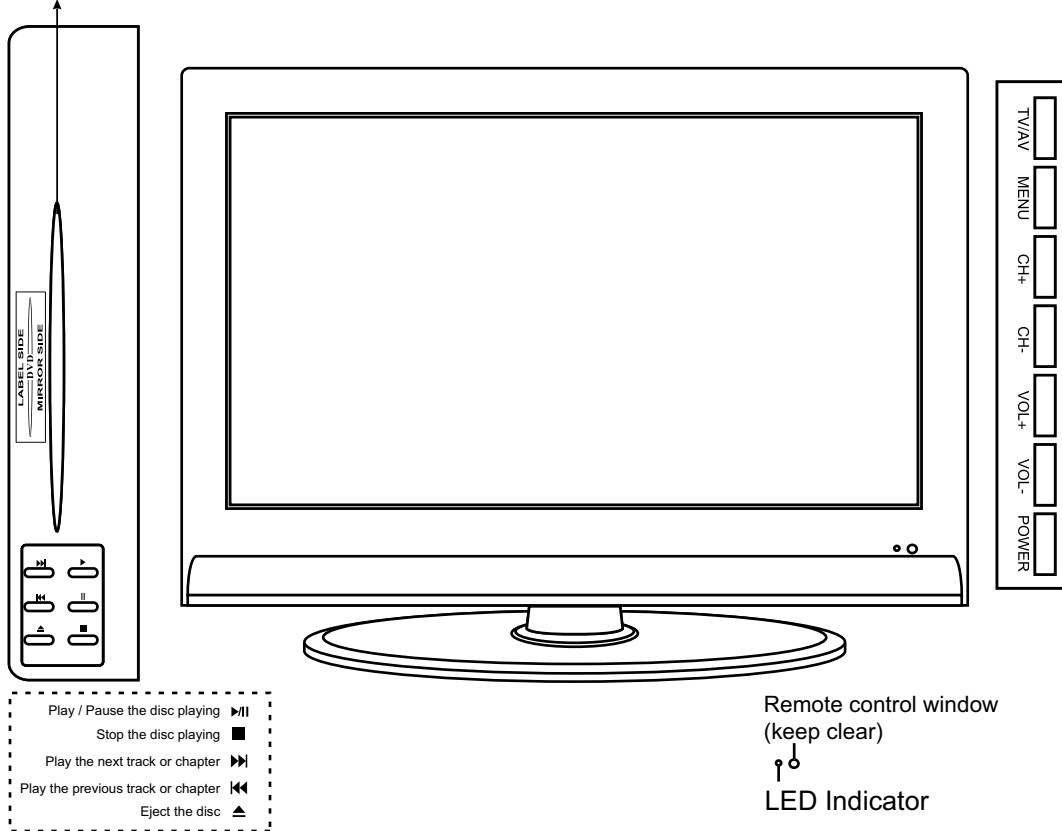

- Play / Pause the disc playing ▶||
- Stop the disc playing ■
- Play the next track or chapter ▶▶
- Play the previous track or chapter ◀◀
- Eject the disc ▲

Remote control window  
(keep clear)  
↑  
LED Indicator

- (IR) Infrared Receiver: Receives IR signals from the remote control.
- (Power on/Standby) LED Indicator: Press **POWER** to turn on and off,


Indicator on(Red)  
Indicator on(Green)

Standby mode  
Power on mode

The effective receiving range for the signal is 5-8 metres from the front of the remote control window, and 30° to the left or right side and 20° above or below the control window.

- The functions of the buttons are described as bellows:
  - TV/AV** : Press to display the input source menu, Press again to change the input source.
  - MENU** : Press to display the OSD menu, Press again to exit the menu.
  - CH +/-** : Press to scan through channels.
  - VOL +/-** : Press to adjust the volume.
  - Power** : Turn on/standby the TV set.

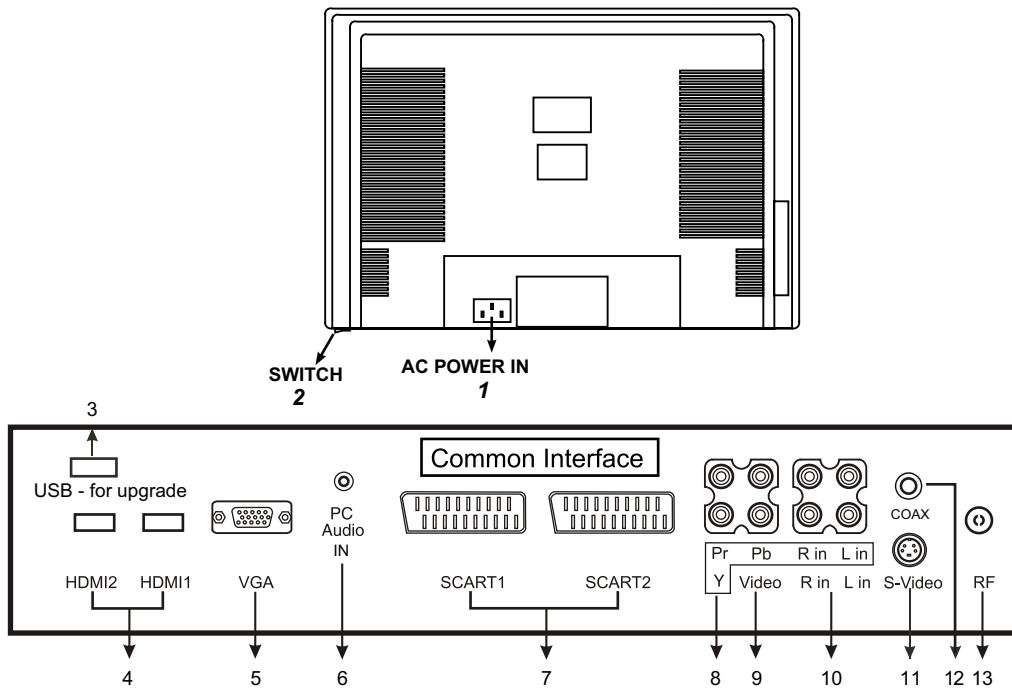

## Names of each part




1. **AC POWER INPUT:** 100-240V AC 50/60HZ.
2. **SWITCH:** Turn on/off the AC power.
3. **USB-for upgrade:** USB jack.
4. **HDMI 1 / 2:** (High definition multimedia interface) Connect to the HDMI output on external equipment.
5. **VGA:** (Video Graphics Adaptor) connect to the VGA on a PC to display PC graphics.
6. **PC AUDIO:** Connect PC audio cable for PC sound.
7. **SCART 1/2:** Connect to scart connectors of dvd players or similar equipment.
8. **YPbPr:** Connect the cables to the YPbPr output of external equipment.  
**L/R in:** Connect to the audio output of external equipment using YPbPr.
9. **VIDEO (CVBS):** Connect to the Video output of external equipment
10. **L/R in:** Connect to the audio output of external equipment.
11. **S-VIDEO:** Connect to the S-Video output on external equipment.
12. **COAX:** Output to Audio amplifier.
13. **RF:** TV tuner input, 75Ω coaxial socket.

### POWER ON/OFF jack

- To turn on the LCD TV


Press  on the back of the LCD TV to  first.

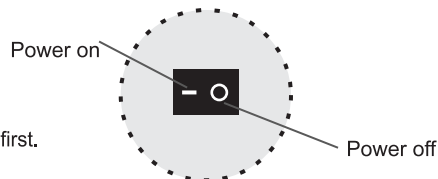

- Be sure to turn off the power and unplug both units from the wall outlet before making any connections.



## Mounting on a Desktop

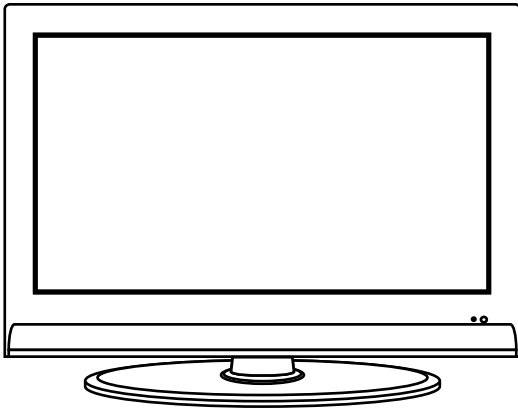



- Your LCD TV can be mounted on a Desktop as shown in the figure above.
- This is not floor-standing unit.

## Installation Precautions



### Using the Stand

- Do not install on an unstable location with support area smaller than the LCD TV.
- Please refer to the desktop stand user's manual for details of installation.

B →  
(Using the Stand)

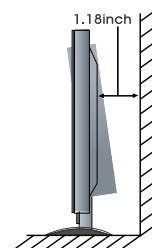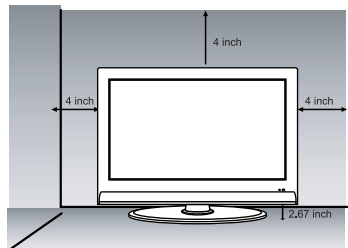

## Installing an Antenna

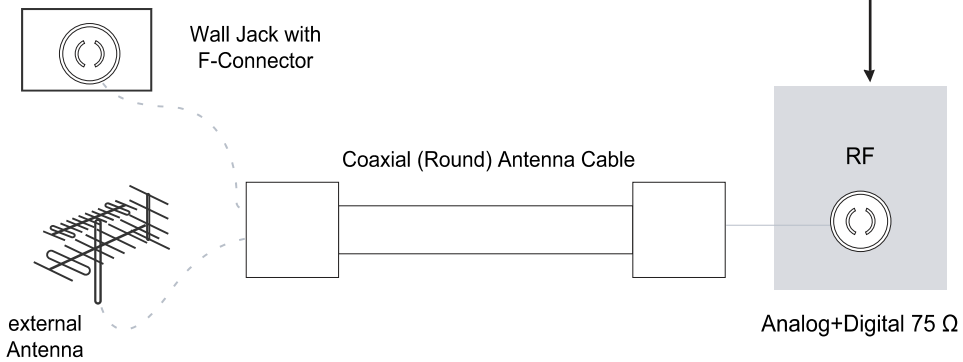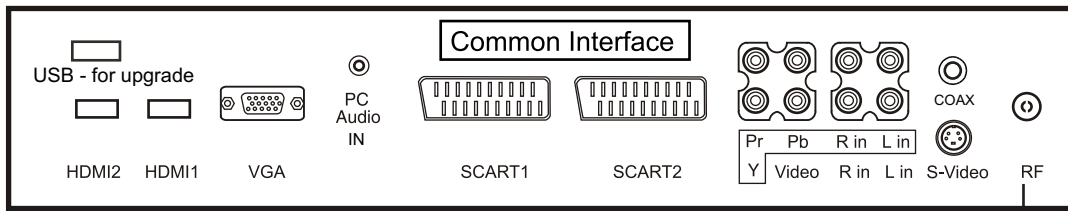

Press TV/AV button on the remote control to display the input source menu press ▲ / ▼ button to select TV then, press ► button to confirm. Then you can receive the signal.

Remote Control

● Functions of remote control buttons

The remote control is using Infra-Red (IR). Point it towards the front of the LCD TV. The remote control may not work correctly if it is operated out of range or out of angle.

**POWER**

Turn the TV on/standby

**Buttons for TELETEXT operating**

You could use the functions of the buttons only in TELETEXT.

**TV/TXT**

Turn off/on the Teletext display.

**CANCEL**

Cancel the Teletext display.

**REVEAL**

Reveal any hidden text.

**HOLD**

Hold or carry on the current subpage.

**SIZE**

Press to see top half of page double size, Press again to see the bottom half of page double size. Press again for normal size.

**SUBPAGE**

Press to subpage, again to cancel.

**INDEX**

Go to index.

**Colour buttons**

Short cuts-follow the coloured links in the text.



**Buttons for Basic operating TV-MENU**

Press to display the OSD menu.

**TV/AV**

Display the input source menu.

**CH+/-**

Channel/Program +/-.

**VOL+/-**

Volume +/-.

**FREEVIEW**

Switch to DTV source.

**DVD-SETUP**

Press to display the DVD menu.

**EXIT**

Press to exit the OSD menu.

**DISPLAY**

Press to display the current mode's information.

Press to display the disc's information in DVD mode.

**THUMBSTICK (▲/▼/◀/▶/OK)**

Allows you to navigate the on-screen menus and adjust the system settings to your preference.

**NUMBER BUTTONS**

Choose channel directly. Press number buttons and press OK button to play the channel.

Number buttons for DVD.

Pressing “-/-” button to display “SELECT 10+”, and press a number button to play the program.



Return to the previous channel viewed.

## Remote Control

### PICTURE

Press repeatedly to cycle through the available video picture modes.

### SOUND

Press to cycle through the different sound settings.

### NICAM/A2

1. TV Nicam/A2 select;
2. FREEVIEW audio language select menu;
3. Other channel audio---"L+R"/"L+L"/"R+R"---select.

### MUTE

Press to mute the sound. Press again or press VOL+ to unmute.

### SLEEP

Shutdown timer.

### INFO

Means information, to display brief information concerning the current channel you are viewing.

### SUBTITLE

To switch the dialog at the bottom of the screen.

### CHANNEL LIST

Display the programs list.

### EPG

To show the Electronic Program Guide during no-menu state only.

### TV/RADIO

Disc menu change between TV and Radio

### FAV

Display the favorite program list.



### Buttons for DVD operating

You could use the functions of the buttons only in DVD mode.

- : Load/eject DVD disc.
- : DVD previous chapter.
- : DVD fast reverse
- : DVD fast forward.
- : DVD next chapter.
- : Play/pause DVD program.
- : Stop DVD program.

### LANGUAGE

Select DVD disc language.

### ZOOM

Adjust picture size in DVD mode.

### SUBTITLE

Select DVD disc subtitle.

### MENU (PBC)

DVD play list/Disc menu

### ANGLE

Select DVD picture angle.

### TITLE

DVD title.

### GOTO

Play your favorite title/chapter/track.

### PROGRAM

Edit the program and play.

### SLOW

Play DVD programs at slow speed.

### REPEAT

Repeat playing the title or chapter.

### A-B

Select and play the preferable paragraph of DVD program by pressing this key twice at the beginning and end of it.


## Precautions

### Avoiding Remote Control Problems

1. Check the polarity (+,-) of the batteries in the remote control.
2. Check that the batteries have power.
3. Check that the LCD TV is powered and that it is properly plugged in.
4. Check if any three-wavelength lamp, special fluorescent or neon sign is turned on near the LCD TV.

### Inserting Batteries in the Remote Control

1. Open the cover completely.
2. Insert the two batteries (AA, 1.5V). Ensure that the polarities (+ and -) of the batteries are aligned correctly.
3. Slide back the cover.

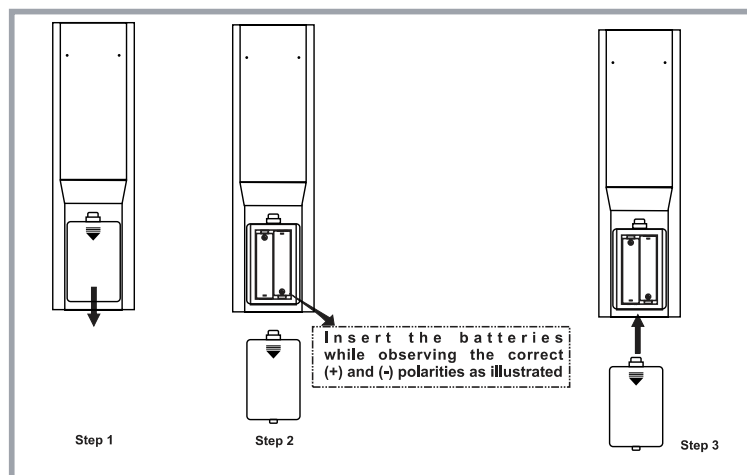

**CAUTION :** Risk of explosion if battery is replaced by an incorrect type.



Dispose of used batteries according to the national code (Recycling program).

## How to use remote control

- The remote control should be operated within 30feet(7m) and 30 ° to the left and the right of the IR receiver at the front of the LCD TV.
- Used batteries should be disposed properly.

## Powering the LCD TV

- Power on/ off

Press  on the back of the LCD TV to  first.


· To turn the LCD TV on :

Press "POWER" button on the LCD TV.

· To turn the LCD TV off :


Press "POWER" button on the LCD TV.



· To turn on/off by remote control :

 
Press the  button of remote control.


## Selecting Input Source

- You can select between the TV signal and the input signal of other equipments connected to the TV.
- Use this function to switch to the input source you wish to view.

Press  button on the remote control.

Use   to move to the desired input source.

Press  to select.

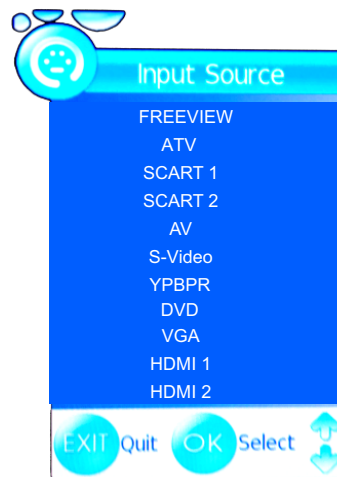


## Operating the Menu

1. Press the POWER button to turn the LCD TV on.
2. Press the MENU button on the remote control, the on-screen menu will appear on the screen.
3. Use the ◀ and ▶ buttons to select your main menu option.

### CHANNEL MENU:

Allows you to search channels and set up a variety of channel options.  
(Select TV source)

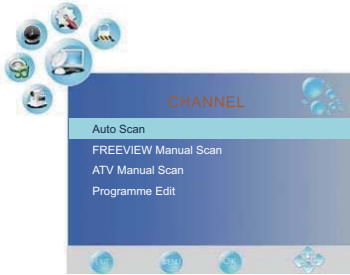


### PICTURE MENU:

Allows you to make adjustments to your picture settings.  
(select TV source for example)



### SOUND MENU:

Allows you to customize the sound options and effects.  
(Select TV source for example)

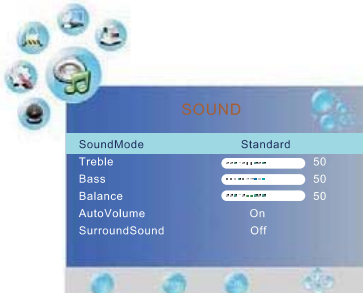

### TIMER MENU:

Allows you to setup a variety of timer options.  
(Select TV source)




### OPTION MENU:

Allows you to setup a variety of setup options.  
(Select TV source)



### LOCK MENU:

Allows you to set up a variety of lock options.  
(Select TV source)

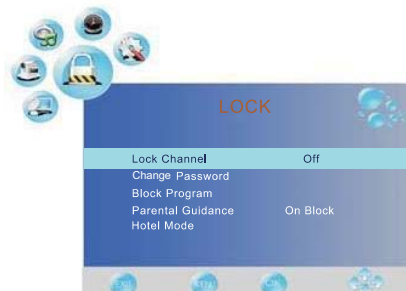


3. Use the ▼ / ▲ buttons to select an option of the sub-menu, and press the ▶ button.  
While in adjustment mode, use the ◀ / ▶ button to change the value of the item.
4. Press the EXIT button to exit the menu.

### Note:

Only when you input the suitable signal, the relevant items can be activated.

## Customizing the CHANNEL Settings

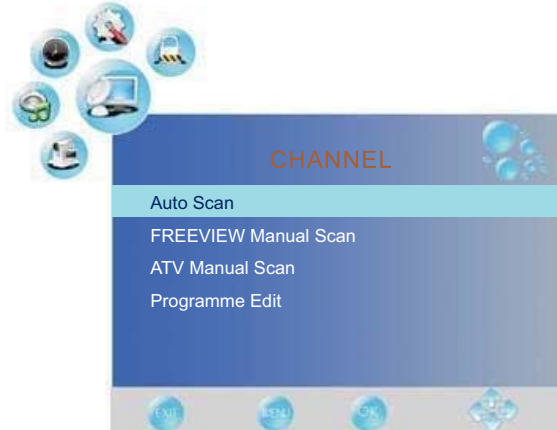


Use the ◀ and ▶ buttons to select the **CHANNEL** menu(as the picture above), press ▼ button to enter the menu.

The CHANNEL menu includes the following options :

### Auto Scan

Press ◀ and ▶ buttons to select the Country, and press ▼ and ▲ buttons to select "Start", and press OK button to start auto tuning(It contains ATV and FREEVIEW signals).

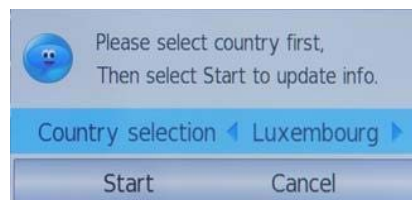

### FREEVIEW Manual Scan

Press ▶ button to enter the submenu. Press ◀ or ▶ button to select a channel and press OK button to start search.





## Customizing the CHANNEL Settings

### ATV Manual Scan

Press ► button to enter the submenu.

Storage To

Select a position to store the program.

Current CH

Select a program you want to tuning.

Search

Press ◀ and ▶ buttons to manual search.

Fine-Tune

Press ◀ and ▶ buttons to fine-tune.

Skip

Select "Yes" to skip the program when you scan the programs by CH+/-


Frequency

Display the current channel's frequency.

Press RED button to save all the setups you have changed.



Program Edit: Press ► button to enter the submenu as the following picture.

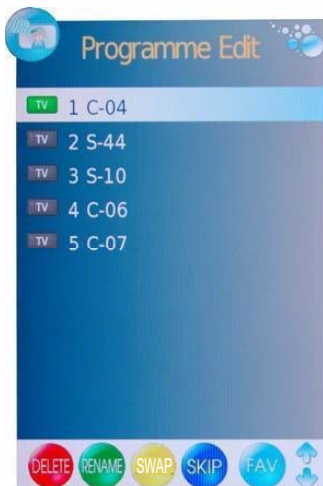

**Delete:** Select a program, and press RED button, on the right of program, "Delete" will appear, then press RED button again, the program will be deleted. If you press "RED button once, but do not want to delete the program, press "menu" to quit.

**Rename:** Select a program, and press GREEN button, then you could use ◀ and ▶ buttons to select the position of the program's name you want to change, and press ▼ and ▲ buttons to change the character, press ◀ or ▶ button to confirm the change. Press menu to exit and it will automatically save the current set. (It can only rename ATV program.)

**Swap:** Use the and navigation buttons to move ▲ and ▼ the list. Press the yellow button to select the channel to move. You can then move it ▲ or ▼ using the and navigation buttons. Press the yellow button to save the new position.

**Skip:** Select a program, and press BLUE button to sign the program, while the program have been signed, it will be skiped when you scan programs by CH+/-.

**FAV:** Select a program, press FAV button to set the program as the favorite channel.

Note: The function of "RENAME" and "MOVE" could not be used in FREEVIEW source.

## Customizing the PICTURE Settings



Use the ◀ and ▶ buttons to select the **PICTURE** menu(as the picture above), press ▼ button to enter the menu.

The PICTURE menu includes the following options :

Picture Mode	Cycles among picture display modes: Standard, Dynamic, User, Mild.
Contrast	Controls the difference between the brightest and darkest regions of the picture.
Brightness	Controls the overall brightness of the picture
Colour	Control the colour.
Sharpness	Increase this setting to see crisp edges in the picture; decrease it for soft edges .
Tint	Controls the tint.
Color Temperature	Cycles among colour modes: User, Cool, Standard, Warm. When you select "User" mode, you could adjust the colours below(Red, Green, Blue) by yourself.
Aspect Ratio	Cycles among screen display modes: Auto, 4:3, 16:9, Zoom1, Zoom2.
Noise Reduction	Reduce the noise point of the picture when you turn on the function by selecting "On".
PC Setup (only exist in PC-RGB mode)	Press ▶ button to enter the submenu to adjust the picture of the screen.



## Customizing the SOUND Settings



Use the ◀ and ▶ buttons to select the **SOUND** menu(as the picture above), press ▼ button to enter the menu.

The SOUND menu includes the following options :

Sound Mode	Allows you to select among: Standard, Music, Movie, Sports and User.
Treble(Could be adjusted when the sound mode is User)	Controls the relative intensity of higher pitched sounds.
Bass(Could be adjusted when the sound mode is User)	Controls the relative intensity of lower pitched sounds.
Balance	To adjust the balance of the left and right sound track, or turn off the volume of the left and right sound track.
Auto Volume	Control the volume of the program automatically when you turn on the function by selecting "On".
Surround Sound	Turn on/off the surround sound function by selecting "on"/"off".

## Customizing the TIMER Settings



Use the ◀ and ▶ buttons to select the **TIMER** menu(as the picture above), press ▼ button to enter the menu.

The TIMER menu includes the following options :

Clock	Use the ◀ and ▶ buttons to select the position, and use the ▼ and ▲ button to set the time. Note: User can not change time manually during FREEVIEW mode, for time is from signal source directly.
Off Time	Press ▶ button to enter the submenu, you could set the time when the TV set will be turned off automatically, you could also set the frequency.
On Time	Press ▶ button to enter the submenu, you could set the time when the TV set will be turned on automatically, you could also set the frequency, volume and program.
Sleep Timer	Allows you to setup the sleep timer among: 10min, 20min, 30min, 60min, 90min, 120min, 180min, 240min and off.
Auto Sleep	Turn on/off the auto Sleep function.
TimeZone	Allows you to select the time zone.

## Customizing the OPTION Settings




Use the ◀ and ▶ buttons to select the **OPTION** menu(as the picture above), press ▼ button to enter the menu.

The **SETUP** menu includes the following options:

Language	Allows you to select menu language.
Audio Language (Could be selected in TV mode)	Allows you to select audio language.
Subtitle Language (Could be selected in TV mode)	Allows you to select subtitle language.
Country	Display the current Country, and you should select the Country when you want to auto tuning.
Restore Setting	Press ▶ button to restore factory default.

## Customizing the LOCK Settings

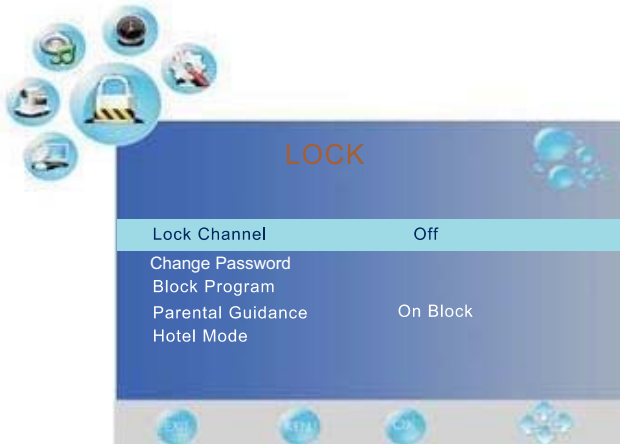

Use the ◀ and ▶ buttons to select the **LOCK** menu(as the picture above), press ▼ button to enter the menu.

*Note: You should enter the code to operate the menu.(original code is 0000)*

The LOCK menu includes the following options :

Lock Channel	Allows you to turn on or off the channel lock. When select "On", channel menu is closed.	
Change Password	Press ▶ button to enter the submenu, and you could change the password here.	
Block Program	Press ▶ button to enter the submenu as the right picture, select a program, and press GREEN button to block it.	
Parental Guidance	Cycles among ages: 4,5,6.....18, or you could turn the function off.	
Hotel Mode	This function is only available for HOTEL professionals customers (a separate instruction sheet is supplied for Hotel Mode Operation on specific request).	

## DVD Operation

Press the Power button on the TV or the remote control, then press the TV/AV button to select DVD mode. If there is no disc in the DVD player the screen will show "NO DISC".

### Place a disc

Insert Disc according to picture next to disc slot.

Do not touch the playing surface.

Hold the disc around the outside with your fingers and place the disc into the slot. The player will automatically draw the disc into the player.

To "Eject" the disc, press the EJECT button on the TV or the "▲" button on the remote control.

### Play

The contents of each disc vary, as to how the disc was authored and what features are included. Some discs start playing as soon as they have been read, some need "Play" selecting in the Menu. Different play modes are offered, such as Menu Play, Sequence Play and other modes.

### Menu Play

1. Compatible with DVD, SVCD or VCD2.0.
2. If the disc is a DVD, ROOT MENU will appear on the screen. If it is SVCD or VCD 2.0, please press the Menu button to see the menu.
3. When a DVD disc is loaded, press the Arrows buttons to highlight the menu item you want to choose. With SVCD or VCD 2.0, press the numeric buttons to select a track to play.
4. Press OK or Play to start when highlighted.
5. Return to Menu when Playing: When playing a DVD disc press the Menu button to return to the "ROOT" menu. When playing a SVCD or VCD, and PBC is "on" press the Menu or Return button to return to the disc menu.

### Title Play

1. Compatible with DVD discs only.
2. During DVD playback, press Title button to display the DVD title content.
3. Press the ▲▼ buttons to highlight the title you want to choose, and press OK; also you can press numeric buttons to choose.
4. The DVD player begins with the chapter 1 of the chosen title.

### Sequence Play

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc /JPEG discs.
2. When a SVCD or VCD disc is loaded and PCB is "on", press the MENU button once switches the PBC "off". The player can now playback in sequence mode. To turn the PBC back on press the MENU button again.
3. Except for SVCD or VCD discs, when in stop state, press the Play button, the player will play in the "Sequence" mode. This is for all compatible discs.

### Program Play

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc /JPEG discs.
2. The Program Playback option allows you to enter the order in which you want chapters or tracks to play, maximum to 16.
3. Program Menu: If PBC is on, this operation will turn PBC off while the chapters / tracks play in programmed order.
4. According to the highlight, use the Numeric buttons to enter the chapters / tracks in the order you want them to play. Then press Play or use Arrow buttons to highlight the "PLAY" item and press OK. The chapters /tracks will play in the programmed order. You can program maximum 16 titles / chapters / tracks.

## DVD Operation

5. According to the Direction Indicator on the menu, you can press Arrow buttons to highlight where you want to enter.
6. During Program Playback, if program button is repressed, the program order and the contents will be displayed on the screen, and the Program Playback will be stopped; also you can press Stop and Play to resume normal playback.
7. Notes:  
To clear the program order, use Arrow buttons to highlight the "CLEAR" item, then press OK.  
To modify the program order, use Arrow buttons to highlight the item you are changing and enter the new chapter / track you want to program directly.
8. The program indicator in the screen and the playing chapter / track illuminate.

### Additional operation

#### Selecting Tracks

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc /JPEG discs.
2. When playing a DVD disc, press Numeric buttons on the menu or title page to select tracks; During DVD playback, you can input desired title numbers directly.
3. During sequence playback of a SVCD or VCD disk, press the numeric buttons to select tracks. (During Program Playback and when the PBC is on, you can only press Prev / Next button to select)
4. As for CD, HD-CD, discs, press Numeric buttons directly to select tracks.
5. When playing WMA, Digital Audio disc/JPEG discs, press Numeric buttons to select different tracks on current track list.

#### Skipping Tracks

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc /JPEG discs.
2. To skip forward to the beginning of the next title / chapter / track on a disc, press Next on the remote or the right side of the player.
3. To skip backward to the beginning of the preceding title / chapter/track on a disc, press Prev on the remote or the right side of the player.

#### Multispeed Fast/Slow Motion Play

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc /JPEG discs.
2. Press the Multispeed Fast/Slow button on the remote during play to search through a disc. Multispeed Fast/Slow has four speeds: x2, x4, x8, x20.  
With each consecutive press of the button, the search speed increases. If you press the button five times, Fast Multispeed Fast/Slow cycles back to normal play.
3. During DVD play, when Multispeed Fast/Slow gets to the beginning of the next title / chapter, it resumes normal play; During SVCD or VCD play with PBC on, when Fast Forward Play gets to the beginning of the next track, it resumes normal play.

#### Multiphase Slow Motion Play

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc/JPEG discs.
2. Multiphase Slow has six speeds: 1/2, 1/3, 1/4, 1/5, 1/6, 1/7 of the normal Speed play when pressing the "Slow" button consecutively when playing discs.
3. When you press Play or the "Slow" button 7 times the player returns to normal play.

#### Freeze Frame

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc/JPEG discs.
2. During CD, HD-CD, WMA or Digital Audio disc / JPEG playback, press Pause once to freeze playback; Press Play button to resume normal playback.

#### Using the Repeat Feature

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc /JPEG discs.



## DVD Operation

2. While a disc is playing, press Repeat button once and the repeat banner appears to show current repeat mode.
  - a) In SVCD, VCD, CD, HD-CD, WMA or Digital Audio disc/JPEG sequence playback mode. Press Repeat button again to turn on repeat mode. Press the button again on the remote to turn to the next repeat mode. There are three repeat options: Off, Track Repeat and Disc Repeat. With each consecutive press of the button, the repeat mode switches. If you press the button four times, repeat mode cycles back to Off.
  - b) In DVD playback, press Repeat button again to turn on repeat mode. There are three repeat options: Off, Chapter Repeat and Title Repeat. With each consecutive press of the button, the repeat mode switches. If you press the button four times, repeat mode cycles back to Off.
  - c) In WMA, Digital Audio disc /JPEG playback, press Repeat button again to turn on repeat mode. There are four repeat options: Off, Track Repeat, Directory Repeat, and Disc Repeat. With each consecutive press of the button, the repeat mode switches. If you press the button five times, repeat mode cycles back to Off.

### Using the Display Feature

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc discs.
2. Loading and playing DVDs (two pages)
  - Press DISPLAY button once to show the first page:
  - "Disc Type, Title \* / \* (the playing title / total titles), Chapter \* / \* (the playing chapter / total chapters), Elapsed Time of the Disc".
  - Press the button again to show the second page:
  - "Language \*/\* (the serial number of playing language / the amount of optional languages) or Off, Language Type, Audio Type, Subtitle \* / \* (the serial number of playing subtitle /the amount of optional subtitles) or Off, Angle \* / \* (the serial number of playing angle / the amount of optional angles) or Off".
  - Press the button for the third time, the display menu fades out.
3. Loading and playing SVCD discs (two pages)
  - Press Display button once to show the first page:
  - "Disc Type, Track \* / \* (the playing track / total tracks), Mute, PBC, Repeat Mode, Elapsed Time of the Playing Track".
  - Press the button again to show the second page:
  - "Language \* / \* (the serial number of playing language/ the amount of optional languages) or Off, Language Type, Audio Type, Subtitle \* / \* (the serial number of playing subtitle / the amount of optional subtitles) or Off".
  - Press the button for the third time, the display menu fades out.
4. Loading and playing VCD
  - Press Display button once to show the first page:
  - "Disc Type, Track \* / \* (the playing track / total tracks), Mute, PBC, Repeat Mode, Elapsed Time of the Playing Track".
  - Press the button again, the display menu fades out.
5. Loading and playing CD, HD-CD, WMA, Digital Audio / JPEG discs
  - Press Display button once to show the first page:
  - "Disc Type, Track \* / \* (the playing track / total tracks), Mute, Repeat Mode, Elapsed Time of the Playing Track".
  - Press the button again, the display menu fades out.

### Using the Search Feature

1. Compatible with DVD, SVCD, VCD, CD, HD-CD discs.
2. You can use Search feature to select a title/ chapter/track number or go to a specific point in a title. First, press GOTO button on the remote controller to bring up the search menu and enter the edit state. Secondly, press Arrow buttons to highlight the title / chapter/ track number or the time option; Thirdly, use Numeric buttons to enter the title / chapter/ track you want to play or the elapsed time you want to go to in that title. At last, press OK button to start playback. For example, entering 01:23:56 will start playback one hour, twenty-three minutes and fifty-six seconds into the title.

### 3. Notes

- a) This feature does not work in Program Play mode.
- b) If PBC is on, it will turn off automatically when Search Playback starts.
- c) When playing WMA, MP3 / JPEG discs, Search Feature does not work.

### **Changing the Soundtrack or Language**

- 1. Compatible with DVD SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc /JPEG discs.
- 2. Press the LANGUAGE button to display current soundtrack.
  - a) Press the button to switch soundtracks.
  - b) Press the button again on the remote to turn to next soundtrack.
- 3. When playing a SVCD or VCD disc, there are five soundtracks: Stereo (L/R), L/L, R/R, L/L Auto A/D Detect, and R/R Auto A/D Detect. With each consecutive press of the button, the soundtrack switches. If you press the button six times, soundtrack cycles back to Stereo.
- 4. When playing a CD, HD-CD, WMA, Digital Audio disc, there are three: Stereo (L/R), L/L, and R/R.
- 5. When playing a DVD or SVCD disc, press LANGUAGE button to display current language, press the button again to turn to next language if the disc has different languages.

### **Subtitles**

- 1. Compatible with DVD, SVCD discs.
- 2. Press the Subtitle button on the remote once, and the subtitle info banner appears
- 3. When a DVD or SVCD is recorded with subtitles, you can use the Subtitle feature to view the subtitles on-screen. By default, subtitles are off. The info banner will display Subtitle Off.
- 4. To display subtitles, press the Subtitle button again. The default language with its responding serial number will be displayed in the info banner and subtitles will be displayed in that language. There are 8 supported subtitles: Chinese, English, Japanese, French, Spanish, Portuguese, Germany and Latin. With each consecutive press of the Subtitle button, the subtitle switches. For example, "Language Icon: [1 English DTS 6CH] or [Off]" (the availability of the subtitles are disc-dependent). To turn subtitles off, press the Subtitle button until Subtitle Off is displayed.

### **Mute the Audio Output**

- 1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc /JPEG discs.
- 2. Pressing the Mute button allows you to reduce sound to an inaudible level, and the icon of "MUTE" will be displayed on screen. Press the button again or press the Vol +/- button to return to the normal condition.
- 3. If the player has no sound, check that the "Mute" is not on.

### **Zoom In the Video Image**

- 1. Compatible with DVD, SVCD, VCD, JPEG discs.
- 2. The Zoom Function allows you to enlarge the video image.
- 3. Press Zoom repeatedly to activate the function and choose the required zoom factor: Zoom 2, Zoom 3, Zoom 4, Zoom 1 /2, Zoom 1 /3, Zoom 1/4, Zoom Off.

### **Repeat a Specific Segment on the Disc that You Define**

- 1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc.
- 2. During normal or fast playback, press the A-B button once. REPEAT "A" appears on the screen. This indicates the start point of the loop.
- 3. Press A-B again, REPEAT A-B will be shown, this indicates the end point of the loop.
- 4. The segment will now be repeated until you press the "REPEAT" button again to turn off the feature.
- 5. Press A-B again to cancel the loop points.
- 6. When playing a SVCD, VCD, or CD disc, you can repeat a specific segment only in one track. When the next track begins, A-B Repeat turns off automatically.
- 7. When playing a DVD disc, you can repeat a specific segment only in one title.

### **Digital Audio Disc**

- 1. Compatible with Digital Audio discs
- 2. The player will search the disc directory automatically and display the contents on screen.

## DVD Operation


3. The player will then start to play the first track, of the selected directory.
4. To change directories use the direction buttons.

## DVD System Operation

System operation will define the setting of the set; these definitions will be stored until you change them again.

### General Steps of Setup Menu

1. Pause or Stop the player. Press **DVD-SETUP** on the remote control. The main menu will be shown as below.

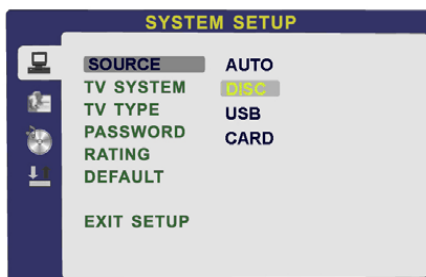


2. Press the  $\uparrow/\downarrow$  buttons to select the Icon of the desired section, e.g. "TV System" and press  $\Rightarrow$  button to open that section.
  3. Press  $\uparrow/\downarrow$  to select the desired feature and again press  $\Rightarrow$  button to open that section.
  4. Press  $\uparrow/\downarrow$  to select the desired feature and then press "OK" to select the new setting.
  - 5 To exit the menu, press "DVD-SETUP" or  $\downarrow$  to select EXIT SETUP and then press "OK"
- When launching the setup routine, the pressing of the following buttons will turn off the setup menu, while the choices that have been changed will be saved.

### Menu specification

#### 1. SYSTEM SETUP

The system setup options are illustrated below:

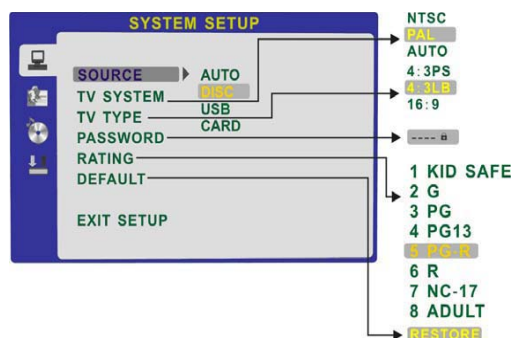

#### SOURCE

Select the source of the information you want to play: AUTO, DISC, CARD, USB

#### TV SYSTEM

According to the Color system of your TV, select proper TV TYPE.

#### PASSWORD

The password option is initialized as locked. You cannot set the ratings limit or change the password.

To enable these features you must unlock the Password. The default password is "0000". Using the  $\uparrow/\downarrow$  button, move the highlight to "PASSWORD", press the  $\Rightarrow$  button and enter "0000". You will see the padlock symbol open. You may now change the RATING or put in a new password number.


If the Lock symbol is BLUE you must press the  $\Rightarrow$  button to enter the lock field, the lock symbol will change to YELLOW, you may now enter a new 4 digit number. Please remember or write down the new Password and keep safe.

**RATING**


The Rating feature is a rating limit feature, like movie ratings. This helps you to control what DVD the family watches. There are 8 levels of selection, from KIDS SAFE to ADULT. Adult is the "play all" selection.

**2. LANGUAGE SETUP**

The language setup options are illustrated below:

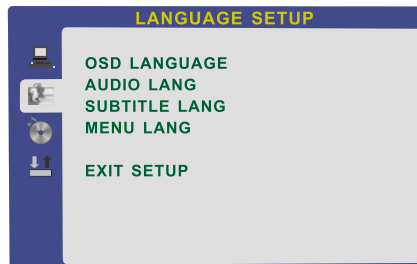

- OSD LANGUAGE: The OSD will display in the language you choose.
- AUDIO LANG: If the disc you are playing has the language you choose, it will output audio in that language.
- SUBTITLE LANG: If the disc you are playing has the language you require you may select this either in the Menu or using the "SUBTITLE" button on the Remote control. You may also switch this OFF.
- MENU LANG: If the disc you are playing has the language you require you may select this.

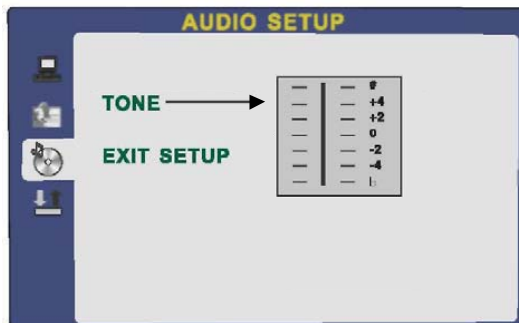
**3. AUDIO SETUP**

- TONE: Use the  $\uparrow/\downarrow$  button to move the scroll and adjust the tone.

**4. DIGITAL SETUP**

The video setup options are illustrated below:

- DYNAMIC RANGE: Use the  $\uparrow/\downarrow$  button to move the scroll and adjust the dynamic range.
- DUAL MONO: Choose the mode of the audio output.
- There are four modes: STEREO, MONO L, MONO R, MIX MONO.

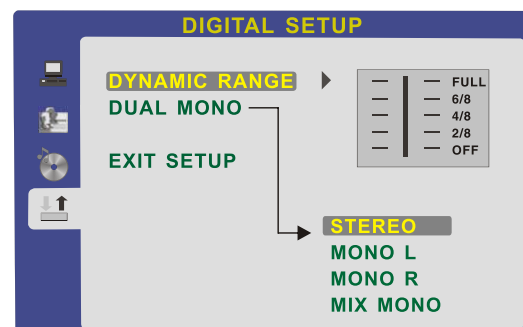

## Disc Care

### Disc Care

#### About Disc Terms

##### Title

Generally, pictures or music compressed on a DVD are divided into several sections, "title".

##### Chapter

The smaller section unit of picture or music in a DVD under the title, usually one title is comprised of one or more chapters and each of them is numbered for easy searching, but some discs may not have a recording chapter.

##### Track

A segment of picture or music on a CD, Each track is numbered for searching.

#### Care of Disc

Video disc contains high-density compressed data that needs proper handling.

1. Hold the disc with fingers by outer edge and/or the center spindle hole. Do not touch the discs surface.
2. Do not bend or press the disc.



3. Do not expose the disc to direct sunlight or heating sources, Store discs in cabinet vertically, and in dry condition.

Prevent exposure to:

Direct sunlight

Heat or exhaust from a heating device

Extreme humidity

Clean the disc surface with a soft, dry cleaning cloth, Wipe the disc surface gently and radially from center toward the outer edge.

Do not apply thinner, alcohol, chemical solvent, or sprays when cleaning. Such cleaning fluids will permanently damage the disc surface.

## Trouble shooting

- Do not use other functions that are not mentioned in this user's manual.
- In case a problem occurs with your LCD TV, please take the following steps first.
- If you still have the problem, turn the power off and contact your dealer or an authorized service center.

Problem	Action
The screen does not appear.	Is the power plug pulled out? Insert the power plug. Press the power button of the remote control.
The screen appears too slowly after the power is turned on.	This problem occurs for a brief time in the process of image elimination processing in order to hide temporary screen noise that occurs when the power is turned on. But if the screen does not come after 1 minute contact your dealer or an authorized service center.
Screen is too bright or too dark.	Perform brightness adjustment or Contrast adjustment.
Screen is too large or too small.	Adjust the screen size.
Stripes appear on the screen and it shakes.	Stop using wireless telephones, hair driers and electric drills.
The screen does not move.	Press the PAUSE button. Check if the Pause button is pressed on external equipment.
Screen appears, Voice is not heard	<ol style="list-style-type: none"> <li>1. Press the "MUTE"button.</li> <li>2. Increase the sound level by pressing volume adjustment button.</li> <li>3. Check if sound terminal of external input is connected properly.</li> <li>4. Check if audio cables are connected properly.</li> <li>5. Select and check the other input.</li> </ol> <p>If the sound still does not work and the other channels are the same after you have done as the above, contact your dealer or an authorized service center.</p>
Remote control does not work	<ol style="list-style-type: none"> <li>1. Check if main power is On.</li> <li>2. Check that the batteries of the remote controller were loaded properly.</li> <li>3. Check to see if any obstacle exists between the LCD TV and the remote control , then remove it, if any.</li> <li>4. If the batteries have no power, replace them with two new batteries.</li> </ol>

- This LCD TV is for household use and registered as harmless on electromagnetic waves.
- Therefore, you can use it in every location as well as residential areas.

 Specifications

Display	Screen size	26inch
	Ratio	16:9
	Definition	1366(RGB)x768
Input	AV	yes
	S-Video	yes
	VGA	yes
	YPbPr	yes
	Double SCART	yes
	Double HDMI	Support to 720p, 1080i
	Power	AC 100-240V 50/60Hz
	Power Consumption	≤ 160W



**TECHNICAL SUPPORT LINE**

GENERAL SUPPORT CAN BE PROVIDED ON ALL  
PRODUCTS PURCHASED FROM US

(Unfortunately we cannot provide support on products or components that we do not supply)

**0161 975 0458**

Calls cost National Rate, Unless dialling from 0161 area

CALLERS MUST BE MINIMUM OF 18 YEARS OF AGE

CALLERS MUST HAVE THE PERMISSION OF THE TELEPHONE SUBSCRIBER

ALL INFORMATION GIVEN IS CORRECT  
AT THE DATE OF PUBLICATION - 23/02/2007  
HOURS OF BUSINESS

MON – FRI 9am to 5pm (excludes bank holidays)

FASCIN8 LTD

14 EMBANKMENT BUSINESS PARK

VALE ROAD, HEATON MERSEY

STOCKPORT CHESHIRE, SK4 3GN

**Alternatively visit our website for further support**

**[www.fascin8.co.uk](http://www.fascin8.co.uk)**

For technical Enquiries please call us on  
0161 975 0458 (Office hours only 9am-5pm) Monday to Friday