

# **USER MANUAL**

**F8D-1701**



**LCD TV + DVD PLAYER**

**TABLE OF CONTENTS**

---


**Page 1 – Table of contents**  
**Page 2, 3 – Safety Information**  
**Page 4 - Contents**  
**Page 5 – LCD TV + DVD Front and Back Panel Diagram**  
**Page 6 – LCD TV + DVD Systems Connection**  
**Page 7 – LCD Remote Controller Function Key**  
**Page 8 – LCD TV + DVD Operation**  
**Page 9 – LCD TV Menu Operation**  
**Page 10 – LCD TV Menu Operation**  
**Page 11 – LCD TV Operation**  
**Page 12 – USB/SD/MMC/MS Operation**  
**Page 13 – DVD Operation**  
**Page 14, 15, 16 – DVD Remote Control Functions**  
**Page 17, 18 – DVD Operation (Set up Menu)**  
**Page 19, 20 – DVD Operation (MP3 and JPEG)**  
**Page 21 – LCD TV Problem solving**  
**Page 22 – DVD Problem Solving**

## Safety information

---

**Note:**

 Please make sure you use the power adaptor supplied with the TV unit. If this is faulty then contact the Technical support helpline listed at the bottom of each page and request a replacement. Do not use any other AC adaptor other than the one provided. To avoid electric shock, never touch the inside of the LCD TV. Only qualified technicians Should open the case.

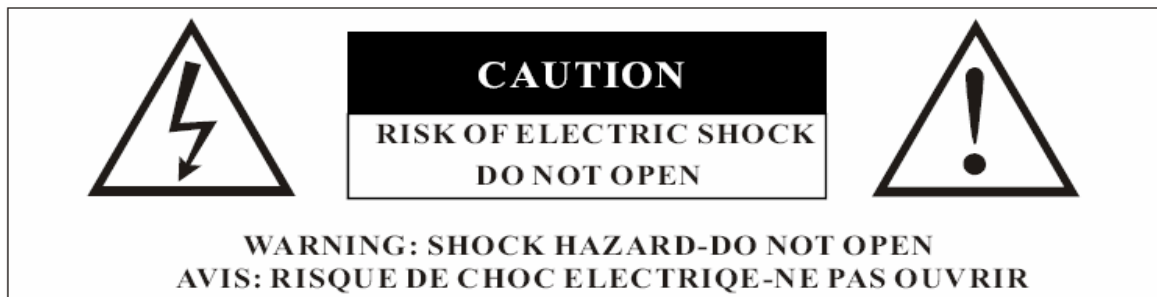

The DVD player is a CLASS 1 LASER product. There may be a small amount of radiation within the laser. As the laser beam used in this DVD player is harmful to the eyes, do not attempt to disassemble and avoid direct exposure to the beam with your eyes.

## **Safety Precautions**

Please read the below safety precautions carefully before operating the unit.

### **Power cord protection:**

1. Never use your LCD TV + DVD if the power cord has been damaged. Do not put anything on the power cord, and keep the power cord away from where people can easily trip over it.
2. Be sure to hold the plug when disconnecting from a mains plug, do not pull the cord in order to disconnect the LCD TV + DVD.

### **Placement:**

1. Only use the accessories that have been provided to you with the TV for set up.
2. Never place the LCD TV + DVD in areas under direct sun-light, avoid areas with high humidity, high temperatures and damp areas.
3. Place the LCD TV + DVD on a solid flat surface.

### **Non-use periods:**

Unplug the LCD TV + DVD when not in use for long periods.

### **Keep away from water & low magnetic emmitence:**

1. Do not expose the LCD TV + DVD to rain or use it near a water source that can splash onto the unit. If the LCD TV + DVD gets wet, unplug the set and contact an authorized electrician.
2. Do not clean the front panel with Ketone-type materials, ethyl alcohol, toluene, acid, methyl, or chloride as they might cause damage to the TV. Clean with a soft cloth.
3. Do not place magnetic objects close to the LCD TV + DVD this can damage the picture.

### **Stacking:**

There are 2 openings in the back of the TV these openings provide ventilation for the heat which is produced when the TV is on. To prevent overheating, these openings should not be blocked or covered. Never use the unit on a bed, sofa, rug, or other uneven surfaces. Doing so may block the ventilation openings at the bottom of the unit. If you place the LCD TV + DVD in a bookcase or some other enclosed place, please make sure you provide adequate space for ventilation.

### **Servicing:**

1. If the LCD TV + DVD/Monitor does not operate normally In particular, if there are any unusual sounds or smell coming from the unit unplug immediately and contact an authorized dealer or service center.
2. Unplug the LCD TV + DVD from the AC outlet before any servicing.
3. Make sure the service technician uses authorized replacement parts or their equivalents.  
Unauthorized parts can cause fire, electrical shock, or other hazards.

## Contents

 
Please make sure that the following items are included with your LCD TV/Monitor. If any item is missing please contact your dealer.




**TFT LCD TV + DVD / Monitor**




Remote control

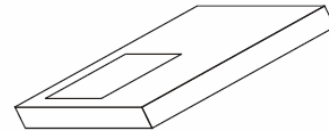


Operation manual

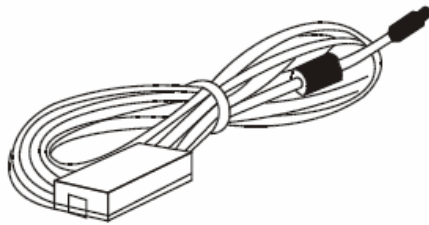 


AC adapter

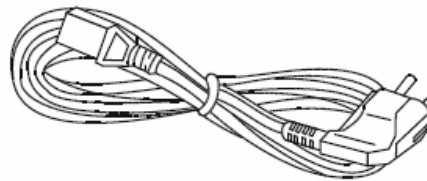 

Power cord

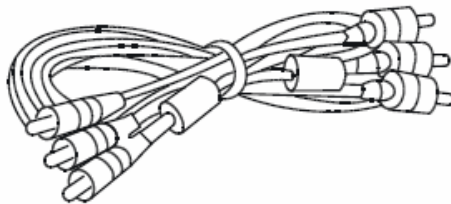 

RCA cable  
(Optional)

 


Car Cord  
(Optional)

## LCD TV + DVD FRONT AND BACK PANEL DIAGRAM

 
### Front panel

1. INPUT button
2. INPUT button
3. MENU button
4. VOL+/- button
5. PRO+/- button
6. POWER button
7. DVD disc holder
8. UP/DOWN/LEFT/  
RIGHT/ENTER  
button
9. PBC button
10. DEVICE button  
(DVD/U disc/Card  
switch)
11. U disc
12. MMS/SD/MSCard
13. STOP button
14. OPEN button

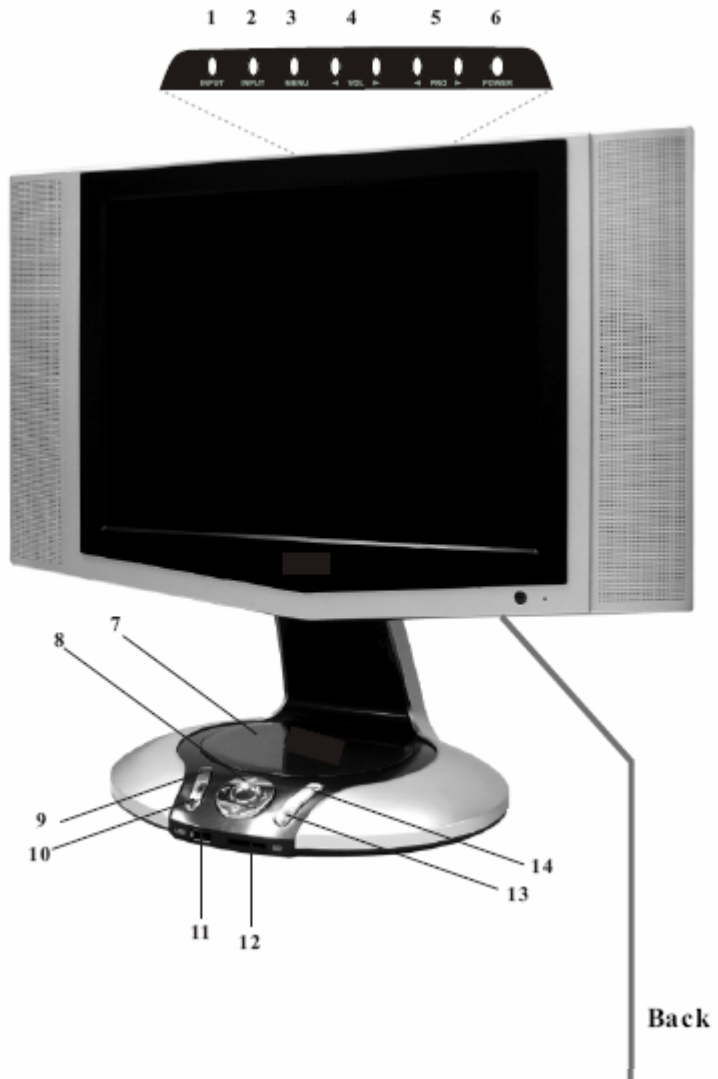

### Back panel

 1. DC input
2. VGA input
3. Y Pb Pr input
4. PC audio input
5. SCART input
6. S-VIDEO input
7. ANTENNA (Terrestrial only)

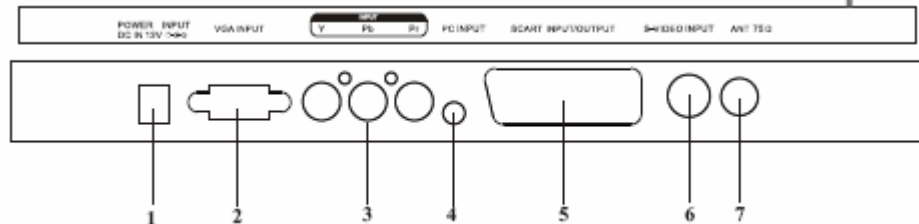

## LCD TV + DVD SYSTEMS CONNECTION

 
### CONNECTION:

**1. INPUT/OUTPUT JACK AS FOLLOWS:** ANT Input, S-VIDEO Input, VGA Input, PC(audio) Input, Y Pb Pr Input, SCART Input(Output).

**2. CONNECT POWER:** Connect the 12V power adapter to the power input of the LCD TV, and then connect the other end to your mains.

### Notice:


*1. This picture is for reference only.*

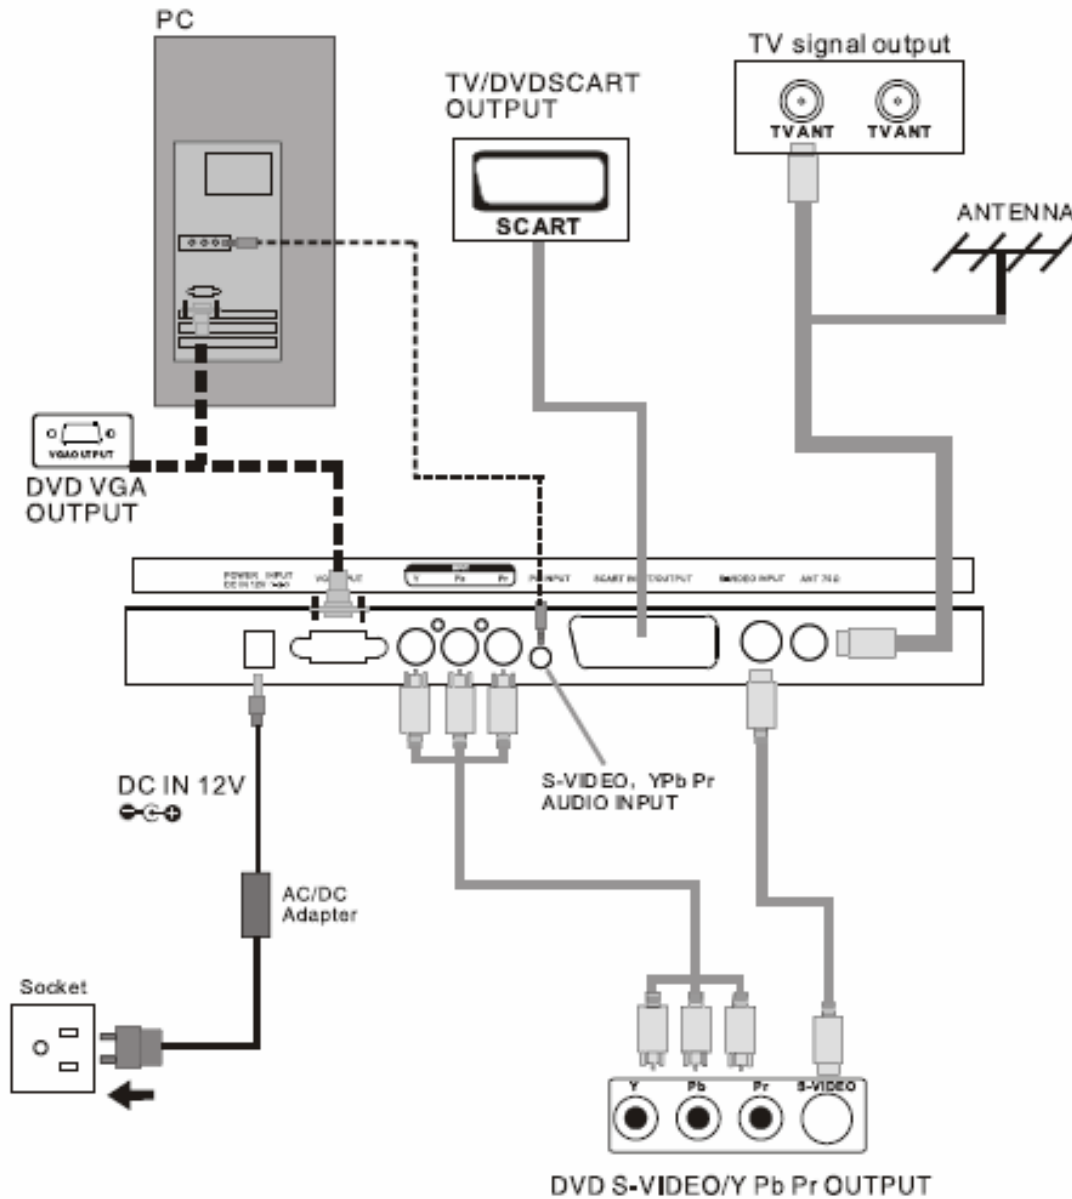

## LCD TV REMOTE CONTROLLER FUNCTION KEY

### Remote control instruction(TV)

 1. **AV:** Input source selection.
2. **PICTURE:** Into picture menu.
3. **SOUND:** Sound menu.
4. **0-9, +10:** Digital key.
5. **RECALL:** Switch to the last channel.
6. **SIZE:** Remove the Teletext & program.
7. **CANCEL:** Change display size.
8. **SLEEP :** Set the sleep time.
9. **P.MODE:** Set picture in sport, weak, game, personal.
10. **VOL-:** Volume down.
11. **CH+:** Channel up.
12. **CH-:** Channel down.
13. **MIX:** Switch to the Teletext with mix mode.
14. **TV TXT:** Switch to Teletext & TV.
15. **MUTE:** Mute ON/OFF.
16. **ADV.SKIP:** Switch between virtual stereo and mono mode.
17. **HOLD:** Toggle hold on or off for current.
18. **REVEAL:** Slow the hidden words.
19. **INCREO.MONO:** Showing the channel number and Volume
20. **NICAM/SUBP.:** Nicam function /
21. **CALL:** Showing the channel number and volume.
22. **MENU:** To enter into or exit from menu.
23. **VOL+:** Volume up

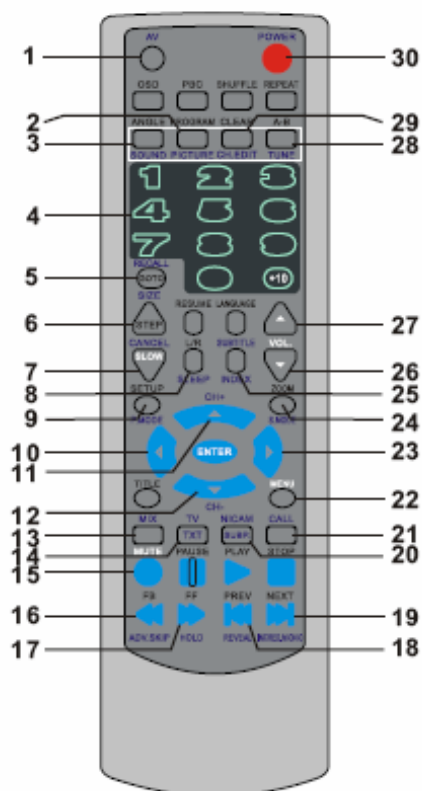

24. **S.MODE:** Set the sound in personal, voice, music, theatre.
25. **INDEX:** Request index page.
26. **VOL-:** Volume down.
27. **VOL+:** Volume up.
28. **TUNE:** Into tune menu.
29. **CH.EDIT:** Into CH.EDIT menu.
30. **POWER:** Turn the power on when pressed.



## LCD TV + DVD OPERATON

### Tuner on the LCD TV

1. Connect the 12V power adapter to the power input of the LCD TV, and then connect the plug to your mains.
2. Press the **POWER** button to turn on or turn off.
3. When the power is on, press the **AV**(remote) button to choose the input mode you want, whether it be Scart, HD, PC, Terrestrial, S-Video or DVD.

4. The **OPTIONS SETTING** menu allows you to alter the picture adjustment. Press **CH+** or **CH-** button to highlight the item you want to alter. Press or to select the item you want to alter, then press **VOL+** or **VOL-** button to adjust it.

**Note:** The item of selected is highlight when press **CH+** or **CH-** button.

### VGA Resolution

Resolution	640x480	800x600	1024x768
Vertical frequency(Hz)	60	60	60

### Using the Remote Control

Unless stated otherwise, the remote control can operate all the features of the LCD TV. Always point the remote control directly at the remote sensor in the front of the LCD TV.

### Battery Installation

Remove the battery compartment lid on the rear of the remote control by sliding the lid down, then off. Put two AAA batteries inside the battery compartment with their + and - ends aligned as indicated. Do not mix old and new batteries or different types of batteries. Replace the battery compartment lid. Slide the lid until you hear it click into place.

 
## LCD TV MENU OPERATON

### MAIN MENU

Press the **MENU** button while in the TV option. In menu Press **CH+** or **CH-** button to select the item you want to alter, then press **VOL+** or **VOL-** button to adjust it.

### AUDIO SETTING


1. **Volume:** Adjust the volume.
2. **Balance:** Adjust the balance of sound between left and right speakers.
3. **Bass:** Adjust bass volume.
4. **Treble:** Adjust treble volume.
5. **Preset:** Select your desired sound mode (personal, voice, music, theatre).
6. **Equalizer:** Adjust equalizer (100Hz, 300Hz, 1K, 3K, 8K).

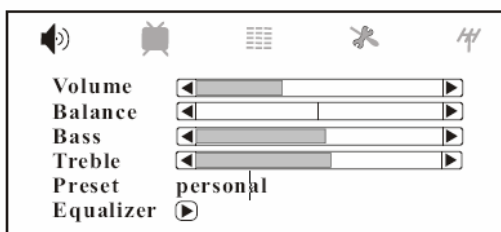

### PICTURE SETTING


1. **Brightness:** Adjust picture brightness.
2. **Contrast:** Adjust picture contrast.
3. **Colour:** Adjust picture colour.
4. **Sharpness:** Adjust picture sharpness.
5. **Tint:** Adjust picture Tint.
6. **Dyn.skin tone Off:** Select the function On or OFF.
7. **White. Tone:** Adjust picture colour temp.
8. **Preset:** Select picture mode.

 **Note:** Tint can be adjusted only for NTSC color signal.

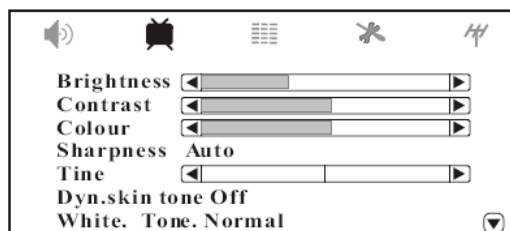


### PROGRAM SETTING

 Press **CH+** or **CH-** and **VOL+** or **VOL-** Button to highlight the item you want to alter. Select Green(Move) Moving channel. Select RED(Delete) Delete channel.

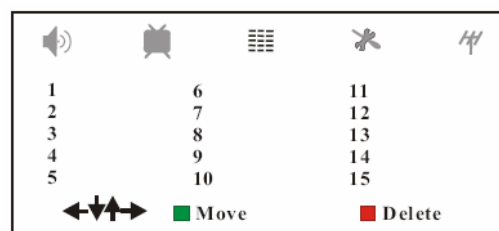

### OTHER SETTING

 1. **Show indicator:** select the function On or OFF.
  2. **Language:** Select OSD language.
  3. **Child lock:** Select child lock control ON/OFF.
  4. **Timers:** Select and set timers mode.
  5. **Teletext lang.:** Select teletext language.
  6. **Teletext E/W:** Selece teletext locale.
  7. **RT Clock:** Adjust clock or time.
- Note:** The child locked password is 0000, if you change the password you will be enter a 4-digit number(this is your password).

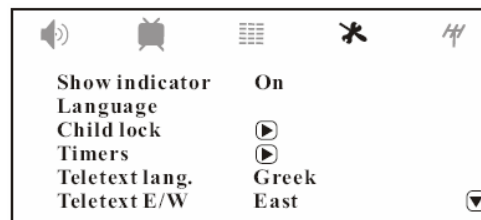


## LCD TV MENU OPERATON

### CHANNEL SETTING

- 1. Program Number.:** Use VOL+/-button select channel.
- 2. Program name:** Use CH+/- button to change character, Use the VOL+/- button to change position.
- 3. Colour system:** Adjust colour system.
- 4. Sound system:** Adjust sound system.
- 5. Auto store:** Use VOL+/- button to start auto tuning.
- 6. Frequency:** Use VOL+/- button to tune the effect of picture.
- 7. AFC:** Select AFC function ON or OFF.
- 8. Skip:** Select channel skip function ON or OFF.

 
**Lock: (No use).**

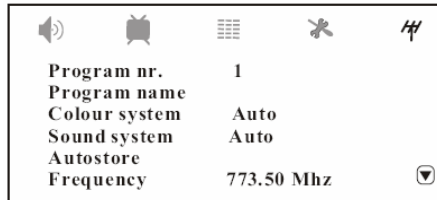

**Operate the AUDIO SETTING / PICTURE SETTING / OTHER SETTING repeatedly at TV / SCART / S-VIDEO / HD (Y Pb Pr)/ PC(VGA) sources.**


### HD(Y Pb Pr) MODE PICTURE SETTING

 - 1. Brightness:** Adjust picture brightness.
- 2. Contrast:** Adjust picture contrast.
- 3. Position:** Adjust the H/V position of the PC signal.
- 4. Video noise:** Select teletext language.
- 5. Colour:** Adjust picture colour.
- 6. Sharpness:** Adjust picture sharpness mode.
- 7. Tint:** Adjust picture Tint.
- 8. White. Tone:** Adjust picture colour temp.
- 9. Preset:** Select picture mode.
- 10. Info:** Display signal information.

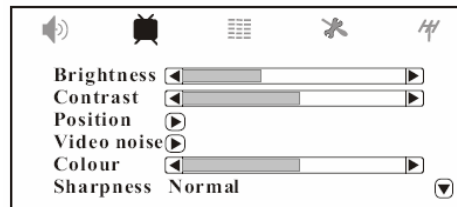


### PC(VGA) MODE PICTURE SETTING

 - 1. Brightness:** Adjust picture brightness.
- 2. Contrast:** Adjust picture contrast.
- 3. Position:** Adjust the H/V position of the PC signal.
- 4. Video noise:** Select teletext language.
- 6. Sharpness:** Adjust picture sharpness mode.
- 7. Auto Adjust:** Automatically adjust the position of the PC signal.
- 8. Info:** Display PC signal information.
- 9. Factory:** Automatically adjust the position of the PC signal.
- 10. Colour Temp.:** Adjust picture colour temp mode.

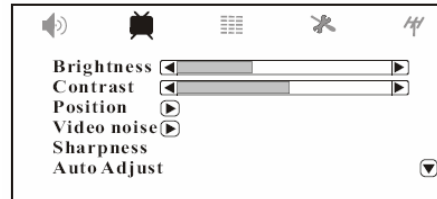

### PC(VGA) MODE AUDIO SETTING

 - 1. Volume:** Adjust the volume.
- 2. Audio:** Select audio ON or OFF.
- 3. Balance:** Adjust the balance of sound between left and right speakers.
- 4. Bass:** Adjust bass volume.
- 5. Treble:** Adjust treble volume.
- 6. Preset:** Select you like sound mode ( personal, voice, music, theatre).
- 7. Equalizer:** Adjust equalizer (100Hz, 300Hz, 1K, 3K, 8K).

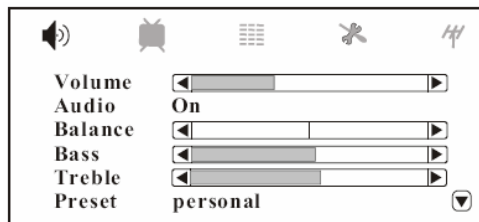

## LCD TV OPERATON

---

Teletext features may vary depending on the Broadcasting Companies and is only available if the channel selected is transmitting Teletext. Pressing the Picture button whilst in Teletext operation will switch the current status to TV. When in Teletext mode, the volume may still be altered to desired listening level, after pressing **VOL+/VOL-** or **MUTE** button. Please note that Teletext does not function on the DVB mode.

### TELETEXT (Optional)

#### Channel Selection

Channels can be selected in the following ways: By entering the page number, using **0-9** button on the remote control.

**Size Button** Press **Size** to change display size: normal => large top => large button =>normal **Reveal Button** Press **Reveal** to reveal hidden words e.g. Quiz page answers. Press again to hide. **RED / GREEN / YELLOW / CYAN** Buttons these four buttons correspond to the differently coloured subjects.

#### Hold Button

Press **Hold** to remain the Teletext page when viewing multi-page information Press again to return to automatic page update.

#### Index Button

Press **Index** to return to the main index page. Depending on the way information is transmitted, this may have to be pressed more than once to return to the main index page.

#### Cancel Button

Press **Cancel** to turn off the Teletext.

#### Subpage Button

When Teletext information exceeds more than one page, it may take some time for the automatic changing of the sub pages to reach the sub page you require. It is possible to enter your required sub page and continue watching the normal program until the correct sub page is found.

Select the required page number using buttons 0-9. If the top of the page indicates that sub pages are being transmitted yet the page dose not change, then the number at the top of the page is there to indicated that the broadcaster has updated the page s contents, there are no sub pages. Press **Subpage** , page number/---- will be displayed at the Button right of the screen. Enter desired sub page number before the page number/---- disappears. To select page 6 enter 0, 0,0 and 6.

#### Txt Button

Press **Txt** to enter Teletext mode and only the text page can be visible.

#### Mix Button

Press **Mix** to enter Teletext mode and both the TV picture and text page can be visible.

## LCD TV OPERATON

---

### NICAM (Optional)

 
Press the **NICAM** button:

Usually set to **stereo** to provide the best reproduction, but if reception deteriorates or if the service is not Available then switch to Mono. **Mono (M1) and (M2)** can also be selected if a mono signal is being transmitted.

## USB/SD/MMC/MS OPERATON

### OPERATION INTRODUCTIONS

1. Insert USB device, SD/MMC/MS Card into appropriate slot.
2. Then either press the AV button on the remote control until you select DVD.
3. Then the USD Drive or memory card will start loading.
4. Either use the DEVICE button on the panel or use GOTO and direction buttons on the remote control to move the selection highlight. Then press the ENTER button to switch DVD/USB Drive/Memory card mode (while switching mode please stop all other function)

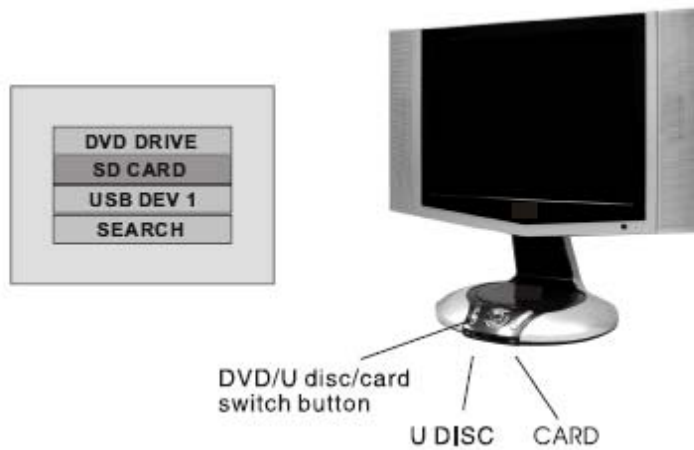

### Playing MP3 and JPEG discs

#### Mode one

 
When SMART NAVI in Preferences page is set as NO MENU, the directory and play mode will not be displayed. You can use numeral buttons to select and play the songs.

#### Mode two(With Menu)

When the display of the selected device is shown use the arrow buttons to select the file you wish to play and press the enter button. Also you can use direction button to set play mode. If you want to change the directory or set a new play mode, simply select the root menu and press ok to display all the files on the device.

#### Notice:

1.This picture is for your reference only, for different MP3 players the display may not be the same.

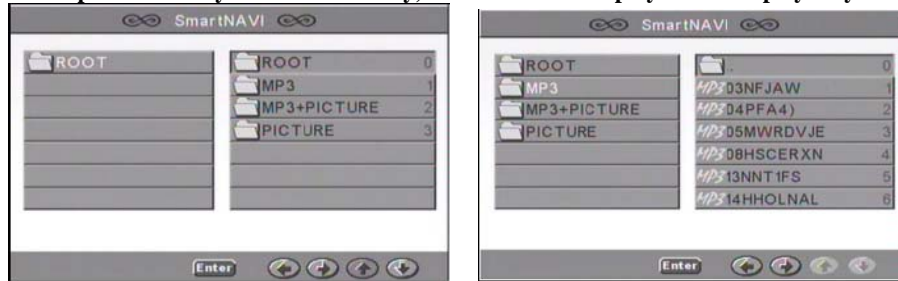

## DVD OPERATION

### Supporting function of disc



PAL zone code & TV system



Picture scale mode



 
Numbers of sound language



Parental lock



Numbers of subtitle language



View angle



Close caption  
(Only NTSC)

### Operation instruction:

#### Step 1:

 
Press the **Power** button and then open your LCD TV + DVD, Press the **AV** button on the remote controller or **INPUT** button to switch to DVD mode .

#### Step 2:

Press the **OPEN** button on the base unit of the DVD disc holder.

#### Step3:

Put the disc on the tray and close cover, the player will identify different disc formats automatically.  
then press the **PLAY** button to play the disc.

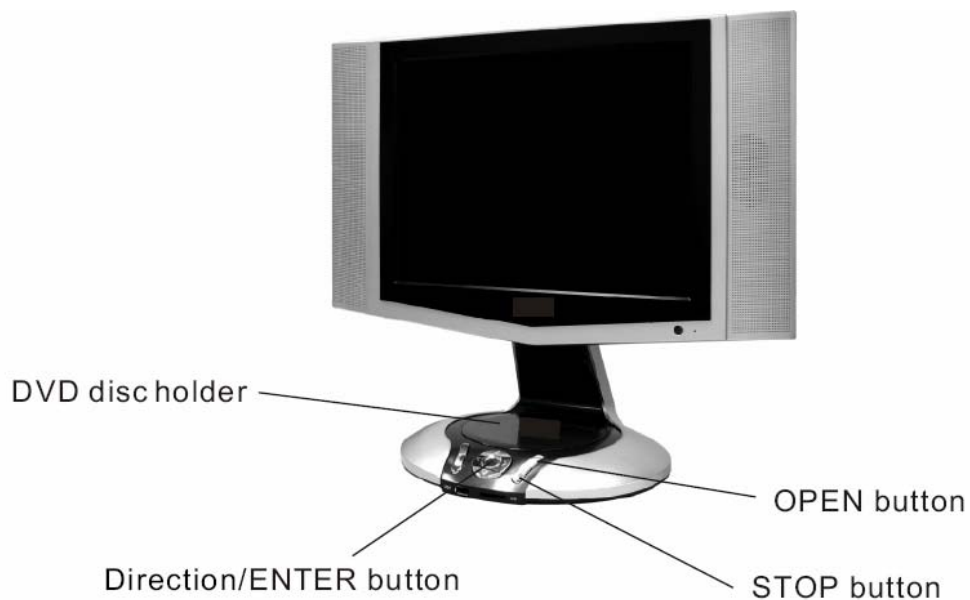

## DVD REMOTE CONTROLLER FUNCTION KEY

### 1. AV

Press the AV button select input source

### 2. PBC

Press **PBC** to toggle Playback Control on and off when playing a DVD.

### 3. SCREEN DISPLAY

When the disc is playing Press **OSD** key to display the current disc title, chapter, tack, and other disc information.

### 4. PROGRAM

On the stop and PBC OFF state press **PROGRAM** button to program the playing turn with numeral buttons.

### 5. ANGLE

Press the **ANGLE** key continually to select various angles to view the same image (This operation only works for the discs with multi angles encoded).

### 6. NUMERIC KEYPAD

### 7. GOTO

 
Press **GOTO** to jump to a specific title, chapter, track, or time during disc playback. Use the arrow keys to select the placeholders, then use the number keys to enter the desired Title/Chapter(DVD), Track(CD), or time counter position.

### 8. RESUME

If you stop the DVD press resume to go back to the point in which you stopped it.

### 9. STEP

Press **STEP** key continually, You can play the disc step by step, in this way, you can catch any picture on the disc (not for MP3, CD). Press Play button to play normally.

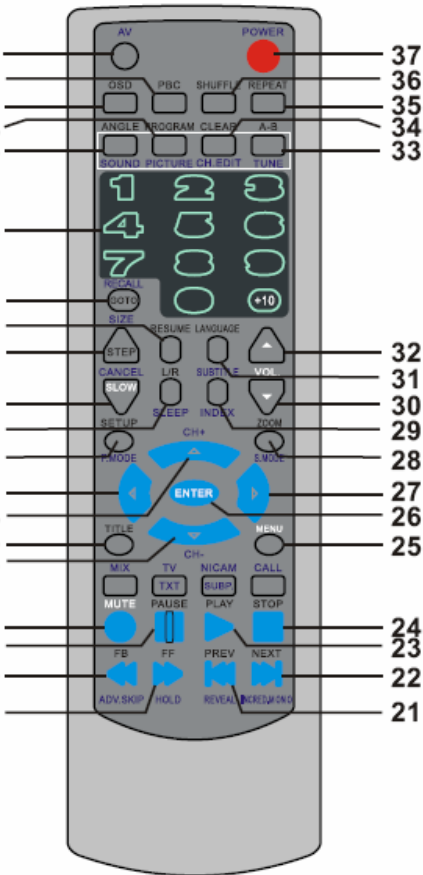

### 10. SLOW

Press **SLOW** key continually, the playing mode will circle within SF 2X, SF 4X, SF 8X, SR 2X, SR 4X, SR 8X and normal play (for DVD disc).

The playing mode will circle within SF 1X,

SF 2X, SF 3X and normal play (for VCD)

### 11. L/R

When VCD disc playing press **L/R** key to select Mono Left, Mono Right, STEREO.

### 12. SETUP

Press the **SETUP** button, the main setup menu appears.

## DVD REMOTE CONTROL FUNCTIONS

---

**13, 14, 16, 26, 27** Direction( ▲▼◀▶ ) / Enter key  
Direction key pad up, down, left and right. Enter button.

**15. TITLE**

For DVD disc playing, press **TITLE** key to get title menu.

**17. MUTE**

Press **MUTE** key to turn the sound off, press it again to recover it from mute.

**18. PAUSE**

Pauses the DVD.

**19. FB REWIND**

Press **FB** key to rewind up to 2X, 4X, 6X, 8X the speed in which the DVD would normally play.

**20. FF**

Press **FF** key to fast forward up to 2X, 4X, 6X, 8X the speed in which the DVD would normally play.

**21. PREV**

Press **PREV** button to skip back a chapter.

**22. NEXT**

Press **NEXT** button to skip forward to the next chapter.

**23. PLAY**

Press **PLAY** key to return playback while disc stop, pause or step.



## DVD REMOTE CONTROL FUNCTIONS

---

### 33. A-B

When you are watching a DVD you can set up something called A-B start and end. This will enable you to mark a start position anywhere on the DVD and then a end point. When turned on it will repeat play in between the two points you have just selected. To do this press the A-B once to select the start point then press it a second time to select the end point. This will now repeat play the selection for you. In order to stop the function simply press the A-B button again to cancel it.

### 34. Clear

Press the **CLEAR** button to clear any current displays

### 35. Repeat

When the DVD is playing, press the **REPEAT** button to repeat chapter you have just watched.

### 36. Shuffle

Select shuffle ON or OFF.

### 37. Power

Turn ON or OFF LCD TV +DVD.

 
## DVD OPERATON (SETUP MENU)

### Setup Menu System

1. Press the **SETUP** button, the main setup menu appears.
2. Press the Left and Right arrow buttons to highlight the icon of the desired page, then press the Down or Right arrow button to activate that page; For example, if you want to setup the video page, press Right to highlight the video icon, the video page will be displayed on the screen.

#### GENERAL PAGE

The general page options are illustrated below:

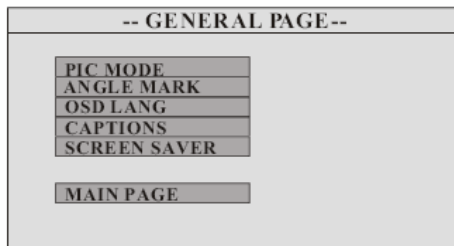

#### Picture Mode

In the picture Mode, you can choose the auto/film/video/smart/super smart.

#### Angle mark

You can set the Angle mark as ON or OFF (If the DVD disc has this function).

#### OSD language

Select the language you prefer for the on screen Display.

#### Captions

 
You can set the caption as ON or OFF (If the DVD disc has this function).

#### Screen Saver

If the screen saver is on, when your DVD player is in the Stop, Open, or No Disc state, the screen saver will be displayed. This feature can protect the screen from damage.

#### Speaker Setup


The speaker setup page options are illustrated below:

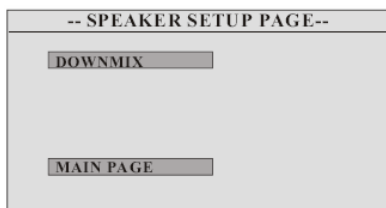

In speaker setup options: You can choose DOWNMIX(LT/RT, STEREO).

#### AUDIO SETUP

 The audio setup page options are illustrated below:

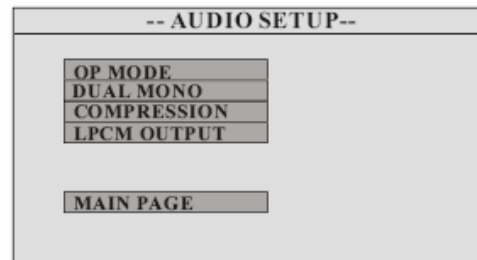

#### OP MODE

When you use a RF Mode select RF Remod, For anything else select Line out.

#### DUAL MONO

If your amplifier/decoder already has digital output, you can select Stereo, L-mono, R-mono, MIX-mono for your amplifier/decoder.

#### COMPRESSION

 
This is to adjust sound dynamic range.

#### LPCM output

You can set this option for different audio encode mode(48K or 96K).

#### PREFERENCES SETUP

The preferences setup options are illustrated below:

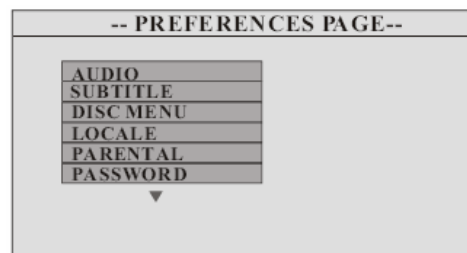

## DVD OPERATON (SETUP MENU)

---

**Audio**

Selects the language for the disc audio track.

**Subtitle**

Selects the language for subtitles when supported by the disc.

**Disc menu**

Selects the language for the disc menus, when supported by the disc.

**Locale**

Select Parental lock country.

**Parental**

Select Parental lock level.

**Password**

Use to set your own personal password for the parental control settings.

The default password is 3308.

**Defaults**

 
Using this option to resume the setting of factory.

**Smartnavi**

Select NO MENU or WITH MENU play mode.

## DVD OPERATON (MP3 and JPEG)

### Playing MP3 and JPEG discs

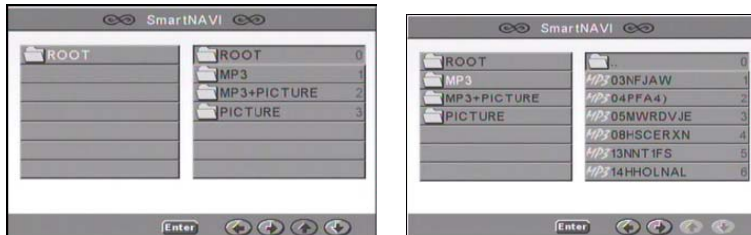

#### Mode one (With Menu)

When the menu is displayed as above simply use the arrow keys to select the file you wish to play. If you want to change the file and it is not listed in the directory you have selected you may need to go back into the root directory to find the files you are searching for.

Notice: for different MP3 discs the display may not be the same as illustrated.

Press Repeat button

You can set the play mode as REP-ONE, FOLDER R, DISC, DISC REP, DISC SCAN, SINGLE, FOLDER. The setting will determine

Program play

- 1) Press **PROGRAM** button to go into program mode.
- 2) Use **NUMERAL** buttons to select the song. When finished, press **STOP** button to stop program.
- 3) Press **PLAY** button to play in the turn that you program.
- 4) Set other play mode to exit program play.

#### Kodak Picture CD

When a directory is selected in the play mode window, each picture in the current directory will be displayed consecutively in a slide show fashion and will be scaled to fit in the TV screen. Twelve slide show transition modes are provided, use **RESUME** button to select:

Mode 0: no special transition effect (by default) Mode 7: wipe from right to left

Mode 1: wipe from top to bottom Mode 8: wipe from left/right to center

Mode 2: wipe from bottom to top Mode 9: wipe from center to left/right

Mode 3: wipe from top/bottom to center Mode 10: wipe from edge to center

Mode 4: wipe from center to top/bottom Mode 11: horizontal blinds

Mode 5: vertical blind Mode 12: random

Mode 6: wipe from left to right

To display an image indefinitely, press the **PAUSE** button. To resume the slide show press the **PLAY** button. To view the Next or Previous picture press **NEXT** or **PREV** buttons.

For technical Enquiries please call us on

0161 975 0458 (Office hours only 9am-5pm) Monday to Friday

## DVD OPERATON (MP3 and JPEG)

---

### Image Rotation

There are four modes to rotate a picture: Invert, Mirror, Left, and Right. These operations are allowed only when a picture is being displayed normally and will be cancelled automatically when a new picture is displayed. The arrow button is used to select the different rotation modes: UP button: Invert/Normal Down button: Mirror/Normal Left button: Turn left Right button: Turn right

### Zoom

This model has a ZOOM in/out and Zoom pan functions for JPEG pictures. The **ZOOM** button is used to turn this function on or off. When this mode is on, any picture will be displayed at the last ratio selected by the user. An OSD message will indicate the current ratio. If zoom mode is on, **FF** and **FR** buttons are used to control the ratio of zoom in/out. With ZOOM mode off, a picture is scaled to fit the whole screen. Note: during ZOOM function, slide show transition and image transformation are disabled.

### Digest Model

The **ROOT** button is used to enable JPEG digest mode. After it is enabled, up to nine scaled-down JPEG pictures will be displayed on the screen. The **NEXT** and **PREV** buttons can be used to display the next and prev nine pictures in the current directory. Each of the nine pictures will be numbered from 1 to 9. By pressing a numeral button the corresponding picture will be enlarged to fill screen, and the digest mode will be cancelled.

### Music Slide Show

Using **STEP** button in the fully stopped state to enter or exit music slide show. After entering music slide show, using **A-B** button to select a MP3 file as background audio.

Notice: During Music Slide Show, image transformation, zoom and digest are not allowed.

### LCD PROBLEM SOLVING

**If you have any problems, please try the following methods first, if failure still exists, please refer to customer service department.**

<b>No picture and no sound</b>	Check power supply and cable connection
	Make sure the power button is ON
	Check for correct setting for brightness and contrast ratio
<b>Has picture but no sound</b>	Check audio cable and audio volume
	Make sure LCD TV was not muted
<b>Picture in black and white or color problem</b>	Adjust color setting
	Check if the LCD TV tuner format selection is correct
<b>Picture or sound interference</b>	Check if LCD TV is too close to other electronic devices for potential interference.
<b>No signal display</b>	Check if selected input source and connection
	Check if the selected input source is working
<b>Remote control problem</b>	Check battery
	Remote dose not aim at LCD TV + DVD remote signal receiver
	Check if there is obstacle between remote and LCD TV + DVD
	Remote is too far away form LCD TV +DVD or the angel is too sharp
<b>Snowy picture with noise</b>	Adjust antenna location and angle for better Reception
	Check antenna location and angle for better Reception
	Check PC or the connected device for correct frequency and bandwidth

### LCD TV SPECIFICATION

<b>LCD:</b>	<b>15" LCD</b>
<b>View angle:</b>	<b>Horizontal view angle: 130 Vertical view angle:110</b>
<b>PC input:</b>	<b>Vertical frequency:60/75Hz</b>
<b>Resolution:</b>	<b>640x480, 800x600, 1024X768 (best resolution 1024X768)</b>
<b>TV system:</b>	<b>PAL D/K, I, B/G</b>
<b>Channel amount:</b>	<b>100</b>
<b>Input:</b>	<b>VGA(PC), Y Pb Pr(HD), S-VIDEO, PC Audio, ANTENNA, SCART</b>

## DVD PROBLEM SOLVING

### No picture

1. Please confirm to switch DVD mode.
2. Push the front panel POWER button off and back on.

### Disc is not playing

1. Make sure the disc is in correctly and the correct way up.
2. Try cleaning the disc with a soft cloth to wipe away any fingerprints or smudges.
3. Close cover.

### No sound

1. Check Volume adjustment on the player and the external equipment.
2. Check the MUTE button on the player and the TV.

### Remote controller doesn't function

1. Make sure the batteries are installed with the correct polarities(+ and -).
2. Batteries are expire. Replace with new ones.

### Solution for reading error of USB Drive or Memory Card

1. Check whether there are files stored on the USB Drive or memory card.
2. Check whether it has been switched to the correct mode.
3. Check whether the player is compatible with the file type.
4. When playing a large size video / picture file, pauses of picture and sound may occur, this is a normal scene.

## DVD Specifications

<b>Compatible with</b>	DVD/MPEG4/CD/VCD/MP3/CD-G/Kodak Picture CD
<b>Video</b>	MPEG2/MPEG4
<b>Audio</b>	MPEG2/MPEG4
<b>Signal output</b>	Y, C
<b>Video system</b>	PAL/NTSC
<b>U disc</b>	U disc
<b>Card</b>	SD/MMC/MS

## General Specifications

<b>Speaker output</b>	1.5W x 2 (Impedance 4ohm)
<b>Speaker</b>	3W x 2 (Impedance 4ohm)
<b>Power supply</b>	Input: 100-240V~ 50/60Hz Output: DC12V 5A
<b>Power Consumption</b>	60W
<b>Accessories</b>	Remote controller, common AAA battery

This user manual is for reference only.  
Specifications are subject to change without notice.

