

kogan

My Q)) t) ‡ °

USER MANUAL



Contents

Caution	1
Safety Information	2
<hr/>	
Names of each part	3-4
Front View	3
Accessories	3
Back View	4
<hr/>	
Remote Control	5-6
<hr/>	
Basic Operation	7
<hr/>	
OSD Menu	8-14
1. Picture menu	8
2. Sound menu	9
3. Channel menu	10-11
4. Feature menu	12-13
5. Setup menu	14
<hr/>	
Multimedia Operation	15-17
Recording Operation	18-20
<hr/>	
DVD Operation	21-29
<hr/>	
Trouble shooting	30
<hr/>	
Specifications	31

Caution



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of un-insulated “dangerous voltage” within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to the persons.



The exclamation point within an equilateral triangle is intend to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



Correct disposal of this Product

(Waste Electrical & Electronic Equipment (WEEE))

Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life should be disposed of separately from your household waste.

Please dispose of this equipment at your local community waste collection/ recycling center.



Pb



This unit complies with European safety and electrical interference directives.

Safety Information

To ensure reliable and safe operation of this equipment, please read carefully all the instructions in this user guide, especially the safety information below.

Electrical safety


- To prevent overload, don't share the same mains supply socket with too many other items of equipment.
 - Do not place any connecting wires where they may be stepped on or tripped over.
 - Do not place heavy items on the leads, which may damage them.
 - Hold the Mains plug, not the wires, when removing from a socket.
 - During a thunderstorm or while leaving the TV for long periods, disconnect the aerial (if outdoor) and mains power from the supply.
 - Do not allow water or moisture to enter the TV . Do NOT use in wet or moist areas such as bathrooms, steamy kitchens or near swimming pools.
 - Pull the plug out immediately, and seek professional help if:
 - the mains plug or cable is damaged.
 - liquid is spilt onto the set, or if it is accidentally exposed to water or moisture.
 - anything accidentally penetrates the ventilation slots.
 - the set does not work normally.
 - Do NOT remove the safety covers. There are no user serviceable parts inside. You may invalidate the warranty. Qualified personnel only are permitted to service this apparatus.
 - To avoid battery leakage, remove exhausted batteries from the remote control handset, or when not using for along period.
 - Do NOT break open or throw exhausted batteries on a fire.
-

Physical safety

- Do NOT block ventilation slots in the back cover. You may place the TV in a cabinet, but ensure at least 5cm (2") clearance all around the unit.
- Do NOT tap or shake the TV screen, you may damage the internal circuitry. Take good care of the remote control, do not drop it or allow it to come into contact with liquids.
- To clean the TV use a soft dry cloth. Do NOT use solvents or petrol based fluids. For stubborn stains, you may use a damp soft cloth with diluted detergent.

Names of each part

Front View

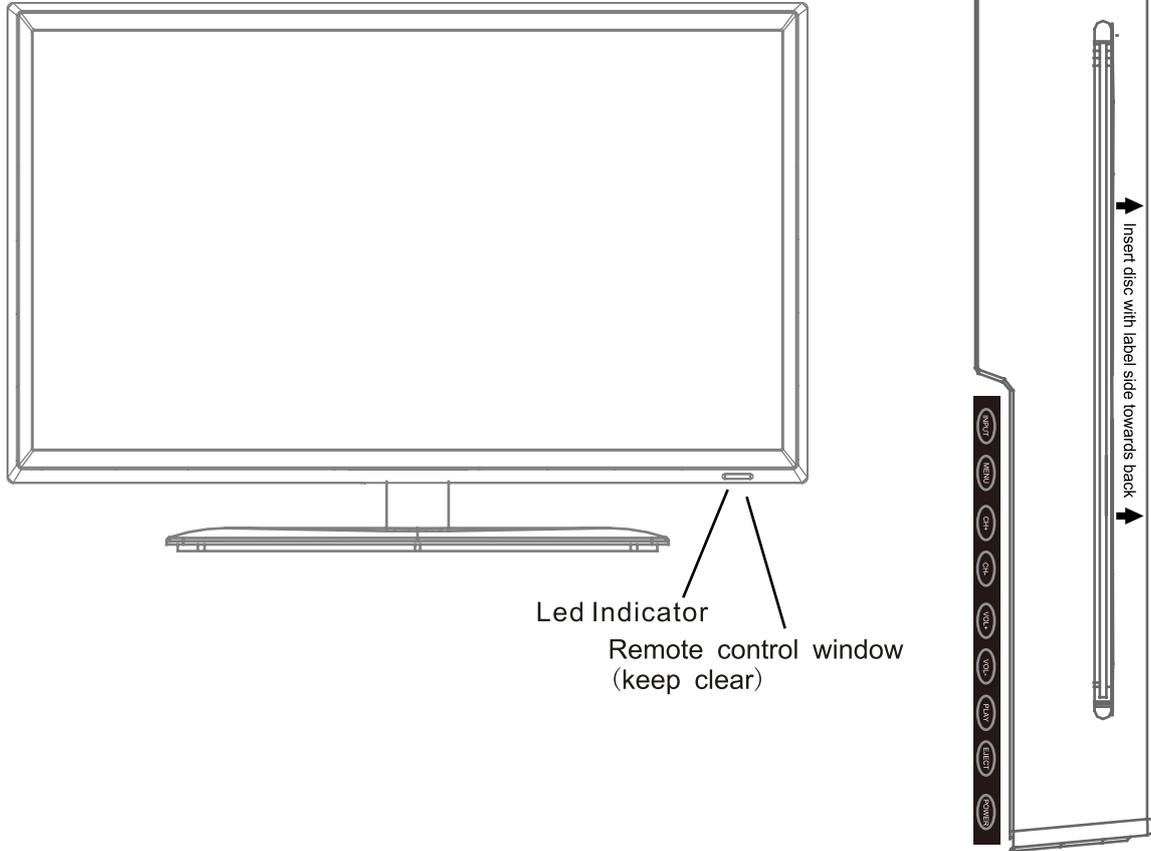

- INPUT:** Display the input source menu.
- MENU:** Display/exit the OSD menu.
- CH+/-:** Scan through channels.
- VOL+/-:** Adjust the volume.
- PLAY:** Play/pause the disc playing.
- EJECT:** Eject / Close the disc.
- POWER:** Turn on/standby the TV set.

Accessories



- The configuration of the components may look different from the following illustration.



Remote Control

Names of each part

Back View

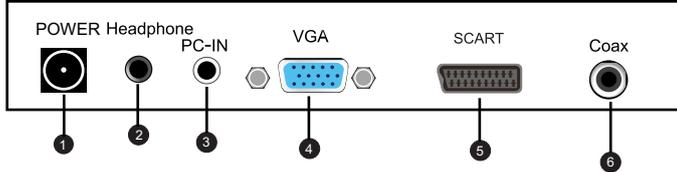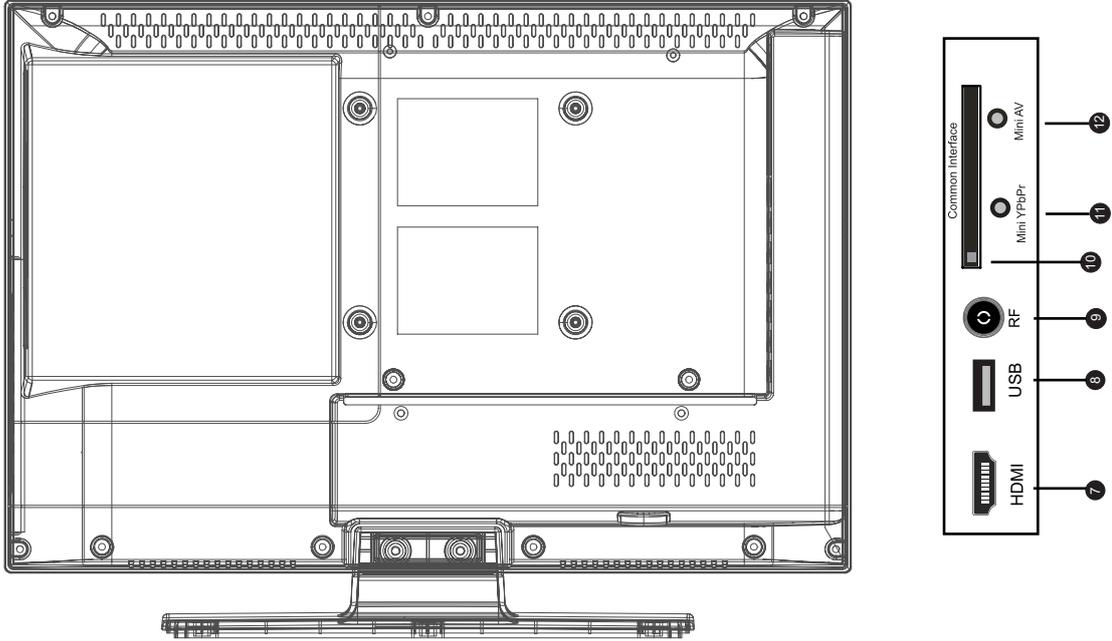


- | | | |
|-----------------|---------|---------------|
| ❶ POWER | ❺ SCART | ❷❶ CI |
| ❷ Headphone out | ❻ Coax | ❷❷ mini YPbPr |
| ❸ PC-IN | ❷❶ HDMI | ❷❷ mini AV |
| ❹ VGA | ❷❶ USB | |
| | ❷❶ RF | |

Remote Control

● Functions of remote control buttons

The remote control is using Infra-Red (IR). Point it towards the front of the TV. The remote control may not work correctly if it is operated out of range or out of angle.

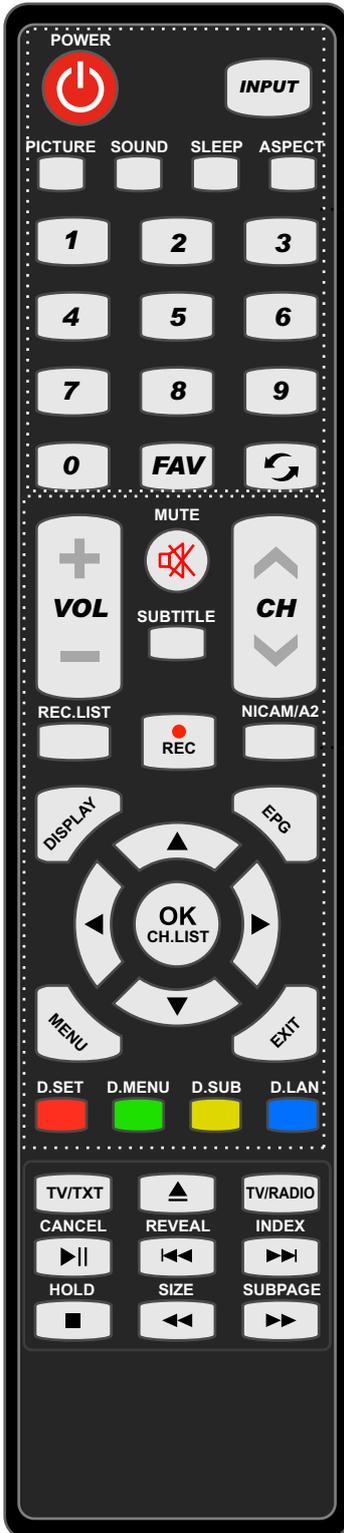

POWER: Turn the TV on/standby.
INPUT: Press to display the input source menu.

PICTURE: Select the picture mode.
SOUND: Select the sound mode.
SLEEP: Standby timer.
ASPECT: Change the screen display mode.

NUMBER BUTTONS
 Press 0-9 to select a TV channel directly when you are watching TV.

Return to previous channel: Press the circular arrow button.
FAV: Display the favorite program list.

MUTE: Press to mute the sound, press again or press VOL+ to unmute.
SUBTITLE: Turn on/off the subtitle display in DTV mode

VOL+ /- : Adjust the volume.
CH▲/▼: Scan through channels.

REC.LIST: Record List.
REC : Press to start recording inDTV mode.
NICAM/A2: TV Nicam/A2 select.

DISPLAY: Press to display the current mode's information.
EPG: To show the Electronic Program Guide during no-menu state only in DTV mode.

CURSOR KEYS (▲/▼/◀/▶/OK)
 Allows you to navigate the on-screen menus and adjust the system settings to your preference.

CH.LIST: Display the channel list.
MENU: System setup menu.

EXIT: Exit the OSD menu.
D.SET: DVD system setup.
D.MENU: DVD play list/Disc menu.
D.SUB: Turn on/off the subtitle display in DVD mode.
D.LAN: Select DVD disc language.

Remote Control



- ▲ : Load/eject DVD disc.
- ▶|| : Play/Pause program.
- ◀◀ : Previous chapter.
- ▶▶ : Next chapter.
- : Stop program.
- ◀◀ : Fast reverse.
- ▶▶ : Fast forward.

TV/TXT: Turn off/on the Teletext display.
 TV/RADIO: To switch to TV or Radio state in DTV mode.
 CANCEL: Cancel the Teletext display.
 REVEAL: Reveal any hidden text.
 INDEX: Go to index.
 HOLD: Hold or carry on the current subpage.
 SIZE: Press to see top half of page double size,
 Press again to see the bottom
 half of page double size. Press again for normal size.
 SUBPAGE: Press to enter subpages, press again to cancel.

Basic Operation

Power on/off

1. Connect to the power supply with the power adaptor.
2. -To turn on the TV
Press **POWER** button on the TV or remote control.
- To turn off the TV
Press **POWER** button on the TV or remote control.

Input Source select


Press **INPUT** button on the TV set or remote control to display the input source menu, and use **CH+/-** button on the TV set or \wedge/\vee button on remote control to select the input source, press **OK** button on the remote control to enter.

Note: Before you select the input source, make sure the connections are prepared.



Basic OSD Menu operation

Press **MENU** button to display the OSD menu as below:

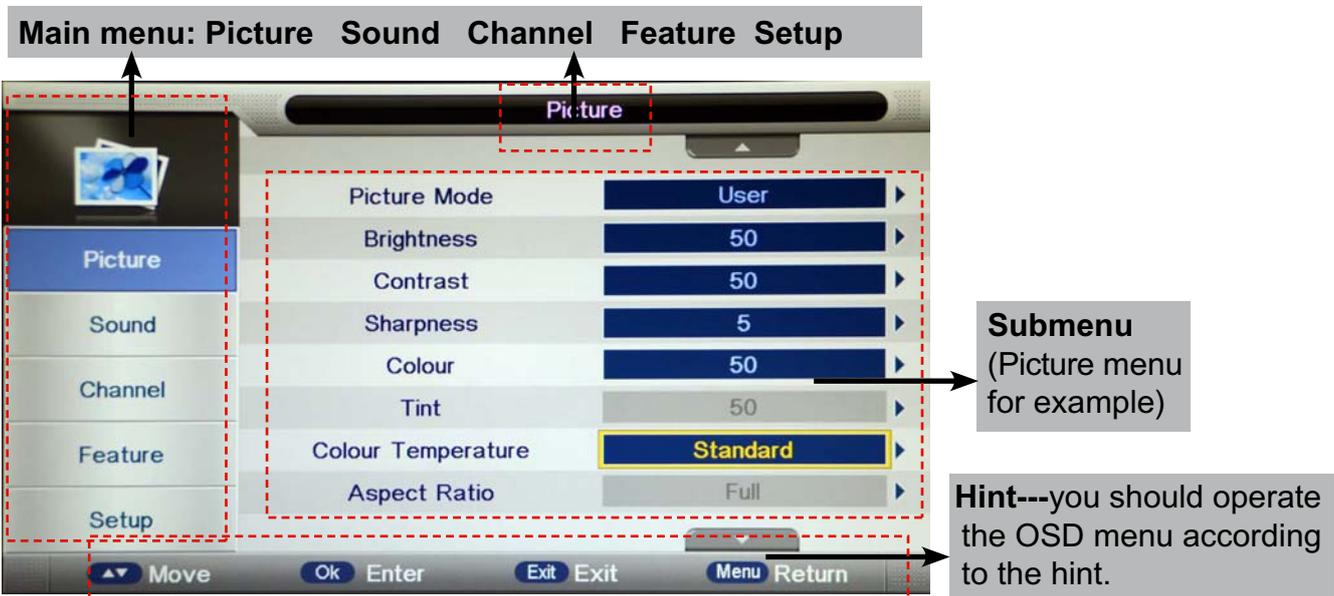

Use \wedge/\vee button to select the main menu, and press $>/\text{OK}$ button to enter the submenu. In the submenu, use \wedge/\vee button to select the function item, press $>/\text{OK}$ button to enter the setup menu, then press $</>$ button to adjust, or press \wedge/\vee to select and press **OK** / $</>$ button to confirm.

* (Press **MENU** / $<$ button to return to the upper menu.)

* (Press **EXIT** button to exit the menu display.)

Note1: Only once the television is receiving an input signal can the input be selected.

Note2: Please operate the OSD menu according to hint on the bottom of the banner.

OSD Menu

1. Picture menu



Description

Picture Mode: Select your desired picture mode from Dynamic, Standard, Mild and User.

Brightness: Adjust image black level.

Contrast: Adjust image contrast.

Sharpness: Adjust the sharpness(Gray and invalid in VGA/PC mode).

Colour: Adjust image colour from black and white.

Tint: Control the tint (NTSC mode only).

Colour Temp.: Select an optimum colour temperature mode to suit your eyes for viewing from Warm, Cool, Standard.

Aspect Ratio: Change the aspect for the screen from 4:3,16:9,Zoom1,Zoom2.

Noise Reduction: If the broadcast signal received is weak, you can select the Noise Reduction option to reduce the video noise level between Off, Low, Middle and High.

OSD Menu

2. Sound menu



Description

Sound Mode: Select your desired sound mode from Standard, Movie, Music, Speech and User.

Bass: Adjust the level of the lower-pitched sounds.

Treble: Adjust the level of the higher pitched sounds.

Balance: Adjust the audio output between left and right speakers.


Surround: Turn on/off the surround sound function.

Auto Volume Level (AVL): The volumes of all sources will be maintained when the function's on.

SPDIF: Select the spdif mode for the TV from off, PCM and Auto.

OSD Menu

3. Channel menu(In ATV/DTV mode)

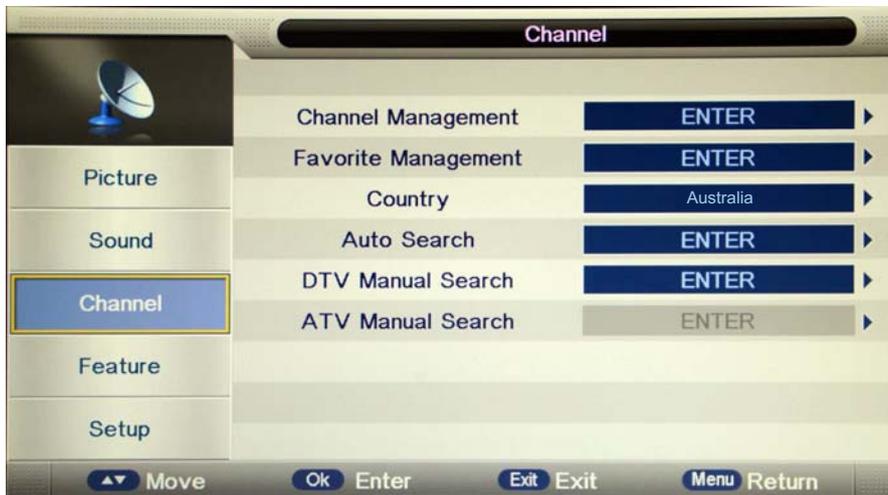

Description

Channel Management: Enter the Channel management menu to edit the channels.



Delete: Press **RED** button to sign the channels you want to delete, it will hint you when you exit.

Lock:User must set the “Lock enable”(Feature-Lock- Lock enable) at ON to active this function.

Press **GREEN** button to sign(lock) or cancel(unlock) the channel. And you have to enter the password to view the program.

Skip: Press **YELLOW** button to skip the channel or cancel the setting, and the program will not be programmed by CH+/- button.

Swap: Press **BLUE** button to sign the channel, press \wedge/\vee button to move, and press OK button to swap the position.

Favorite Management: Add or remove favourite channels by the colour buttons.

Up to 4 favourite lists are available, RED-Fav1, GREEN-Fav2, YELLOW-Fav3, BLUE-Fav4.



OSD Menu

Country: Select the country.

When the Child Lock is on, please enter the Password (Lock Password in Feature menu) to start Auto and Manual Search.

Auto Search: Press OK button to enter the Auto Search menu, select search mode, and press OK button to start auto search.




Note:

1. ALL: Auto search channels for DTV, ATV and Radio.
DTV: Auto search channels for DTV and radio.
ATV: Auto search channels for ATV.

2. When the TV is auto tuning, you could press MENU button to stop auto tuning and return to preview menu.


DTV Manual Search: Enter the DTV Manual Search menu.

Press \wedge / \vee button to select the "Channel" item, and press \lt / \gt button to select the channel, then press \wedge / \vee button to select the "Start" item, and press \lt / \gt button to manual search.

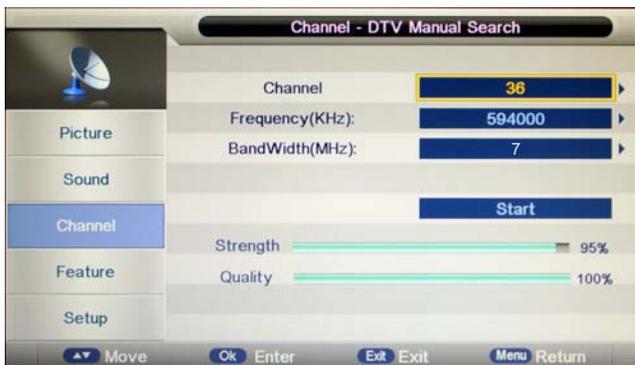

DVB-T

ATV Manual Search: Enter the ATV Manual Search menu.

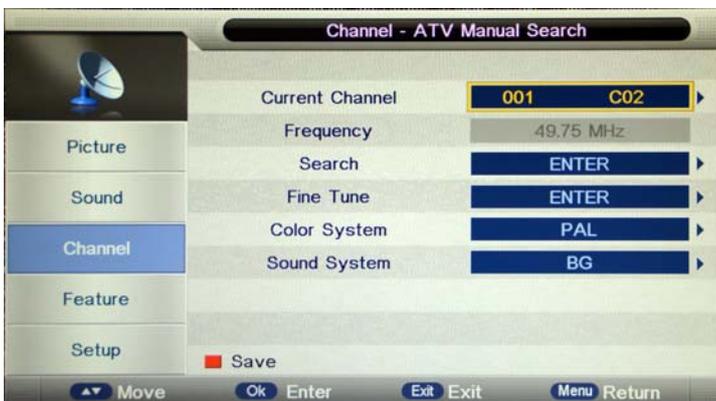

Current Channel: Select the current channel for manual searching.


Search: Press OK button to enter the search menu, and manual search the frequency by \lt / \gt button.

Fine Tune: Press OK button to enter the Fine tune menu, and fine tune the frequency by \lt / \gt button.

Color/Sound System: Select the Colour/Sound system for the program.

OSD Menu


4. Feature menu

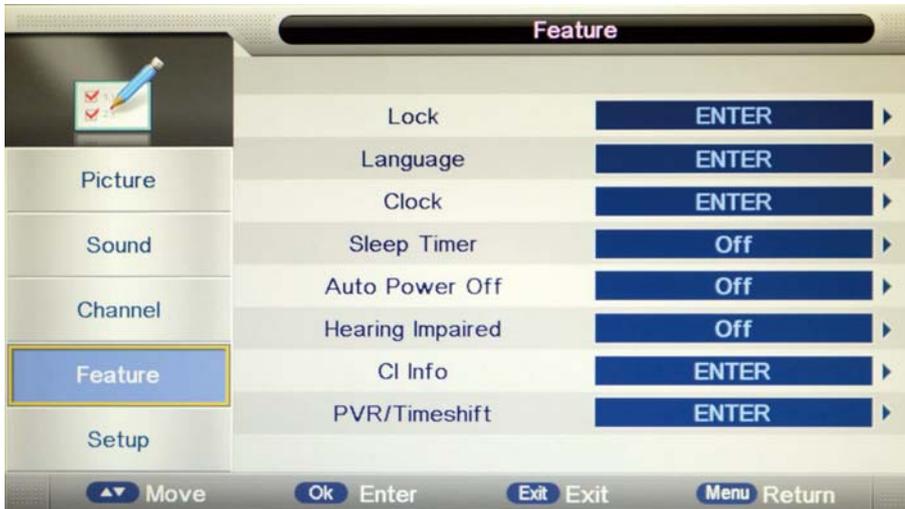

Description

Lock: This menu allows you to lock certain features of the television so that they can not be used or viewed. For example if you don't want certain channels viewed by children or if the television is to be used in a hotel and you want certain channels be locked.

When you enter the system lock menu you will be asked for a password. As default it is 0000.

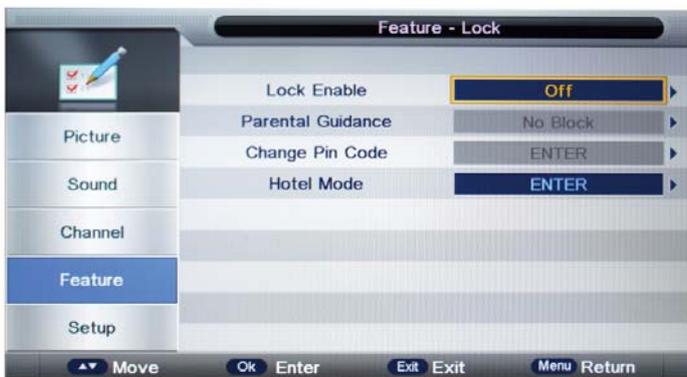

Lock Enable - Turn on/off the Lock functions.


Note: When it is be turned on, the functions of Parental Guidance and Change Pin code below will be locked, and the functions Lock(in Channel Management), Auto Search, DTV Manual Search, ATV manual Search in Channel menu will also be locked.

Parental Guidance - Select the Parental Guidance mode, or turn off the function.

Change Pin Code – Press OK button to enter , first enter the current code, then enter your new code and confirm your new code.

OSD Menu

Hotel Mode - Enter the Hotel Setting menu.

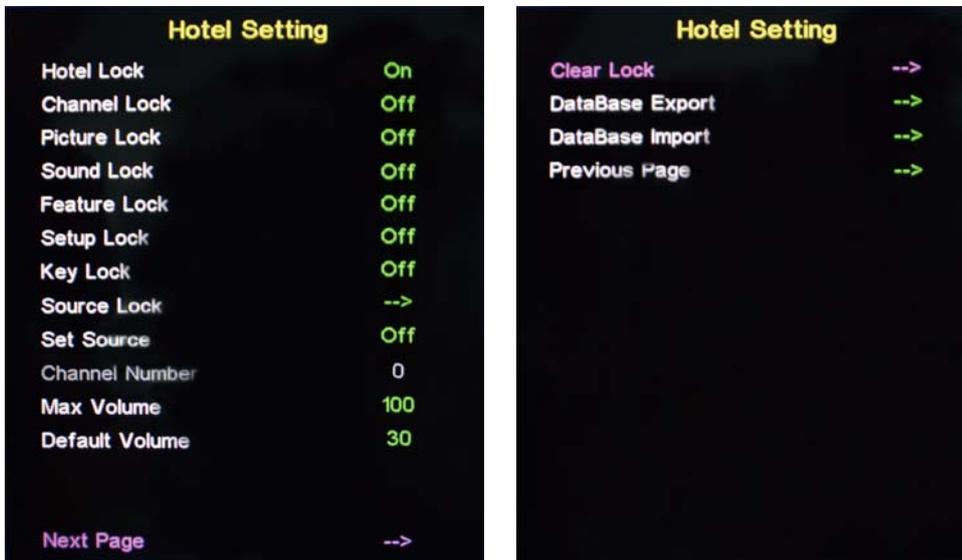

Hotel Lock: Turn on/off the Hotel Lock function.

Channel Lock: Disable the Channel menu in OSD.

Picture Lock: Disable the Picture menu in OSD.

Sound Lock: Disable the Sound menu in OSD.

Feature Lock: Disable the Feature menu in OSD.

Setup Lock: Disable the Setup menu in OSD.

Key Lock: Disable the buttons on the TV set.

Source Lock: Disable the input source you desired.

Set Source: Select the default source when you turn on the TV.

Channel Number: Select the default channel number when you turn on the TV.

Max Volume: Set the Max volume for the TV.

Default Volume: Set the default volume when the program is on.

Clear Lock: Clear all the locks above, it means set all the locks to OFF and max volume to 100.

Database Export: Export all Hotel Settings to the USB device.

Database Import: Import all Hotel Settings from the USB device.

Language: Lets you adjust the different language options available.

Clock: Allows you to set the clock (as default the information is taken automatically from the digital signal).

Sleep Timer: Lets you set the sleep timer so the television automatically switches off after a certain amount of time.

Auto Power Off: The TV will switch off itself automatically if no change in status within the time you select. You can choose 1H, 2H, 4H or off.

Hearing Impaired: You can switch on the hearing impaired feature, this provides additional information and subtitles.

PVR/Timeshift: Setup menu for recording, please see the Recording Operation section.

OSD Menu

5. Setup menu



Description

OSD Timer: Lets you adjust the amount of time the On Screen Menu stays on the screen before disappearing.

PC Setup: Change the PC Settings in PC mode.



Auto Adjust: Setup the parameter of the screen automatically.

H/V-Position: Adjust the transverse/vertical position of the screen.

Phase: Adjust the phase of the ADC sampling clock relative to the sync signal, until a stable image is obtained.

Clock: Adjust the pixel clock frequency, until the image size is maximized for the screen.

Blue Screen: Changes the background when there is no input between clear and a blue background (Only available in some sources).

Reset TV Setting - This clears all the TV settings for the television.

Software Upgrade: From time to time we may release new firmware to improve the running of the television (available to download). This menu lets you upgrade that software onto the television. Further details of how to do this will be issued with the firmware. Contact the Kogan Customer support team for further information.

Multimedia Operation

Basic Operation

1). Press the INPUT button on the remote control to display the input source menu, select Media source by the ▲ / ▼ buttons, and press OK button to enter the Multimedia menu as shown below.



2). Insert USB device, and select the Media mode form Photo, Music, Movie and eBook, then you will find the name of the device display on the screen as shown below.



Hints for operation

3). Press ▲/▼ button to select the USB device and press OK button to enter the file list as shown below.



Press ▲ / ▼ buttons to move (press OK button to select the file or unfold the folder);

Press **RED** button to delete the file; Press **GREEN** button to sign or cancel all the files to playlist;

Press **OK** button to sign or cancel the selected file to playlist.

Press < button to previous menu, Press EXIT button to select the file view type list(<) or thurnbnail(>).

Press Exit again to return to the root MENU.

Then press ► button to program the files (be signed) you select or the files in the fold you select.

Press **STOP** button to stop and exit the full screen program, please notes the hints on the bottom.

Multimedia Operation

1. Photo

View photos



Press ◀/▶ button to select the option on the table, and press **OK** button to change.

Note: You could press OK button to display the option table when it disappears.

▶/|| Play/Pause the photo playing.

■ Stop and exit the full screen program.

◀▶ Play the previous or next file directly.

↻ Rotate the picture(0, 90, 180, 270).

🔍 Zoom in/out the picture, you could move the picture by Cursor left/right/up/down button in Zoom mode.

ⓘ Display the information of the current file.

⚙ Display the photo setup menu, and select the Repeat mode, Background Music, Slide Time, Effect.

☰ Display the playing list.

2. Music

Play music



Press ◀/▶ button to select the option on the table, and press **OK** button to change.

▶/|| Play/Pause the music playing.

■ Stop and exit the music playing.

◀◀ ▶▶ Play fast backward or forward.

◀▶ Play the previous or next file directly.

🕒 Input the time and start playing directly.

ALL Select the repeat mode for playing music.

☑ Switch the window between "Information" and "Playlist".

⊞ Switch off the screen displaying (BLUE button as quick button), and it will be turned on by exepet power button).

Multimedia Operation

3. Movie

Play movies




Press ◀/▶ button to select the option on the table, and press **OK** button to change.

Note: You could press OK button to display the option table when it disappears.

- ▶/|| Play/Pause the movie playing.
- Stop and exit the full screen program.
- ◀◀ ▶▶ Play fast backward or forward.
- ⏪ Play the movie in slow mode.
- ⏩ Play the movie in step mode.
- ↺ Set the A-B repeat playing mode.
- ◀ ▶ Play the previous or next file directly.
- ☰ Display the playing list.
- ⓘ Display the information of the current file.
- ⚙ Display the movie setup menu, and setup the Program, Subtitle, Audio, Repeat mode.
- 🕒 Goto mode, Input the time and start playing directly.

4. eBook

Read text

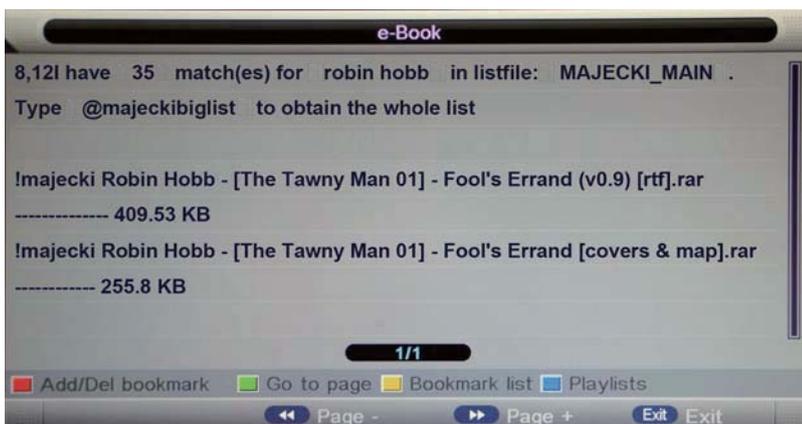

◀◀ ▶▶ Turn to previous/next page of the text.

RED button: Add or delete the bookmark.

GREEN button: Goto the appoint page.

YELLOW button: Display the bookmark list.

BLUE button: Display the playlist.

Recording Operation

PVR settings

Press the MENU button select Feature-PVR/Timeshift menu, press OK button to enter the menu as below.



1). Record File Format

Select Record File Format mode from TS and PS for storing in the USB device.

2). Partition Select



USB device informations

Format: Press **RED** button to format the selected USB device.

Set Default Partition: Press **GREEN** button to set the focus partition as the default partition. The recorders are stored in the default partition. It need to be reset if the default partition is full in recording progress.

3). Timeshift Buffer

Set Timeshift Buffer mode: auto, 30Mins, 1hr, 2hr.

4). Timer

Enter the Timer menu to setup the timer recording settings.



Press yellow button to add.



Recorder: Turn on/off the recorder function.

Type: Select the type of the program you want to recording.

Channel: Select the channel you want to recording.

Start Time: Setup the start time for recording the program.

Duration: Setup the duration time for recording.


Date: Select the date for recording.

Mode: Select the mode for recording.

Recording Operation

5). Record List

Display the Record list menu.

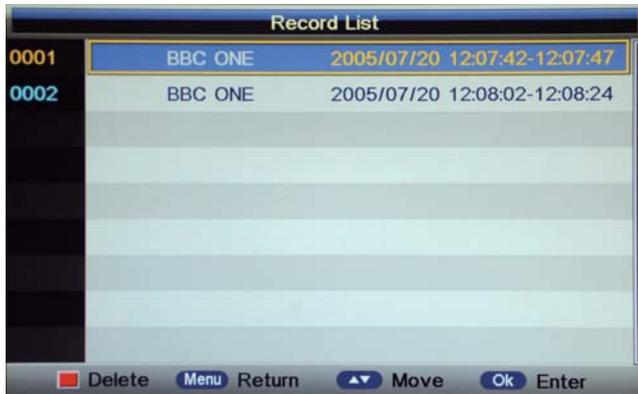

Delete: Press RED button to delete the selected record plan.

6). Recorder Start

Press **OK** button to start recording, as the function of the **REC** button on the remote control.

EPG and Timer Record

Press **EPG** button on the remote control to display the EPG menu.



EPG mode: Press RED button to change the EPG display mode.

Daily mode: shows the information of the programs to be broadcasted in daily mode.

Weekly mode: shows the information of the programs to be broadcasted in weekly mode.

Reminder: Press GREEN button once to remind the program for watching, and press GREEN button again to remind the program for recording. You could check it in Timer menu, and the TV will record the program according to your settings automatically.

Previous/Next Day: Press YELLOW/BLUE button to display the programs on previous or next day.

Recording Operation

Recording

Press **REC** button on the remote control to start recording in DTV mode, and the TV will give you a hint. Select "OK" item, and press OK to start recording, there will be a sign on the screen.



Note:

- Please make sure the USB device is on the TV.
- Please make sure the speed and free space of the USB is enough.
- Press STOP button to exit the recording mode.
- Press Recording list button to display the Recorder list, and you could play the program you selected. The recording will be going on, and the Recording menu will display when you exit the Recorder list.
- You could also play the Recorded program in Multimedia mode.

Timeshift

Press **II PAUSE** button on the remote control to start timeshift in DTV mode, and the TV will give you a hint. Select "OK" item, and press OK to start timeshift, there will be a sign on the screen, and the screen will be frozen.



Note:

- Please make sure the USB device is attached to the TV.
- Please make sure the speed and free space of the USB is adequate.
- Press STOP button to exit the timeshift mode.
- Press PLAY button to play the program you are recording from the beginning, and the timeshift will be going on.
- Timeshift time menu on the right top corner shows the fallen time between the current picture and the living broadcasting picture;
- During the recording progress, if the signal is missing, the recording process will pause until the signal is stable again.

DVD Operation

Basic Operation

Press the Power button on the TV or the remote control, then press the INPUT button to select DVD mode.

If there is no disc in the DVD player the screen will show "NO DISC".

Insert Disc according to picture next to disc slot.

Do not touch the playing surface.

Hold the disc around the outside with your fingers and place the disc into the slot. The player will automatically draw the disc into the player.

To "Eject" the disc, press the EJECT button on the TV or the "▲" button on the remote control.

DVD Setup Mode

- Setup Mode provides the menu for the configuration of General Setup Page, Audio Setup Page, Dolby Digital, Setup, Preference Page.
- Item selection in the Setup Menu is done by using the Navigation Arrows, SETUP button and the OK button.
- Press the SETUP button first, enter into SETUP menu, then press the DIRECTION RIGHT button, you can enter into the next Sub-menu.
- Press the SETUP button again to exit the Setup Menu.

General Setup

TV Display

• 4:3 pan scan

This is selected when the DVD player is connected to a normal TV. Wide-screen images are shown on the screen, but with some parts cut automatically.

• 4:3 Letter Box

This is selected when the player is connected to a normal TV. Wide-screen images are shown on the screen, with black belt on the top and bottom.

• Wide

This is selected when the player is connected to a wide-screen TV.



DVD Operation

OSD Language


This is used to select the OSD language.



Screen Saver

Start the screen saver, the screen saver image will appear when the player stops or the picture is frozen for a few minutes. This saver can keep the screen from being damaged.

- **On** (Start the screen saver)
- **Off** (Remove the screen saver).

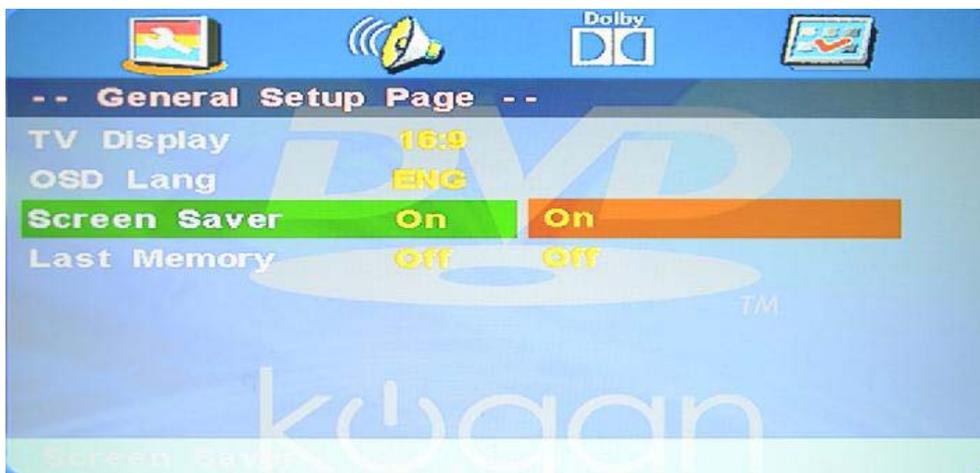

Last Memory

Can set the items on the last memory, "on" and "off" option.

Select "On", the shutdown will shutdown the machine before the settings for memory, re-boot the machine settings. Set near the same time.

Select "Off", every time the machine automatically switched back to the default settings

- **On** (Start the memory)
- **Off** (Remove the memory).

DVD Operation



AUDIO Setup

- **Speaker Setup**

In the "Audio Setup page" press "▼" button to select "Speaker Setup" item, press the "OK ENTER" or "▶" button (play) into the "Speaker Setup Page".

DVD Operation



Downmix

- **LT/RT**

A disc recorded multi channel soundtrack, the output signal will be incorporated to left and right channel.

- **Stereo**

A disc recorded multi channel soundtrack, The output signal will be incorporated to stereo.




DVD Operation

Dolby Digital Setup

Dynamic

This option is used to set the compression ratio in order to control the sound (Volume) contrast.

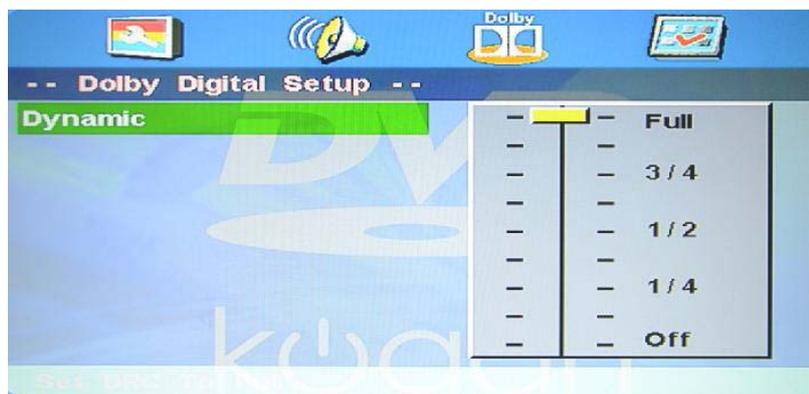

Preference Setup

You must press **STOP** twice to enter Preference Page or NO disc

TV Type

- **PAL**

This is selected when the player is connected to an PAL System TV.

- **MULTI**

The player will set the TV system according to the disc in the tray.

- **NTSC**

This is selected when the player is connected to a NTSC System TV.



Audio

If a language listed below is recorded on the disc, you can play the sound in such language. If not, the language recorded will be used.

DVD Operation



Subtitle

If a language listed below is recorded on the disc, you set the subtitle to be displayed in such language. If not, the language recorded will be used.



Disc Menu

If a language listed below is recorded on the disc, you can set the Menu to be displayed in such language. If not, the language recorded will be used.



DVD Operation

Parental

When playing disc with parental lock function, you may select an Age Control Grade according to grade of disc and your own preference. For example, if PG is selected, DVD Video disc rated higher than the PG grade cannot be played.


- KID SAFE
- G
- PG
- PG 13
- PGR
- R
- NC 17
- ADULT



Password

User can change the password that is required when the user wants to change the Age Control Grade in the Parental Lock function.

NOTE:(Default password is 123456)

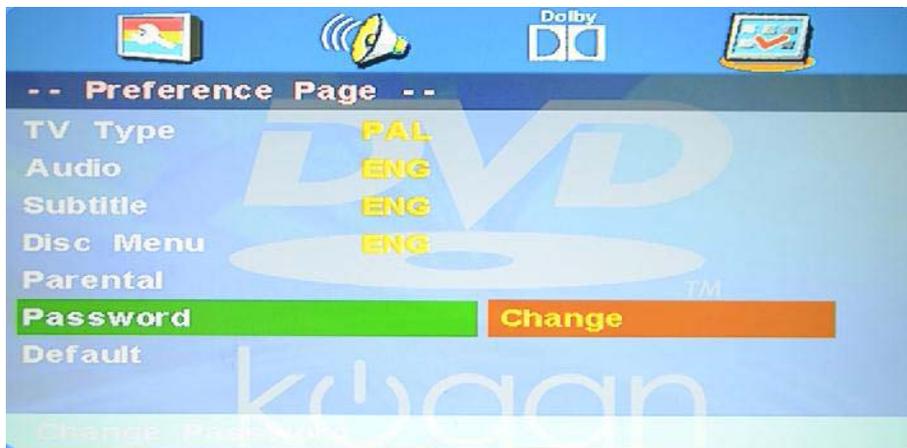


DVD Operation



Default

User can load the original factory setting by choose RESET and press OK button .

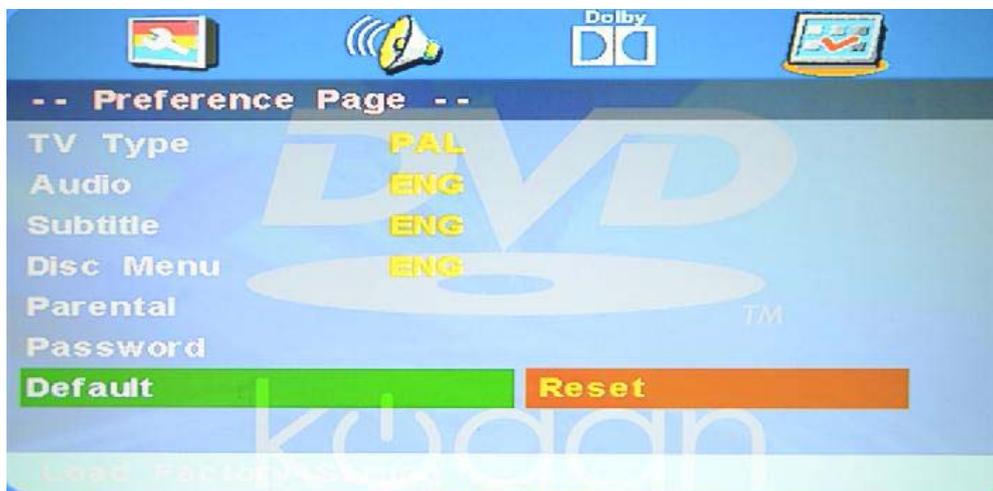

Disc Care

Disc Care

About Disc Terms

Title

Generally, pictures or music compressed on a DVD are divided into several sections, "title".

Chapter

The smaller section unit of picture or music in a DVD under the title, usually one title is comprised of one or more chapters and each of them is numbered for easy searching, but some discs may not have a recording chapter.

Track

A segment of picture or music on a CD, Each track is numbered for searching.

Care of Disc

Video disc contains high-density compressed data that needs proper handling.

1. Hold the disc with fingers by outer edge and/or the center spindle hole. Do not touch the discs surface.
2. Do not bend or press the disc.



3. Do not expose the disc to direct sunlight or heating sources, Store discs in cabinet vertically, and in dry condition.

Prevent exposure to:

Direct sunlight

Heat or exhaust from a heating device

Extreme humidity

Clean the disc surface with a soft, dry cleaning cloth, Wipe the disc surface gently and radially from center toward the outer edge.

Do not apply thinner, alcohol, chemical solvent, or sprays when cleaning. Such cleaning fluids will permanently damage the disc surface.

Trouble shooting

- Do not use other functions that are not mentioned in this user's manual.
- In case a problem occurs with your TV, please take the following steps first.
- If you still have the problem, turn the power off and contact the Kogan customer support team.

Problem	Action
The screen does not appear.	Is the power plug pulled out? Insert the power plug. Press the power button of the remote control.
The screen appears too slowly after the power is turned on.	This problem occurs for a brief time in the process of image elimination processing in order to hide temporary screen noise that occurs when the power is turned on. But if the screen does not come after 1 minute contact the Kogan customer support service center.
Screen is too bright or too dark.	Perform brightness adjustment or Contrast adjustment.
Screen is too large or too small.	Adjust the screen size.
Stripes appear on the screen and it shakes.	Stop using wireless telephones, hair driers and electric drills.
The screen does not move.	Press the PAUSE button. Check if the Pause button is pressed on external equipment.
Screen appears, Voice is not heard	<ol style="list-style-type: none"> 1. Press the "MUTE"button. 2. Increase the sound level by pressing volume adjustment button. 3. Check if sound terminal of external input is connected properly. 4. Check if audio cables are connected properly. 5. Select and check the other input. <p>If the sound still does not work and the other channels are the same after you have done as the above, contactthe Kogan customer support service center.</p>
Remote control does not work	<ol style="list-style-type: none"> 1. Check if main power is On. 2. Check that the batteries of the remote controller were loaded properly. 3. Check to see if any obstacle exists between the TV and the remote control , then remove it, if any. 4. If the batteries have no power, replace them with two new batteries.

- This TV is for household use and registered as harmless on electromagnetic waves.
- Therefore, you can use it in every location as well as residential areas.

Specifications

Technical Specifications

TV

TVSystem	PAL BG/DK/I SECAM BG/DK
Screen size	19"(diagonal)
Resolution	1366 x 768 pixels (RGB)
Aerial input	75 Ω (unbalanced)
Power Consumption	12V --- 3A 36 W

ENGLISH

Instructions on environment protection



Do not dispose of this product in the usual household garbage at the end of its lifecycle; hand it over at a collection point for the recycling of electrical and electronic appliances. The symbol on the product, the instructions for use or the packing will inform about the methods for disposal.

The materials are recyclable as mentioned in this marking. By recycling, material recycling or other forms of re-utilization of old appliances, you are making an important contribution to protect our environment.

Please inquire at the community administration for the authorized disposal location.

Manufactured under license from Dolby Laboratories.

"Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

CE