

## 32" LED TV

L32HE17



# Contents

|   |           |
|---|-----------|
| <b>Safety Warnings</b> .....                                    | <b>4</b>  |
| <b>Preparation</b> .....  | <b>7</b>  |
| Unpacking the TV .....  | 7         |
| Installing / Removing the Base Stand .....                      | 8         |
| – Installing the Base Stand.....                                | 8         |
| – Mounting the TV to a Wall.....                                | 9         |
| Front / Right Side View and Controls.....                       | 10        |
| Rear View and Sockets .....                                     | 11        |
| Installing Batteries in the Remote Control .....                | 12        |
| Remote Control Operation Range.....                             | 12        |
| Remote Control .....  | 13        |
| <b>Connections</b> .....  | <b>15</b> |
| Making Video and Audio Connections.....                         | 15        |
| Connecting an AV Device Using an HDMI Cable.....                | 15        |
| – Connecting a Soundbar - HDMI ARC (Audio Return Channel) ..... | 16        |
| Connecting a Computer Using a VGA Cable .....                   | 16        |
| Connecting an AV Device Using a Component (YPbPr) Cable .....   | 17        |
| Connecting an AV Device Using a SCART Cable .....               | 17        |
| Connecting an AV Device Using Composite Cable .....             | 18        |
| Connecting a Coaxial Audio Receiver .....                       | 19        |
| Connecting Headphones.....                                      | 19        |
| <b>Initial Setup</b> .....                                      | <b>20</b> |
| Turning the TV On for the First Time .....                      | 20        |
| – First Time Setup .....  | 20        |
| – Target Region Setting (UK Only) .....                         | 21        |
| – Eco Friendly / Auto Standby Function .....                    | 22        |
| – Selecting the Input Source.....                               | 22        |
| – Channel Selection .....                                       | 22        |
| – Listening to the Radio (Radio Mode).....                      | 22        |
| – Display Channel Information .....                             | 23        |
| – Volume Adjustment.....  | 23        |
| <b>Customising TV Settings</b> .....                            | <b>24</b> |
| Picture Setting .....   | 24        |
| Sound Setting .....   | 25        |
| – Stereo / Dual Sound Reception (ATV Mode).....                 | 25        |
| Channel Setting.....  | 26        |
| – Auto Scan.....  | 26        |
| – Speaker Sound Output Selection (DTV Mode).....                | 26        |
| – DTV Manual Scan (DTV Mode).....                               | 27        |
| – ATV Manual Scan (ATV Mode).....                               | 28        |
| – Auto Channel Update (DTV Mode).....                           | 29        |
| – Channel Edit (DTV Mode).....                                  | 29        |
| – Channel Edit (ATV Mode).....                                  | 30        |
| – Favourite Manager .....                                       | 31        |
| – Common Interface (DTV Mode) .....                             | 32        |
| – Signal Information (DTV Mode).....                            | 33        |
| Lock Setting .....  | 34        |
| – Lock System .....   | 34        |
| – Channel Block .....   | 35        |
| – Parental Rating .....   | 36        |
| – Lock Keypad.....  | 36        |
| – New Password.....   | 37        |
| – Clear Lock .....  | 38        |

|  |           |
|--|-----------|
| Setup Setting.....                                     | 38        |
| – OSD Language.....                                    | 38        |
| – Audio Language (DTV Mode).....                       | 39        |
| – Subtitle (DTV Mode).....                             | 40        |
| – Teletext.....  | 41        |
| – Blue Screen.....                                     | 41        |
| – Mode Setting.....                                    | 42        |
| – Time Settings.....                                   | 42        |
| – HDMI CEC Control.....                                | 44        |
| – PVR Settings (DTV Mode).....                         | 45        |
| – OAD (Over Air Download).....                         | 47        |
| – Restore Factory Default.....                         | 48        |
| <b>Using the Features .....</b>                        | <b>49</b> |
| EPG (Electronic Programme Guide) (DTV Mode).....       | 49        |
| – Switch On / Off EPG.....                             | 49        |
| – Select a Programme.....                              | 49        |
| Red Button (Interactive Services).....                 | 50        |
| – Accessing the Information.....                       | 50        |
| <b>Entertainment .....</b>                             | <b>51</b> |
| Connecting a USB Storage Device.....                   | 51        |
| Viewing Photos.....                                    | 51        |
| Listening to Music.....                                | 52        |
| Viewing Movies.....                                    | 53        |
| My Text.....   | 53        |
| <b>PVR (Personal Video Recorder).....</b>              | <b>55</b> |
| Time Shift Function.....                               | 55        |
| Recording DTV Programme onto a USB Storage Device..... | 56        |
| Timer Programming (DTV Mode).....                      | 57        |
| Play Recorded Programme.....                           | 59        |
| <b>Other Information.....</b>                          | <b>61</b> |
| Maintenance.....                                       | 61        |
| Hints and Tips.....                                    | 61        |
| Display Modes.....                                     | 64        |
| – YPbPr Mode.....                                      | 64        |
| – PC Mode.....   | 64        |
| – HDMI Mode.....                                       | 64        |
| Product Fiche and Specifications.....                  | 65        |
| Useful Information and Licences.....                   | 67        |

## Safety Warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.
- **WARNING:** Never let people (including children) with reduced physical, sensory or mental capabilities or lack of experience and / or knowledge use electrical devices unsupervised.
- To avoid danger of suffocation, keep plastic bags out of reach of babies, children and domestic animals.
- Carefully attach the stand to the TV. If the stand is provided with screws, tighten the screws firmly to prevent the TV from tilting. Do not over tighten the screws and mount the stand rubbers properly.

### Damage

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

### Location of Unit

- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the unit on sloped or unstable surfaces as the unit may fall off or tip over causing serious personal injury or death.
- The mains socket must be located near the unit and should be easily accessible.
- This unit is designed for indoor, domestic use only.
- Use this TV set at an altitude of less than 2000 meters above sea level, in dry locations and in regions with moderate or tropical climates.

Many injuries, particularly to children, can be avoided by taking simple precautions such as;

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only use furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both furniture and the television set to a suitable support.
- Not standing the television set on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls. If your existing television set is being retained and relocated, the same considerations as above should be applied.

### Wall Mounting

- Read the TV and wall mount instructions before mounting your TV on the wall.
- For TVs over 40" in size, wall mounting requires 2 people to lift and position the TV on to the wall mount.
- The wall mount bracket is not supplied, they can be purchased from your dealer.
- Do not install the TV on a ceiling or an inclined wall.
- Only use the screws supplied with the wall mount bracket when attaching the TV to the bracket. See your TV instructions for screw type.
- Tighten the wall mount screw firmly to prevent the TV from falling. Do not over tighten the screws.
- If you are in any doubt how to mount your TV, contact a professional.

### Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas / electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

### Naked Flames


- Never place any type of candle or naked flame on the top of or near the unit.

### Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit.
- If you spill any liquid into the unit, it can cause serious damage. Switch it off at the mains immediately. Withdraw the mains plug and consult your dealer.

### Ventilation

- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.
- Make sure that there is a gap of at least 10 cm on both sides and a gap of 20 cm at the top.

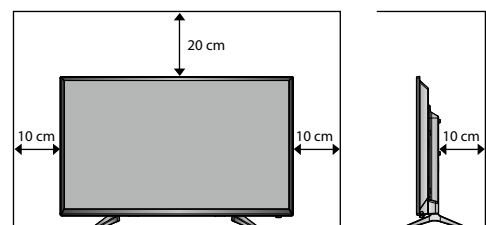

### Safety

- Always disconnect the unit from the mains supply before connecting / disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket during a lightning storm and long inactivity periods (going on holiday).

### Mains Cable

- Make sure the unit or unit stand is not resting on top of the mains cable, as the weight of the unit may damage the mains cable and create a safety hazard.
- A damaged power cord/plug can cause fire or give you an electric shock. Handle the power cord by the plug, do not unplug the TV by pulling the power cord.
- Never touch the power cord/plug with wet hands as this could cause a short circuit or electric shock.
- Never make a knot in the power cord or tie it with other cords.
- If the mains cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

### Interference

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the operating performance of the unit, and cause a distorted picture or sound.

### Optimum viewing

- View the unit in moderate light to prevent eye strain. It is recommended to watch the unit from a distance 3-7 times that of the screen height.

### LCD screen

- The LCD screen is manufactured using high-precision technology. However, some tiny black points and / or bright points (red, blue or green in colour) may constantly appear on the LCD screen. These points are generated in the manufacturing process and are normal.


### Screen Burn

- A characteristic of Plasma and TV Panels is that displaying the same image for a long time may cause a permanent after-image to remain on the screen. This is called screen burn. Most pictures shown on the unit will be constantly moving and fill the screen.
- Examples of images that you need to watch out for are as follows (this is not an all-inclusive list):
  1. **Black Bars:** If black bars appear at the left / right or top / bottom of the screen, it is recommended to change the format so that the picture fills the entire screen.
  2. **TV Channel Logos:** e.g. Shopping channel logos and pricing displays - especially if they are bright and stationary. Moving or low-contrast graphics are less likely to cause ageing of the screen.
  3. **Time Displays**
  4. **Teletext:** Do not view a stationary page for long periods of time.
  5. **TV Menus**
  6. **Pause Mode:** Do not leave the screen in pause mode for long periods of time, e.g. when watching videos.
- To prevent screen burn if viewing any of the above for long periods of time, reduce contrast and brightness when viewing. Once burn-in occurs it will never disappear completely.

### Earphones

- Listening to loud sounds for prolonged periods of time may permanently damage your hearing.
- Before putting on earphones, turn the volume down then put the earphones on and slowly increase the volume until you reach a comfortable listening level.

### Standby

- The  button on the remote control does not switch off the unit completely. The unit will continue to draw electricity from the mains supply while in standby. In the interests of safety and to avoid unnecessary energy consumption, never leave the unit in standby while unattended for long periods of time, e.g. overnight, while on holiday or while out of the house. Disconnect the mains plug from the mains socket.

### Batteries

- Batteries used in the remote control for this unit are easily swallowed by young children and this is dangerous.
- Keep loose batteries away from young children and make sure that the battery holder tray is secure in the remote control. Seek medical advice if you believe a cell has been swallowed.
- Please dispose of batteries correctly by following the guidance in this manual.
- Do not dispose of batteries in fire or with hazardous or flammable materials.
- The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

### Earthing

- Apparatus connected to the protective earthing of the building installation through the MAINS connection or through other apparatus with a connection to protective earthing - and to a television distribution system using coaxial cable, may in some circumstances create a fire hazard. Connection to a television distribution system has therefore to be provided through a device providing electrical isolation below a certain frequency range (galvanic isolator, see EN 60728-11).

### Supervision

- Children should be supervised to ensure that they do not play with the unit and the remote control.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.




The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

**Service**

- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

**Maintenance**

- Ensure to unplug the unit from the mains socket before cleaning.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit's surface.
- Do not use liquids to clean the unit.
- The wall socket plug is used as a disconnect device, the disconnect device should be readily accessible.
-  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



To prevent the spread of fire,  
keep candles or other open  
flames away from this product  
at all times.


## Thank you

for purchasing your new Logik TV.  
Your new TV has many features and incorporates the latest technology to enhance your viewing experience. We recommend that you spend some time reading this instruction manual so that you fully understand these features. You will also find some hints and tips to help you resolve any issues. Read all the safety instructions carefully before use and keep this instruction manual for future reference.


## Unpacking the TV

Remove all packaging from the TV. Retain the packaging. If you dispose of it please do so according to local regulations.


The following items are included:

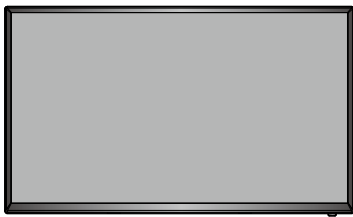

TV

 


TV Stand (Left) x 1  
TV Stand (Right) x 1

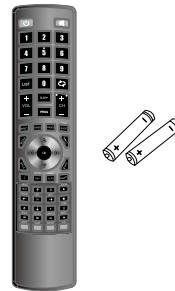


Remote Control / AAA Batteries x 2



 Screw x 4



Component Adapter Cable

 

Composite Adapter Cable



Instruction Manual



Quick Start Guide

GB

Preparation



- If items are missing, or damaged please contact Partmaster (UK only). Tel: 0344 800 3456 for assistance.
- if you require additional assistance:  
For UK, please call our UK Call Centre on **0344 561 1234**.  
For Ireland, please call our Ireland Call Center on **1 890 818 575**.

## Installing / Removing the Base Stand



- The LCD display is very fragile, and must be protected at all times when installing and removing the base stand. Be sure that no hard or sharp object, or anything that could scratch or damage the LCD display, comes into contact with it. **DO NOT** exert pressure on the front of the TV at any time because the screen could crack.
- It is recommended that two people take part in the base installation.


1. Disconnect all cables connected to the TV.
2. Lay the TV down on a flat surface with the back side facing up, and ideally at the edge of a table so that the base of the TV slightly overhangs on it. Please make sure a soft cushioned material (such as a pillow or thick piece of foam) is placed beneath the screen.

### Installing the Base Stand

Attach the TV stand to the TV. Align the screw holes, then secure with a screw driver (not included) using the 4 screws provided.



The screw holes will only align if the front of the base stand is at the front of the TV.

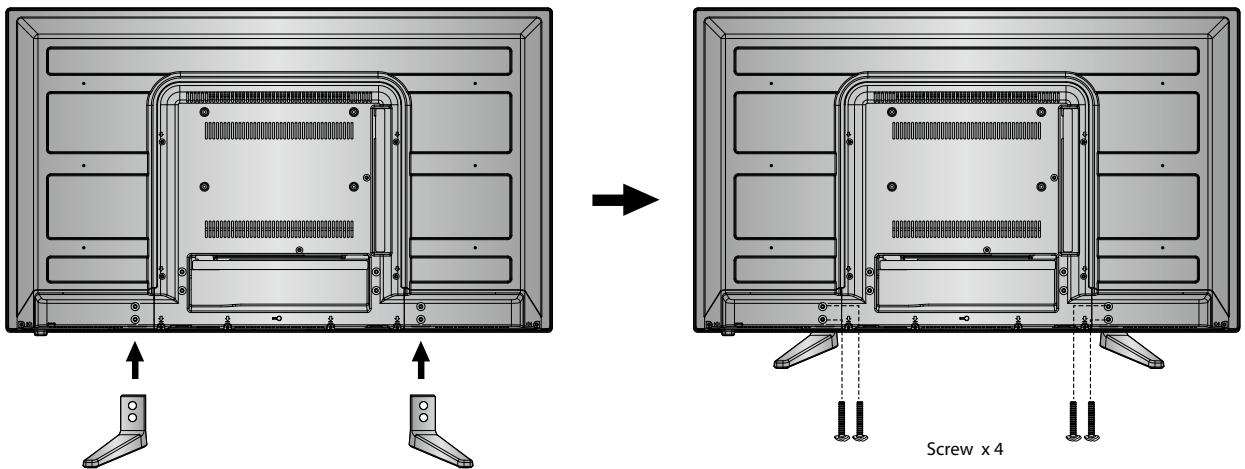

- Please read this instruction manual carefully while setting up your TV.
- If you require additional assistance:  
for UK, please call our UK Call Centre on **0344 561 1234**.  
for Ireland, please call our Ireland Call Center on **1 890 818 575**.



## Mounting the TV to a Wall




- Remove the stand assembly before mounting the TV onto the wall.
- It is recommended that two people take part in the installation.

1. To remove the stand assembly, untighten the screws holding the stand assembly to the rear of the TV. Slide the stand assembly out.




Keep all the spare screws should you want to use the stand assembly option.


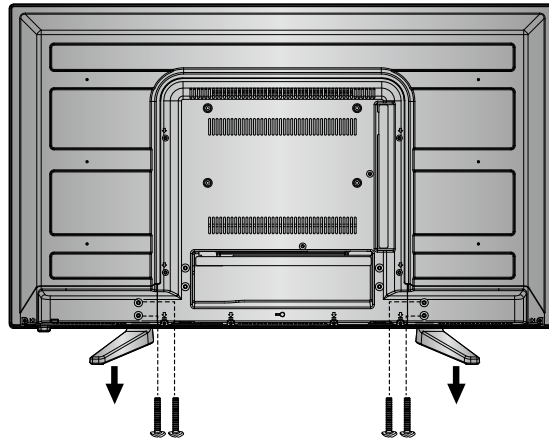


2. This TV is designed to be wall-mounted with a standard mounting kit (sold separately) designed for flat-panel TVs. Mount this TV according to the instructions included in the mounting kit. Due to space restrictions, we recommend that you make all connections (refer to page 15-19 and page 51 for details) before mounting on to the wall.

### TV Weight (Without Stand): 4.4 kg

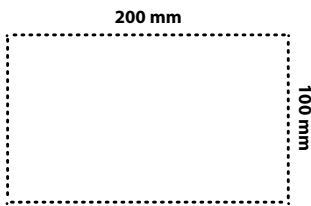

Four mounting holes  
(size M4x5 screw)

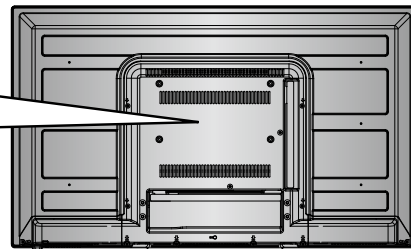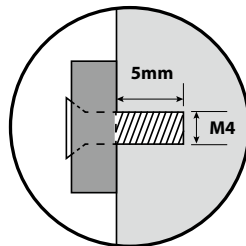

- Some models of TV are provided 4 screws inside the mounting holes. Be sure to use these supplied screws with your mounting kit when attaching the mounting hooks to the TV set. The supplied screws are designed for the TV. Use of screws other than those supplied may result in internal damage to the TV set or cause it to fall, etc.
- Before mounting on the wall, untighten the screws inside the mounting holes.






- Please read this instruction manual carefully while setting up your TV.
- If you require additional assistance:  
for UK, please call our UK Call Centre on **0344 561 1234**.  
for Ireland, please call our Ireland Call Center on **1 890 818 575**.

## Front / Right Side View and Controls


GB

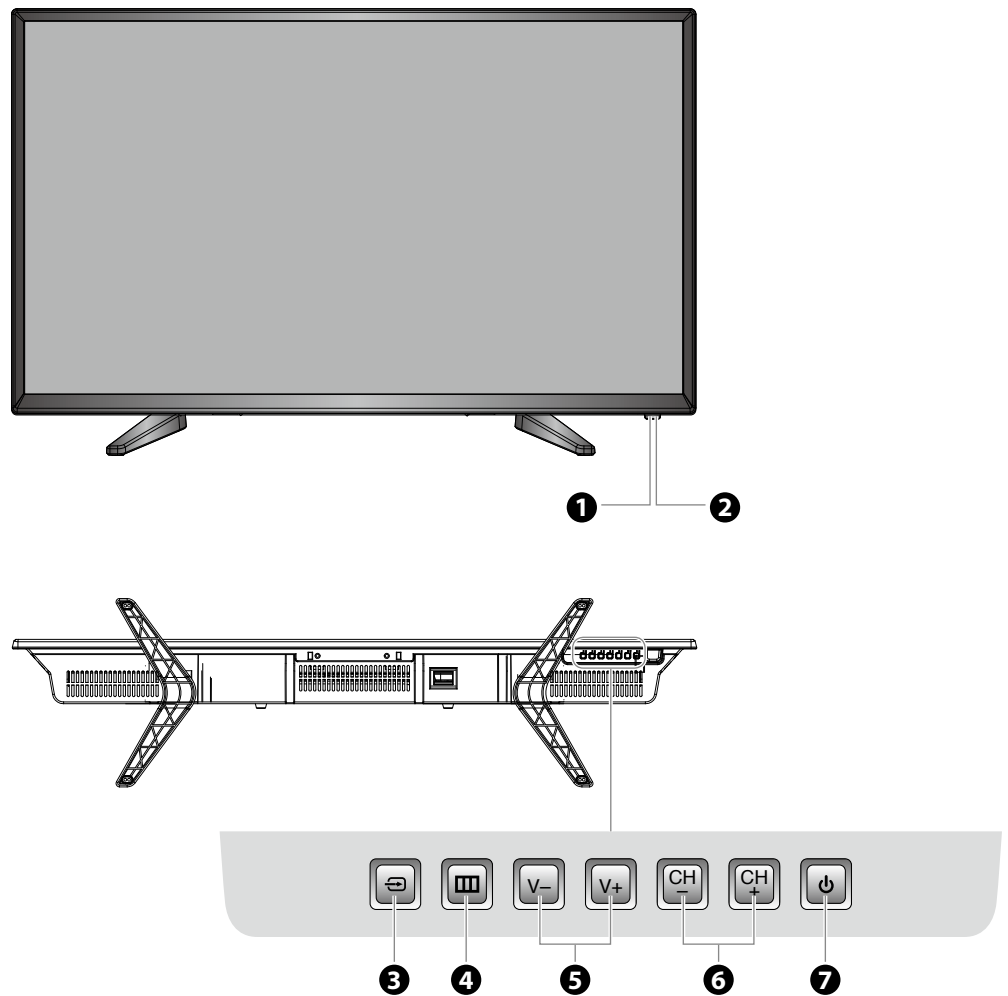Preparation



| Item  | Description   |
|---|---|
| 1 <b>POWER LED</b>  | Illuminates red when the TV is in standby mode. The LED will illuminate blink red confirming that a timer recording programme has started in the standby mode.  |
| 2 <b>IR (Infrared Receiver)</b>   | Receives IR signals from the remote control.<br>Do not put anything near the sensor, as its function may be affected.   |
| 3  | Press to select among different input signal sources:<br>DTV / ATV / AV / SCART / YPbPr / HDMI 1 / HDMI 2 / HDMI 3 / PC / USB.<br>Use the ▲▼ buttons on the remote control to select the input, and then press the <b>OK</b> button to confirm. |
| 4 <b>MENU</b>   | Displays the OSD (on screen display) menu.  |
| 5 <b>VOL (V) + / -</b>  | Adjusts the volume.<br>Press to select and adjust a setting in the OSD menu.  |
| 6 <b>CH + / -</b>   | Press to select a channel or select a sub-menu from the OSD menu.   |
| 7  | Switches the TV on from standby mode.<br>Switches the TV back to standby mode.  |


## Rear View and Sockets

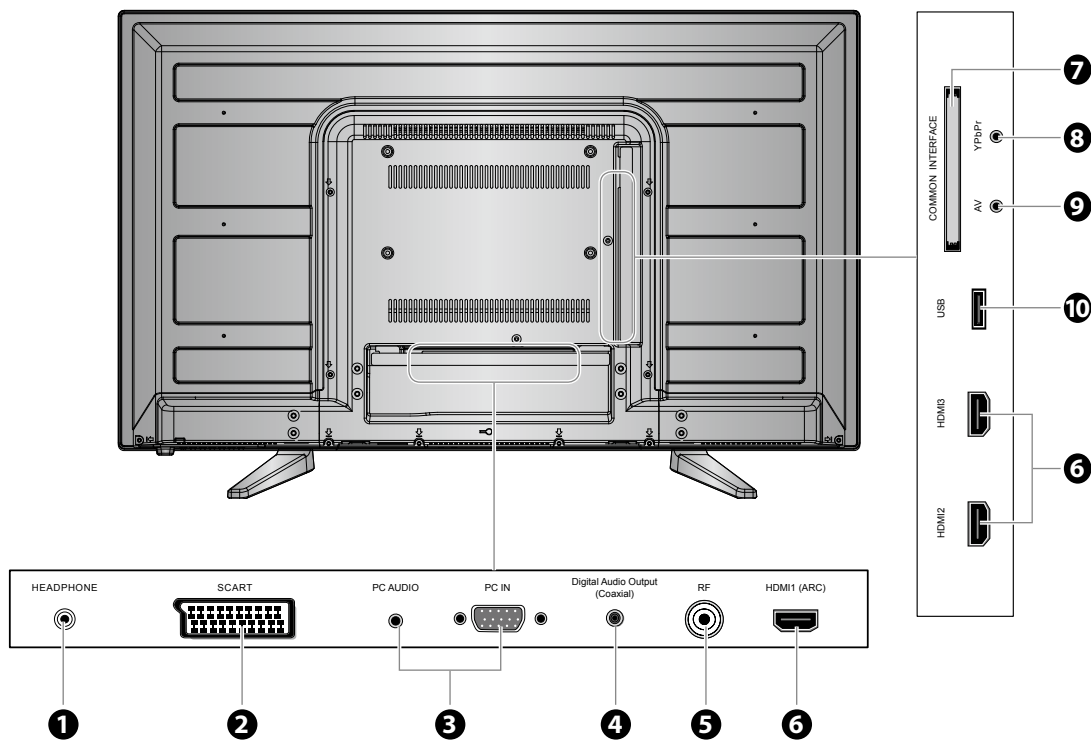


| Item                             | Description  |
|----------------------------------|--|
| 1 HEADPHONE                      | Connects to the headphones.  |
| 2 SCART                          | Connects to a VCR, DVD Player, or other AV device with a SCART output socket.  |
| 3 PC IN / PC AUDIO               | Connects to a computer or other devices with a VGA interface.  |
| 4 Digital Audio Output (Coaxial) | To connect to the audio socket on the digital/standard 5.1 audio system.   |
| 5 RF                             | Connects to the aerial socket on the wall with the RF coaxial cable.   |
| 6 HDMI1 (ARC) / HDMI2 / HDMI3    | Connects to a High-Definition (HD) signal output device, such as a set-top box, blu-ray disc player or AV receiver.                                      |
| 7 COMMON INTERFACE               | Allows the insertion of a Common Access Module. (Refer to page 32 for details.)  |
| 8 YPbPr                          | Connects to a DVD player, Digital Set-Top-Box, or other AV devices with component (YPbPr) video and audio output sockets.                                |
| 9 AV                             | Connects to the Composite VIDEO and AUDIO (L/R) output sockets on external video devices.  |
| 10 USB                           | Allows the insertion of a USB storage device to play video, audio, photo and text files (USB mode) and record DTV programmes on to a USB storage device. |

## Installing Batteries in the Remote Control

 1. Press and lift the back cover to open the battery compartment of the remote control.



2. Insert two AAA size batteries. Make sure the (+) and (-) ends of the batteries match the (+) and (-) ends indicated in the battery compartment.

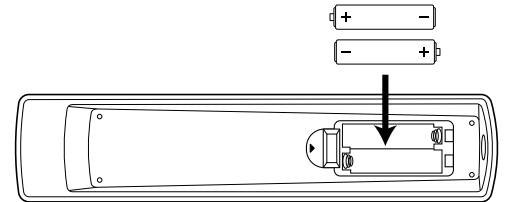

3. Close the battery compartment cover.

GB



### Handling the Batteries

- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property.
- Only use the battery type indicated in this manual.
- When the batteries are exhausted, the remote will not function. Replace both batteries at the same time with new ones.
- Do not install new batteries with used ones and do not mix different types of batteries.
- Do not dispose of used batteries as domestic waste. Dispose of them in accordance with local regulations.


### Handling the Remote Control

- Take care of your fingernails when you press and hold the battery release tab.
- Do not drop or cause impact to the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as it could cause corrosion or battery leakage and may result in physical injury and/or property damage including fire.

Preparation


## Remote Control Operation Range

Point the remote control at the TV no more than 5 metres from the remote control sensor on the TV and within 60° in front of the TV. The operating distance may vary depending on the brightness of the room.

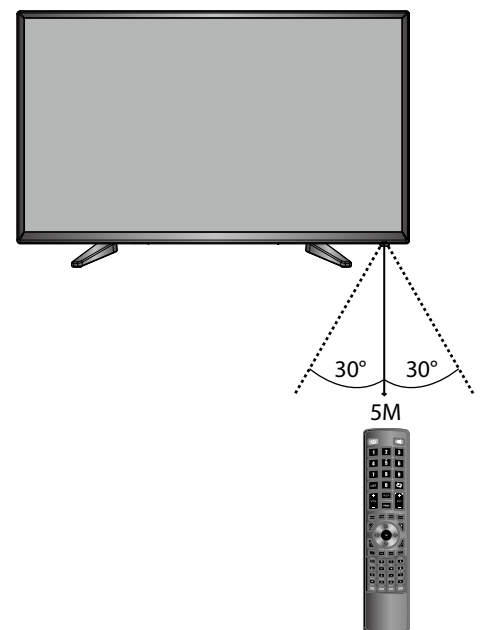

# Remote Control

1. **Power**  
Switch the TV between on and standby mode.
2. **Mute**  
Mute and restore your TV sound.
3. **0-9 Number Button**
  - Press to select a programme.
  - Select numbered items in a menu. (DVD mode)
4. **LIST**  
Display the channel list. (ATV / DTV mode)
5. **Return**  
  - Return to the previous viewing channel. (ATV / DTV mode)
  - Return to menu (DVD mode)
6. **SLEEP**  
Set the TV sleep timer: OFF / 5 / 15 / ... / 120 / 240 min.
7. **VOL + / -**  
Adjust the volume.
8. **CH + / -**  
Select a channel.
9. **PROG**
  - Display the channel edit menu. (ATV / DTV mode)
  - Programme the DVD. (DVD mode)
10. **S.MODE**  
Select sound mode: Standard / Music / Movie / Sports / User.
11. **ASPECT**  
Watch the screen in various formats: Auto / 4:3 / 16:9 / Zoom / Subtitle / Smart Zoom.
12. **GUIDE**  
Displays the EPG Electronic Programme Guide. (DTV mode)
13. **TITLE**  
Display the DVD title content. (DVD mode)
14. **MENU**  
Display the OSD (On Screen Display) menu.
15. **INPUT**  
Select among the different input signal sources:  
DTV / ATV / AV / SCART / YPbPr / HDMI 1 / HDMI 2 / HDMI 3 / PC / USB.
16. **Navigation**  
Allows you to navigate the OSD menus and adjust the system settings to your preference.
17. **OK**  
Confirm the selection in the OSD menus.
18. **BACK**  
Return to the previous menu in the OSD menus.
19. **Exit**  
Exit the OSD menu.
20. **FAV**  
Display the favourite channel list. (ATV / DTV mode)
21. **SETUP**  
Display and exit the DVD setup menu. (DVD mode)
22. **i**
  - Display the present channel information such as the current time and channel name. (ATV / DTV mode)
  - Display the present disc information. (DVD mode)
23. **TV.RD**  
A short-cut to switch input source to TV / Digital radio channels.
24. **ANGLE**  
Select different angles for the video. (DVD mode)

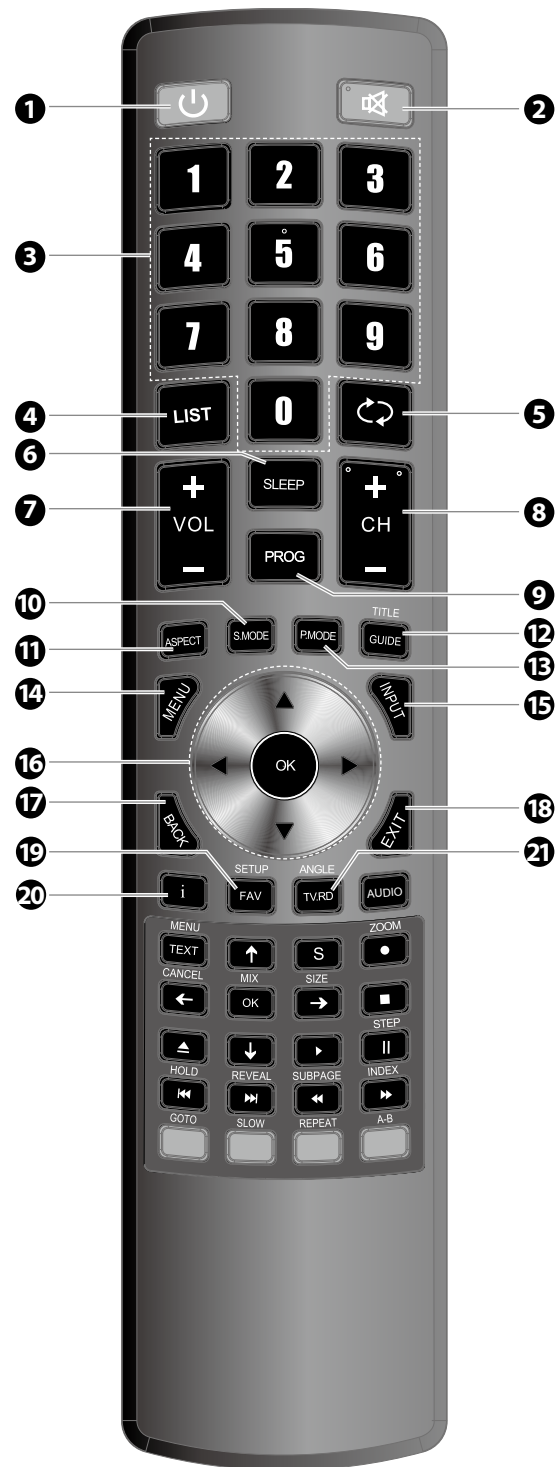

Please note that there are DVD mode functions on the remote control only operate on TV models with a built-in DVD player.

**GB**

Preparation

**22. AUDIO (Audio Description)**

- Turn on / off the Audio Description (AD) function (only applicable when the TV programme has this feature). (DTV mode)
- Select different Audio mode on DVD mode. (DVD mode)
- Select Stereo / Dual Sound Reception. (ATV mode)

**23. TEXT**

Turn on and off the teletext function. (DTV mode)

**MENU**

Display the DVD menu. (DVD mode)

**24. S (Subtitle)**

- Display subtitles which are broadcast with the programme. (DTV mode)
- Display subtitles on the DVD. (DVD mode)

**25. ● REC**

Record the current programme. (DTV mode).

**ZOOM**

Zoom in on the displayed frame. (DVD mode)

**26. ←↑↓→**

Navigate the DVD menu and adjust the system settings to your preference. (DVD mode)

**OK**

Confirm the selection in the DVD menus. (DVD mode)

**CANCEL** (No Function)

**MIX** (No Function)

**SIZE** (No Function)

**27. ■ Stop**

Stop the playback or recording. (DVD / USB / DTV mode)

**28. ▲**

Eject a disc. (DVD mode)

**29. II Pause**

- Pause playback. (DVD / USB mode)
- Start the time-shift function (DTV mode)

**STEP**

Play the playback forward frame by frame. (DVD mode)

**30. ▶ PLAY**

Start playback. (DVD / USB mode)

**31. ►►**

Skip to the beginning of the next chapter / track / photo. (DVD / USB mode)

**REVEAL** (No Function)

**32. ◀◀**

To skip to the beginning of the previous chapter / track / photo. (DVD / USB mode)

**HOLD** (No Function)

**33. ◀◀**

Reverse playback rapidly. (DVD / USB mode)

**SUBPAGE** (No Function)

**34. ►►**

Advance playback rapidly. (DVD / USB mode)

**INDEX** (No Function)

**35. Coloured buttons**

- Access the TELETEXT items (DTV mode)
- Access menu options.

**GOTO (RED)**

Skip to a specific location on a DVD / CD. (DVD mode)

**SLOW (GREEN)**


Play video slowly. (DVD mode)

**REPEAT (YELLOW)**

Select between different repeat modes. (DVD mode)

**A-B (BLUE)**

Repeat a segment between A and B. (DVD mode)

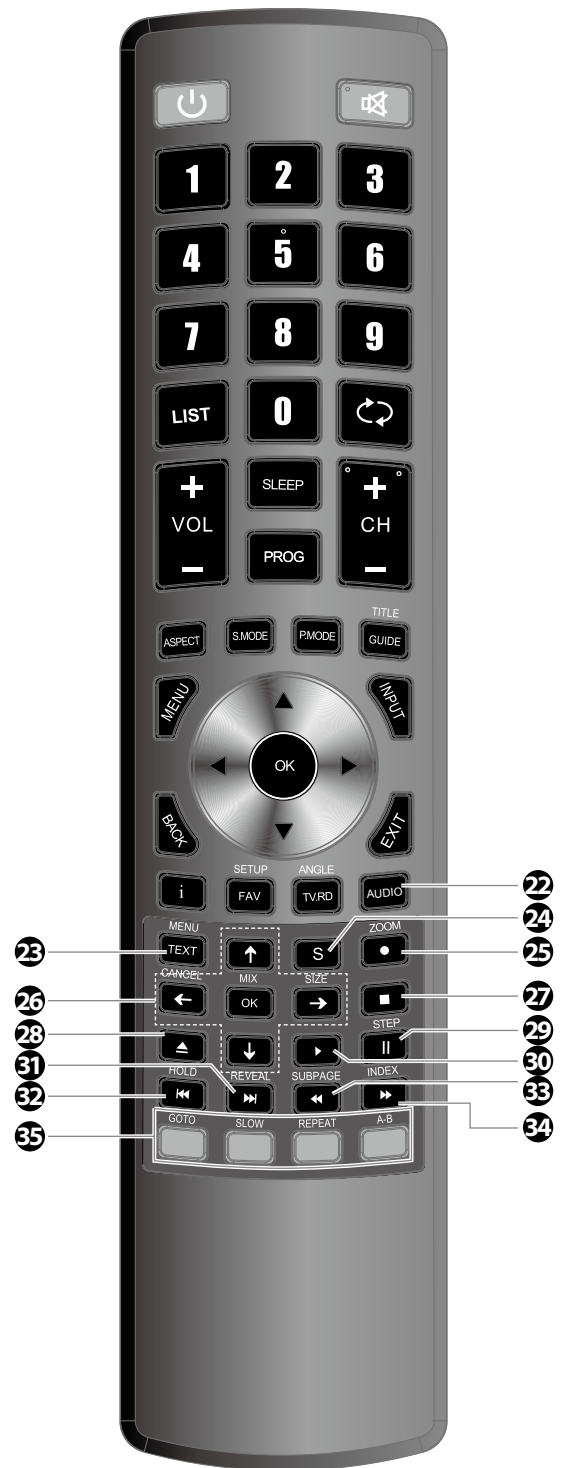
 



Please note that there are DVD mode functions on the remote control only operate on TV models with a built-in DVD player.

## Making Video and Audio Connections

Not all AV devices have the ability to connect to a TV, please refer to the owner's manual of your AV device for compatibility and connection procedures.

When connecting any external AV device, do not connect the mains cable to the mains socket until all other connections are complete.

| Best Video Performance |  | Signal Type  | Separate Audio Connection Required |
|------------------------|--|--|------------------------------------|
| ↑                      | HDMI1<br> | HDMI<br>(480i/480p/576i/576p/720p/1080i/1080p*)            | No                                 |
|                        | PC IN<br> | PC   | Yes<br>●<br>PC AUDIO               |
|                        | YPbPr<br>●   | Component Video<br>(480i/480p/576i/576p/720p/1080i/1080p*) | Yes<br>AV<br>●                     |
|                        | SCART<br> | SCART (RGB Input)  | No                                 |
|                        | AV<br>●  | Composite Video  | No                                 |



\*1080i/1080p: Although this TV is compatible with a 1080i/1080p input, it is possible that the screen may not display the exact resolution and consequently the picture quality will be adjusted accordingly.

GB

Connections


## Connecting an AV Device Using an HDMI Cable

- This TV can accept High-Definition Multimedia Interface (HDMI) supports HDCP (High-Bandwidth Digital Content Protection) Protocol.
- This TV has a total of 3 HDMI input sockets, please make sure the correct input source is selected and corresponds to your connected HDMI input socket.
- When you connect to the output of an HD ready player (blu-ray disc player, game console, set-top box or computer) switch to the HDMI function and the TV will automatically detect the resolution used by the HDMI source.
- To get the best picture quality, adjust the blu-ray disc player, game console or set-top box output resolution up to 1920 x 1080p.

- Use an HDMI cable to connect the TV's HDMI input socket to the external AV device's HDMI output socket.
- Plug the connected devices into the mains socket before switching on the TV.
- Press the  button on the right bottom panel under the TV frame or on the remote control to turn on your TV.
- Press the  button on the right bottom panel under the TV frame or the **INPUT** button on the remote control to display the **INPUT SOURCE** List. Use the ▲ ▼ buttons to select **HDMI 1 / HDMI 2 / HDMI 3** and then press the **OK** button to confirm.




Although this TV is able to connect to an HDMI device, it is possible that some devices may not operate correctly.

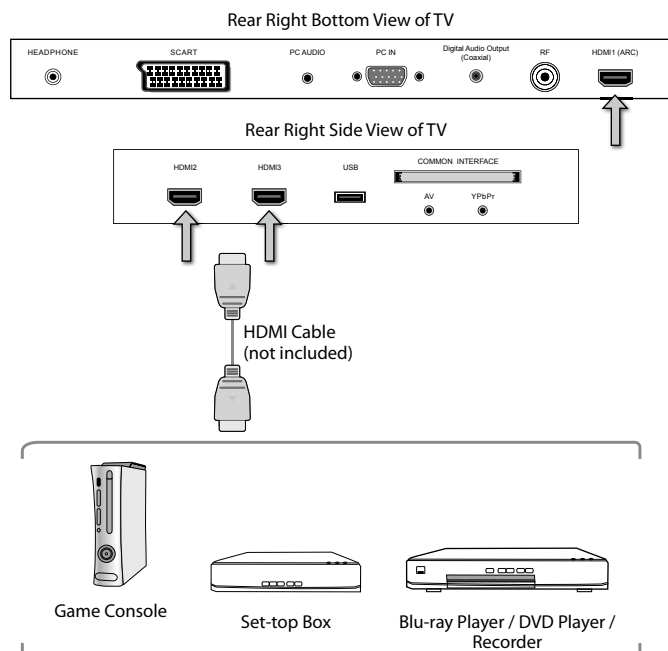

## Connecting a Soundbar - HDMI ARC (Audio Return Channel)

The ARC (Audio Return Channel) function allows you to send audio from your ARC-compliant TV to ARC-compliant audio devices (e.g. soundbar) through a single HDMI connection.

To enjoy the ARC function, please ensure your ARC-compliant audio devices are connected by an HDMI cable that support the ARC function to the **HDMI 1(ARC)** socket of your ARC-compliant TV. When correctly set up, you can use your TV remote control to adjust the volume output (VOL +/- and MUTE) of the connected audio device.

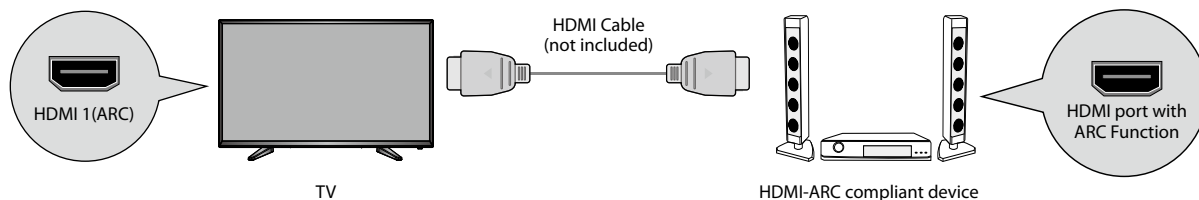

- Ensure that audio device is HDMI CEC and ARC compliant and that the TV is connected to the device using an HDMI cable attached to HDMI-ARC connectors.
- The HDMI 1 connector is HDMI Audio Return Channel (ARC) compliant. Use it to output digital audio to an HDMI home theater system.
- If the ARC-compliant audio devices do not support sound that TV outputs, such as Dolby Digital, or Dolby Digital Plus, then ARC function will not work and there may be no sound from ARC-compliant audio devices. In this case, additional connection with digital optical cable is necessary.
- The HDMI CEC feature has different trade names on different brands. The compatibility performance may vary with different CEC-enabled devices.
- Please refer to your ARC-compliant devices' guidebook for more details on the operation of the HDMI ARC function.
- Ensure **HDMI CEC Control** is **On** (refer to page 44 for details on **HDMI CEC**).

GB


Connections

## Connecting a Computer Using a VGA Cable

1. Use a VGA cable to connect the TV's PC IN input socket to a computer's VGA output socket. Use an audio cable to connect the TV's PC AUDIO input socket to the computer's audio output socket.
2. Plug the connected devices into the mains socket before switching on the TV.
3. Press the **Power** button on the right bottom panel under the TV frame or on the remote control to turn on your TV.
4. Press the **Input** button on the right bottom panel under the TV frame or the **INPUT** button on the remote control to display the **INPUT SOURCE** List. Use the **Up/Down** buttons to select **PC** and then press the **OK** button to confirm.



- The best resolution is 1366 x 768.
- If your computer is set to shut down after a few minutes in the idle mode, the TV will also switch to standby due to no signal being received, this is to save energy. Press the **Power** button on the right bottom panel under the TV frame or on the remote control to restart the TV.

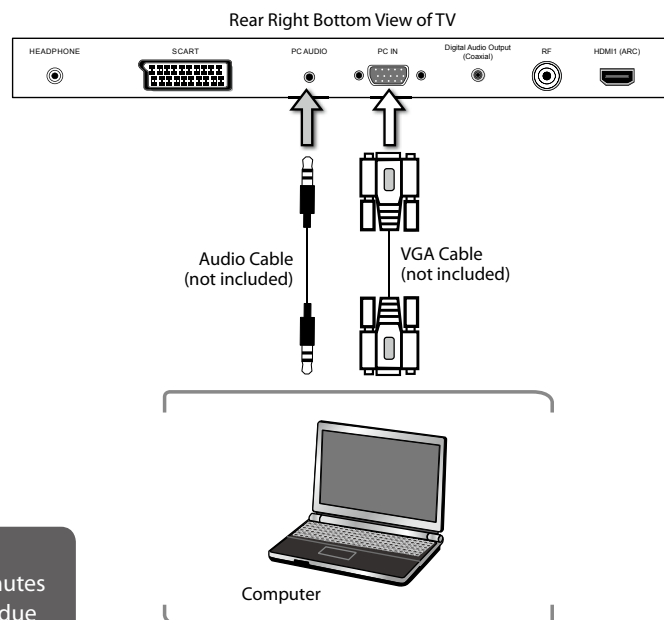




## Connecting an AV Device Using a Component (YPbPr) Cable

1. Use a component cable to connect the TV's YPbPr input sockets to an external AV device's component output sockets.
2. Use an AV cable to connect the TV's AUDIO(L/R) input sockets to the external AV device's component audio output sockets. (Audio Left = white, and Audio Right = red)

|                          |   |    |    |
|--------------------------|---|----|----|
| Component port on the TV | Y | Pb | Pr |
|--------------------------|---|----|----|

|                                  |   |    |    |
|----------------------------------|---|----|----|
| Video output ports on DVD player | Y | Pb | Pr |
|                                  | Y | Cb | Cr |

3. Plug the connected devices into the mains socket before switching on the TV.
4. Press the **⏻** button on the right bottom panel under the TV frame or on the remote control to turn on your TV.
5. Press the **⏮** button on the right bottom panel under the TV frame or the **INPUT** button on the remote control to display the **INPUT SOURCE** List. Use the **▲▼** buttons to select **YPbPr** and then press the **OK** button to confirm.

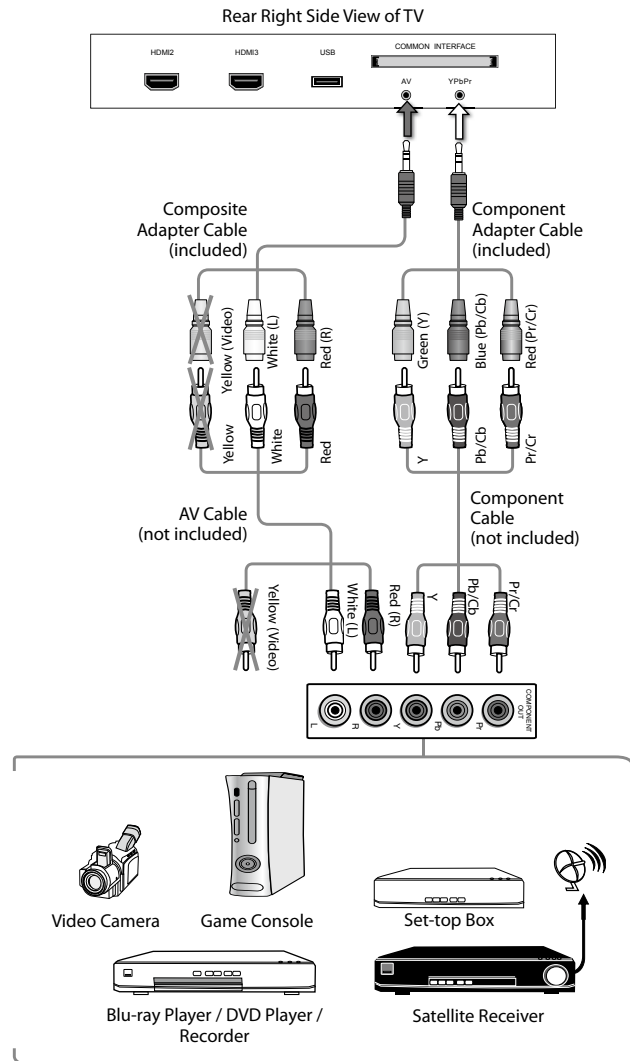

GB


Connections

## Connecting an AV Device Using a SCART Cable

1. Use a SCART cable to connect the TV's SCART input socket to an external AV device's SCART output socket.
2. Plug the connected devices into the mains socket before switching on the TV.
3. Press the **⏻** button on the right bottom panel under the TV frame or on the remote control to turn on your TV.
4. The TV will change the input source to **SCART** automatically once the AV device is switched on.




Ensure the both side of SCART plugs are fully plugged to the TV and the connected devices.

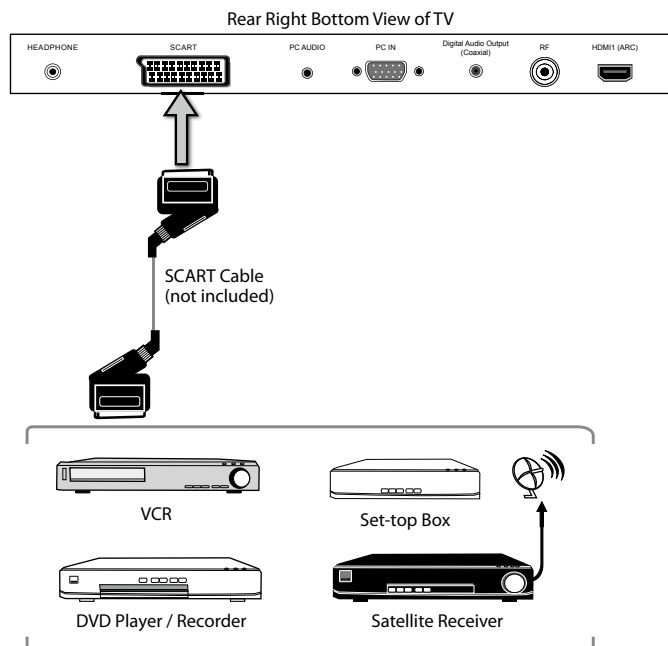




 
## Connecting an AV Device Using Composite Cable

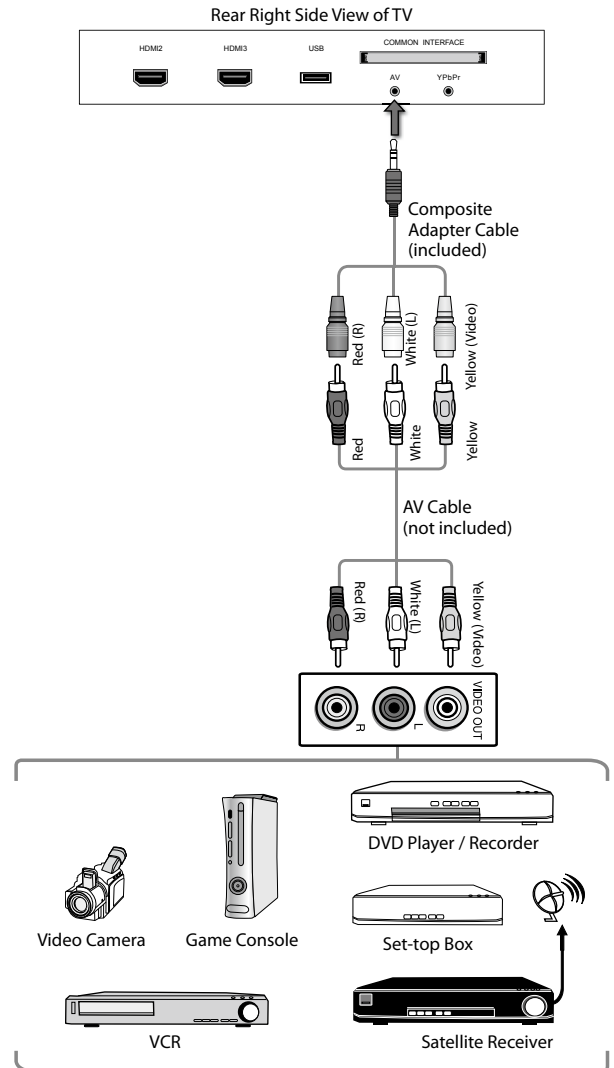1. Use an AV cable to connect the TV's AUDIO(L/R) / VIDEO input sockets to the external AV device's composite audio / video output sockets. (VIDEO = yellow, Audio Left = white, and Audio Right = red)
2. Plug the connected devices into the mains socket before switching on the TV.
3. Press the **⏻** button on the right bottom panel under the TV frame or on the remote control to turn on your TV.
4. Press the **↺** button on the right bottom panel under the TV frame or the **INPUT** button on the remote control to display the **INPUT SOURCE** List. Use the **▲▼** buttons to select **AV** and then press the **OK** button to confirm.




## Connecting a Coaxial Audio Receiver

For better sound quality, you may want to play the audio through your multi-channel audio receiver.

1. Use an audio cable (not included) to connect the TV's Digital Audio Output (Coaxial) socket to an external audio receiver's audio coaxial input socket.
2. Plug the connected devices into the mains socket before switching on the TV.
3. Press the  button on the right bottom panel under the TV frame or on the remote control to turn on your TV.
4. Press the  button on the right bottom panel under the TV frame or the **INPUT** button on the remote control to display the **INPUT SOURCE** List. Use the   buttons on the remote control to select any desired input source and then press the **OK** button to confirm.



The TV's volume will not be affected. You may control the audio level via the Audio Receiver.

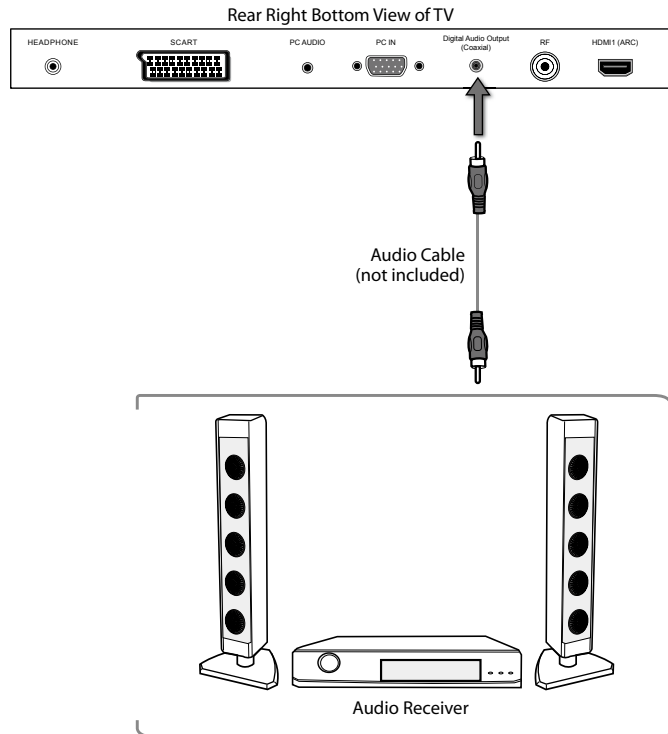

GB

Connections


## Connecting Headphones

Connect your headphones to the TV's HEADPHONE socket.

Before putting on the headphones, turn the volume down then put the headphones on and slowly increase the volume until you reach a comfortable listening level.



Long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when using headphones, especially for extended periods.

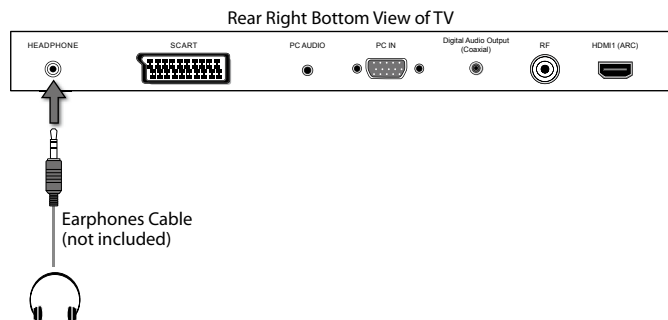

# Turning the TV On for the First Time





- This instruction manual explains the basic instructions for operating this unit. Unless otherwise stated, all operations described are based on remote control use.
- When an item in main menu is displayed gray, it means that the item is not available or cannot be adjusted.
- If you are going to watch TV using a set-top box, simply connect your TV and set-top box via a HDMI cable and select HDMI in the **Input Source** menu.


1. Connect one end of the RF coaxial cable to the aerial socket on the wall and the other end of the cable to the RF (75Ω) socket at the rear right side of your TV.




Do not connect the TV to the mains supply until you have completed all the connections.

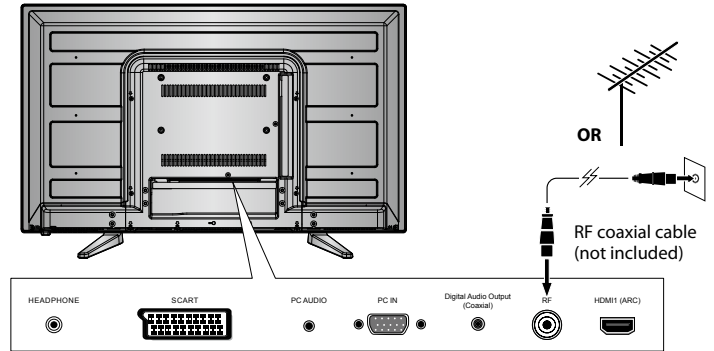
 
 

 


2. Connect the mains cable to the mains socket after you have completed all the connections.
3. At this stage, the TV switches to standby mode. The red LED indicator will illuminate on the front panel of the TV.
4. In standby mode, press the  button on the right bottom panel under the TV frame or on the remote control to turn the TV on. The red LED indicator will turn off.

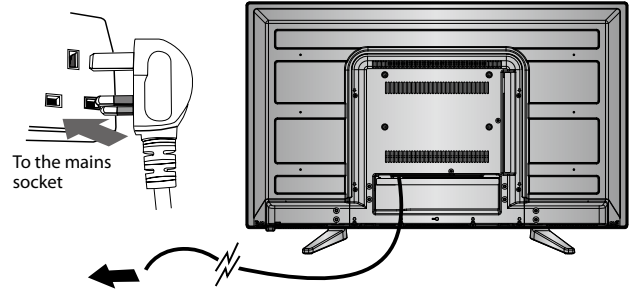

- Always disconnect the TV from the mains socket when not in use for a long period of time.
- The  button on the right bottom panel under the TV frame or on the remote control is only used for switching the TV into standby, it does not disconnect the TV from the mains power. To completely disconnect the mains power, please remove the mains plug from the mains socket.



## First Time Setup

1. The first time you turn the TV on, it will go straight into the **First Time Setup** menu. Please ensure the aerial is plugged in and then press the **OK** button. (If you have already installed the TV using the Quick Start Guide, please go to the section "**Selecting the Input Source**" on the next page.)
2. Press the   buttons to select your desired language to be displayed on the menu. The default on-screen menu language is set as **English**.
3. Press the  button to select **Mode Setting**. Press the   buttons to select your desired mode. If select **Store Mode**, a pop-up menu will be display. Press the **OK** button to confirm or press any button to cancel and return to the **Mode Setting** menu.

|                  |   |
|------------------|---|
| <b>Home Mode</b> | Intended for use in home environment.   |
| <b>Shop Mode</b> | Intended for use in retail environment. |



For the best picture quality in your home environment, we recommend setting the TV to **Home Mode**.

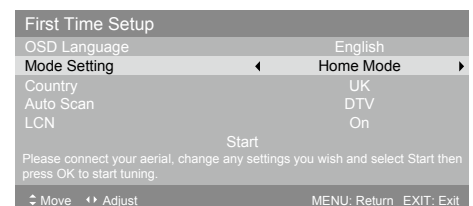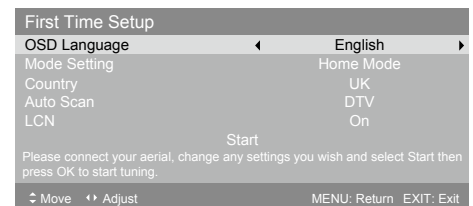

- Press the ▼ button to select **Country**. Press the ◀▶ buttons to select the country option.







If you select Ireland as the country where you will operate the TV, a pop-up screen will be display. You will need a 4-digit activation code for Irish tuning. This code can be found in-store, on the back of your receipt (if bought in Ireland), or call the customer service team / **KNOWHOW**.

- Press the ▼ button to select **Auto Scan**. Press the ◀▶ buttons to select **DTV / ATV / DTV + ATV**.

- Press the ▼ button to select **LCN** (Logical Channel Number, UK only). Press the ◀▶ buttons to select **On / Off**.


- Press the ▼ button to select **Start** and then press the **OK** button. Channel tuning will commence. This operation may take up to few minutes. The display will show the progress of the tuning and the number of channels found.
- If you select DTV + ATV and you want to skip the DTV tuning during scanning, press the **MENU** button to interrupt the tuning half way.
- After tuning is complete, the channels are arranged in a preset order. If you wish to skip channels, modify the preset order or rename channels, select **Channel Edit** under the **Channel** menu (refer to page 29-31 for details).

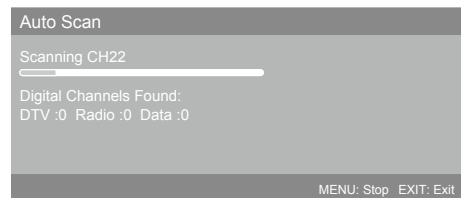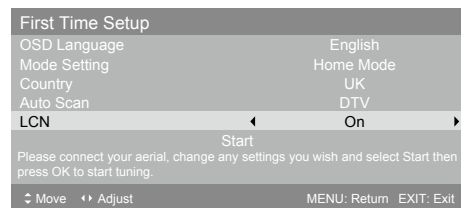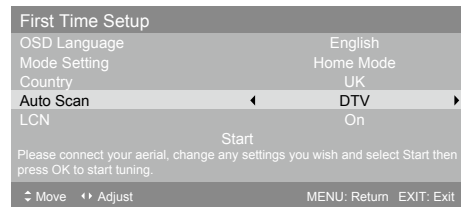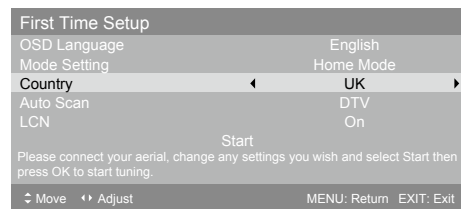

## Target Region Setting (UK Only)

During tuning your TV may have received signals from more than one transmitter. If this has occurred the Target Region Setting screen will be displayed. This will enable you to select the correct regional transmission for the local news service that you require.


- Press the **OK** button to confirm the **Country Code**, this will highlight the Primary Region **England**.
- Press the **OK** button to highlight **Secondary Region** and press the ◀▶ buttons to select your preferred option (if available).
- Press the **OK** button to confirm, and **Tertiary Region** will be highlighted. Press the ◀▶ buttons to select the your preferred option (if available).
- Press the **OK** button to confirm.

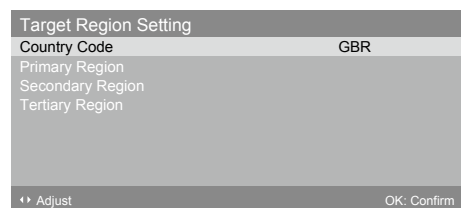


|                         |   |
|-------------------------|---|
| <b>Country Code</b>     | This will be shown as GBR for the UK.   |
| <b>Primary Region</b>   | This will show the regional country (e.g. England, Wales, Scotland, NI).  |
| <b>Secondary Region</b> | This will allow you to set the region for your local news service.  |
| <b>Tertiary Region</b>  | You may receive signals from more than one transmitter within the Secondary Region, (e.g Beds and Cambs may have Luton or Sandy Heath). |

## Eco Friendly / Auto Standby Function


 
 
The latest eco-friendly power saving technology will automatically switch the TV into standby mode if the TV is left on and idle for 4 hours or it does not receive an input signal for several minutes. A reminder screen will pop up and count down before the switches to standby mode. Once the TV is switched to standby mode, the red LED indicator will illuminate on the front panel of the TV.

Press the  button on the bottom panel of the TV or on the remote control to turn on your TV. The red LED indicator will turn off and a pop up message will be prompt on the screen **AFTER** wake up from standby.



- Always disconnect the TV from the mains socket when not in use for a long period of time.
- The  button on the right bottom panel under the TV frame or on the remote control is only used for switching the TV into standby, it does not disconnect the TV from the mains power. To completely disconnect the mains power, please remove the mains plug from the mains socket.

## Selecting the Input Source

1. Press the  button on the right bottom panel under the TV frame or the **INPUT** button on the remote control to display the Input source list.
2. Press the   buttons to select the input source that you want: DTV / ATV / AV / SCART / YPbPr / HDMI 1 / HDMI 2 / HDMI 3 / PC / USB.
3. Press the **OK** button to confirm your selection.

| INPUT SOURCE |
|--------------|
| DTV          |
| ATV          |
| AV           |
| SCART        |
| YPbPr        |
| HDMI 1       |
| HDMI 2       |
| HDMI 3       |
| PC           |
| USB          |
| INPUT: Exit  |



### Alternative



Press the **TV.RD** button to switch to TV / digital radio channels directly.






## Channel Selection

- Press the **CH + / -** buttons on the remote control repeatedly or the **0-9** buttons to select the channel.



### Alternative

Press the **LIST** button to enter the **Channel List**. Then use the   buttons to highlight and select the channel. Press the **OK** button to view the selected channel.



- If a blocked channel is selected, the password screen will be displayed. Press the **0-9** buttons to enter the password, the channel will then be unlocked (refer to page 35 for details on **Channel Block**).
- Press the **FAV** button to view the **Favourite List**. Then the   buttons to select your favourite list and then use the   buttons to highlight and select the channel from the list. Press the **OK** button to view the selected channel (refer to page 31 for details on **Favourite Manager**).
- Press the  button to return to the previously viewed channel.

## Listening to the Radio (Radio Mode)

- In DTV mode, press the **TV.RD** button to switch between DTV and Digital radio channel.
- Press the **CH ▲ / ▼** buttons on the remote control repeatedly to change the radio stations.



### Alternative

Press the **LIST** button to enter the **Channel List**. Then use the   buttons to highlight and select the station. Press the **OK** button to listen to the selected station.

- Press the **GUIDE** button to see all the stations in the Programme Guide (refer to page 49 for details on EPG).

## Display Channel Information

- Press the **i** button to view the current information.


## Volume Adjustment

- Press the **VOL +** or **-** button on the side panel of the TV or on the remote control to adjust the volume.
- If you wish to switch the sound off, press the **🔇** button. You can turn the volume down while your TV is in mute mode. Press the **VOL -** button, you will see the volume level reduce, but you won't hear anything at the moment. To listen to your TV at the new lower level, press the **🔇** button again or **VOL +** button.

# Picture Setting



Allows you to set your preferred picture mode.

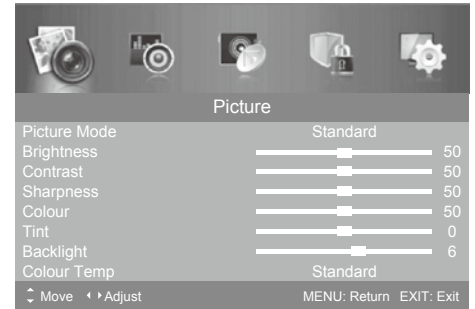1. Press the **MENU** button to display the main menu. Press the ◀▶ buttons to select the **PICTURE** menu and then press the ▼ button or the **OK** button.
2. Press the ▲▼ buttons to select the following options, and then press ◀▶ buttons to adjust each option's setting or the **OK** button to select the options.



GB

Customising TV Settings

|                                     |   |                    |  |                   |   |                   |  |              |                                 |              |  |
|-------------------------------------|---|--------------------|--|-------------------|---|-------------------|--|--------------|---------------------------------|--------------|--|
| <b>Picture Mode</b>                 | Select among picture mode: <b>Standard / Mild / Personal / Dynamic.</b><br><br> <b>Alternative</b> _____<br>You may press the <b>P.MODE</b> button to select the picture mode directly.  |                    |  |                   |   |                   |  |              |                                 |              |  |
| <b>Brightness</b>                   | Increases or decreases the amount of white in the picture. (for Personal mode)  |                    |  |                   |   |                   |  |              |                                 |              |  |
| <b>Contrast</b>                     | Adjusts the difference between light and dark levels in the picture. (for Personal mode)  |                    |  |                   |   |                   |  |              |                                 |              |  |
| <b>Sharpness</b>                    | Adjusts the level of crispness in the edges between light and dark areas of the picture. (for Personal mode)  |                    |  |                   |   |                   |  |              |                                 |              |  |
| <b>Colour</b>                       | Controls the colour intensity. (for Personal mode)  |                    |  |                   |   |                   |  |              |                                 |              |  |
| <b>Tint</b> (for NTSC format)       | Adjusts the balance between red, blue and green levels. (Tint is only available for NTSC signal input via the SCART or AV IN.)  |                    |  |                   |   |                   |  |              |                                 |              |  |
| <b>Backlight</b>                    | Adjusts the backlight setting of your TV. This controls the brightness and display performance of the screen.   |                    |  |                   |   |                   |  |              |                                 |              |  |
| <b>Colour Temp</b>                  | Select among colour temperature: <b>Standard / Cool / Warm.</b><br>Adjusts the colour components independently to achieve a warm or cool colour. (for Personal mode) <ul style="list-style-type: none"> <li>• <b>Standard</b></li> <li>• <b>Cool:</b> Increases blue tint</li> <li>• <b>Warm:</b> Increases red tint</li> </ul>   |                    |  |                   |   |                   |  |              |                                 |              |  |
| <b>Aspect Ratio</b>                 | Allows you to watch the screen in various picture formats: <b>Auto / 4:3 / 16:9 / Zoom / Subtitle / Smart Zoom.</b><br><br> <b>Alternative</b> _____<br>You may press the <b>ASPECT</b> button to select the aspect ratio directly.  |                    |  |                   |   |                   |  |              |                                 |              |  |
| <b>PC Setup</b> (PC mode only)      | Adjusts the PC desktop content. Press <b>OK</b> button to enter the <b>PC Setup</b> menu. <table border="1" data-bbox="427 1518 1449 1727"> <tr> <td><b>Auto Adjust</b></td> <td>Allows you to synchronise a PC signal automatically.</td> </tr> <tr> <td><b>H Position</b></td> <td>Adjusts the position of the picture left and right in the window.</td> </tr> <tr> <td><b>V Position</b></td> <td>Adjusts the position of the picture up and down in the window.</td> </tr> <tr> <td><b>Phase</b></td> <td>Minimize horizontal distortion.</td> </tr> <tr> <td><b>Clock</b></td> <td>Minimize vertical stripes in the screen image.</td> </tr> </table> | <b>Auto Adjust</b> | Allows you to synchronise a PC signal automatically. | <b>H Position</b> | Adjusts the position of the picture left and right in the window. | <b>V Position</b> | Adjusts the position of the picture up and down in the window. | <b>Phase</b> | Minimize horizontal distortion. | <b>Clock</b> | Minimize vertical stripes in the screen image. |
| <b>Auto Adjust</b>                  | Allows you to synchronise a PC signal automatically.  |                    |  |                   |   |                   |  |              |                                 |              |  |
| <b>H Position</b>                   | Adjusts the position of the picture left and right in the window.   |                    |  |                   |   |                   |  |              |                                 |              |  |
| <b>V Position</b>                   | Adjusts the position of the picture up and down in the window.  |                    |  |                   |   |                   |  |              |                                 |              |  |
| <b>Phase</b>                        | Minimize horizontal distortion.   |                    |  |                   |   |                   |  |              |                                 |              |  |
| <b>Clock</b>                        | Minimize vertical stripes in the screen image.  |                    |  |                   |   |                   |  |              |                                 |              |  |
| <b>Screen Mode</b> (HDMI mode only) | Allows you to select the screen mode: <b>Auto / Video / PC.</b>   |                    |  |                   |   |                   |  |              |                                 |              |  |
| <b>Noise Reduction</b>              | Switch on / off the noise level of the connected device: <b>On / Off.</b>   |                    |  |                   |   |                   |  |              |                                 |              |  |


3. Press the **MENU** button to return to the previous menu, press again to return to the main menu.
4. Press the **EXIT** button to exit the menu.




# Sound Setting

Allows you to select an audio-enhancement technique.

1. Press the **MENU** button to display the main menu. Press the ◀▶ buttons to select the **SOUND** menu and then press the ▼ button or the **OK** button.
2. Press the ▲▼ buttons to select the following options, and then press ◀▶ buttons to adjust each option's setting or the **OK** button to select the options.

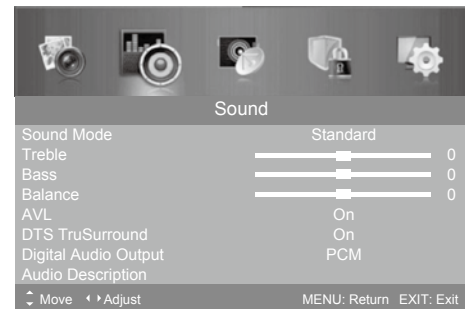

|  |   |
|--|---|
| <b>Sound Mode</b>                        | You can select this function when DTS TruSurround switch off. It allows the selection of an audio-enhancement technique: <b>Standard / Movie / Music / Personal</b> .<br><br> <b>Alternative</b> _____<br>You may press the <b>S.MODE</b> button to select the sound mode directly.  |
| <b>Treble</b>                            | Controls the relative intensity of higher pitched sounds. (for Personal mode)   |
| <b>Bass</b>                              | Controls the relative intensity of lower-pitched sounds. (for Personal mode)  |
| <b>Balance</b>                           | Adjusts the relative volume of the speakers in a multiple speaker system.   |
| <b>AVL (Auto Volume Limiting)</b>        | Activates the auto volume leveller to keep the volume level consistent whenever you change channels if selecting <b>On</b> .<br>The volume level may not be consistent due to different signal conditions of broadcasting stations if selecting <b>Off</b> .  |
| <b>DTS TruSurround</b>                   | DTS TruSurround delivers an immersive virtual surround sound experience over front facing speaker configurations, complete with rich bass, high frequency detail and clear dialogue. Press the <b>OK</b> button to select <b>On / Off</b> .   |
| <b>Digital Audio Output</b>              | Selects the digital audio output mode: <b>PCM / Auto / Off</b> .  |
| <b>Audio Description (DTV mode only)</b> | This will only work if the programme you are watching broadcasts the audio description. You will hear a description of what is happening on screen, it is designed for people with a visual impairment.<br><ol style="list-style-type: none"> <li>1. Press the ▶ button to highlight <b>Audio Description</b>, then press the <b>OK</b> button to enter the sub-menu.</li> <li>2. Press the ◀▶ buttons to switch the <b>Mode</b> to <b>On</b>.</li> <li>3. Press to ▼ button to select <b>Volume</b>, then press the ◀▶ buttons to adjust the volume of the audio description.</li> </ol> |
| <b>Sound Type (DTV mode only)</b>        | Select the sound type: <b>Stereo / Dual I / Dual II / Mixed</b> .   |

4. Press the **MENU** button to return to the previous menu, press again to return to the main menu.
5. Press the **EXIT** button to exit the menu.

## Stereo / Dual Sound Reception (ATV Mode)

When a programme is selected, press the **AUDIO** button to display the sound information for the selected station.

| Broadcast | On Screen Display                                   |
|-----------|---|
| Mono      | MONO / NICAM MONO                                   |
| Stereo    | MONO / NICAM STEREO                                 |
| Dual      | MONO / NICAM DUAL I, NICAM DUAL II, NICAM DUAL I+II |

## Mono sound selection

If the stereo signal is weak, you can switch to mono by pressing the **AUDIO** button. In mono reception, the clarity of sound is improved. To switch back to stereo, press the **AUDIO** button again.

## Language selection for dual language broadcast

If a programme can be received in two languages (dual language), you can switch to **NICAM DUAL I**, **NICAM DUAL II**, **NICAM DUAL I+II** or **MONO** by pressing the **AUDIO** button repeatedly.

|                 |   |
|-----------------|---|
| NICAM DUAL I    | Sends the primary broadcast language to the loudspeakers                |
| NICAM DUAL II   | Sends the secondary broadcast language to the loudspeakers              |
| NICAM DUAL I+II | Sends the primary and secondary broadcast languages to the loudspeakers |

## Speaker Sound Output Selection (DTV Mode)

While watching a DTV programme, you can press the **AUDIO** button to display the audio language list (only applicable when the TV programme has this feature).


Press the **▲▼** buttons to select an audio language if available and then press the **OK** button to confirm and exit.

## Channel Setting


### Auto Scan

Use this to automatically find and store all available channels. This is normally recommended if some channels have been added or removed by the broadcaster or if you have moved.

1. Press the **MENU** button to display the main menu. Press the **◀▶** buttons to select the **Channel** menu and then press the **▼** button or the **OK** button.

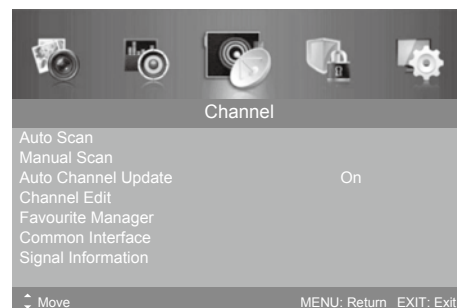


2. Press the **▲▼** buttons to select **Auto Scan** and then press the **OK** button or the **▶** button to enter the **Auto Scan** menu.

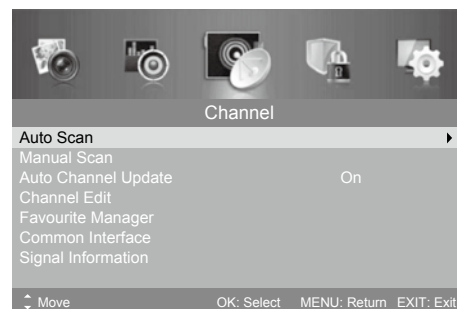

3. Press the **▲▼** buttons to select the following options, and then press **◀▶** buttons to adjust each option's setting or **OK** button to select the options.

|  |   |
|--|---|
| <b>Country</b>                         | Selects the desired country.  |
| <b>Mode</b>                            | Selects tune type: <b>DTV / ATV / DTV + ATV</b> .                           |
| <b>LCN</b><br>(Logical Channel Number) | Sets LCN <b>On</b> or <b>Off</b> if you want to sort the channels manually. |

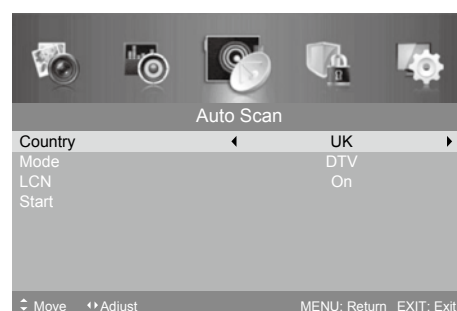


- Press the **▼** button to select **Start** and then press the **OK** button or the **▶** button to start auto tuning.



If you select Ireland as the country where you will operate the TV, a pop-up screen will be display. You will need a 4-digit activation code for Irish tuning. This code can be found in-store, on the back of your receipt (if bought in Ireland), or call the customer service team / **KNOWHOW**.


- Channel tuning will commence. This operation may take up to few minutes. The display will show the progress of the tuning and the number of channels found.
- If you select DTV + ATV and you want to skip the DTV tuning during scanning, press the **MENU** button to interrupt the tuning half way. You will then go straight to ATV tuning. You may repeat the above step if you want to skip ATV tuning.
- After tuning is complete, the channels are arranged in a preset order. If you wish to skip channels, modify the preset order or rename channels, select **Channel Edit** under the channel menu (refer to page 29-31 for details).

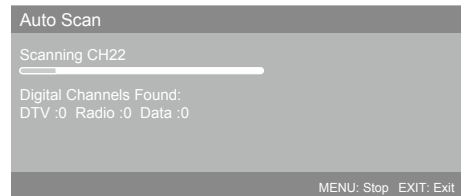


## DTV Manual Scan (DTV Mode)

Allows you to make manual fine tuning adjustments to the channel under DTV channel.


- Press the **MENU** button to display the main menu. Press the **◀▶** buttons to select the **Channel** menu and then press the **▼** button or the **OK** button.

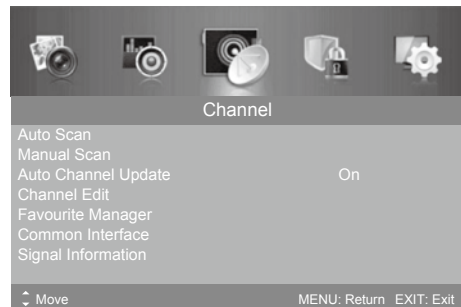


- Press the **▲▼** buttons to select **Manual Scan** and then press the **OK** button or the **▶** button to enter the **Manual Scan** menu.

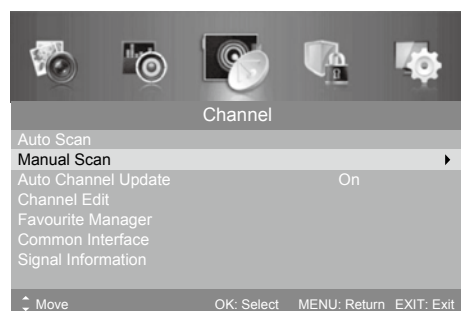

- Press the **OK** button or the **▶** button to enter the **Digital Manual Scan** menu.

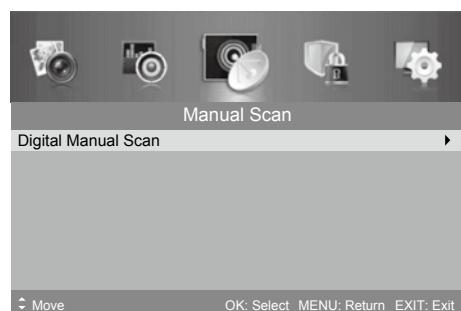


4. Press the **▼** button to select **Digital Scan** and then press the **◀▶** buttons to select the desired channel number.
5. Press the **▼** button to select **Start** and then press the **OK** button to commence the search of that channel. When the signal has been tuned, the frequency and strength will be displayed on the screen.
6. Press the **MENU** button to return to the previous menu, press again to return to the main menu.
7. Press the **EXIT** button to exit the menu.

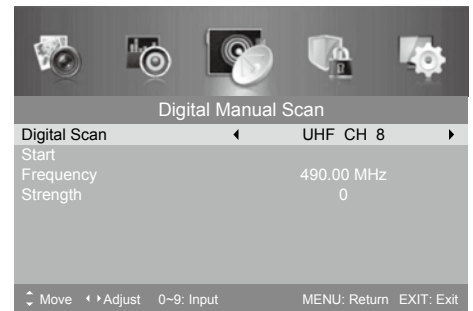


## ATV Manual Scan (ATV Mode)

Allows you to make manual fine tuning adjustments if the channel reception is poor under ATV mode.

1. Press the **MENU** button to display the main menu. Press the **◀▶** buttons to select the **Channel** menu and then press the **▼** button or the **OK** button.
2. Press the **▲▼** buttons to select **Manual Scan** and then press the **OK** button or the **▶** button to enter the **Manual Scan** menu.

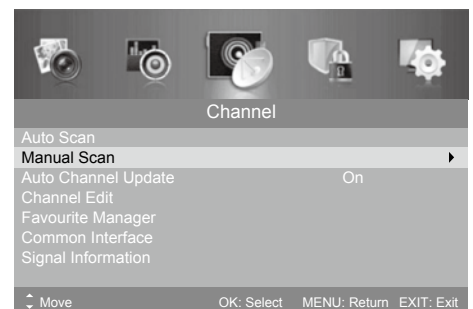


3. Press the **▼** button to select **Analogue Manual Scan** and then the **OK** button or the **▶** button to enter the **Analogue Manual Scan** menu.

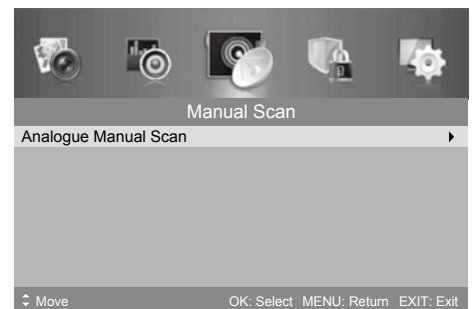

4. Press the **▲▼** buttons to select the following auto scan options, and then press **◀▶** buttons to adjust each option's setting or **OK** button to select the options.

|                        |   |
|------------------------|---|
| <b>Analogue Scan</b>   | Selects the tune frequency.                                   |
| <b>Channel to Save</b> | Presets the channel number.                                   |
| <b>Colour System</b>   | Selects the colour system: <b>PAL / SECAM / Auto</b> .        |
| <b>Sound System</b>    | Selects the sound system: <b>I / BG / DK / L</b> (for SECAM). |
| <b>AFC</b>             | Selects the AFC (Auto Frequency Channel) <b>On / Off</b> .    |

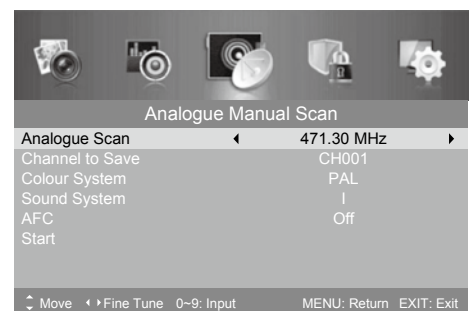


5. Press the **▼** button to select **Start** and then press the **OK** button to commence the search of that channel.
6. Press the **MENU** button to return to the previous menu, press again to return to the main menu.
7. Press the **EXIT** button to exit the menu.


## Auto Channel Update (DTV Mode)

Enable auto channel update feature in DTV channel.

1. Press the **MENU** button to display the main menu. Press the **◀▶** buttons to select the **Channel** menu and then press the **▼** button or the **OK** button.

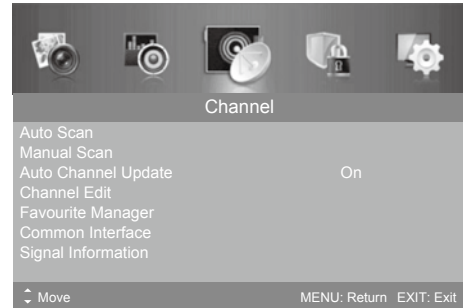

2. Press the **▲▼** buttons to select **Auto Channel Update** and then press the **◀▶** buttons to select **On / Off**.

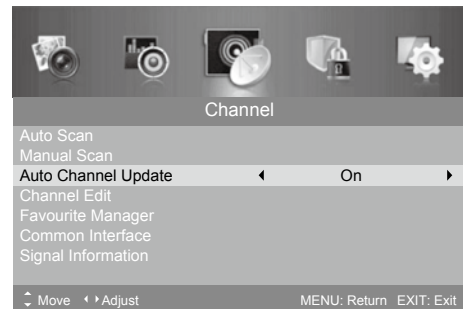


3. Press the **MENU** button to return to the previous menu, press again to return to the main menu.
4. Press the **EXIT** button to exit the menu.

## Channel Edit (DTV Mode)

Allows you to edit TV channel information in the Channel List under DTV mode.

1. Press the **MENU** button to display the main menu. Press the **◀▶** buttons to select the **Channel** menu and then press the **▼** button or the **OK** button.

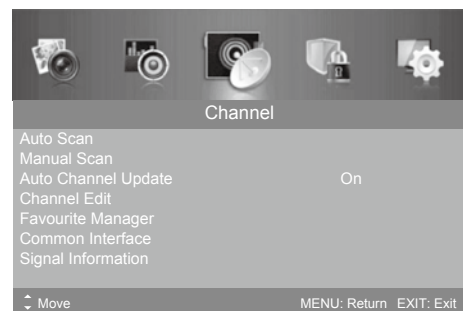

- Press the **▲▼** buttons to select **Channel Edit** and then press the **OK** button or the **▶** button to enter the **Channel Edit** menu.



### Alternative

Press the **PROG** button to enter the **Channel Edit** menu.

- A **Channel Edit** screen will be displayed. Press the **▲▼** buttons to select the programme you want to edit.

#### a. Delete

Press the **RED** button to delete the selected channel.

#### b. Skip

Press the **GREEN** button to select the channels that you want to skip when you are selecting channels. Press the **GREEN** button again to undo it.


#### c. Move

Press the **BLUE** button and then press the **▲▼** buttons to move to the selected channel. Press the **BLUE** button or the **OK** button to confirm.

- Press the **MENU** button to return to the previous menu, press again to return to the main menu.
- Press the **EXIT** button to exit the menu.




Care should be taken when editing the position of digital channels as this may affect EPG and reminder settings.

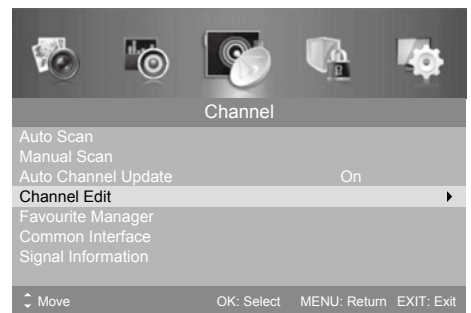

## Channel Edit (ATV Mode)

Allows you to edit TV channel information in the Channel List under ATV mode.

- Press the **MENU** button to display the main menu. Press the **◀▶** buttons to select the **Channel** menu and then press the **▼** button or the **OK** button.

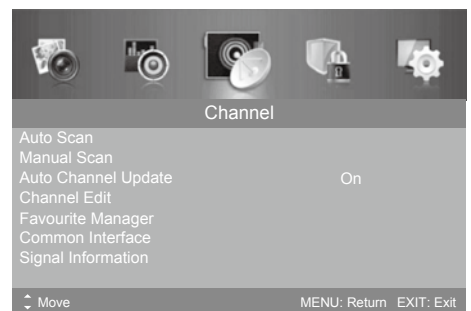


- Press the **▲▼** buttons to select **Channel Edit** and then press the **OK** button or the **▶** button to enter the **Channel Edit** menu.



### Alternative

Press the **PROG** button to display the **Channel Edit** menu.

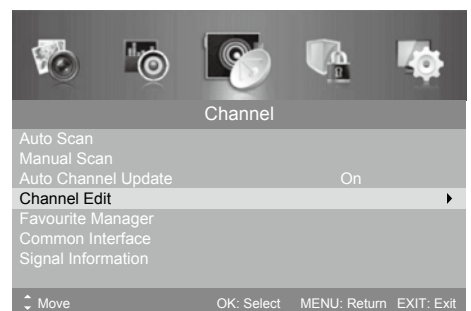

3. A **Channel Edit** screen will be displayed. Press the **▲▼** buttons to select the programme you want to edit.

**a. Delete**

Press the **RED** button to delete the selected channel.

**b. Skip**

Press the **GREEN** button to select the channels that you want to skip when you are selecting channels. Press the **GREEN** button again to undo it.

**c. Move**

Press the **BLUE** button and then press the **▲▼** buttons to move to the selected channel. Press the **BLUE** button or the **OK** button to confirm.

**d. Rename**

Press the **YELLOW** button to rename the selected channel. Press the **▲◀▶▼** buttons to choose the character from the keyboard, then press the **OK** button to confirm the selection. Press the **YELLOW** button to save the new name.

4. Press the **MENU** button to return to the previous menu, press again to return to the main menu.


5. Press the **EXIT** button to exit the menu.




## Favourite Manager

Allows you to select your favourite channel that you watch the most and create 4 channel lists of just your favourites.

1. Press the **MENU** button to display the main menu. Press the **◀▶** buttons to select the **Channel** menu and then press the **▼** button or the **OK** button.

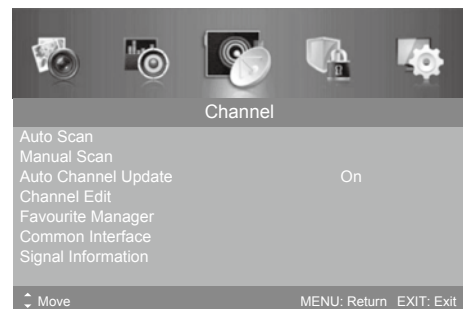

2. Press the **▲▼** buttons to select **Favourite Manager** and then press the **OK** button or the **▶** button.

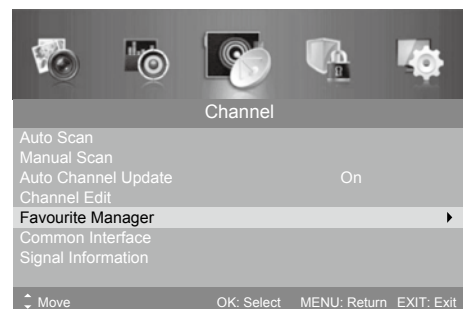

3. A **Favourite Manager** screen will be displayed. Press the **▲▼** buttons to select the channel you want to add to the list and then use the coloured button to save your favourite list.

4. Press the **MENU** button to return to the previous menu, press again to return to the main menu.

5. Press the **EXIT** button to exit the menu.




## Common Interface (DTV Mode)

The common interface allows the use of a Common Access Module to enable you to view scrambled (pay to view) services. These services are provided by TopUp TV (UK only) and others. The Common Access Module and viewing card can be obtained from the service provider.



Do not repeatedly insert or remove the Common Access Module as this may damage the interface and cause a malfunction.

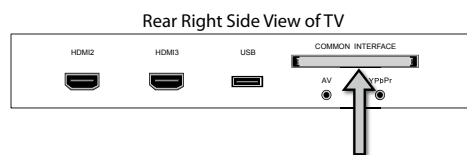

### CI (Common Interface)

Allows the Common Access Module to be inserted and access the content that has been encrypted.

This feature is not available in all countries.

### To Insert the Common Access Module




1. Before you insert the Common Access Module, ensure that the TV is switched off and the viewing card is inserted **in accordance with the Service Provider's instructions**.
2. Insert the Common Access Module into the slot. Flip the Common Access Module to another side and try again if you feel resistance.
3. Switch the TV on.

### To Remove the Common Access Module

1. Before you remove the Common Access Module, ensure that the TV is switched off.
2. Pull the Common Access Module from the slot.
3. Switch the TV on.

### To View the Module Information

1. Press the **MENU** button to display the main menu. Press the ◀▶ buttons to select the **Channel** menu and then press the ▼ button or the **OK** button.
2. Press the ▲▼ buttons to select **Common Interface** and then press the **OK** button or the ▶ button.

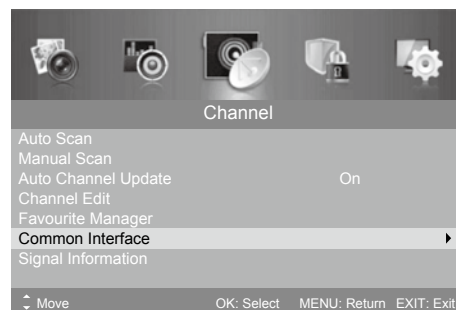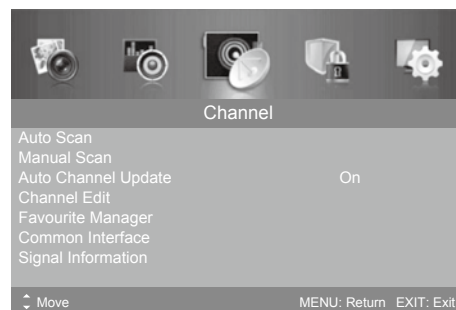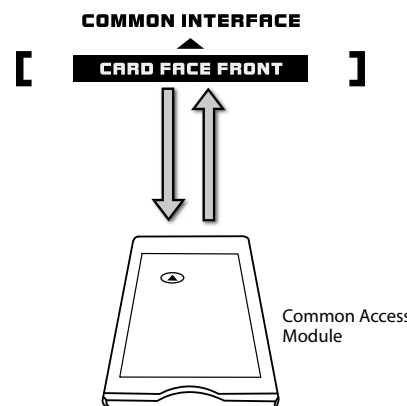



3. A CI Information Main menu will pop up. Press the ▲▼ buttons to display the module information, smart card information, language, software download. Press the **OK** button to confirm.
4. Press the **MENU** button to return to the previous menu, press again to return to the main menu.
5. Press the **EXIT** button to exit the menu.




This screen is for illustration only.




## Signal Information (DTV Mode)

Allows you to view the signal information.

1. Press the **MENU** button to display the main menu. Press the ◀▶ buttons to select the **Channel** menu and then press the ▼ button or the **OK** button.

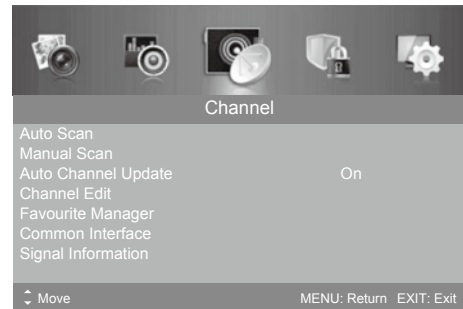

2. Press the ▲▼ buttons to select **Signal Information** and then press the **OK** button or the ▶ button to view the signal information.

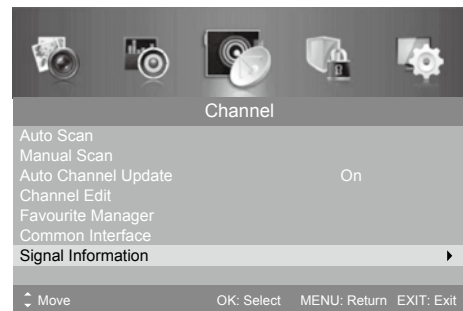

3. Press the **MENU** button to return to the previous menu, press again to return to the main menu.
4. Press the **EXIT** button to exit the menu.



## Lock Setting


To access the **Lock System** menu, you must enter the password. Enter the default password "0000" for first time use. To change the password, refer to "New Password" (see below).

### Lock System

The Lock System is designed to prevent accidental re-tuning of the TV / losing of channels and to prevent children from watching unsuitable programmes.

The Lock System must be set to **On** for this function to operate. If the Lock System is set to **On**, a valid password must be entered when you access channel block, rated programme and first time setup, also all buttons on the TV will be locked.


1. Press the **MENU** button to display the main menu. Press the ◀▶ buttons to select the **Lock System** and then press the ▼ button or the **OK** button.

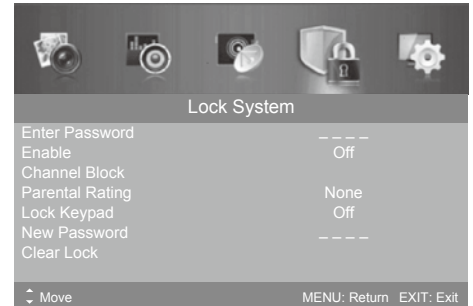


2. Press the ▲▼ buttons to select the **Enter Password**. Use the 0-9 buttons to input a 4-digit password to enter the **Lock System** menu.



The default password is "0000".  
If you change the password, be sure to remember the new password! If you forget the new password, enter the master password "8899".

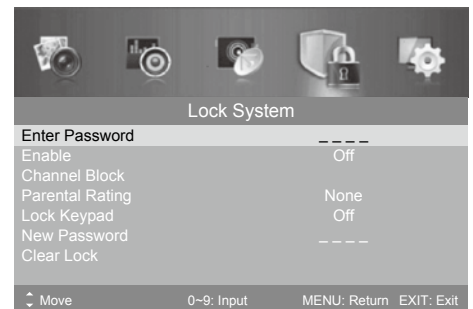

3. Press the ▲▼ buttons to select **Enable** and then the ◀▶ buttons to select **On / Off**.  
If the Enable is set to **On**, a valid password must be entered when you access Auto Tuning / Manual Tuning / Channel Edit / Favourite Manager / Restore Factory Default.
4. Press the **MENU** button to return to the previous menu, press again to return to the main menu.
5. Press the **EXIT** button to exit the menu.

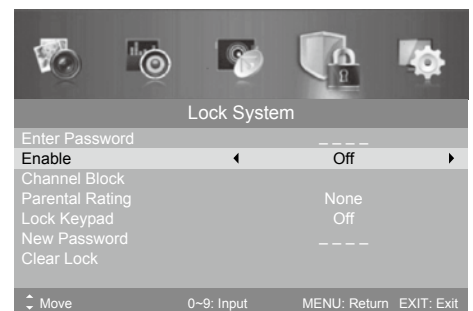


## Channel Block

Block Channel is designed to prevent children from watching unsuitable programmes.

When a channel is blocked, a valid password must be entered.


1. Press the **MENU** button to display the main menu. Press the ◀▶ buttons to select the **Lock System** and then press the ▼ button or the **OK** button.

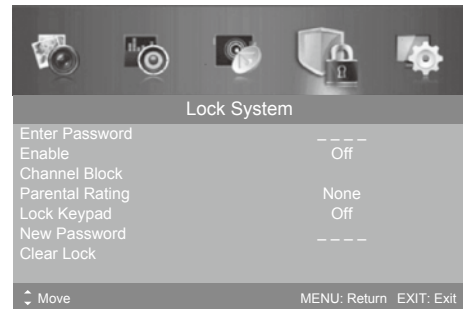


2. Press the ▲▼ buttons to select the **Enter Password**. Use the 0-9 buttons to input a 4-digit password to enter the **Lock System** menu.



The default password is "0000".  
If you change the password, be sure to remember the new password! If you forget the new password, enter the master password "8899".

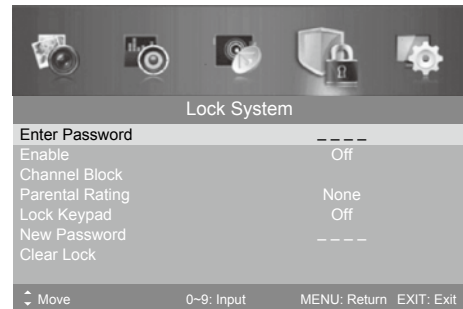

3. Press the ▲▼ buttons to select **Channel Block** and then press the **OK** button or the ▶ button.

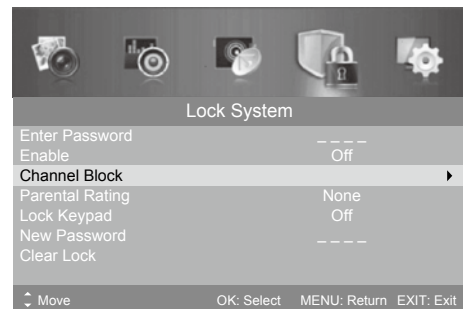

4. A Channel Block screen will display. Press the ▲▼ buttons to select a channel. Press the **OK** button on the remote control to block. Press the **OK** button again to unblock.

5. Press the **MENU** button to return to the previous menu, press again to return to the main menu.

6. Press the **EXIT** button to exit the menu.




## Parental Rating

This function allows you to set up blocking schemes to block specific channels and ratings. It operates according to information from the broadcasting station, therefore if the signal has incorrect information, this function will not operate.

This TV is programmed to remember the last option set even if the TV is switched off.

When a programme is locked or rated, a valid password must be entered.


1. Press the **MENU** button to display the main menu. Press the ◀▶ buttons to select the **Lock System** and then press the ▼ button or the **OK** button.

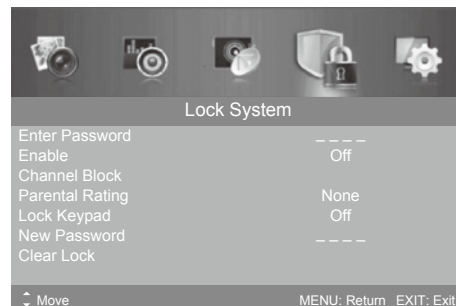


2. Press the ▲▼ buttons to select the **Enter Password**. Use the 0-9 buttons to input a 4-digit password to enter the **Lock System** menu.



The default password is "0000".  
If you change the password, be sure to remember the new password! If you forget the new password, enter the master password "8899".

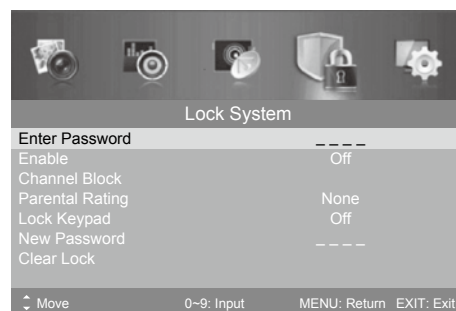


3. Press the ▲▼ buttons to select **Parental Rating** and then press the ◀▶ buttons to select an age rating: None, 4-18.
4. Press the **MENU** button to return to the previous menu, press again to return to the main menu.
5. Press the **EXIT** button to exit the menu.

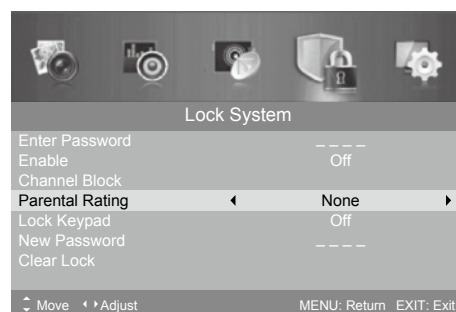

## Lock Keypad

Lock Keypad is designed to prevent children from pressing the buttons on the TV. The Lock System must be set to On for this function to operate. If the Lock Keypad is set to On, all buttons on the TV will be locked. All TV operations can be controlled by the remote control only.


1. Press the **MENU** button to display the main menu. Press the ◀▶ buttons to select the **Lock System** and then press the ▼ button or the **OK** button.

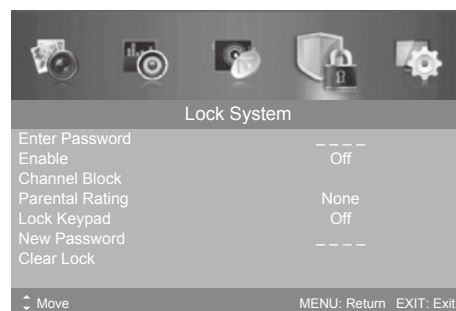


- Press the **▲▼** buttons to select the **Enter Password**. Use the **0-9** buttons to input a 4-digit password to enter the **Lock System** menu.



The default password is "0000".  
If you change the password, be sure to remember the new password! If you forget the new password, enter the master password "8899".

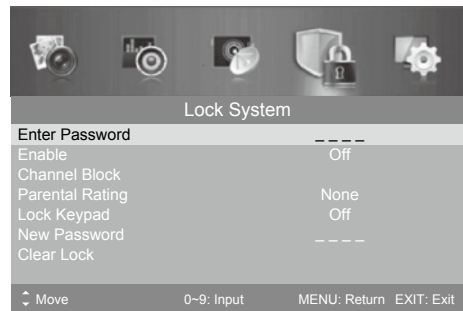


- Press the **▲▼** buttons to select **Lock Keypad** and then press the **◀▶** buttons to select **On / Off**.
- Press the **MENU** button to return to the previous menu, press again to return to the main menu.
- Press the **EXIT** button to exit the menu.

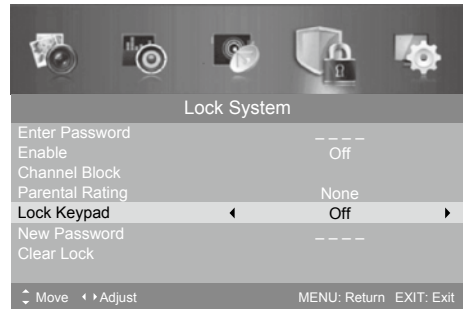

## New Password


- Press the **MENU** button to display the main menu. Press the **◀▶** buttons to select the **Lock System** and then press the **▼** button or the **OK** button.

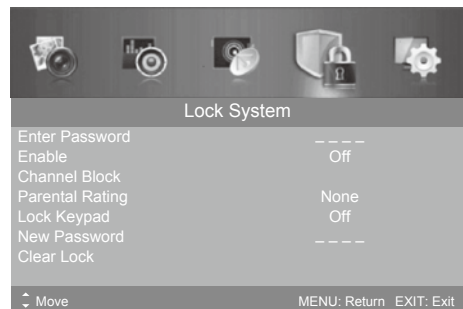


- Press the **▲▼** buttons to select the **Enter Password**. Use the **0-9** buttons to input a 4-digit password to enter the **Lock System** menu.



The default password is "0000".  
If you change the password, be sure to remember the new password! If you forget the new password, enter the master password "8899".

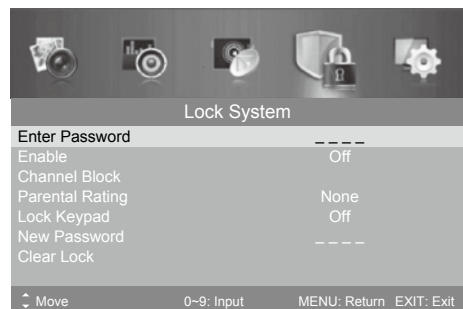


- Press the **▲▼** buttons to select **New Password** and then use the **0-9** buttons to input the new 4-digit password. Re-enter new password for confirmation.
- Press the **MENU** button to return to the previous menu, press again to return to the main menu.
- Press the **EXIT** button to exit the menu.

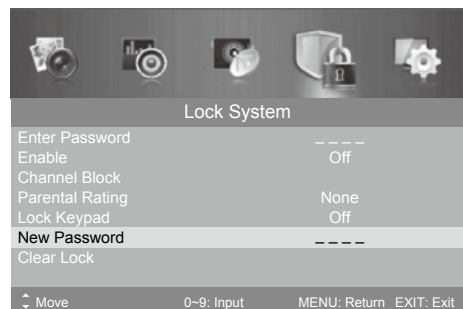

## Clear Lock

Restores all Lock System settings to the factory defaults.

1. Press the **MENU** button to display the main menu. Press the ◀▶ buttons to select the **Lock System** and then press the ▼ button or the **OK** button.

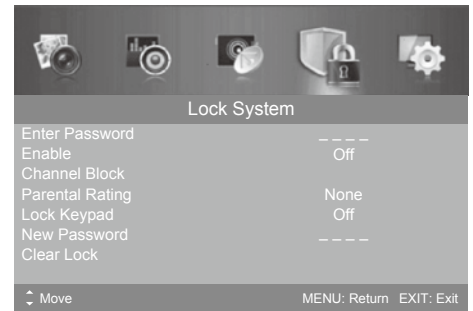


2. Press the ▲▼ buttons to select the **Enter Password**. Use the 0-9 buttons to input a 4-digit password to enter the **Lock System** menu.




The default password is "0000".

If you change the password, be sure to remember the new password! If you forget the new password, enter the master password "8899".

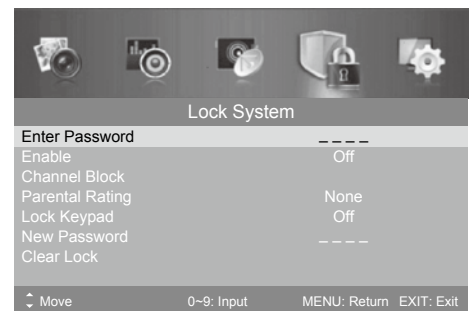

3. Press the ▲▼ buttons to select **Clear Lock** and then press the **OK** button or the ▶ button. All settings in Lock System will reset to the factory defaults.
4. Press the **MENU** button to return to the previous menu, press again to return to the main menu.
5. Press the **EXIT** button to exit the menu.

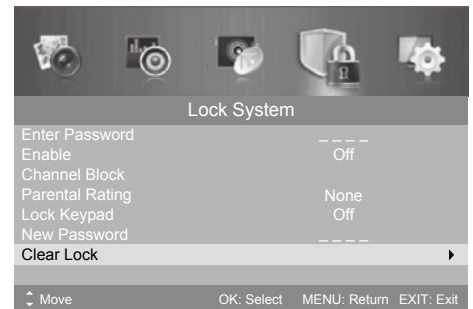

## Setup Setting

### OSD Language

Allows you to select your desired on screen menu language.

1. Press the **MENU** button to display the main menu. Press the ◀▶ buttons to select the **Setup** and then press the ▼ button or the **OK** button.



- Press the **▲▼** buttons to select **OSD Language** and then press the **◀▶** buttons to select the desired language. The default on-screen menu language is **English**.
- Press the **MENU** button to return to the previous menu, press again to return to the main menu.
- Press the **EXIT** button to exit the menu.




## Audio Language (DTV Mode)

Allows you to select your desired audio language. (Available for digital channels if multiple audio languages are broadcast.) The Audio Language is used to describe the programmes when the Hearing Impaired option is switched **On**.

- Press the **MENU** button to display the main menu. Press the **◀▶** buttons to select the **Setup** and then press the **▼** button or the **OK** button.




- Press the **▲▼** buttons to select **Audio Language** and then press the **OK** button or the **▶** button to enter **Audio Language** menu.

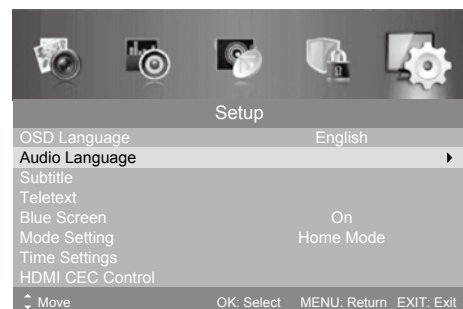

- Press the **▲▼** buttons to select **Audio Primary Language** and **Audio Secondary Language**, then press the **◀▶** buttons to select the desired language
- Press the **MENU** button to return to the previous menu, press again to return to the main menu.
- Press the **EXIT** button to exit the menu.



While watching a DTV programme, you can press the **AUDIO** button to display the audio language list (only applicable when the TV programme has this feature). Press the **▲▼** buttons to select an audio language if available and then press the **OK** button to confirm and exit.

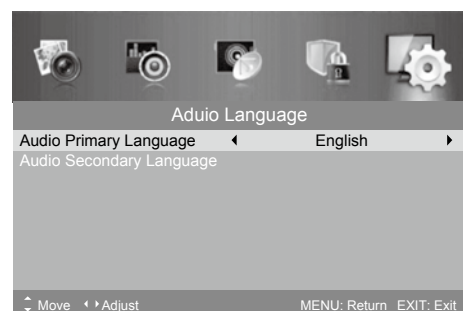


## Subtitle (DTV Mode)

Allows you to select your desired subtitle language or turn off the subtitle. (Only applicable when the TV programme has this feature.)

1. Press the **MENU** button to display the main menu. Press the ◀▶ buttons to select the **Setup** and then press the ▼ button or the **OK** button.




2. Press the ▲▼ buttons to select **Subtitle** and then press the **OK** button or the ▶ button to enter sub-menu.

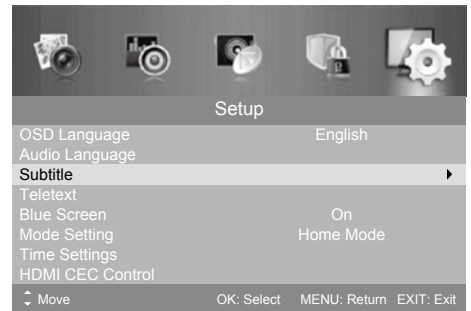

3. Press the ▲▼ buttons to select the following options, and then press ◀▶ buttons to adjust each option's setting or **OK** button to select the options.

|                                    |  |
|------------------------------------|--|
| <b>Mode</b>                        | Allows you to turn <b>On / Off</b> the subtitle.   |
| <b>Subtitle Primary Language</b>   | Allows you to select your desired subtitle primary language.   |
| <b>Subtitle Secondary Language</b> | Allows you to select your desired subtitle secondary language.                                       |
| <b>Hearing Impaired</b>            | Shows information for the hearing-impaired in some programmes. (For DTV channels only if available.) |

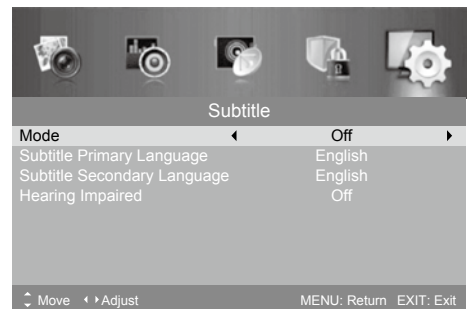

4. Press the **MENU** button to return to the previous menu, press again to return to the main menu.
5. Press the **EXIT** button to exit the menu.




While watching a DTV programme, you can press the **S** button on the remote control to display the **Subtitle Language** list and then press the ▲▼ buttons to select the **Subtitle Language OFF**. Press the **OK** button to confirm. (Only applicable when the TV programme has this feature.)



## Teletext

Allows you to select your preferred Teletext language (if the language is being broadcast).

1. Press the **MENU** button to display the main menu. Press the ◀▶ buttons to select the **Setup** and then press the ▼ button or the **OK** button.

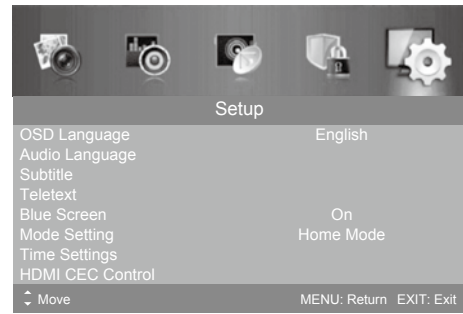

2. Press the ▲▼ buttons to select **Teletext** and then press the **OK** button or the ▶ button to enter **Teletext** menu.



3. Press the ▲▼ buttons to select the following options, and then press ◀▶ buttons to adjust each option's setting or **OK** button to select the options.

|   |  |
|---|--|
| <b>Digital Teletext Language</b> (DTV mode) | Allows you to select an available language as primary language which relates to different initial Teletext page. (Available for digital channels if multiple initial Teletext pages in different languages.) |
| <b>Decoding Page Language</b>               | Selects a proper type of language in which Teletext will display.  |



4. Press the **MENU** button to return to the previous menu, press again to return to the main menu.
5. Press the **EXIT** button to exit the menu.


## Blue Screen

Allows the blue background to turn On or Off during weak or no signal conditions.

1. Press the **MENU** button to display the main menu. Press the ◀▶ buttons to select the **Setup** and then press the ▼ button or the **OK** button.



2. Press the ▲▼ buttons to select **Blue Screen** and then press the ◀▶ buttons to select **On** or **Off**.
3. Press the **MENU** button to return to the previous menu, press again to return to the main menu.
4. Press the **EXIT** button to exit the menu.

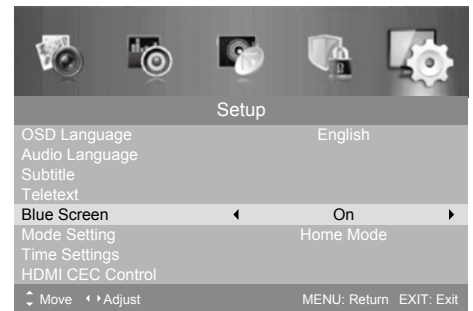


## Mode Setting

Allows you to select Home mode to maximize energy efficiency or Store mode if you would like your picture to be brighter.

1. Press the **MENU** button to display the main menu. Press the ◀▶ buttons to select the **Setup** and then press the ▼ button or the **OK** button.



2. Press the ▲▼ buttons to select **Mode Setting** and then press the ◀▶ buttons to select **Home Mode** or **Store Mode**.
3. Press the **MENU** button to return to the previous menu, press again to return to the main menu.
4. Press the **EXIT** button to exit the menu.

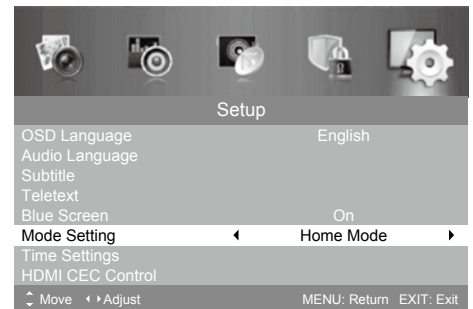


## Time Settings

Allows you to adjust OSD timer, sleep time, auto sleep, time zone.

1. Press the **MENU** button to display the main menu. Press the ◀▶ buttons to select the **Setup** and then press the ▼ button or the **OK** button.




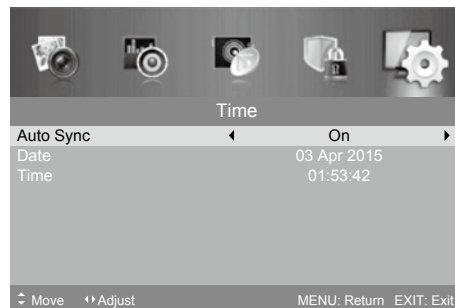
- Press the ▲▼ buttons to select **Time Settings** and then press the **OK** button or the ► button to enter **Time Settings** menu.

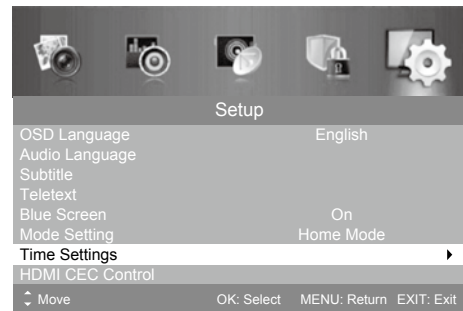

- Press the ▲▼ buttons to select the following options, and then press ◀▶ buttons to adjust each option's setting or **OK** button to select the options.



|                     |  |
|---------------------|--|
| <b>OSD Timer</b>    | You can select a time that your on-screen menus will be displayed: <b>10 / 20 / 30 / 60 seconds / Off</b> . If you select <b>Off</b> the menu will remain on the screen until you press a button to remove it.   |
| <b>Sleep Timer</b>  | <p>The sleep timer automatically switches the TV to standby after the preset time has elapsed. The clock will be set automatically when receiving a digital signal. Time must be set before using Sleep Timer function.</p> <p>Selects a period of time after which the TV automatically switches to standby mode: OFF / 5 / 15 / ... / 120 / 240 min. The timer begins to count down from the number of minutes selected.</p> <div style="border: 1px solid black; padding: 5px; display: inline-block;">  <p>If you turn the TV off after setting the sleep timer, the sleep timer setting will be erased.</p> </div> |
| <b>Auto Standby</b> | <p>The unit will automatically switch to standby mode 4 hours after the last time the remote control was used. A reminder screen will pop up and count down before the unit switches to standby mode.</p> <p>If you want to operate the TV for a long period of time, turn off the auto standby function. To save energy you should always turn the auto standby function back to "<b>3 hours</b>", "<b>4 hours</b>" or "<b>5 hours</b>".</p>  |
| <b>Time Zone</b>    | When you select a Time Zone city, the TV time is set by the time offset information based on Time Zone and GMT (Greenwich Mean Time) which is received with the broadcast signal and the time is set automatically by a digital signal.  |
| <b>Time</b>         | <p>Allows to set the time and date manually or set automatically when receiving a digital signal. Press the ▲▼ buttons to highlight <b>TIME</b>, then press the <b>OK</b> button or the ► button to enter the sub-menu.</p> <p>Selects <b>Auto Sync</b> to <b>On</b>, the time and date will be set from the broadcast signal.</p> <p>If you want to set the time and date manually, set <b>Auto Sync</b> to <b>OFF</b>. Then press the ▲▼ buttons to highlight the <b>Date</b> and <b>Time</b> options and press the <b>0-9</b> buttons or the ▲▼ buttons to set the date and time.</p>   |




- Press the **MENU** button to return to the previous menu, press again to return to the main menu.
- Press the **EXIT** button to exit the menu.

## HDMI CEC Control

Allows you to command and control two or more HDMI CEC (Consumer Electronics Control) compliant devices, that are connected through HDMI, by using only one of the remote controls (e.g. controlling a TV set, set-top box and DVD player using only the remote control of the TV). HDMI CEC also allows individual HDMI CEC compliant devices to command and control each other without user intervention.

Make sure that your HDMI CEC-compliant device is connected to your TV using a HDMI cable and the correct HDMI input source is selected prior to using this function. (Some HDMI cables may not support HDMI-CEC functions.)


1. Press the **MENU** button to display the main menu. Press the ◀▶ buttons to select the **Setup** and then press the ▼ button or the **OK** button.

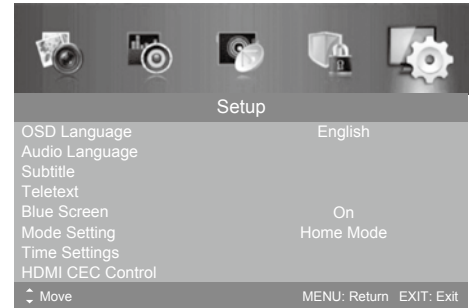

2. Press the ▲▼ buttons to select **HDMI CEC Control** and then press the **OK** button or the ▶ button to enter **HDMI CEC Control** menu.



- This unit can only communicate with HDMI-CEC compatible devices.
- To be sure that the HDMI-CEC device has this feature, check to see if there is HDMI-CEC compatible logo on it.
- HDMI-CEC function only works when the AV device supporting CEC is turned on.

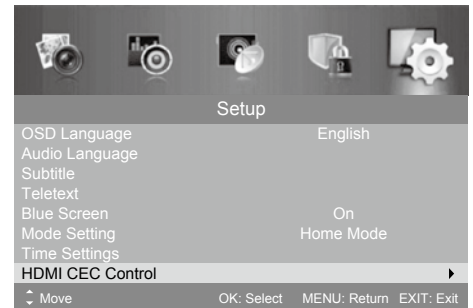


3. Press the ▲▼ buttons to select the following options, and then press ◀▶ buttons to adjust each option's setting or **OK** button to select the options.



### HDMI CEC Control

This will allow you to control other CEC enabled devices (connected via HDMI) using your TV remote control. Press the ▲▼ buttons to select **HDMI CEC Control** and then press the ◀▶ buttons to turn **On**.

|                  |   |
|------------------|---|
| ARC              | <p>The ARC (Audio Return Channel) function allows you to send audio from your ARC-compliant TV to ARC-compliant audio devices (e.g. home theatre) through a single HDMI connection. To enjoy the ARC function, please ensure your ARC-compliant audio devices are connected by an HDMI cable that support the ARC function to the <b>HDMI 1(ARC)</b> socket of your ARC-compliant TV. When correctly set up, you can use your TV remote control to adjust the volume output (VOL +/- and MUTE) of the connected audio device.</p> <p>Ensure <b>HDMI CEC Control</b> is set to <b>On</b>. Press the <b>▲▼</b> buttons to select <b>ARC</b> and then press the <b>◀▶</b> buttons to turn <b>On</b>.</p>  <ul style="list-style-type: none"> <li>• Ensure the audio device supports the ARC function and is connected to the correct HDMI input source.</li> <li>• Ensure to use an HDMI cables that can support the ARC function.</li> <li>• The HDMI ARC only works on the <b>HDMI 1(ARC)</b> input on the TV.</li> <li>• If the ARC-compliant audio devices do not support sound that TV outputs, such as Dolby Digital, or Dolby Digital Plus, then ARC function will not work and there may be no sound from ARC-compliant audio devices. In this case, please set <b>Digital Audio Output</b> to <b>PCM</b>.</li> <li>• Please refer to your ARC-compliant devices' guidebook for more details on the operation of the HDMI ARC function.</li> <li>• Ensure <b>HDMI CEC Control</b> is set to <b>On</b>.</li> </ul> |
| CEC Menu Control | <p>To display the setup menu of the connected HDMI-CEC compliant devices on the screen. Press the <b>▲▼</b> buttons to select <b>CEC Menu Control</b> and then press the <b>OK</b> button or the <b>▶</b> button to enter sub-menu. Use the <b>▲▼</b> buttons and then press the <b>OK</b> button or the <b>▶</b> button to select <b>Home menu / Option / Content</b> to operate the equipment. You can use the <b>◀▶</b> buttons to navigate through the setup menu (some HDMI-CEC compliant devices may not support this function). For details operations on the connected devices, please refer to the user manual of the device for available control.</p>  |
| Device List      | <p>Displays a list of connected equipment that is compatible with HDMI CEC Control. Press the <b>▲▼</b> buttons and then the <b>OK</b> button or the <b>▶</b> button to select <b>Device List</b>. Press the <b>▲▼</b> buttons to select <b>Reset</b> and then the <b>OK</b> button or the <b>▶</b> button to update the list.</p>  |

4. Press the **MENU** button to return to the previous menu, press again to return to the main menu.
5. Press the **EXIT** button to exit the menu.

## PVR Settings (DTV Mode)

Allows you to select your preferences in the PVR File System.




Ensure the USB device is connected.

1. Press the **MENU** button to display the main menu. Press the **◀▶** buttons to select the **Setup** and then press the **▼** button or the **OK** button.



2. Press the ▲▼ buttons to select **PVR Settings** and then press the **OK** button or the ► button to enter **PVR Settings** menu.

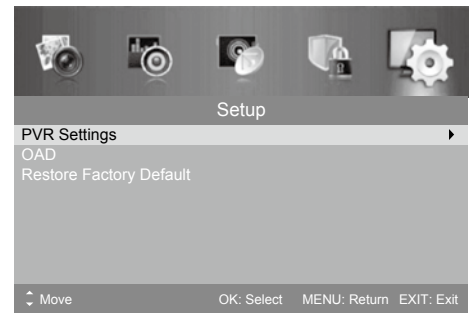

3. Press the ◀▶ buttons and then press the **OK** button to select the following options.




|                         |  |  |  |
|-------------------------|--|--|--|
| <b>File Manager</b>     | Displays the scheduled recorded list.  |  |  |
|                         | <b>Replay</b>  | Press the <b>RED</b> button to replay the video.                       |  |
|                         | <b>Delete One</b>  | Press the <b>GREEN</b> button to delete the video.                     |  |
|                         | <b>Delete All</b>  | Press the <b>YELLOW</b> button to delete all video.                    |  |
|                         | <b>Zoom In/Out</b>   | Press the <b>BLUE</b> button to zoom in or zoom out the video.         |  |
| <b>Device List</b>      | When multiple recording devices are connected, the recording devices are listed. Press the ▲▼ buttons to select one recording device in the <b>Device List</b> . |  |  |
|                         | <b>Format</b>  | Press the <b>RED</b> button to format the selected USB device.         |  |
| <b>Scheduled Record</b> | Sets the scheduled recording information manually. See page 57 for details on <b>Timer Programming</b> .   |  |  |
|                         | <b>Delete One</b>  | Press the <b>GREEN</b> button to delete the selected scheduled record. |  |
|                         | <b>Delete All</b>  | Press the <b>YELLOW</b> button to delete all scheduled record.         |  |

4. Press the **MENU** button to return to the previous menu, press again to return to the main menu.
5. Press the **EXIT** button to exit the menu.


## OAD (Over Air Download)

The TV auto detects the latest firmware through the DTV signal and allows you to accept or refuse the firmware upgrade service.

1. Press the **MENU** button to display the main menu. Press the ◀▶ buttons to select the **Setup** and then press the ▼ button or the **OK** button.

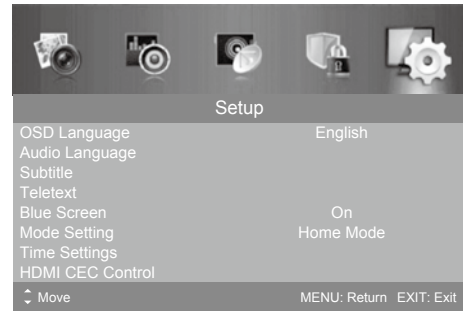

2. Press the ▲▼ buttons to select **OAD** and then press the **OK** button or the ▶ button to enter **OAD** menu.

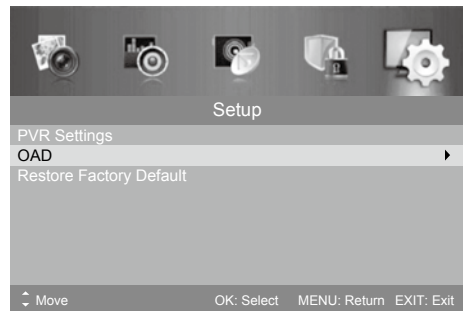


3. Press the ▲▼ buttons to select the following options, and then press ◀▶ buttons to adjust each option's setting or the **OK** button to select the options.

|                            |  |
|----------------------------|--|
| <b>Manual OAD Download</b> | Allows you to download the latest firmware manually. Press the <b>OK</b> button to start.  |
| <b>Auto Download</b>       | Allows the TV auto detects and download the latest firmware by switching <b>On / Off</b> . |



During download, please do not turn off or unplug your TV. This will damage your TV.


4. When the download is complete, the TV will automatically upgrade the software.
5. After complete the update, the TV will return to standby mode.
6. Press the **MENU** button to return to the previous menu, press again to return to the main menu.
7. Press the **EXIT** button to exit the menu.

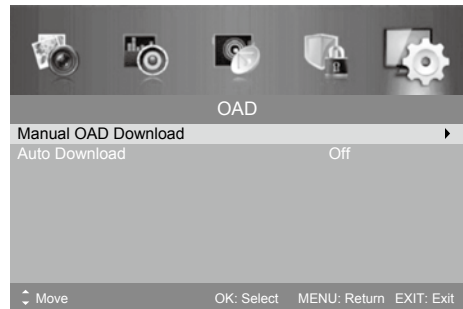


## Restore Factory Default

Restores all settings to the factory defaults.

1. Press the **MENU** button to display the main menu. Press the ◀▶ buttons to select the **Setup** and then press the ▼ button or the **OK** button.

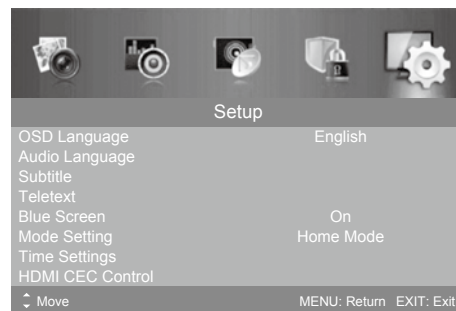

2. Press the ▲▼ buttons to select **Restore Factory Default** and then press the **OK** button or the ▶ button.

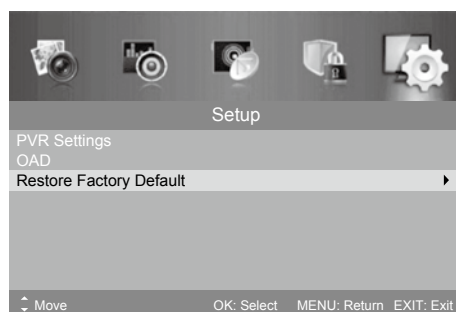

3. A pop-up screen will be displayed. Press the ◀ buttons and then the **OK** button to select "Yes". The TV will turn off and restart after a few seconds. Press the ▶ button and then the **OK** button to select "No" to cancel and return to the Setup menu.



All channel and user settings will be lost and the TV will revert to "First Time Installation".

GB



# EPG (Electronic Programme Guide) (DTV Mode)

This system has an Electronic Programme Guide (EPG) to help you navigate through all the possible viewing options.

The EPG supplies information such as programme listings, start and end times for all available services. In addition, detailed information about the programme is often available in the EPG (the availability and amount of programme information will vary, depending on the particular broadcaster).

This function can be used only when the EPG information is broadcast by broadcasting companies.

The EPG displays the programme details for the next 7 days.

## Switch On / Off EPG

1. Press the **GUIDE** button to switch on EPG.
2. Press the **GUIDE** button or the **EXIT** button again to switch off EPG and return to normal TV viewing.




## Select a Programme

Press the **▲▼** buttons to select the desired channel and then press the **◀▶** buttons to select the desired programme. Press the **OK** button to confirm.

## Button Functions in a 7-Day Guide

| Remote Control Button         | Function  |
|-------------------------------|---|
| <b>Red</b> (Prev Date)        | <ul style="list-style-type: none"> <li>• View the schedule of the previous day in <b>EPG</b>.</li> <li>• Delete the selected preset reminder in the <b>Reminder List</b>.</li> </ul>  |
| <b>Green</b> (Next Date)      | <ul style="list-style-type: none"> <li>• View the schedule of the next day in EPG.</li> <li>• Delete the selected preset reminder in the <b>Schedule List</b>.</li> </ul>   |
| <b>Yellow</b> (Reminder List) | <ul style="list-style-type: none"> <li>• View the preset reminders or scheduled recordings in the <b>Reminder List</b>.</li> <li>• Press again to return to the EPG.</li> </ul>   |
| <b>BLUE</b> (Reminder)        | <p>Press the <b>BLUE</b> button while on the selected programme, the <b>Reminder</b> menu will be displayed.</p> <p>Press the <b>▲◀▶▼</b> buttons to adjust the settings and then press the <b>OK</b> button to confirm the settings. After confirmation, the <b>Reminder List</b> will then be displayed with your preset reminders shown. Press the <b>YELLOW</b> button to return to the EPG. The TV will automatically tune to the selected programme when it starts.</p> |
| <b>INDEX</b>                  | Enter to the PVR Settings.  |
| <b>●</b> (Recording)          | <ul style="list-style-type: none"> <li>• <b>Timer Programming</b></li> <li>• See page 57 for details on <b>Timer Programming</b>.</li> </ul>  |
| <b>▲</b> or <b>▼</b>          | Press to select a channel / programme / preset reminder.  |
| <b>◀</b> or <b>▶</b>          | <ul style="list-style-type: none"> <li>• Switch a between channel window or programme window in EPG.</li> <li>• Adjust the settings in <b>Schedule list</b> or <b>Reminder</b>.</li> </ul>  |
| <b>OK</b>                     | View the selected programme information.  |
| <b>GUIDE / EXIT</b>           | Switch off the EPG.   |

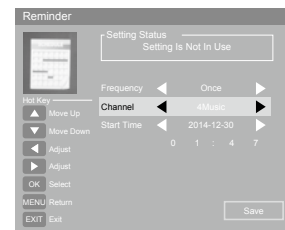

## Red Button (Interactive Services)

Red button services are available on BBC TV and Radio channels. The services are gradually changing to an internet based service rather than the conventional over air (though your aerial). To make the most out of the Red Button services make sure your TV is connected to the internet.

### Accessing the Information

1. In DTV mode press the **TEXT** button to display the main information page. You may see slightly different looking pages depending if your TV is accessing the page over air or via the internet.
2. Follow the instructions on the interactive services page and move around the page by pressing the **▲◀▶▼**, **OK**, **RED**, **GREEN**, **YELLOW**, **BLUE** or **0-9** buttons etc.

To change digital teletext services, you will need to exit the current text service and change channels. Then enter the text service on the newly selected channel.



Over Air Red Button Services

GB



### Alternative

You may press the **RED** button to display the interactive services information when you see a red "press ●" logo in the top right corner of the screen (e.g. BBC services). This will now display the Red Button menu and available information categories.


To access the pages, use navigation buttons to highlight item required and press the **OK** button to select.

Follow on screen prompts for other functions.

3. Press the **TEXT** button to exit.

## Connecting a USB Storage Device



1. Switch off the TV before connecting any USB storage device.
2. Connect your USB storage device to the USB port of your TV.
3. Plug the connected devices into the mains socket before switching on the TV.
4. Press the **⏻** button on the rear bottom panel of the TV or on the remote control to turn on your TV and your USB storage device.
5. Press the **⏮** button on the right bottom panel under the TV frame or the **INPUT** button on the remote control to display the **INPUT SOURCE** List. Use the **▲▼** buttons to select **USB** and then press the **OK** button to confirm.

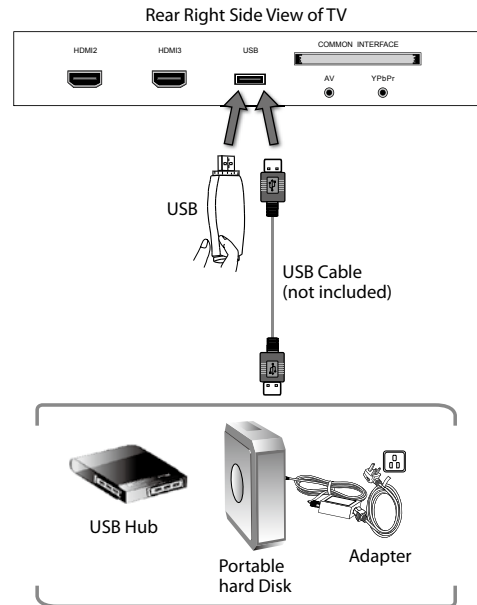

- If a hard disk is used, make sure its mains adapter is connected to the mains supply.
- If a USB hub is used, make sure its mains adapter is connected to the mains supply as the total current consumption may exceed 500mA.
- The maximum supported storage space of the hard disk is 1 TB.
- The file system only supports FAT32 format.
- If you want to store the video streaming of a DTV programme, the transfer rate of the USB storage device must not be less than 5MB/s, otherwise the picture and sound of the programme will be affected and a warning statement will be shown on the screen. If this happens, please upgrade your USB storage device.
- The TV screen will be blank temporarily as it will take time to start up and stabilise the connected hard disk. This is normal and the starting time may vary depending on the brand and the memory size of the connected hard disk.
- Disconnect the USB storage device if it is not in use.
- Supports USB2.0 only.

## Viewing Photos

1. Press the **⏮** button on the right bottom panel under the TV frame or the **INPUT** button on the remote control then press the **▲▼** buttons to select the **USB** mode and then press the **OK** button.
2. Press the **◀▶** buttons to select **PHOTO** and then press the **OK** button.
3. Press the **◀▶** buttons to select your storage device and then press the **OK** button.

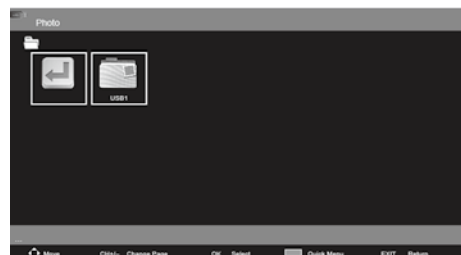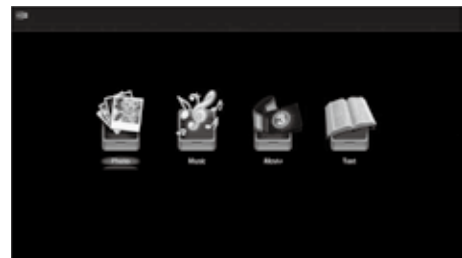

- Press the ▲◀▶▼ buttons to navigate in the picture folder and then press the **OK** button.



Supported file formats: JPG.

- Press the **OK** button or the **i** button to display the function bar. Press the **OK** button to play / pause the slideshow. Press the ◀▶ buttons to select the previous or next photo. During pause the playback, press the ▲▼ buttons to rotate the photo. Press the **BLUE** button to enter the **Quick Menu**. And then press the ▲◀▶▼ buttons to select the functions and adjust the setting: Interval Time / Repeat / Slideshow Effect / Background Music.




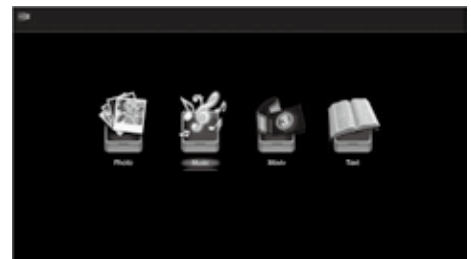
If this folder also contains music files, you can select a music track to play at the same time you view your photos.

- Press the **EXIT** button to return to the previous menu.



## Listening to Music

- Press the  button on the right bottom panel under the TV frame or the **INPUT** button on the remote control then press the ▲▼ buttons to select the **USB** mode and then press the **OK** button.
- Press the ◀▶ buttons to select **MUSIC** and then press the **OK** button.



- Press the ▲▼ buttons to select your storage device and then press the **OK** button.



- Press the ▲▼ buttons to navigate in the file list. The music information (Title / Artist / Album / Track / Year / Date / File Size) will be displayed in player window. Press the **OK** button to play.



- Some audio file formats will not be supported.
- Supported file formats: mp3.

- Press the **CH + / -** buttons to switch between file list and player window. In player window, press the ◀▶ buttons to select the playback function. Press the **BLUE** button to enter the **Quick Menu**. And then press the ▲◀▶▼ buttons to select the functions: Repeat / Background Music.
- Press the **EXIT** button to return to the previous menu.




## Viewing Movies

1. Press the **⏪** button on the right bottom panel under the TV frame or the **INPUT** button on the remote control then press the **▲▼** buttons to select the **USB** mode and then press the **OK** button.
2. Press the **◀▶** buttons to select **MOVIE** and then press the **OK** button.




3. Press the **▲▼** buttons to select your storage device and then press the **OK** button.

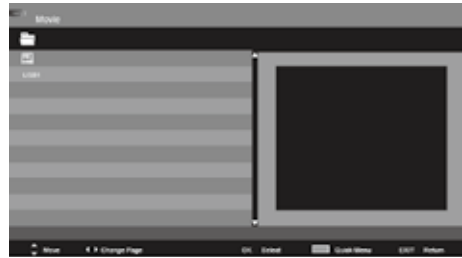

4. Press the **▲▼** buttons to navigate in the movie folder and then press the **OK** button to view.



- Some video file formats will not be supported.
- Supported file formats: MPEG1/2.

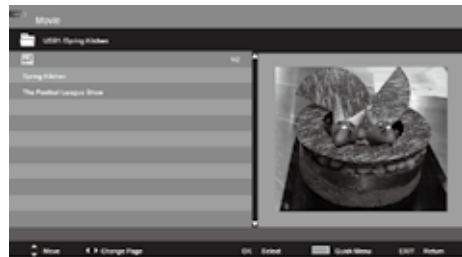

5. Press the **OK** button or the **i** button to display the function bar. Press the **◀▶** buttons and then **OK** button to select the playback function. Press the **BLUE** button to enter the **Quick Menu**. And then press the **▲◀▶▼** buttons to select the functions: Repeat / Encode Type.
6. Press the **EXIT** button to return to the previous menu.



## My Text

1. Press the **⏪** button on the right bottom panel under the TV frame or the **INPUT** button on the remote control then press the **▲▼** buttons to select the **USB** mode and then press the **OK** button.
2. Press the **◀▶** buttons to select **TEXT** and then press the **OK** button.



3. Press the **▲▼** buttons to select your storage device and then press the **OK** button.



4. Press the ▲▼ buttons to navigate in the text folder and then press the **OK** button to view.



5. Press the ◀▶ buttons to go to previous or next page. Use **0-9** buttons to goto the specified page. Press the **BLUE** button to enter the **Quick Menu**. And then press the ▲◀▶▼ buttons to select the functions: Repeat / Background Music / Encode Type.
6. Press the **EXIT** button to return to the previous menu.



## Time Shift Function

This function allows you to pause live TV. The picture will pause and the programme will begin recording so you will not miss any of the programme. You need to have a USB storage device attached to the USB socket for Time Shift Recording to work.



- Time Shift Mode and Recording functions may not work if the signal strength is weak.
- Stop the time shift function before switching to another input source.




If the transfer rate of the USB storage device is too slow for recording or time shift function, a warning statement will be shown on the screen. If this happens, please upgrade your USB storage device. The minimum transfer speed is 5MB/s.

During normal TV viewing, you may press the **PAUSE** button to pause the live programme if you want to go out for a while (e.g. going to the bathroom / kitchen). "II" will show on the screen.

When you have returned, press the **PLAY** button to play the missed broadcast programme. "▶" will show on the screen and the PVR Time Shift progress bar will be displayed on the screen.

The video and sound may have a little bit of delay or be out-of-sync for a few seconds when the unit starts to playback the missed broadcast programme. It will soon turn to normal.

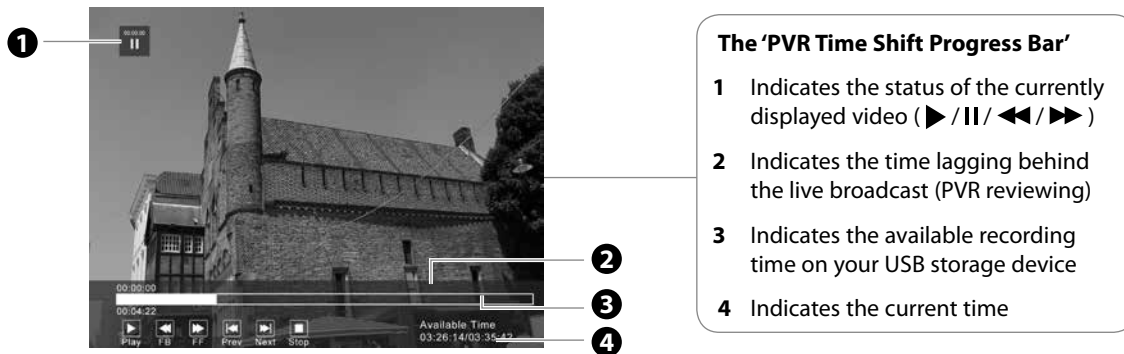

### The 'PVR Time Shift Progress Bar'

- 1 Indicates the status of the currently displayed video (▶ / II / ◀◀ / ▶▶)
- 2 Indicates the time lagging behind the live broadcast (PVR reviewing)
- 3 Indicates the available recording time on your USB storage device
- 4 Indicates the current time

## Using the Remote Control

You can shift playback to any point of the virtually recorded programme. The PVR Time Shift progress bar will be displayed on the screen for 15 seconds. Press the **OK** button to display the PVR Time Shift progress bar again.

|                   |  |
|-------------------|--|
| ◀◀ or ▶▶          | <p>When playing,</p> <ul style="list-style-type: none"> <li>• Press the ◀◀ button repeatedly to speed up ◀◀ x 2 / x 4 / x 8 / x 16.</li> <li>• Press the ▶▶ button repeatedly to speed up ▶▶ x 2 / x 4 / x 8 / x 16.</li> <li>• During fast forward / fast backward state, press the <b>PLAY</b> button to return to normal playback.</li> </ul> |
| ◀◀◀ or ▶▶▶        | <ul style="list-style-type: none"> <li>• Press the ▶▶▶ button to jump about 10% forward.</li> <li>• Press the ◀◀◀ button to jump about 10% back.</li> </ul>  |
| <b>PLAY</b> or II | <ul style="list-style-type: none"> <li>• During playback, press the II button to display a still screen and then press the <b>PLAY</b> button again to resume playback.</li> <li>• During fast forward / fast backward state, press the <b>PLAY</b> button to return to normal playback.</li> </ul>  |
| <b>OK</b>         | <p>During playback, press the <b>OK</b> button to display a still screen and then press the <b>PLAY</b> button again to resume playback.</p>   |
| ■                 | <p>If you want to exit the PVR Time Shift progress bar and return to the current live broadcast, press the ■ button.</p>   |

## Recording DTV Programme onto a USB Storage Device

Use this function to record the DTV programme you are watching on the main screen and save it for future viewing.

The recording from timer programme or direct recording may have a little bit of delay when it starts to record the broadcast programme.

Please make sure the USB device is inserted. If not, a warning message will pop up.

1. Press the ● button to record the programme that you are currently watching.
2. Press the ● button again, the recording progress bar will disappear.
3. Press the ■ button to stop recording.



Recording will stop automatically when the disk is full.



If you want to turn off your TV during recording, press the ⏻ button on the right bottom panel under the TV frame or on the remote control. A dialogue will display.

The recording is still in Progress. Do you want to switch off the TV?

Yes, Stop recording and switch off the TV.

Yes, turn off the screen and sound, but keep recording.

No

OK: Select

Press the ▲▼ buttons to select your desired option and then press the **OK** button to confirm.

If you select the middle option in the box, the screen will turn off but the recording will still be in progress, the LED indicator will alternatively flash red.



# Timer Programming (DTV Mode)

This function is used to perform scheduled recording.


The recording from timer programme or direct recording may have a little bit of delay when it starts to record the broadcast programme.

Please make sure the USB device is inserted. If not, a warning message will pop up.

1. Press the **GUIDE** button on the remote control. The **EPG** menu will appear.




2. Press the **▲◀▶▼** buttons and then the **●** button to select the desired programme you want to record. The **Scheduled Record** will be display.

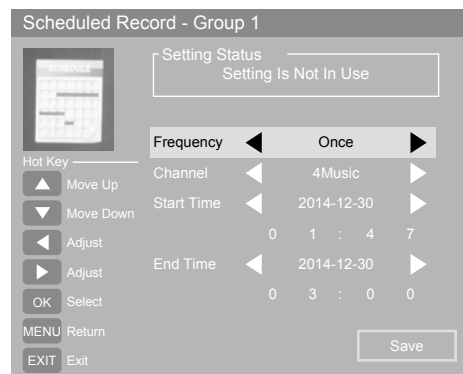


3. Press the **▲▼** buttons to select the **Frequency**. And then press the **◀▶** buttons to select the Off / Once / Daily / Weekly.

4. Press the **▲▼** buttons to select the **Channel**. And then press the **◀▶** buttons to select the channel that you want to record.

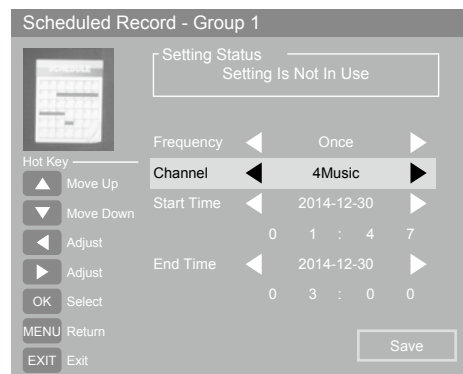

5. Press the **▲▼** buttons to select the **Start Time**. The **Calendar** will be display.


6. Use the **▲◀▶▼** buttons select the Year / Month / Day. And then press the **OK** button to confirm.

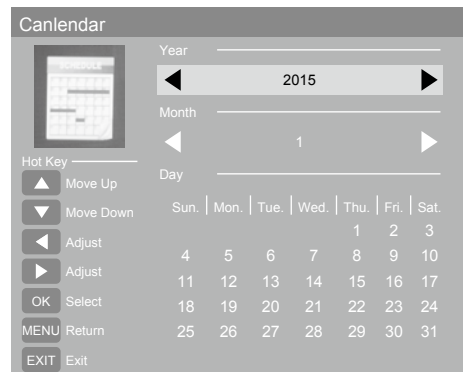


**GB**

PVR (Personal Video Recorder)


7. Press the ▲▼ buttons to select the first digit of hour. Use the 0-9 buttons and the ◀▶ buttons to enter the Hour and Minutes.

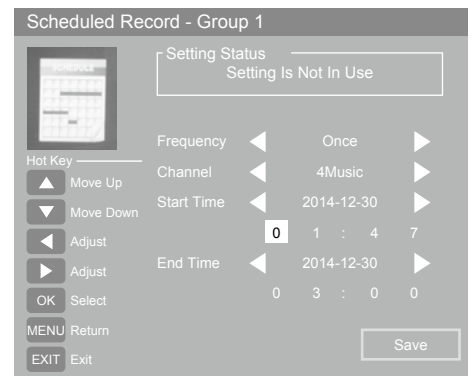

8. Press the ▲▼ buttons to select the **End Time**. The **Calendar** will be display.
9. Use the ▲◀▶▼ buttons select the Year / Month / Day. And then press the **OK** button to confirm.

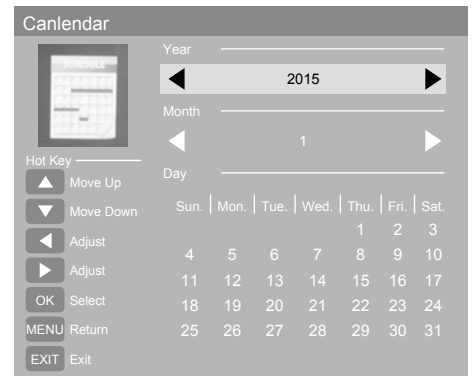

10. Press the ▲▼ buttons to select the first digit of hour. Use the 0-9 buttons and the ◀▶ buttons to enter the Hour and Minutes.

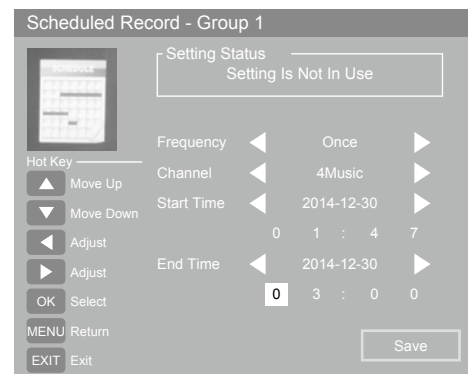

11. After finishing all the recorder adjustments, press the ▲▼ buttons to select **Save** to confirm your settings. A Scheduled Record Setting List will be displayed.




If a programme recording starts when the TV is in standby mode, the LED indicator will flash red and blue.

# Play Recorded Programme

You can play a recorded programme from the File Manager or from a USB Storage Device.


## From File Manager

1. Press the **MENU** button to display the main menu. Press the ◀▶ buttons to select the **Setup** and then press the ▼ button or the **OK** button.
2. Press the ▲▼ buttons to select **PVR Settings** and then press the **OK** button or the ▶ button to enter **PVR Settings** menu.
3. Press the ◀▶ buttons and then the **OK** button to select the **File Manager**. The **File Manager** with **Scheduled Record** will be displayed.
4. Press the ▲▼ buttons to select the recorded programme and then press the **OK** button to view.

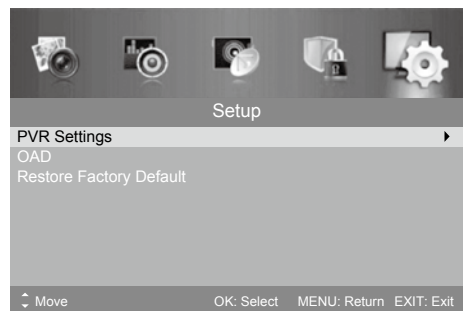

## From a USB Storage Device


1. Press the **INPUT** button on the right bottom panel under the TV frame or the **INPUT** button on the remote control and then press the ▲▼ buttons to select the **USB** mode and then press the **OK** button.
2. Press the ◀▶ buttons to select **MOVIE** and then press the **OK** button.

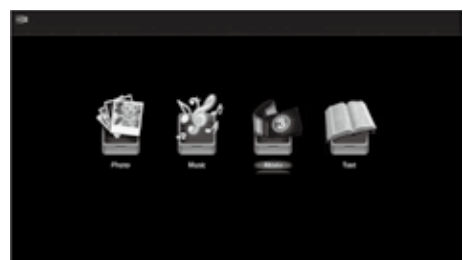

**GB**

PVR (Personal Video Recorder)


3. Press the ▲▼ buttons to select your storage device and then press the **OK** button.
4. Press the ▲▼ buttons to select the "\_MSTPVR" folder and then press the **OK** button.
5. Press the ▲▼ buttons and then the **OK** button to select the record programme to view.
6. Press the **OK** button or the **i** button to display the function bar. Press the ◀▶ buttons and then **OK** button to select the playback function. Press the **BLUE** button to enter the **Quick Menu**. And then press the ▲◀▶▼ buttons to select the functions: Repeat / Encode Type.
7. Press the **EXIT** button to return to the previous menu.

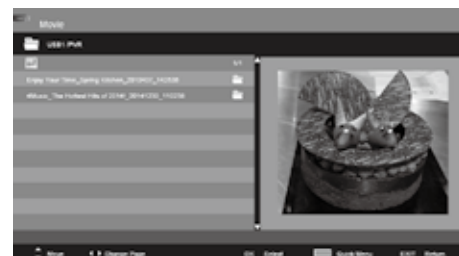


## Maintenance

Careful and regular cleaning can prolong the life of your TV.



Be sure to press the  button on the right bottom panel under the TV frame or on the remote control to turn off the TV. Disconnect the mains cable from the mains socket before any cleaning.

1. Use a soft dry cloth to wipe away the dust from the screen and surfaces.
2. If the surfaces are extremely dirty, clean the TV with a cloth which has been dipped in a slightly soapy water. Wring the cloth until it is almost dry, then use it to wipe the TV.
3. Ensure there is no excess water on the screen. Allow any water or dampness to evaporate before switching the TV on.

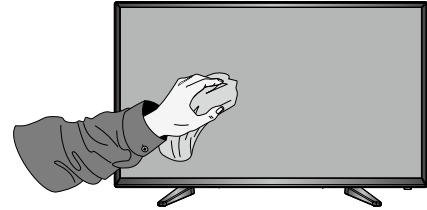

Never use alcohol, benzine, paint-thinner, cleaning fluid or other chemicals. Do not use compressed air to remove dust.

## Hints and Tips

The following table contains various hints and tips to get the best performance from your TV. If you require additional assistance:

- For UK, please call our UK Call Centre on **0344 561 1234**.
- For Ireland, please call our Ireland Call Center on **1 890 818 575**.

| The TV does not operate properly.                        |  |
|--|--|
| <b>The TV does not respond when pressing any buttons</b> | <ul style="list-style-type: none"> <li>• The TV may freeze up during use. Disconnect the mains plug from the mains socket for a few minutes. Reconnect the mains plug and try to operate it again as usual.</li> </ul>   |
| <b>TV cannot be switched on</b>                          | <ul style="list-style-type: none"> <li>• Check that the TV is connected to the mains supply is switched on.</li> <li>• Make sure all connected AV devices are switched off before switching on your TV.</li> </ul>   |
| <b>The remote control does not work</b>                  | <ul style="list-style-type: none"> <li>• Check to see if there are any objects between the TV and the remote control causing an obstruction. Ensure that you are pointing the remote control directly at the TV.</li> <li>• Ensure that the batteries are installed with the correct polarity (+ to +, - to -).</li> <li>• Install new batteries.</li> </ul> |
| <b>Power is suddenly turned off</b>                      | <ul style="list-style-type: none"> <li>• Check the power of the TV. The mains supply maybe interrupted.</li> <li>• Check if the sleep timer is set.</li> <li>• Check whether the Auto Standby is activated.</li> </ul>   |
| <b>Can't view Saorview channels</b>                      | <ul style="list-style-type: none"> <li>• Check that you have selected the correct country when tuning in your TV. For ROI select <b>IRELAND</b>.</li> <li>• You will only receive Saorview channels in ROI, retune your TV making sure to select <b>IRELAND</b> as your country.</li> </ul>  |

| The video function does not work.                   |  |
|---|--|
| <b>No Picture &amp; No Sound</b>                    | <ul style="list-style-type: none"> <li>• Check whether the TV is switched on.</li> <li>• Try another channel. The problem may be caused by the broadcaster.</li> </ul>   |
| <b>Picture appears slowly after switching on</b>    | <ul style="list-style-type: none"> <li>• This is normal, the image is muted during the TV startup process. Please contact your service centre, if the picture has not appeared after five minutes.</li> </ul>                                  |
| <b>No or poor colour or poor picture</b>            | <ul style="list-style-type: none"> <li>• Adjust the settings in the <b>PICTURE</b> menu.</li> <li>• Try another channel. The problem may be caused by the broadcaster.</li> <li>• Check if the video cables are connected properly.</li> </ul> |
| <b>Horizontal / Vertical bar or picture shaking</b> | <ul style="list-style-type: none"> <li>• Check for local interference such as an electrical appliance or power tool.</li> </ul>  |

|   |   |
|---|---|
| <b>Poor reception on some channels</b>  | <ul style="list-style-type: none"> <li>• Station or cable channel may be experiencing problems, tune to another station.</li> <li>• Station signal is weak, reposition the aerial for better reception.</li> <li>• Check for sources of possible interference.</li> </ul> |
| <b>Lines or streaks in pictures</b>     | <ul style="list-style-type: none"> <li>• Check aerial (Change the position of the aerial.)</li> </ul>   |
| <b>No pictures when connecting HDMI</b> | <ul style="list-style-type: none"> <li>• Check if the input source is <b>HDMI1 / HDMI2 / HDMI3</b>.</li> </ul>  |
| <b>Picture appears in wrong ratio</b>   | <ul style="list-style-type: none"> <li>• Adjust the <b>Aspect Ratio</b> settings in the <b>PICTURE</b> menu or press the <b>ASPECT</b> button on the remote control.</li> </ul>   |

#### The audio function does not work.

|   |  |
|---|--|
| <b>Picture OK but no sound</b>            | <ul style="list-style-type: none"> <li>• Press the <b>VOL + / -</b> buttons.</li> <li>• Sound muted? Press the <b>MUTE</b> button.</li> <li>• Try another channel. The problem may be caused by the broadcaster.</li> </ul>  |
| <b>No output from one of the speakers</b> | <ul style="list-style-type: none"> <li>• Adjust the <b>Balance</b> settings in the <b>SOUND</b> menu.</li> </ul>   |
| <b>Unusual sound from inside the TV</b>   | <ul style="list-style-type: none"> <li>• A change in ambient humidity or temperature may result in an unusual noise when the TV is switched on or off and does not indicate a fault with the TV.</li> </ul>  |
| <b>No sound when connecting HDMI</b>      | <ul style="list-style-type: none"> <li>• Check if the input source is <b>HDMI1 / HDMI2 / HDMI3</b>.</li> </ul>   |
| <b>Audio noise</b>                        | <ul style="list-style-type: none"> <li>• Keep the RF coaxial cable away from other connected cables.</li> </ul>  |
| <b>Distorted sound</b>                    | <ul style="list-style-type: none"> <li>• Adjust the <b>SOUND MODE</b> setting in the <b>SOUND</b> menu, depending on the type of program you are watching.</li> <li>• If still have distorted sound, switch off the <b>DTS TruSurround</b> in <b>SOUND</b> menu, then re-adjust the <b>SOUND MODE</b> setting in the <b>SOUND</b> menu.</li> </ul> |

#### Password

|                      |  |
|----------------------|--|
| <b>Lost password</b> | <ul style="list-style-type: none"> <li>• Select the <b>Set Password</b> setting in the <b>LOCK</b> menu, then enter the following master password "9527". The master password clears your previous password and allows you to enter a new password.</li> </ul> |
|----------------------|--|

#### There is a problem in PC mode.

|   |   |
|---|---|
| <b>The signal is out of range (Invalid format)</b>                              | <ul style="list-style-type: none"> <li>• Adjust the resolution, horizontal frequency, or vertical frequency.</li> </ul> |
| <b>Vertical bar or stripe on background &amp; horizontal incorrect position</b> | <ul style="list-style-type: none"> <li>• Use Auto configure or adjust clock, phase, or H/V position.</li> </ul>         |
| <b>Screen colour is unstable or shows a single colour</b>                       | <ul style="list-style-type: none"> <li>• Check the signal cable.</li> <li>• Reinstall the PC video card.</li> </ul>     |

#### Channels are not recording.

|                                |   |
|--------------------------------|---|
| <b>Not all channels record</b> | <ul style="list-style-type: none"> <li>• You can only record free to air channels.</li> <li>• You may have you run out of space on your USB storage device. Delete some files or use another USB storage device.</li> <li>• Check that there were no recording conflicts from scheduled series recordings.</li> </ul> |
|--------------------------------|---|

#### FAQs (Frequently Asked Questions)

|   |   |
|---|---|
| <b>Why have I lost some / all of my channels?</b> | <ul style="list-style-type: none"> <li>• It happens sometimes if you have a weak signal. Usually it just means you'll need to re-scan your digital box or TV. Don't worry, it is easy to do. And once you've done it, you should get all the channels available to you. If problems persist you may need to get your aerial checked. Talk to your retailer or contact your local aerial installer.</li> </ul> |
|---|---|

|   |  |
|---|--|
| <b>Why do I get 'blocking' on my digital picture?</b>               | <ul style="list-style-type: none"> <li>• In most cases, blocking is caused by a reception problem – either the signal is too weak or there is some kind of interference. Talk to your retailer or contact your local aerial installer.</li> <li>• Blocking can also be caused by a digital signal that is too strong. If you are still experiencing blocking and the signal is strong, consult your local aerial installer for advice.</li> </ul>  |
| <b>Can I watch TV using a portable set-top aerial?</b>              | <ul style="list-style-type: none"> <li>• Some, but only a few, homes may be able to use a set top aerial. However, for a much better reception, we strongly recommend that you use a rooftop aerial.</li> <li>• If you do not have access to a rooftop aerial – for example, if you rent a flat and the aerial is the responsibility of your landlord, or if you're using a second TV in the bedroom and don't want the hassle and expense of using extension cables, a set top aerial may be your only option.</li> </ul> |
| <b>What type of aerial do I need?</b>                               | <ul style="list-style-type: none"> <li>• If you are installing a new aerial, we recommend a wideband rooftop aerial rather than a loft aerial. Loft aerials generally receive a weaker digital signal and are more likely to get interference from other electrical devices at home. We suggest you have an aerial survey done before getting an aerial upgrade.</li> <li>• Talk to your retailer or contact your local aerial installer.</li> </ul>   |
| <b>Why the TV haven't received any signal from external device?</b> | <ul style="list-style-type: none"> <li>• Power reset the TV and the connected device.</li> <li>• Ensure that the external device is turned on and properly connected to the correct TV's socket.</li> <li>• Select the correct input source.</li> </ul>  |

## Display Modes

The screen resolution has been optimised during production for the display modes listed below.

Although this TV is compatible with a 1080i/1080p input, it is possible that the screen may not display the exact resolution this resolution and consequently the picture quality will be adjusted accordingly.

### YPbPr Mode

| Resolution         | Vertical Frequency (Hz) | Aspect Ratio                                     |
|--------------------|-------------------------|--|
| 480I: 720 x 480    | 60                      | Auto / 4:3 / 16:9 / Zoom / Subtitle / Smart Zoom |
| 480P: 720 x 480    |                         |  |
| 576I: 720 x 576    | 50                      |  |
| 576P: 720 x 576    |                         |  |
| 720P: 1280 x 720   | 50                      |  |
|                    | 60                      |  |
| 1080I: 1920 x 1080 | 50                      |  |
|                    | 60                      |  |
| 1080P: 1920 x 1080 | 50                      |  |
|                    | 60                      |  |

### PC Mode

Please check the display settings of your computer before connecting to the TV. If the display setting of your computer does not match the TV, there may be no video.

| Resolution | Vertical Frequency (Hz) | Aspect Ratio |
|------------|-------------------------|--------------|
| 640 x 480  | 60                      | 4:3 / 16:9   |
|            | 72                      |              |
|            | 75                      |              |
| 800 x 600  | 60                      |              |
|            | 72                      |              |
|            | 75                      |              |
| 1024 x 768 | 60                      |              |
|            | 70                      |              |
|            | 75                      |              |
| 1360 x 768 | 60                      |              |
| 1366 x 768 | 60                      |              |

### HDMI Mode

| Resolution         | Vertical Frequency (Hz) | Aspect Ratio                                     |
|--------------------|-------------------------|--|
| 480I: 1440 x 480   | 60                      | Auto / 4:3 / 16:9 / Zoom / Subtitle / Smart Zoom |
| 480P: 720 x 480    | 60                      |  |
| 576I: 1440 x 576   | 50                      |  |
| 576P: 720 x 576    | 50                      |  |
| 720P: 1280 x 720   | 50                      |  |
|                    | 60                      |  |
| 1080I: 1920 x 1080 | 50                      |  |
|                    | 60                      |  |
| 1080P: 1920 x 1080 | 24                      |  |
|                    | 50                      |  |
|                    | 60                      |  |

GB

Other Information



## Product Fiche and Specifications

|   |  |
|---|--|
| <b>Brand</b>  | <b>LOGIK</b>                                     |
| <b>Model</b>  | <b>L32HE17</b>                                   |
| <b>Energy Efficiency Class</b>  | A+   |
| <b>Screen Size (measured diagonally)</b>  | Approx. 81 cm (32 inch)                          |
| <b>Power Consumption (In HOME mode)</b>   | 31.2 W   |
| <b>Average Annual Energy Consumption *</b><br>(Please refer to *1 under this table) | 46 kWh   |
| <b>Standby Power Consumption</b>  | 0.50 W   |
| <b>Display Resolution</b>   | 1366 pixels (horizontal) x 768 pixels (vertical) |
| <b>Panel System</b>   | 31.5 inch LED Backlit LCD Panel                  |
| <b>Television System</b>  | PAL I / SECAM L / BG / DK                        |
| <b>Brightness</b>   | 300 cd/m <sup>2</sup>                            |
| <b>Contrast Ratio</b>   | 3000:1   |
| <b>Peak Luminance (On-Mode/Home Mode)</b>   | 75%  |
| <b>Power Source</b>   | 100-240V~50/60Hz                                 |
| <b>Off Power Consumption</b>  | N/A  |
| <b>Operating Temperature</b>  | 0°C – 40°C                                       |
| <b>Operating Humidity</b>   | 10% – 80%  |
| <b>Mercury Content (mg)</b>   | 0.0 mg   |
| <b>Presence of Lead *</b><br>(Please refer to *2 under this table)                  | √  |
| <b>Reference Period</b>   | 2010/1062 – 2017                                 |
| <b>Speaker Power</b>  | 8 W + 8 W  |
| <b>Dimension( W x D x H) with base</b>  | 731 x 201 x 477 mm                               |
| <b>Weight (Net)</b>   | 4.6 kg   |
| <b>Inputs / Output</b>  |  |
| <b>SCART</b>  | 1  |
| <b>HDMI</b>   | 3  |
| <b>PC IN</b>  | 1  |
| <b>PC AUDIO</b>   | 1  |
| <b>YPbPr</b>  | 1  |
| <b>Common Interface</b>   | 1  |
| <b>AV</b>   | 1  |
| <b>Digital Audio Output (Coaxial)</b>   | 1  |
| <b>USB</b>  | 1  |
| <b>Aerial</b>   | 1  |
| <b>Headphone (3.5mm)</b>  | 1  |

Features and specifications are subject to change without prior notice.

\*1 Energy consumption per year based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.


\*2 This television contains lead in certain parts or components where no technology alternatives exist in accordance with existing exemption clauses under the RoHS Directive.

**GB**

Other Information

GB

Other Information

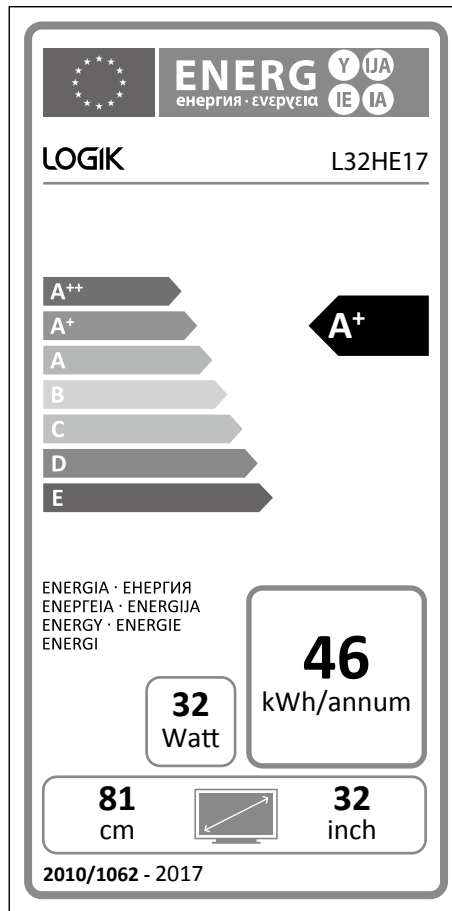

## Useful Information and Licences



### Team Knowhow

Help with all life's kit®

For general information about appliances and handy hints and tips, please visit

[www.TeamKnowhow.com/discover](http://www.TeamKnowhow.com/discover)

or call **0344 561 1234 (UK)** **1890 818 575 (Ireland)**



Visit [Partmaster.co.uk](http://Partmaster.co.uk) today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit [www.partmaster.co.uk](http://www.partmaster.co.uk) or call 0344 800 3456 (UK customers only). Calls charged at National Rate.

TV channels are subject to coverage and may be changed from time to time. Aerial upgrade and/or receiver may be required.



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.



#### Notes for Battery Disposal

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.

#### MPEG-2 NOTICE

Any use of this product in any matter other than personal use that complies with the MPEG-2 standard for encoding video information for packaged media is expressly prohibited without a license under applicable patents in the MPEG-2 Patent Portfolio, which license is available from MPEG LA, LLC, 6312 S. Fiddlers Green Circle, Suite 400E, Greenwood Village, Colorado, 80111 U.S.A.

#### Dolby Audio

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS TruSurround is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

All trademarks are the property of their respective owners and all rights are acknowledged.

GB

Other Information

**For Help and Support Call**  
**UK: 0344 561 1234**  
**Ireland: 1890 818 575**



Hereby, DSG Retail Ltd., declares that this TV (L32HE17) is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://www.teamknowhow.com/>  
Click on **SEARCH** and enter the model number.