


9

SD card and USB device connections

The USB device and SD Card memory connect to the connectors located on the right side panel.

See the diagram below. Note the orientation of the SD Card.

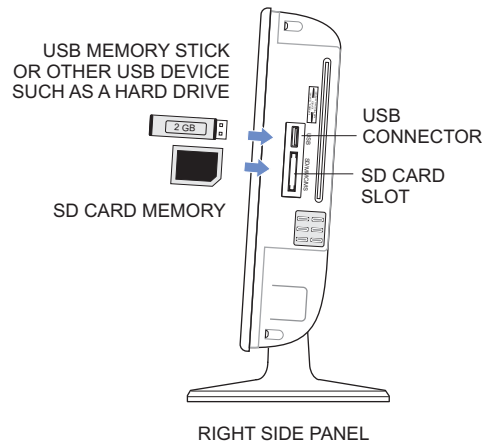

10

Playing files stored on SD card & USB devices

The Media function lets you browse your media devices, USB and SD memory card and play the movies, music and games and display photographs that are stored on the devices.

Press the INPUT button and then the ▲▼ buttons to highlight DVD. Press the OK button.

The system will search the media for compatible files and by default will display a list of Movie files if these are present.




Press the GREEN button to list any music files found, the YELLOW button to list any photo files found, the BLUE button to list any games files found.

To play one of the listed files,

Use the ▲ or ▼ buttons to select the file

Press the OK button to play or display the file.

TV
DTV
AV
S-VIDEO
SCART
HDMI
PC
DVD

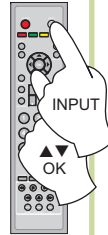

Digital TV

Your DVD/TV Player can receive digital and analogue TV channels and lets you access the free digital channels that are broadcast in the UK. It uses a digital signal, received through your normal aerial. For more information please visit www.digitaluk.co.uk

Freeview

Freeview digital TVs give you more than 40 free channels that you can watch for no subscription. For more information about Freeview, and to check reception in your area visit www.freeview.co.uk



meos.

DVD192B HD TV/DVD Player




Quick Start Guide

Please read the Safety information on page 5 of the User Manual

1

In the box

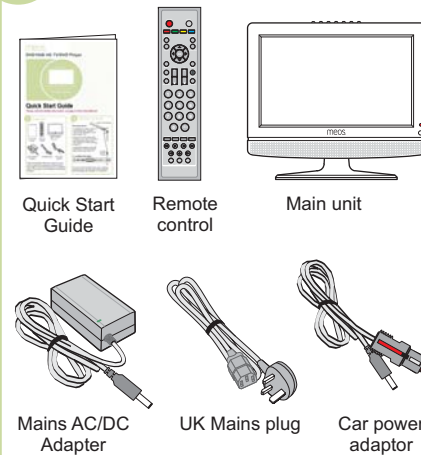

Only the supplied items you require to carry out the setup in this guide are shown above. See page 8 in the User Manual for all supplied items. The remote control batteries will already be fitted.

2

Connect an aerial


Roof-top aerial

A wideband rooftop aerial is recommended. It will be much more reliable for use with digital TVs.

Even in an area with good reception you may find that a set-top aerial will prevent your Digital TV from working properly.

Connect the aerial to the RF connector on the connector strip on the rear of the TV.

TV CONNECTOR PANEL

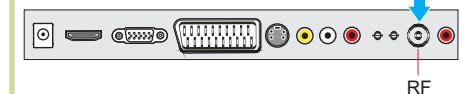

It is recommended that you use a rooftop aerial to carry out the First Time Install for both Analogue and Digital TV channels.

meos.

DVD192B Quick Start Guide


All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, translated or stored in a retrieval system in any form by any means without the written permission of Meos.

Technical details contained in this publication are subject to change without notice. Copyright Meos.

3 Connect power

Your player can be powered from the mains supply via the adapter supplied and from an external 12V d.c. supply.

Connect the preferred power supply to the connector panel on the rear as shown below, either AC mains via the AC/DC Adapter or an external DC supply such as the output available from the cigar lighter in a car for example, or caravan.

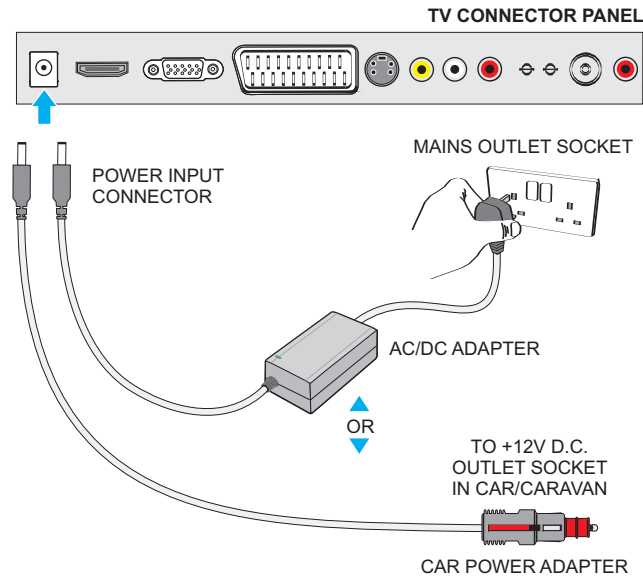

6 Basic TV operation

Analogue TV. Press the INPUT button and then the ▲▼ buttons to highlight TV. Press the OK button.

Digital TV. Press the INPUT button and then the ▲▼ buttons to highlight DTV. Press the OK button.


Changing channels. Press the CH+ or CH- buttons to step up/down the list of stored stations. The selected channel will be displayed. Stop when you reach the required station.

Alternatively enter the channel number on the numeric keys.

Volume. The volume is adjusted using the VOL + and - buttons. Press + to increase and - to decrease the volume.

Mute. To temporarily turn off the sound on your TV, Press the MUTE button. The volume will be turned off and the mute symbol will be displayed on the screen.

To restore the sound when in the MUTE mode, Press the MUTE button again or press the VOL + or - buttons. The sound level will be restored and the mute symbol cleared.

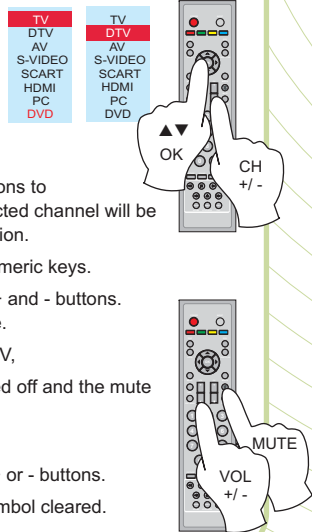

4 First time installation - Analogue


Press the INPUT button to display the list of input sources.

Press the ▲▼ buttons to highlight TV and then press the OK button to set the input source.

Press the MENU button to display the main menu:



Use the ▲▼◀▶ buttons to select the TV Setup button as shown above and then press the OK button to display the first setup page:


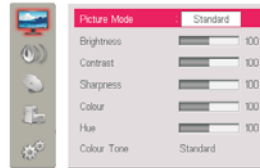


Press the ▼ button to select the TV Settings icon (below left) and then press the ▼ button to select Auto Search.

Press the ▶ button to scan for analogue TV channels.



When scanning has finished, the first TV station stored will be displayed.

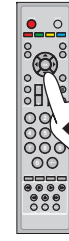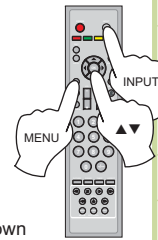


5 First time installation - Digital

Press the INPUT button to display the list of input sources.


Press the ▲▼ buttons to highlight DTV and then press the OK button to set the input source.

The install message box will be displayed.

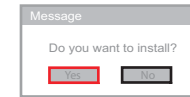





Use the ◀▶ buttons to select Yes and then press the OK button.

The 'Channel Search' window will be displayed and the unit will begin searching for TV and radio channels.

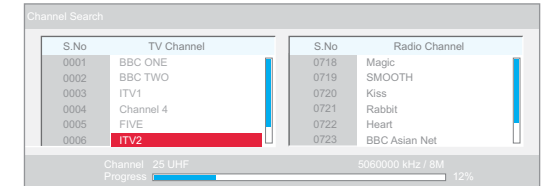

When the search has finished, the installation window will close and the first TV channel will be shown. Information about the channel will appear briefly along the bottom of the screen and the Quick Select window will be displayed.

Press the MENU button to clear this window.

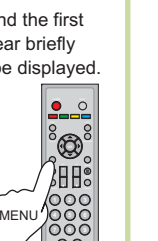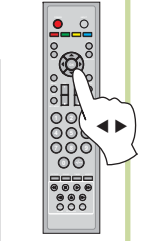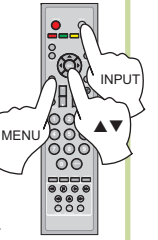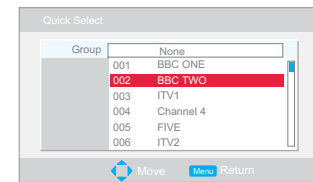

7 Playing a disc

Press the INPUT button and then the ▲▼ buttons to highlight DVD. Press the OK button.

Load disc

Carefully push the disc into the slot until it engages with the drive mechanism and then release the disc.



The disc will then be automatically taken inside and the disk will start to play.

Pause, Play, Stop

Press the Play/Pause button (⏮▶) to pause play; press again to resume play.

Press the Stop button (■) to stop play.

Press Stop again when you want to remove the disc and then press the EJECT button to eject the disc. Carefully remove the disc.

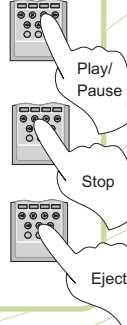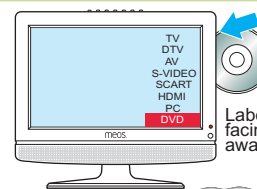

8 Recording from digital TV

This player is equipped with Record Me functionality to let you record Digital TV to a USB device.

Press INPUT and use the ▲▼ buttons to select DTV. Use CH+/- buttons to select the TV channel to record.

Connect the USB device to the player, see panel 9.

Press the MENU button to display the main menu.

Use the ▲▼◀▶ buttons to select REC.SETTINGS and then press the OK button.

The REC NOW button will already be selected.

Press the OK button to start to recording.

Press the REC button when you want to stop recording.

Select Yes in the message box displayed to stop recording and then press OK to confirm.

