




Digital Receiver & Recorder

A52HF

OWNER'S MANUAL

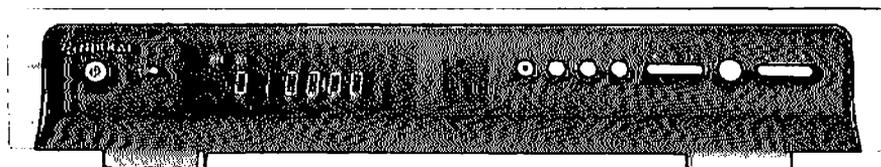

Read this manual before installation and use.

English

SAFETY INFORMATION

This PVR has been manufactured to satisfy international safety standards.
Please read the following recommended safety precautions carefully.

TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



CAUTION: To reduce the risk of fire and electric shock, do not remove the cover (or back) of the unit. Refer servicing only to qualified service personnel.

 The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock

 The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE
CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT AND FULLY INSERT.

The apparatus shall not be exposed to dripping or splashing, and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

Warning

1. Follow these directions to avoid damage of the power cord or plug.
Do not modify or process the power cord or plug arbitrarily.
Do not bend or twist the power cord.
Make sure to disconnect the power cord with the plug held.
Keep heating appliances as far as possible from the power cord in order to prevent the cover vinyl from melting.
2. Follow these directions. Failure to follow one of them may cause electrical shock.
Do not open the main body.
Do not insert metals or inflammable objects inside the product.
Do not touch the power plug with a wet hand.
Disconnect the power cord in case of lightning.
3. Do not use the product when it is out of order. If you continue to use the product when defective, serious damage can be caused to it. Make sure to contact your local product distributor if the product is out of order
4. Please do not insert metal or alien substance into the slot for the module. In doing so can cause damage to the product and reduce its life span
5. Hard Disk Drive
Do not turn the power off suddenly while the hard disk drive is running. The company shall not be liable for any corruption of data on the hard disk drive caused by the carelessness or misuse of users.



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product

MAINS SUPPLY:	AC 220-240V ~50/60Hz
OVERLOADING:	Do not overload wall outlets, extension cords or adapters as this can result in fire or electrical shock.
LOCATION	Place the product indoors to avoid exposing it to lightning, rain or sun. Do not place it near a radiator or heat register. Make sure it has more than 10 cm clearance from any appliances susceptible to electromagnetic influences, such as TV and VCR.
LIQUIDS:	Keep liquids away from the PVR.
CLEANING:	Before cleaning, disconnect the PVR from the wall socket. Use a cloth lightly dampened with water (no solvents) to clean the exterior.
VENTILATION:	Do not block the PVR ventilation holes. Ensure that free airflow is maintained around the PVR. Never store the PVR where it is exposed to direct sunlight or near heating equipment e.g. a radiator. Never stack other electronic equipment on top of the PVR. Place the PVR at least 30mm from the wall.
ATTACHMENTS:	Do not use any attachment that is not recommended by the manufacturer; it may cause a hazard or damage the equipment.
CONNECTION TO THE CABLE TV SIGNAL AND TV:	Connect all components before plugging any power cords into the wall outlet. Always turn off the PVR, TV and other components before you connect or disconnect any cables.
SERVICING:	Do not attempt to service this product yourself. Any attempt to do so will make the warranty invalid. Refer all servicing to a qualified service agent.
LIGHTNING, STORM, or NOT IN USE:	If the PVR is installed in an area subject to intense lightning activity, protection devices for the PVR mains connector and modem telephone line are essential. The individual manufacturer's instruction for safeguarding other equipment, such as TV set, Hi-Fi, etc., connected to the PVR must also be followed during lightning storms. Unplug the product from the wall outlet and disconnect the aerial during a lightning storm or when left unattended and unused for a long period of time.
GROUNDING:	CATV cable MUST BE EARTHED . The grounding system must comply with SABS 061.
REPLACEMENT of PARTS	When the replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorised substitutions may result in additional damage to the unit.

NOTE

Dispose the used batteries at designated place for environment protection.

CONTENTS

SAFETY INFORMATION

INTRODUCTION

About the PVR

Front panel

Rear panel

Remote control

1
2

SYSTEM CONNECTION

Connecting to the TV

Connecting a Hi-Fi system

Connecting a video recorder

3
4
5

GETTING STARTED

Switching on

Auto Scan/Manual Scan/Scan By Nit

Changing channels

4
4
4

OPERATION

Accessing the Electronic Programme Guide (EPG)

Channels List

Recording

Record List

Playback

Booking List

HDD Extraction System

5
6
7
8
8
8

SYSTEM SET-UP

System Setting

Sort Channel

Game

9
9
9

TROUBLESHOOTING

10


SPECIFICATIONS

11


INTRODUCTION


About the PVR

Front panel

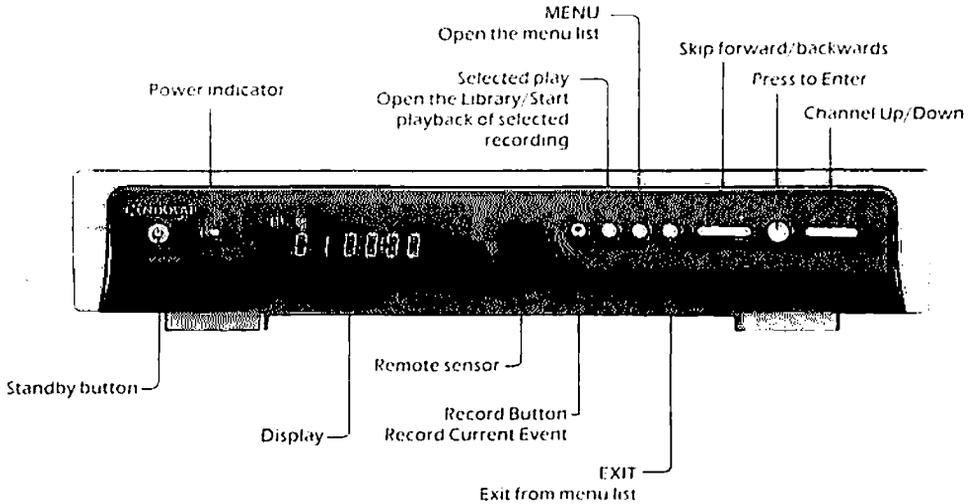

Rear panel

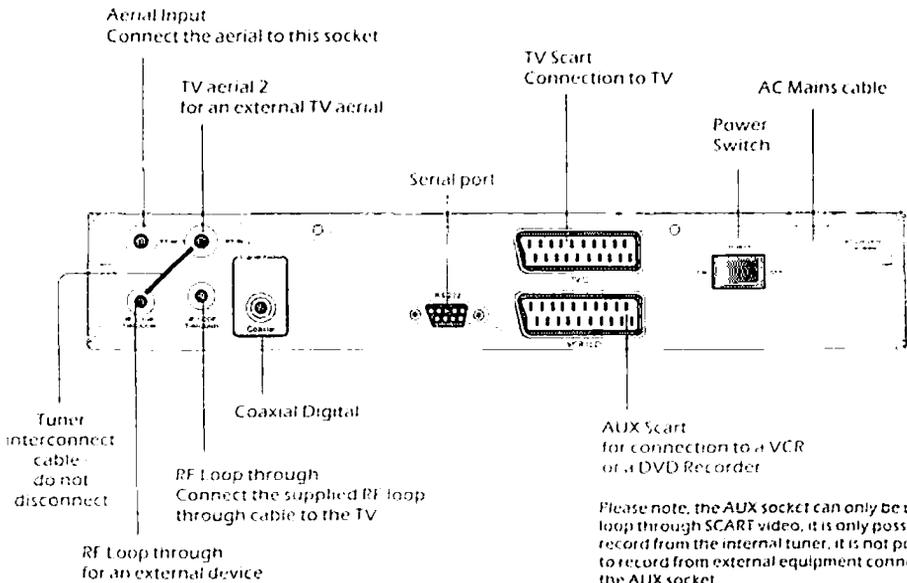

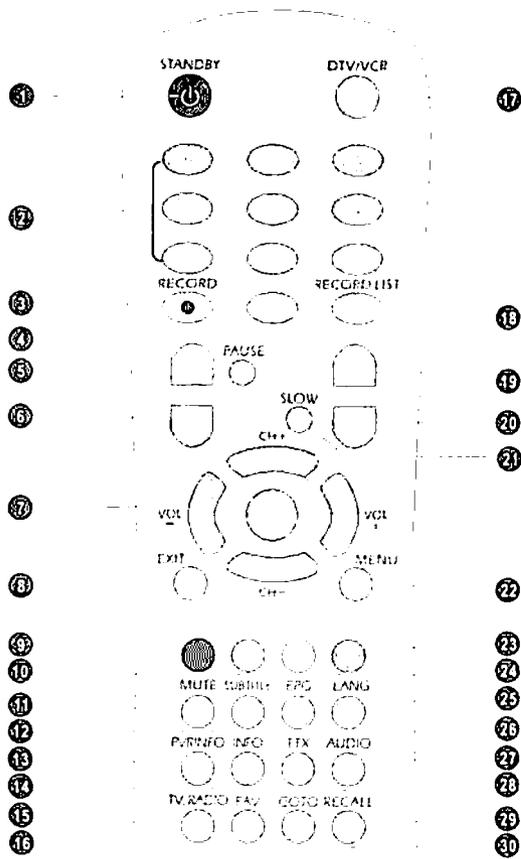


NIKKAII

- 1 STANDBY
(Switch the PVR ON/STANDBY mode)
- 2 Numeric entry
(To select a channel directly by entering its channel number)
- 3 RECORD
- 4 PAUSE (for playback recording)
press once to pause
press again to play frame by frame
- 5 PLAY
(resume playback when paused)


- 6 STOP (for playback recording)
- 7 Cursor / Enter
(to select sub-menu from the main menu and select channel)
(to select sub-menu from the main menu and select volume)
(Press to enter)
- 8 EXIT
(Exit from menu)
- 9 Red Button
(For teletext & recording function)
- 10 Green Button
(For teletext & recording function)
- 11 MUTE
- 12 SUBTITLE
(On/Off subtitle)
- 13 PVRINFO
(In playback recording mode, display current playback information)
- 14 INFO
(To display current channel information)
- 15 TV/RADIO
(Switch between TV and Radio)
- 16 FAV
(Open up Favourite list)
- 17 DTV/VCR
(Switch between TV and external input through AUX scart)
- 18 RECORD LIST
(Open up record list)
- 19 Search forward (for playback recording)
- 20 Search backward (for playback recording)
- 21 Slow (for playback recording)
- 22 MENU
(Open up menu)
- 23 Blue Button
(For teletext & recording function)
- 24 Yellow Button
(For teletext & recording function)
- 25 LANG
(Select language)
- 26 EPG
(Open up Electronic Programme Guide menu)
- 27 AUDIO
(Select audio Left / Right / Stereo / Mono)
- 28 TTX
(Open Teletext function)
- 29 RECALL
(switch to previous channel)
- 30 GOTO
(Press to search favourite scene)

SYSTEM CONNECTION


Connecting to the TV

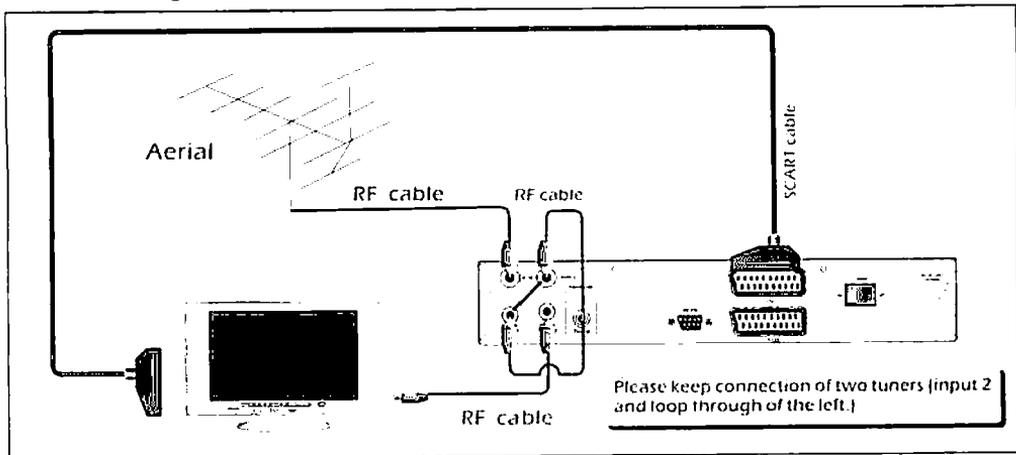

Connecting a Hi-Fi system

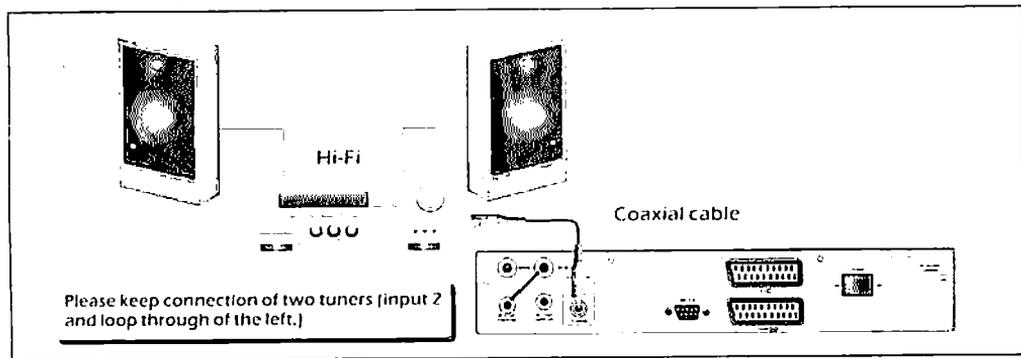

Connecting a video recorder

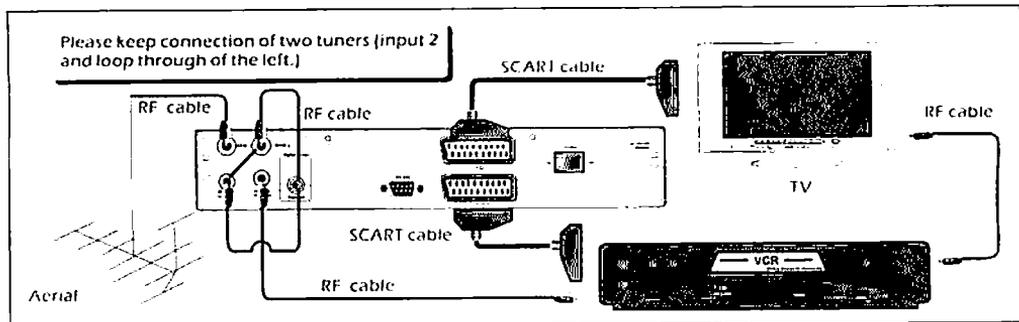

GETTING STARTED

Switching on

- Install a hard drive (HDD) as the instructions on page 8. this PVR does not have a HDD installed and will not function as a recorder until this is done
- Turn on your TV set and select the AV input (with the AV key, or similar, on the TV remote control).
- Turn on the main power supply in the PVR, the indicator on the front of the unit will turn green.
- In standby mode, the indicator light will be red.



NOTE

- The hard disk will take several seconds for startup after power on. So your PVR will start working after about 3 seconds when you turn on the power.

Auto Scan /Manual Scan/Scan By NIT

Use "MENU" button on the remote control enter Setup menu of the PVR and then move "cursor" button to "Channel Setting", press "OK" button twice to setup "Auto Scan /Manual Scan/Scan By NIT".

- 1 Press "UP" or "DOWN" button to move the cursor to the desired item.
- 2 Press "RIGHT" button to select the option of settings.
- 3 Press "UP" or "DOWN" button to select the desired item and press "OK" button to confirm.
- 4 Press numeric button set the Channel No. TPS.
- 5 Select the "Start Search" button to start scan.

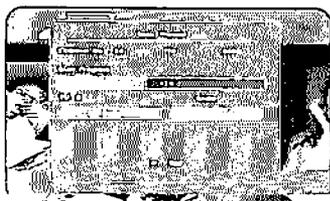
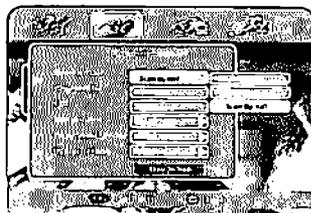


The scanning window will display.
Press "EXIT" button to stop scanning.
Press "MENU" button to return the super menu.

Changing channels

There are four ways of channel selection - stepping through the channel list, selection by number, from the on-screen channel list, and using the electronic programme guide (EPG).

- 1 Stepping through the channel list by pressing "UP" or "DOWN" button
- 2 Selection by numeric button.
- 3 Selection by on-screen channel list which is displayed in setup menu of PVR.
- 4 Selection by EPG.

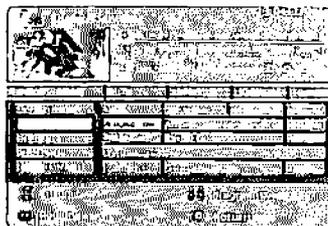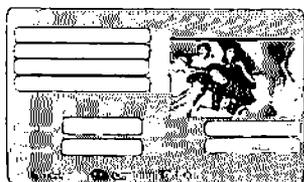


OPERATION

Accessing the Electronic Programme Guide (EPG)

- 1 Press the 'EPG' button on the remote to enter the EPG menu.
- 2 Press 'UP' or 'DOWN' button to select the desired channel.
- 3 Press 'LEFT' or 'RIGHT' button to preview the program event.
- 4 Press 'OK' button to book the service.
- 5 Press 'EXIT' button to quit.

Press 'MENU' button to enter the main window and press 'LEFT' or 'RIGHT' button, select the 'EPG' option, press 'OK' button to confirm, the EPG window will display.


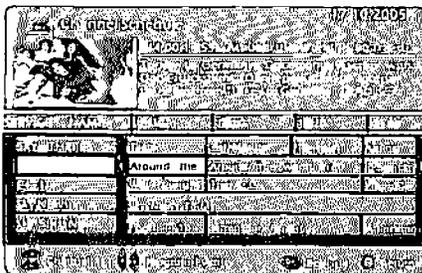


Channel List

Press the 'MENU' then 'RIGHT' button to enter Channel List item, you can Modify/Delete/Lock&Unlock /Move/Favourite channel.


Channel List

- 1 Press 'MENU' button to enter the main menu window, press 'RIGHT' button to choose and confirm the Channel List item.
- 2 Press 'OK' button to select the Channel List.
- 3 Press 'RED' button to switch TV or Radio.
- 4 Press 'EXIT' button to exit.
- 5 Press 'RIGHT' button to enter sub-menu, then add/modify/delete/lock or unlock/move channel.

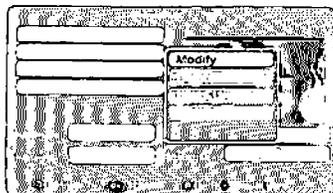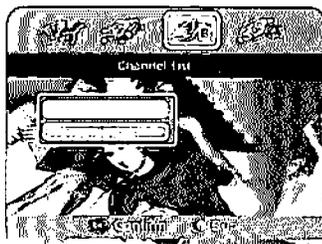

Favourite List

- 1 Enter the Channel Manager window, select 'Favourite List' and press 'OK' button to confirm.
- 2 Press 'RED' button to switch group of favorite.
- 3 Press 'RIGHT' button to add or delete channel, press 'OK' button to confirm.
- 4 Press 'EXIT' button to quit, press 'MENU' to return the last menu.
- 5 Press 'FAV' button to display the favourite window, press 'RED' button to switch groups, press 'UP' or 'DOWN' to select channel, press 'OK' button to confirm.

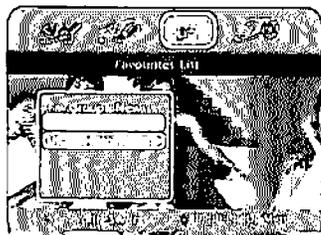


Recording

Recording current service:

Your PVR can record the current service to HDD.

It will always use Reserved channel(Your PVR only support one recording at the same time)
If Reserved channel is already recording, the operation will be unavailable.

1. Select a desired channel and press "OK" button.
2. Press "RECORD" button, PVR will start to record the current service.
3. Press "RECORD" button again, the recording menu will appear.
4. Press "RIGHT" or "LEFT" button to set recording duration.
5. Press "OK" button to confirm duration, press "EXIT" button to cancel.

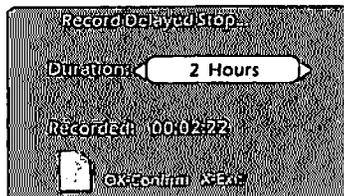


When there is a recording on reserved channel, at any time you can switch to another channel. Please ensure that two sets of RF cables have already been connected.

Timeshift Recording:

Timeshift recording is a temporary recording. If this function is set to enable, when you pause the current programme, you can resume playback from then.

- If PVR is recording, Timeshift recording will not work.
 - When a recording started, Timeshift recording will be stopped. When the recording finishes, Timeshift will start again if Enabled.
1. Press "MENU" button to enter the system setting menu of PVR.
 2. Press "UP" or "DOWN" button to select the PVR Setting.
 3. Press "OK" button to enter the sub-menu.
 4. Press "UP" or "DOWN" button to highlight the settings.
 5. Press "RIGHT" to sub-menu, press "UP" or "DOWN" to select, press "OK" button to confirm.

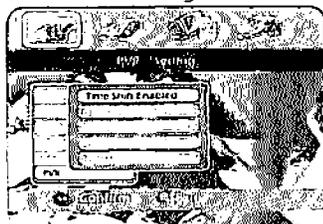


Time Shift Enabled: Activate Time shift

Time Shift Disabled: Deactivate Time shift

Recording from EPG: You can record a service from EPG to HDD.

1. Press the "MENU" button to enter the main menu.
2. Select the "EPG" menu to confirm.
3. Press "OK" button to select and confirm the EPG item.
4. Press "UP" or "DOWN" button to select the desired channel.
5. Press "LEFT" or "RIGHT" button to select the desired TV program.
6. Press "OK" button to enter the Book Service window.
7. Press "UP" or "DOWN" button to select the option of settings, press "RIGHT" button to enter the sub-menu, and press "UP" or "DOWN" button to highlight the setting, press "OK" button to confirm. Then the PVR will record the reserved service automatically (Timer recording).
8. Press "OK" button to confirm the booking, or press "EXIT" to quit.

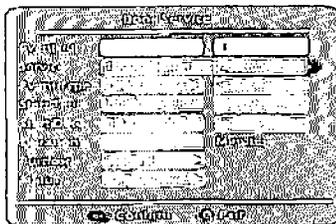

NOTE


If the TV program will be recorded, a red mark will display in the EPG window..

Record List

Your PVR lists all recorded services in the HDD to RECORD List.

The top left corner of Record List shows more detailed information for the highlighted title including time recorded, length in Megabytes, Event Name, estimated playing time, marking (time) of last viewing, remained HDD space and estimated available recording space in time.

- 1 Press "RECORD LIST" button on the remote to enter record list.
- 2 Press "UP" or "DOWN" button to select the desired program.
- 3 Press "OK" or "RED" button to playback.
- 4 Press the "GREEN" button, you can rename the selected program.
- 5 Press "YELLOW" button to delete the selected program.
- 6 Press "BLUE" button to Lock/Unlock the selected program.
- 7 Press the numeric "ZERO" to sort the recorded files.

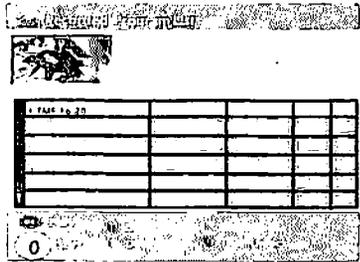


For playback, last stopped mark is always saved when playback is recorded program and it can be continued by pressing the Red button. Press "OK" button to playback from the beginning.

NOTE

- The current recording program can (viewed and reserved channel) not be shown in Record list.
- For "Lock/Unlock" setting, you need to enter Pin code. The default Pin code is "888888".

Playback

- 1 Press "RECORD LIST" button the remote to enter record list.
- 2 Press "UP" or "DOWN" button to select the desired program.
- 3 Press "OK" button to playback the selected program from beginning.
- 4 If you want to continue playback from list stopping time, press the red button

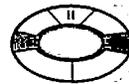

Search Forward / Backward:

SLOW FORWARD

▶▶X2▶▶▶▶X4▶▶▶▶X8▶▶▶▶X16▶▶▶▶ (Playback)

▶▶X2▶▶▶▶X4▶▶▶▶X8▶▶▶▶ (Playback)

◀◀X4◀◀◀◀X8◀◀◀◀X16◀◀◀◀▶▶ (Playback)

GOTO

Use GOTO function to play the recorded program at a desired time

- 1 Press "GOTO" button, the goto menu window appears.
- 2 Use the numeric button to input the desired time and press "OK" button to confirm. Then playback will jump to that time

Booking List

This menu allows users to set a timer for recording or playing some programs automatically. With this timer, you can pre-program up to 15 events.

① Press the 'MENU' button to enter the main menu of the PVR.

② Press the 'LEFT' or 'RIGHT' cursor button to select 'EPG'.

③ Press the 'OK' button to enter the EPG menu.

④ Press the 'DOWN' button to confirm the 'Booking List'.

⑤ Press the 'UP' or 'DOWN' cursor button to highlight your desired item, you can see more detailed information of setting.

⑥ Press 'OK' button to enter the booking service.

⑦ Press 'UP' or 'DOWN' button to select the desired item.

⑧ Press 'LEFT' or 'RIGHT' cursor button to set the selection you want.

⑨ Press 'OK' button to book.

⑩ Press 'EXIT' button to quit.

Event Id: To set up to 15 events by pressing LEFT or RIGHT button.

Service: To select your desired service by pressing OK button.

Event Type: To select Once/Daily/Weekly by pressing LEFT or RIGHT button.



Start Time: To input the start time in HH:MM mode by pressing the numeric buttons.

Start date: To input the start date in MM/DD/YYYY mode by pressing the numeric buttons.

Duration: To input the duration in Minutes mode by pressing the numeric buttons.

Purpose: To select Play/Record mode by pressing LEFT or RIGHT button.


Status:

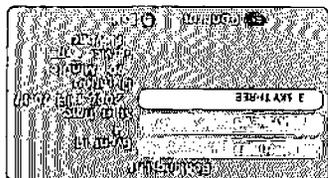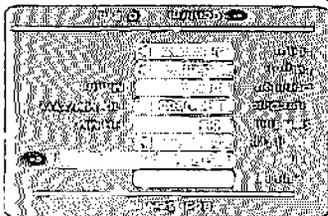

HDD Extraction System

NOTE - Please make sure the PVR unit is disconnected from the power supply before removing the plastic cover for the HDD.

- Remove the plastic cover for the HDD casing, located on the underside of the unit. By moving this in the 'Open' direction once the cover has been removed, you will see the IDE connection for data and the 4pin Molex connection for power.
- Check your Hard Drive and ensure the Jumper Settings are set to 'Master' (these instructions will be printed on the Hard Drive).
- Place the IDE cable into the relevant connection on the Hard Drive, the notch should fit in place, or the red coloured cable on the ribbon will point toward the Molex power connector.
- Place the 4pin Molex connector for power into the relevant connection on the Hard Drive (this is tailored to fit in one way).
- Once the cables are connected, please carefully place the Hard Drive into the plastic casing and slide this back into position (using the 'Close' direction) until you hear a 'click' sound, which means this is in the correct position.
- Connect the PVR to a power supply and power on.

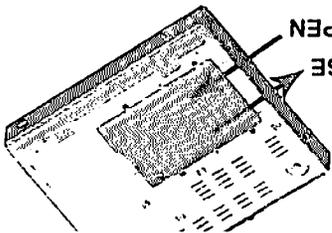


SYSTEM SET-UP

System Setting

Many aspects of your PVR can be set to reflect your circumstances and preference. The System Setting menu screen is accessed from main menu.

- 1 Press 'MENU' button to enter the main menu of the PVR.
- 2 Press 'OK' button to enter the System Setting window.
- 3 Press 'UP' or 'DOWN' button to highlight desired item and press 'OK' button to enter the sub-menu.
- 4 Press 'UP' or 'DOWN' button to select desired option and press 'LEFT' or 'RIGHT' button to select desired option.
- 5 Press 'OK' button to confirm.
- 6 Press 'EXIT' button to quit.

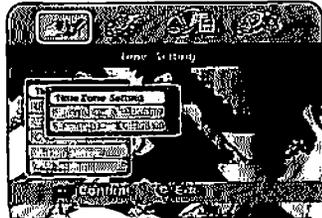

Time Setting

The TimeZone Setting option allows the user to setup the desired Time Zone, Sleep Timer, Banner Time.

Parental Setting

The default Pin Code is '888888'. you can change it by entering the Change Pin Code menu. The parental setting allows the user to setup the Censorship.

Factory Setting

You can view the system information, re-set the PVR back to default settings, clear all channels in this menu, see the platform information of the PVR and LCN Setting.

Language Setting

The Language Setting option allows the user to select the desired language of the Menu ,audio .

A/V Setting


Various A/V modes can be set in this menu, such as TV shape, conversion and TV standard, Video Output, Bright&contrastion and saturation.

PVR Setting

PVR Setting option to set Time Shift function, Time Shift minutes, Minutes Add, Format Hard Disk and display some informations about HDD.

Sort Channel


- 1 Press 'MENU' button to enter the main menu of the PVR.
- 2 Press 'LEFT' or 'RIGHT' button to select the Channel Setting window and press 'OK' to confirm.
- 3 Press 'DOWN' button to highlight the Sort Channel and press 'OK' button to enter the sub-menu.
- 4 Press 'UP' or 'DOWN' button to select desired option and press 'OK' button to select desired option.
- 5 Press 'EXIT' button to quit.

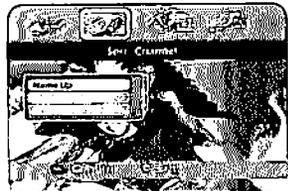

Game

The Game contains the calendar and tetris. The Calendar function allows to find the date forward /backward. The Tetris can be play by the guide.

- 1 Press 'MENU' button to enter the main menu of the PVR, press 'OK' button to enter the Game window.
- 2 Press 'UP' or 'DOWN' button to highlight desired item and press 'OK' button to enter the sub-menu.

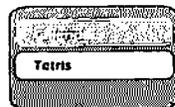

TROUBLESHOOTING

In some area the digital reception may be weak. This will cause you not to receive a complete channel list or have some interference/break-up of the picture. Ensure you use digital rated aerial and consider using a booster

Problem	Possible cause	What to do
Standby light not lit	Mains lead unplugged Mains fuse blown	Check mains lead Check fuse
No signal found	Aerial is disconnected Aerial is damaged/misaligned Out of digital signal area	Check aerial lead Check aerial Check with dealer
No picture or sound	Tuned to digital teletext channel	Reduce to another channel
Scrambled channel message	Channel is scrambled	Select alternative channel
No response to remote control	Receiver off Handset not aimed correctly Front panel obstructed Hand set batteries exhausted	Plug in and turn on plug Aim handset at front panel Check for obstructions Replace handset batteries
Forgotten channel lock code		Re-install channels to cancel channel lock
Forgotten menu lock code		Contact help line
The remote control will not operate your PVR	{1} The batteries in your remote control need replacing {2} There is an obstruction blocking the signal path between the remote control and the box.	{1} Replace the batteries {2} Check that there is nothing in the way of the path between the remote control and the receiver
After moving the PVR to another room you find you are no longer able to receive digital reception	The aerial feed former new point may come through a distribution system which may reduce the digital signal now received by the box.	Try a direct feed from the antenna
Recording fail(There is a recording, but can't find the file in Recording list	Check if the two sets tuner are connected by the RF cable.	Connect two sets tuner use RF cable.
After pausing, you can't watch TV program from stopped position.	{1} Timeshift recording disabled {2} Your PVR is recording.	{1} Set timeshift recording to enable {2} If you want to watch TV program from stopped position, please cancel the current any recording before pausing.

SPECIFICATIONS

<p><u>TUNER & CHANNEL</u></p>	<ul style="list-style-type: none"> • RF INPUT CONNECTOR x2 (IEC-TYPE, IEC 169-2, FEMALE) • RF OUTPUT CONNECTOR x2 (IEC-TYPE, IEC 169-2, MALE (LOOPTHROUGH)) • FREQUENCY RANGE: 174MHz ~ 230MHz (VHF) & 470MHz ~ 860MHz (UHF) • SIGNAL LEVEL: -20 ~ -78 dBm
<p><u>DECODER</u></p> <ul style="list-style-type: none"> • TRANSPORT STREAM • PROFILE LEVEL • INPUT RATE • VIDEO FORMATS • Audio Format • VIDEO OUTPUT 	<p>MPEG-2 ISO/IEC 13818</p> <p>MPEG-2 MAIN PROFILE @MAIN LEVEL</p> <p>MAX. 15Mbit/s</p> <p>4:3/16:9 SWITCHABLE</p> <p>MPEG Layer I & II, 32 / 44.1 / 48KHz</p> <p>CVBS, RGB(default)</p>
<p><u>CONNECTION</u></p> <ul style="list-style-type: none"> • MAIN POWER CABLE • TUNER • OUTPUT • DATA PORT 	<p>FIXED TYPE</p> <p>ANTENNA INPUTx2, RF Loop through x2</p> <p>SCART(TV) x1, SCART(VCR) x1, COAXIAL x1</p> <p>RS-232 x1</p>
<p><u>POWER SUPPLY</u></p> <ul style="list-style-type: none"> • INPUT VOLTAGE • POWER CONSUMPTION 	<p>AC 220-240V -50/60Hz</p> <p>MAX. 20W/STANDBY 9W</p>

NOTE

- Design and Specifications are subject to change without notice.