DVD VIDEO PLAYER

DVP5100

User manual

Thank you for choosing Philips.

Need help fast?

Read your User's Manual first for quick tips that make using your Philips product more enjoyable. If you have read your instructions and still need assistance, you may access our online help at **www.philips.com/support**





01-39 DVP5100_EU_05

1

17/03/05, 1:33 **A1 39 246 15641**

CAUTION

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

VAROITUS

Muiden kuin tässä esitettyjen toimintojen säädön tai asetusten muutto saattaa altistaa vaaralliselle säteilylle tai muille vaarallisille toiminnoille.

DK

Advarsel: Usynlig laserstråling ved åbning når sikkerhedsafbrydere er ude af funktion. Undgå utsættelse for stråling.

Bemærk: Netafbryderen er sekundært indkoblet og ofbryder ikke strømmen fra nettet. Den indbyggede netdel er derfor tilsluttet til lysnettet så længe netstikket sidder i stikkontakten.

S

Klass 1 laseraparat Varning! Om apparaten används på annat sätt än i denna bruksanvisning specificerats, kan användaren utsättas för osynlig laserstrålning, som överskrider gränsen för laserklass 1.

Observera! Stömbrytaren är sekundärt kopplad och bryter inte strömmen från nätet. Den inbyggda nätdelen är därför ansluten till elnätet så länge stickproppen sitter i vägguttaget.

Luokan 1 laserlaite

SF

Varoitus! Laitteen käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle. Oikeus muutoksiin varataan. Laite ei saa olla alttiina tippu-ja roiskevedelle.

Huom. Toiminnanvalitsin on kytketty toisiopuolelle, eikä se kytke laitetta irti sähköverkosta. Sisäänrakennettu verkko-osa on kytkettynä sähköverkkoon aina silloin, kun pistoke on pistorasiassa.

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.

Due to the inconsistency of disc formats provided by various disc manufacturers, your DVD system may require a playability enhancement or upgrade. As DVD technology advances, these enhancements will become common and will be easy to complete. **Go to www.philips.com/support for software upgrade.**

3

'CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 525 OR 625 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE 'STANDARD DEFINITION' OUTPUT. IF THERE ARE QUESTIONS REGARDING OUR TV SET COMPATIBILITY WITH THIS MODEL 525p AND 625p DVD PLAYER, PLEASE CONTACT OUR CUSTOMER SERVICE CENTER.'

17/03/05, 1:33 31 39 246 15641

General Information

Environmental Information

All unnecessary packaging has been omitted. The packaging has been made easy to separate into two materials: cardboard (box, buffer) and polyethylene (bags, protective foam sheet).

Your DVD player consists of materials which can be recycled and reused if disassembled by a specialised company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories.

DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc and are used under license.



Windows Media is a trademark of **Microsoft Coporation.**

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

For Customer Use:

Read carefully the information located at the rear of your DVD VIDEO player and enter below the Serial No. Retain this information for future reference.

Model No. DVP 5100 Serial No.

Laser safety

This unit employs a laser. Due to possible eye injury, only a qualified service person should remove the cover or attempt to service this device.

NOTE: **PICTURES SHOWN MAYBE DIFFERENT BETWEEN** COUNTRIES.

CAUTION (WARNING LOCATION: ON THE **BACKPLATE OF THE SET)**

NEVER MAKE OR CHANGE CONNECTIONS WITH THE POWER SWITCHED ON.

Important Note:

Due to the numerous versions of new CD-Audio copy protection or enhanced CD-Audio protection recently available on certain discs, Philips is unable to guarantee that this DVD Player is fully compatible with such new discs. Should you have difficulty playing any such CD-Audio discs, kindly refer them to your CD-Audio disc retailer.



This compact DVD player is in conformity with the EMC directive and low-voltage directive.

LASER	
Туре	Semiconductor laser
	GaAlAs
Wave length	650 nm (DVD)
	780 nm (VCD/CD)
Output Power	7 mW (DVD)
	10 mW (VCD/CD)
Beam divergence	60 degree

CAUTION VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM. **ADVARSEL** SYNLIG OG USYNLIG LASERSTRÅLING VED ÅBNING UNDGÅ UDSÆTTELSE FOR STRÅLING VARNING SYNLIG OCH OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD BETRAKTA EJ STRÅLEN VARO! AVATTAESSA OLET ALTTIINA NÄKYVÄLLE JA NÄKYMÄTTÖMÄLLE LASER SÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN VORSICHT GEFAHR VON SICHTBARER UND UNSICHTBARER LASERSTRAHLUNG BEI GEÖFFNETEM GEHÄUSE. **ATTENTION** RAYONNEMENT LASER VISIBLE ET INVISIBLE EN CAS D'OUVERTURE EXPOSITION DANGEREUSE AU FAISCEAU

01-39 DVP5100_EU_05

5

17/03/05, 1:33 AN 39 246 15641

Contents

Introduction

Supplied accessories	8
Care and safety information	8

Connections

Connecting TV
Optional : Connecting to an Audio System .
Functional Overview

Front and Rear Panels	
Remote Control	

Getting Started

Step 1: Inserting batteries into the
Remote Control
Using the Remote Control to operate the
Player 15
Step 2: Setting up the TV 15-17
Setting up Progressive Scan feature (for
Progressive Scan TV only) 16
To deactivate Progressive manually
Selecting the colour system that
corresponds to your TV 17
Step 3: Setting language preference
Setting the OSD Language
Setting the Audio, Subtitle and Disc menu
language

6

Disc Operations Region Codes 19 Playing discs 19 Basic playback controls 20 Selecting various repeat/shuffle functions 20 Repeat play mode 20 Repeating a section within a chapter/track . Operations for video playback21 Zooming in 21 Resuming playback from the last stopped Slow motion 21 Using the OSD menu 21 Special DVD features 22 Special VCD & SVCD Features 22-23 Playback Control (PBC) 22 Playing DivX disc23 Playing MP3/Windows Media™ Audio/ MPEG-4/JPEG/Kodak Picture CD24 Selecting a folder and track/file 24 Special picture disc features25 Zoom picture 25 Playing MP3/Windows Media[™] Audio music and JPEG picture simultaneously 25

01-39 DVP5100_EU_05

Contents

 
DVD Menu Options
General Setup menu
Locking/Unlocking the disc for viewing 26
Dimming system's display screen
Programming disc tracks
OSD Language
Screen Saver - turning on/off
Sleep
DivXVOD registration code
Audio Setup Menu
Analogue output
Digital Audio Setup
Sound Mode
CD Upsampling
Night Mode - turning on/off
Video Setup Menu
ТV Туре
Setting the TV Display
Progressive - turning on/off
Picture Setting 31-32
Switching the YUV/RGB
Preference Page
Audio, Subtitle, Disc Menu
Restricting playback by Parental Control
PBC
MP3/JPEG Menu - turning on/off
Changing the Password
Setting the DivX Subtitle
Restoring to original settings
Troubleshooting
Specifications
Glossary 39
Language Code

17/03/05, 1:33 A139 246 15641

Introduction

Supplied accessories

Remote Control and two AA batteries



Care and safety information

Power consumption

When the system is switched to
 Standby mode, it is still consuming power.
 To disconnect the system from the power supply completely, remove the AC power plug from the wall jack.

• Avoid high temperatures, moisture, water and dust

 Do not expose the player, batteries or discs to humidity, rain, sand or excessive heat (caused by heating equipment or direct sunlight.)

Avoid condensation problem The lens may cloud over when the player is suddenly moved from cold to

warm surroundings, making it impossible to play a disc. Leave the player in the warm environment until the moisture evaporates.

8

Do not block the vents

 Do not operate the DVD Player in an enclosed cabinet, allow about 10 cm (4 inch) of free space all around the player for adequate ventilation.

	10 cm (4 inches)	
10 cm (4 inches)	PHILIPS	10 cm (4 inches)

• Care of the cabinet

 Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

• Finding a suitable location

Place the player on a flat, hard, and stable surface.

Disc handling

To clean a CD, wipe it in a straight line from the center towards the edge using a soft, lint-free cloth. A cleaning agent may damage the disc!
 Write only on the printed




side of a CDR(W) and only with a soft felttipped pen.

- Handle the disc by its edge, do not touch the surface.

01-39 DVP5100_EU_05

2

Connecting TV

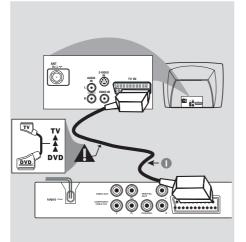

IMPORTANT!

- You only need to make <u>one</u> video connection from the following options, depending on the capabilities of your TV system.

- Connect the DVD system directly to the TV.

- A SCART connection will let you use features both Audio and Video on the DVD Player.

Using SCART jack

 Use the SCART cable (black) to connect the DVD Player's SCART jack (TV OUT) to the corresponding Scart input jacks on the TV (cable not supplied).

Helpful Hint:

- Ensure that the "TV" indication on SCART cable is connected to the TV set and "DVD" indication on SCART cable is connected to the DVD Player.

9

Using Composite Video jacks (CVBS)

G

DIGITAL


0000


0 ->

Ю

00

- Use the composite video cable (yellow) to connect the DVD Player's CVBS (VIDEO) jack to the video input jack (or labeled as A/V In,Video In, Composite or Baseband) on the TV (cable not supplied).
- To hear the sound of this DVD Player through your TV, use the audio cables (white/red) to connect AUDIO OUT (L/ R) jacks of the DVD Player to the corresponding AUDIO IN jacks on the TV (cable not supplied).

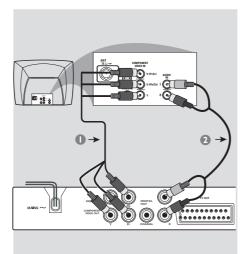

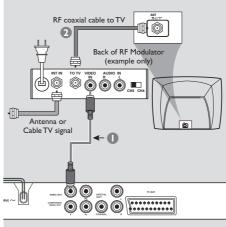

IMPORTANT!

- The progressive scan video quality is only possible when using Y Pb Pr and a progressive scan TV is required.

Using Component Video jacks (Y Pb Pr)

- Use the component video cables (red/blue/green) to connect the DVD system's
 Y Pb Pr jacks to the corresponding
 Component video input jacks (or labeled as Y Pb Pr) on the TV (cable not supplied).
- To hear the sound of this DVD Player through your TV, use the audio cables (white/red) to connect AUDIO OUT (L/ R) jacks of the DVD Player to the corresponding AUDIO IN jacks on the TV (cable not supplied).
- Proceed to page 16 for detailed Progressive Scan set up.

IMPORTANT!


- If your TV only has a single Antenna In jack (or labeled as 75 ohm or RF In,) you will need an RF modulator in order to view the DVD playback on the TV. See your electronics retailer or contact Philips for details on RF modulator availability and operations.

Using an accessory RF modulator

- Use the composite video cable (yellow) to connect the DVD Player's CVBS jack to the video input jack on the RF modulator.
- Use the RF coaxial cable (not supplied) to connect the RF modulator to your TV's RF jack.

01-39 DVP5100_EU_05

Connecting the power cord

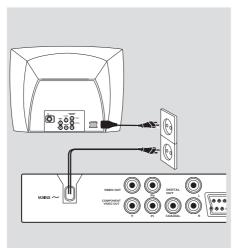

After everything is connected properly, plug in the AC power cord to the power outlet.

Never make or change any connections with the power switched on.

When no disc is loaded, press STANDBY ON on the DVD Player front panel, "EUEET" may appear on the display


panel.



11

01-39 DVP5100_EU_05


Optional: Connecting to an Audio System

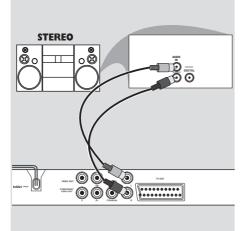

Stereo system has Dolby Pro Logic or Right / Left Audio In jack

- Select one of the video connections (CVBS VIDEO IN, SCART or COMPONENT VIDEO IN) depending on the options available on your TV.
- Use the audio cables (white/red) to connect AUDIO OUT (L/R) jacks of the DVD Player to the corresponding AUDIO IN jacks on the stereo system (cable not supplied).

Optional: Connecting Digital AV Receiver

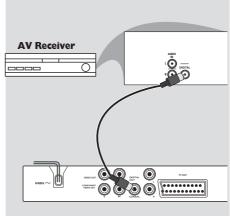

Receiver has a PCM, Dolby Digital, or MPEG2 decoder

- Select one of the video connections (CVBS VIDEO IN, SCART or COMPONENT VIDEO IN) depending on the options available on your TV.
- Connect the COAXIAL jack of the DVD Player to the corresponding Digital Audio In jack on your Receiver (cable not supplied).
- Set the DVD Player's Digital Output to PCM-ONLY or ALL depending on the capabilities of your Receiver (see page 28 "Digital Output").


Helpful Hint:

 If the audio format of the Digital Output does not match the capabilities of your receiver, the receiver will produce a strong, distorted sound or no sound at all.


01-39 DVP5100_EU_05

12

Functional Overview

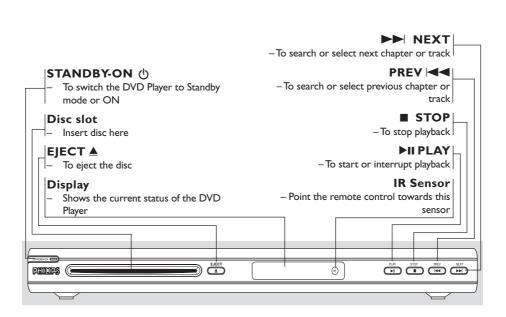

Front and Rear Panels

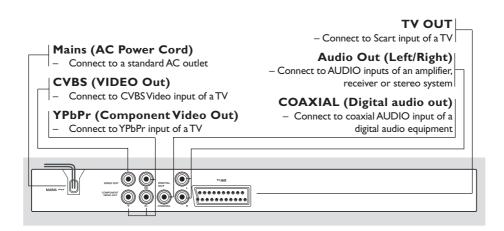


Caution: Do not touch the inner pins of the jacks on the rear panel. Electrostatic discharge may cause permanent damage to the unit.

13

Functional Overview

Remote Control

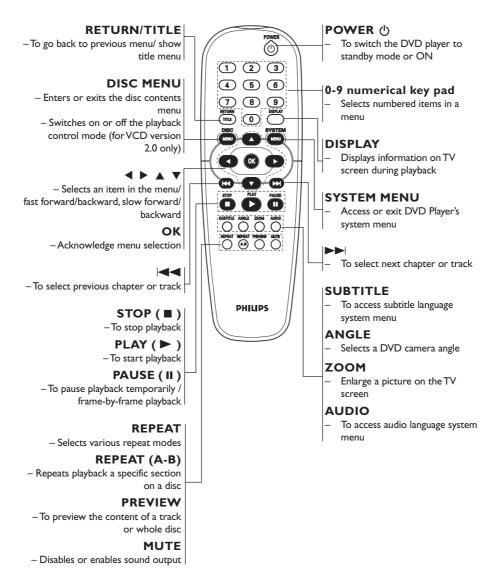


Helpful Hint: Press "STOP" for few seconds to eject the disc.

14

01-39 DVP5100_EU_05

14

 Step 1: Inserting batteries into the Remote Control



- Open the battery compartment.
- Insert two batteries type R06 or AA, following the indications (+ -) inside the compartment.
- Close the cover.

Using the Remote Control to operate the Player

Aim the Remote Control directly at the remote sensor (IR) on the front panel.

Do not put any objects between the Remote Control and the DVD Player while operating the DVD Player.



CAUTION!

Remove batteries if they are exhausted or if the Remote Control is not being used for a long time.
Do not use old and new or different types of batteries in combination.

- Batteries contain chemical substances, so they should be disposed properly.

Getting Started

Step 2: Setting up the TV

IMPORTANT!

Make sure you have completed all the necessary connections. (See pages 9-10 "Connecting TV").

- Turn on the TV and set to the correct video-in channel. You should see the Philips DVD background screen on the TV.
- Usually these channels are between the lowest and highest channels and may be called FRONT, A/V IN, or VIDEO. See your TV manual for more details.

→ Or, you may go to channel 1 on your TV, then press the Channel down button repeatedly until you see the Video In channel.

→ Or, the TV Remote Control may have a button or switch that chooses different video modes.

 \rightarrow Or, set the TV to channel 3 or 4 if you are using an RF modulator.

If you are using external equipment, (eg. audio system or receiver), turn it on and select the appropriate input source for the DVD Player output. Refer to the equipment owner's manual for detail.

17/03/05, 1:34 B 39 246 15641

Getting Started

Setting up Progressive Scan feature (for Progressive Scan TV only)

The progressive scan display twice the number of frames per seconds than interlaced scanning (ordinary normal TV system). With nearly double the number of lines, progressive scan offers higher picture resolution and quality.

IMPORTANT!

Before enabling the progressive scan feature, you must ensure:

- 1) Your TV can accept progressive signals, a progressive scan TV is required.
- 2) You have connected the DVD player to your TV using Y Pb Pr (see page 10.)
- Turn on your TV.
- Turn off your TV progressive scan mode or turn on interlaced mode (refer to your TV user manual.)
- Press POWER on the remote control to turn on the DVD player.
- Gelect the correct Video Input channel. (See page 15).
 → The DVD background screen appears on the TV.
- Press SYSTEM MENU.
- Press > repeatedly to select {VIDEO SETUP PAGE}.



Select {PROGRESSIVE} to {ON}, then OK to confirm.

→ The instruction menu appears on the TV.



There will be a distorted picture on your TV at this state until you turn on the progressive scan mode on your TV.

 Turn on your TV progressive scan mode (refer to your TV user manual.)
 The below menu appears on the TV.



Press ◀ to highlight □○K in the menu and press OK to confirm.
 → The set up is complete now and you can start enjoy the high quality picture.

T	1	F	2

To return to the previous menu, press **4**. To remove the menu, press **SYSTEM MENU**.

16

01-39 DVP5100_EU_05

16

Getting Started

• Press \blacktriangle \checkmark to highlight one of the options

PAL – Select this if the connected TV is

PAL system. It will change the video signal

of a NTSC disc and output in PAL format.

NTSC – Select this if the connected TV

is NTSC system. It will change the video signal of a PAL disc (VCD only) and

<u>Multi</u> – Select this if the connected TV is compatible with both NTSC and PAL

(multi-system). The output format will be

in accordance with the video signal of the

Before changing the current TV
 Standard setting, ensure that your TV

supports the 'selected TV Type' system. – If there is no proper picture on

your TV, wait for 15 seconds for auto

ENSURE THAT YOUR TV SUPPORTS NTSC STANDARD. IF THERE IS A DISTORTED PICTURE DISPLAYED ON THE TV, WAIT 15 SECONDS FOR AUTO RECOVER.

M AGAIN TO USE NEW TV

CANCEL

CANCEL

output in NTSC format.

5 Select an item and press **OK**.

CHANGING PAL TO NTSC:

ок

ок

Helpful Hints:

recovery.

helow.

disc.

To deactivate Progressive manually

- When the distorted sign still appears on the TV, it may be due to the connected TV does not accept progressive signals, and progressive is set by mistake. You must reset the unit to interlace format.
- **Turn off** your TV progressive scan mode or turn on to interlaced mode (refer to your TV user manual.)
- Press and hold EJECT on the DVD player.
- When the disc is ejected, press and hold EJECT again, and numeric keypad '1' on the remote control at the same time for few seconds.

 \rightarrow The DVD blue background screen will appear on the TV.

Selecting the colour system that corresponds to your TV

This DVD Player is compatible with both NTSC and PAL. In order for a DVD disc to play on this Player, the colour system of the Disc, the TV and the DVD Player should match.

💥 📢		F
Video Setup F	Page	
TV Type TV Display Progressive Picture Setting Component	PAL Multi NTS(
NTSC TV		

Press SYSTEM MENU.

- Press ► repeatedly to select {VIDEO SETUP PAGE}.
- Press ▲ ▼ to highlight {TV TYPE}, then press ▶.

TIPS:	To return to the previous menu, press 4 . To remove the menu, press SYSTEM MENU .
	•

17

01-39 DVP5100_EU_05

17

Getting Started

Step 3: Setting language preference

You can select your preferred language settings. This DVD Player will automatically switch to the language for you whenever you load a disc.

Setting the OSD Language

The On-screen language for the system menu will remain as you set it, regardless of various disc languages.



Press SYSTEM MENU.

- Press ► to select {GENERAL SETUP PAGE}.
- Press ▲ ▼ to highlight {OSD LANGUAGE}, then press ▶.
- Press ▲ ▼ to select a language and press OK.

Setting the Audio, Subtitle and Disc menu language

You can choose your own preferred language or soundtrack from audio, subtitles and disc menu languages. If the language selected is not available on the disc, the disc's default language will be used instead.



- Press STOP twice then, press SYSTEM MENU.
- Press ► repeatedly to select {PREFERENCE PAGE}.
- Press ▲ ▼ to highlight one of the options below at a time, then press ►.
 - 'Audio' (disc's soundtrack)
 - 'Subtitle' (disc's subtitles)
 - 'Disc Menu' (disc's menu)
- Press ▲ ▼ to select a language and press OK.

If the language you want is not in the list, then select {OTHERS}, then use the numeric keypad (0-9) on the remote to enter the 4-digit language code 'XXXX' (see page 244 "Language Code") and press **OK**.

S Repeat steps 3~4 for other language settings.

TIPS:

To return to the previous menu, press ◀. To remove the menu, press **SYSTEM MENU**.

18

01-39 DVP5100_EU_05

IMPORTANT!

- If the inhibit icon (ø) appears on the TV screen when a button is pressed, it means the function is not available on the current disc or at the current time.

- Depending on the DVD or VIDEO CD, some operations may be different or restricted.

- Do not push on the disc tray or put any objects other than disc on the disc tray. Doing so may cause the disc player malfunction.

Playable Discs

Your DVD Player will play:

- Digital Video Discs (DVDs)
- Video CDs (VCDs)
- Super Video CDs (SVCDs)
- Digital Video Discs +
- Recordable[Rewritable] (DVD+R[W]) - Compact Discs (CDs)
- MP3/Windows Media[™] Audio discs,
- picture (Kodak, JPEG) files on CD-R(W). - JPEG/ISO 9660 format
- JPEG/ISO 9660 format – Maximum 30 characters display.
- Supported sampling frequencies :
- 32 kHz, 44.1 kHz, 48 kHz (MPEG-1) 16 kHz, 22.05 kHz, 24 kHz (MPEG-2)
- Supported Bit-rates : 32~256 kbps (MPEG-1), 8~160 kbps (MPEG-2) variable bitrates
- MPEG-4 disc on CD-R(W):
 - Simple profile
- Advanced simple profile (640-480)
 DivX disc on CD-R[W]/DVD+R[W]:
 - DivX 3.11, 4.x and 5.x
 - Q-pel accurate motion compensation
 Clobal Mation Companyation (CMC)
 - Global Motion Compensation (GMC) playback



Disc Operations

Region Codes

DVD discs must be labeled for ALL regions or Region 2 in order to play on this Player. You cannot play Discs that are labeled for other regions.



Helpful Hints:

 It may not be possible to play CD-R/RW or DVD-R/RW in all cases due to the type of disc or condition of the recording.

 If you are having trouble playing a certain disc, remove the disc and try a different one. Improper formatted disc will not play on this DVD Player.

Playing discs

- Connect the power cords of the DVD Player and TV (and any optional stereo or AV receiver) to a power outlet.
- Iurn on the TV power and set to the correct Video In channel. (See page 15 "Setting up the TV").
- Press STANDBY-ON on the DVD Player front panel.
 You should see the Philips DVD
- background screen on the TV.
 Insert a disc in the disc tray.
 → Make sure the label side is facing up. For double-sided discs, load the side you want to play facing up.
- S Playback will start automatically. If not press PLAY ►.
 → If a disc menu appears on the TV, see page 21 "Using the Disc Menu".
 → If the disc is locked by parental control, you must enter your six-digit password. (See page 34).
- O Press EJECT ▲ to eject the disc.

TIPS: The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

01-39 DVP5100_EU_05

Disc Operations

Basic playback controls

Unless otherwise stated, all operations described are based on Remote Control use.

Pausing playback

- During playback, press PAUSE II.
 → Playback will pause and sound will be muted.
- To resume normal playback, press PLAY .

Selecting track/chapter

Press | < / > >> | or use the numeric keypad (0-9) to key in a track/chapter number.

→ If repeat mode is active, pressing will replay the same track/chapter.

Searching backward/forward

 Press and hold < / ▶, then press PLAY
 ▶ to resume normal playback.
 ⇒ While searching, pressing < / ▶ repeatedly again will decrease/increase the search speed.

Stopping playback

Press .

Selecting various repeat/shuffle functions

Repeat play mode

 While playing a disc, press REPEAT continuously to choose a 'Play Mode'.

CHAPTER (DVD)

 to repeat playback of the current chapter.

<u>TRACK/TITLE</u> (CD/SVCD/VCD/DVD) – to repeat playback of the current track (CD/SVCD/VCD)/title (DVD).

<u>ALL</u>

 to repeat playback of all the disc and all the programmed tracks.

SHUFFLE

- to repeat playback at random order.

 OFF
- to cancel the repeat mode.

Helpful Hint:

 For VCD, repeat playback is not possible if the PBC mode is switched on.

Repeating a section within a chapter/track

- While playing a disc, press REPEAT A-B at your chosen starting point.
- Press REPEAT A-B again at your chosen end point.
 The section A and B can be set only within the same chapter/track.
 The section will now repeat continuously.
- To exit the sequence, press REPEAT A-B.

TIPS: The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

01-39 DVP5100_EU_05

20

17/03/05, 1:35 A1 39 246 15641

Operations for video playback (DVD/VCD/SVCD)

Using the Disc Menu

Depending on the disc, a menu may appear on the TV screen once you load in the disc.

To select a playback feature or item

 Use < ▶ ▲ ▼ keys or numeric keypad (0-9) on the remote, then press OK to start playback.

To access or remove the menu

Press DISC MENU on the remote.

Zooming in

This function allows you to enlarge the picture on the TV screen and to pan through the enlarged picture.

 During playback, press ZOOM repeatedly to display the picture with different scales.
 → Use ◄ ► ▲ ▼ keys to pan through the

enlarged picture. → Playback will continue.

Press ZOOM repeatedly to return to the original size.

Resuming playback from the last stopped point

Resume playback of the last 5 discs is possible, even if the disc was ejected or the power switched off.

- Load one of the last 5 discs.
 → "LORD" appears.
- Press PLAY > and the disc will be played back from the last point.

To cancel resume mode

In stop mode, press STOP ■ again.

Disc Operations

Slow Motion

- Press ▲ ▼ during playback to select the required speed: 1/2, 1/4, 1/8 or 1/16 (backward or forward).
 → Sound will be muted.
- 2 To return to normal speed, press PLAY ►.

Helpful Hint:

Slow backward is not possible on VCDs.

Using the OSD menu

OSD menu shows the disc playback information (for example, title or chapter number, elapsed playing time, audio/ subtitle language), a number of operations can be done without interrupting disc playback.

During playback, press DISPLAY.

 \rightarrow A list of available disc information appears on the TV screen.



Disc Tin Track Ti Repeat	me	0:48:53 0:48:53 Off			$\overline{}$
Bitrate	71		Total Elapsed	0:01:32	

- Press ▲ ▼ to view the information and press OK to access.
- 3 Press ► or OK to select an option.
- Use the numeric keypad (0-9) to input the number/time or press ▲ ▼ to make the selection, then press OK to confirm.
 → Playback will change to the chosen time or to the selected title/chapter/track.

TIPS: The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

Disc Operations

Special DVD Features

Playing a Title

- Press DISC MENU. \rightarrow The disc menu appears on the TV screen.
- O Use ▲ ▼ ◀ ► keys or numeric keypad (0-9) to select a play option.
- Press OK key to confirm.

Camera Angle

Press ANGLE repeatedly to select different desired angle.

Changing the Audio Language

For DVD

Press AUDIO repeatedly to select different audio languages.

Changing the Audio Channel For VCD

Press AUDIO to select the available audio channels provided by the disc (MONO LEFT, MONO RIGHT, MIX-MONO, STEREO).

Subtitles

Press SUBTITLE repeatedly to select different subtitle languages.

Special VCD & SVCD Features

Playback Control (PBC)

For VCD with Playback Control (PBC) feature (version 2.0 only)

- Press DISC MENU to toggle between 'PBC ON' and 'PBC OFF'. → If you select 'PBC ON', the disc menu (if available) will appear on the TV. \rightarrow Use the $| \blacktriangleleft \triangleleft /
 ightarrow
 ightarrow |$ or the numeric keypad (0-9) to select a play option.
- During playback, pressing **RETURN**/ TITLE will return to the menu screen (if PBC is on).

If you want to skip the index menu and playback directly from the beginning,

Press DISC MENU key on the remote control to switch to PBC off.

TIPS:

The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

Preview Function (DVD/VCD)

The preview function allows you to reduce the picture of 6 tracks enough to display in a full screen.

• Press **PREVIEW**.

→ The preview menu appears on the TV screen.

Select Digest Type: Title Digest Chapter Digest Title Interval Chapter Interval	Select Digest Type: Track Digest Disc Interval Track Interval
Chapter Interval (DVD example)	(Video CD example)

(DVD example)

Press ▲ ▼ to select the PREVIEW type, then press OK.

→ The picture of each segment will appear on the screen.

А	В	С
D	Е	F

(example for 6 thumbnail pictures display)

- 3 Press $\blacktriangle \lor \blacklozenge \lor$ to select a track and input your selected track number using the numeric keypad (0-9), then press OK. → Playback will start automatically on the selected track.
- For CDDA (Musical CD) → Press **PREVIEW** to listen to the first 10 seconds of each sound track in the disc.

Disc Operations

Playing a DivX disc

This DVD player supports the DivX movie playback that you download from your computer onto a CD-R/RW (see page 27 for more information).

- Load a DivX disc. → Playback will start automatically. If not press **PLAY** .
- If the DivX movie contains external subtitles, the subtitle menu will appear on the TV screen for your selection.
- In this case, pressing SUBTITLE on the remote control will turn on or off the subtitle.
- If multilingual subtitles are embedded on the DivX disc, pressing SUBTITLE will change the subtitle language during playback.

Helpful Hints:

Subtitle files with the following filename extensions (.srt, .smi, .sub, .ssa, .ass) are supported but do not appear on the file navigation menu.

The subtitle filename have to be the _ same as the filename of the movie.

TIPS:

The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

23

01-39 DVP5100_EU_05

Disc Operations

Playing MP3/Windows Media™ Audio/MPEG-4/JPEG/Kodak Picture CD

IMPORTANT!

You have to turn on your TV and set to the correct Video In channel. (See page 15 "Setting up the TV").

General Operation

Load a disc.

→ The disc reading time may exceed 30 seconds due to the complexity of the directory/file configuration.

→ The data disc menu appears on the TV screen.

Playback will start automatically. If not press PLAY .

01:42 04:40 • 001/020	
Coco Lee	
 MP3 Coco - Before MP3 Coco - Ilove MP3 Coco - Jazz	Before ALBUM 2002

Selecting a folder and track/file

- Press ▲ ▼ to select the folder and press
 OK to open the folder.
- Press ▲ ▼ to select a track/file.
- Press | | | | | to go to previous/next page.
- Press OK to confirm.
 Playback will start from the selected file to the end of the folder.

During playback, you can;

- Press | < / >> | to select another track/ file in the current folder.
- Press REPEAT continuously to access different 'Play Mode'.

→ FOLDER: files will be played back once.
→ REPEAT ONE: one file being played repeatedly.

 → REPEAT FOLDER: all files in one folder being played repeatedly.
 → SHUFFLE: all files in the current folder being played at random order.
 → SINGLE: play the selected file once, then return to the menu.

• Press II to pause playback.

Helpful Hints:

 It may not be possible to play certain MP3/Windows Media[™] Audio/JPEG/DivX/ MPEG-4 disc due to the configuration and characteristics of the disc or condition of the recording.

 It is normal to experience an occasional "skip" while listening to your MP3/Windows Media™ Audiodisc.

 It is normal to experience an occasional pixelation during MPEG-4/DivX playback due to poor clarity of digital contents during internet downloading.

- For multi-session discs with different formats, only the first session will be available.

TIPS: The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

Special picture disc features

IMPORTANT!

You have to turn on your TV and set to the correct Video In channel. (See page 15 "Setting the TV").

 Load a Picture disc (Kodak Picture CD, JPEG).

→ For Kodak disc, the slide show will begin.

→ For JPEG disc, the picture menu appears on the TV screen. Press **PLAY** ► to start the slide-show playback.

Preview Function (JPEG)

This function shows the content of the current folder or the whole disc.

Press PREVIEW during playback.
 12 thumbnail pictures will appear on the TV screen.

		S.
200	- Har	

- Press | < / >> to display the other pictures on the previous/next page.
- Use ◀►▲ ▼ to highlight one of the picture and press OK to start playback.
- Press DISC MENU to return to Picture CD menu.

Disc Operations

Zoom picture

- During playback, press ZOOM repeatedly to display the picture with different scales.
- Use ◀►▲ ▼ keys to view the zoomed picture.

Playback with multi-angles

- During playback, press ▲ ▼ ◀ ► to rotate the picture on the TV screen.
 - ▲: flip the picture vertically
 - \mathbf{v} : flip the picture horizontally
 - I rotate the picture anti-clockwise
 - rotate the picture clockwise

Scan Effect

 Press ANGLE repeatedly to choose different scan effect.
 > Various scan effect appears on the top left hand corner on the TV screen.

Playing MP3/Windows Media™ Audio music and JPEG picture simultaneously

- Load a disc that contains music and picture.
 → The disc menu appears on the TV screen.
- Select an MP3/Windows Media[™] Audio track.
- 3 During MP3/Windows Media[™] Audio music playback, select a picture from the TV screen and press PLAY ▶.
 → The picture files will be played back one after another until end of the folder.
- ④ To quit simultaneous playback, press ■.

Helpful Hint:

 Some files on Kodak or JPEG disc may be distorted during playback due to the configuration and characteristics of the disc.

TIPS:

The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

This DVD Player setup is carried out via the TV, enabling you to customise the DVD Player to suit your particular requirements.

General Setup menu

- In disc mode, press SYSTEM MENU.
- Press ◀► to select 'General Setup' icon.
- Press OK to confirm.



Locking/Unlocking the disc for viewing

Not all discs are rated or coded by the disc maker. You can prevent a specific disc from playing by locking the disc. Up to 40 discs can be locked.

In 'GENERAL SETUP PAGE', press ▲ ▼ to highlight {DISC LOCK}, then press ▶.

LOCK

Select this to block the playback of the current disc. Subsequent access to a locked disc requires six-digit password. The default password is '136 900' (see page 34 "Changing the password").

UNLOCK

Select this to unlock the disc and allow future playback.

2 Press $\blacktriangle \blacksquare$ to select a setting, then press OK to confirm your selection.

Dimming player's display panel

You can select different levels of brightness for the display screen.

- 0 In 'GENERAL SETUP PAGE', press ▲ ▼ to highlight {DISPLAY DIM}, then press ▶.
 - 100% Select this for full brightness.
 - 70% Select this for medium brightness.
 - 40% Select this for dimming the display.
- 2 Press ▲ ▼ to select a setting, then press **OK** to confirm your selection.

Programming disc tracks (not for Picture CD/MP3/Windows Media™ Audio/DivX)

You can play the contents of the disc in the order you want by programming the tracks to be played. Up to 20 tracks can be stored.

In 'GENERAL SETUP PAGE', press A V to highlight {PROGRAM}, then press to select {INPUT MENU}.

2 Press OK to confirm.

Programme : Track (01 - 17)			
1 04		6	
2 10		7	
3 11		8	
4		9	
5		10	
	Ewit	STADT	NEVTO

To input your favourite tracks/chapter

- Use the numeric keypad (0-9) to enter a valid track/chapter number.
- the next position. \rightarrow If the track number is more than ten, press $\rightarrow \rightarrow$ to open the next page and proceed with programming or, \rightarrow Use $\blacktriangleleft \blacktriangleright \blacktriangle$ keys to highlight {NEXT} on the programme menu, then press OK.
- 5 Repeat steps 3~4 to input another track/chapter number.

To return to the previous menu, press TIPS: To remove the menu, press **SYSTEM MENU**.

26

01-39 DVP5100_EU_05

26

If you want to remove a track

- O Use ◀►▲ ▼ keys to move the cursor to the track you want to remove.
- Press OK to remove this track from the programme menu.

To start programme playback

8 Use ◀►▲▼ keys to highlight {START} on the programme menu, then press OK. → Playback will start with the selected tracks under the programmed sequence.

To exit programme playback

② Use $\blacktriangleleft ▶ ▲ ▼$ keys to highlight {EXIT} on the programme menu, then press OK.

OSD Language

This menu contains various language options for display language on the screen. For details, see page 18.

Screen Saver - turning on/off

The screen saver will help to prevent your TV display device from becoming damaged.

In 'GENERAL SETUP PAGE', press ▲ ▼ to highlight {SCREEN SAVER}, then press ▶.

ON

Select this if you wish to turn off the TV screen when disc playback is stopped or paused for more than 5 minutes.

OFF

Select this to disable the screen saver function

2 Press $\blacktriangle \mathbf{\nabla}$ to select a setting, then press **OK** to confirm your selection.

Sleep

Sleep function allows you to turn off the DVD Player automatically after a preset time.

In 'GENERAL SETUP PAGE', press ▲ ▼ to highlight {SLEEP}, then press ▶.

15 Mins

Turn off the DVD Player after 15 minutes. 30 Mins

Turn off the DVD Player after 30 minutes. 45 Mins

Turn off the DVD Player after 45 minutes. 60 Mins

Turn off the DVD Player after 60 minutes. OFF

Turn off the sleep function.

2 Press \blacktriangle \triangledown to select a setting, then press **OK** to confirm your selection.

DivX(R) VOD registration code

Philips provide you the DivX®VOD (Video On Demand) registration code that allows you to rent and purchase videos using the DivX[®]VOD service. For more information, visit us at www.divx.com/vod.

In 'GENERAL SETUP PAGE', press ▲ ▼ to highlight {DIVX(R) VOD CODE}, then press .

The registration code will appear.

- Press OK to exit.
- 3 Use the registration code to purchase or rent the videos from DivX[®]VOD service at www.divx.com/vod. Follow the instructions and download the video onto a CD-R for playback on this DVD player.

Helpful Hints:

All the downloaded videos from DivX® VOD can only be played back on this DVD þlayer.

Time search feature is not available during DivX movie playback.

TIPS:

To return to the previous menu, press To remove the menu, press SYSTEM MENU.

27

17/03/05, 1:36 A139 246 15641

Audio Setup Menu

- In disc mode, press SYSTEM MENU.
- 2 Press ◀► to select 'Audio Setup' icon.
- Press **OK** to confirm.



Analog Output

This options allows you to set the stereo analog output of your DVD Player.

In 'AUDIO SETUP PAGE', press ▲ ▼ to highlight {ANALOG OUTPUT}, then press ▶.

Stereo

Select this option when output delivers sound from only the two front speakers.

LT/RT

Select this option if your DVD Player is connected to a Dolby Pro Logic decoder.

V SURR

Allows the DVD player to use virtual surround sound effects.

Press ▲ ▼ to select a setting, then press OK to confirm your selection.

Digital Audio Setup

The options included in Digital Audio Setup are: 'Digital Output' and 'LPCM Output'.

- In 'AUDIO SETUP PAGE', press ▲ ▼ to highlight {DIGITAL AUDIO SETUP}, then press ▶.
- 2 Press the \blacktriangle \blacktriangledown keys to highlight an option.
- 3 Enter its submenu by pressing ▶.
- ④ Press ▲ ▼ to select a setting, then press OK to confirm your selection.

Digital Output

Set the Digital output according to your optional audio equipment connection. → Off: Turn off the digital output.

→ All: If you have connected your

DIGITAL AUDIO OUT to a multi-channel decoder/receiver.

→ <u>PCM Only</u>: Only if your receiver is not capable of decoding multi-channel audio.

Helpful Hints:

 If DIGITAL OUTPUT is set to 'All', all audio settings except MUTE are invalid.

LPCM Output

If you connect the DVD Player to a PCM compatible receiver via the digital terminals, such as coaxial or optical etc, you may need to adjust 'LPCM Output'. Discs are recorded at a certain sampling rate. The higher the sampling rate, the better the sound quality.

→ 48kHz: Playback a disc recorded at the sampling rate of 48kHz.

→ 96kHz: Playback a disc recorded at the sampling rate of 96kHz that can only be achieved in Stereo-Classic (Flat) mode.

Helpful Hint:

- LPCM Output can be selected only when PCM Only is activated.

TIPS:

To return to the previous menu, press **4**. To remove the menu, press **SYSTEM MENU**.

01-39 DVP5100_EU_05

Sound Mode

The options included in Sound Mode Setup are: '3D', 'Movie Mode' and 'Music Mode'.

- In 'AUDIO SETUP PAGE', press ▲ ▼ to highlight {SOUND MODE}, then press ►.
- Press the ▲ ▼ keys to highlight an option.
- Inter its submenu by pressing .
- Press ▲ ▼ to select a setting, then press OK to confirm your selection.

3D

This function provides a virtual surround sound experience using just two speakers. → Off, Living Room, Hall, Arena and Church

Movie Mode

Select a Sound Mode that matches the type of music you are playing. These preset Sound Modes adjust the frequency bands of the video to enhance your favourite movie sound track.

→ Off, Sci-Fic, Action, Drama and Concert

Music Mode

Select a Sound Mode that matches the type of music you are playing. These preset Sound Modes adjust the frequency bands of the audio to enhance your favourite music.

→ Off, Digital, Rock, Classic and Jazz

CD Upsampling

This feature allows you to convert your music CD to a higher sampling rate using sophisticated digital signal processing for better sound quality. If you have activated the upsampling, the player will automatically switch to stereo mode.

In 'AUDIO SETUP PAGE', press ▲ ▼ to highlight {CD UPSAMPLING}, then press ►.
OFF

Select this to disable CD-upsampling.

88.2 kHz (X2)

Select this to convert the sampling rate of the CDs twice higher than the original.

176.4 kHz (X4)

Select this to convert the sampling rate of the CDs four times higher than the original.

Press ▲ ▼ to select a setting, then press OK to confirm your selection.

Helpful Hint:

 CD upsampling feature is only applicable to stereo output setting.

Night Mode - turning on/off

In this mode, the high volume outputs are softened and low volume outputs are brought upward to an audible level. It is useful for watching your favourite action movie without disturbing others at night.

In 'AUDIO SETUP PAGE', press ▲ ▼ to highlight {NIGHT MODE}, then press ►.

<u>ON</u>

Select this to level out the volume. This feature is only available for movies with Dolby Digital mode.

<u>OFF</u>

Select this when you want to enjoy the surround sound with its full dynamic range.

Press ▲ ▼ to select a setting, then press OK to confirm your selection.

TIPS:

To return to the previous menu, press ◀. To remove the menu, press **SYSTEM MENU**.

29

29

Video Setup Menu

- In disc mode, press SYSTEM MENU.
- Press ◀► to select 'Video Setup' icon.
- Press **OK** to confirm.

* =>			Ēř
Video Setup F	Page		
TV Type TV Display Progressive Picture Setting Component			
Go To Video Setup	Page	_	

TV Type

This menu contains the options for selecting the colour system that matches the connected TV. For details, see page 17.

Setting the TV Display

Set the aspect ratio of the DVD Player according to the TV you have connected. The format you select must be available on the disc. If it is not, the setting for TV display will not affect the picture during playback.

- In 'VIDEO SETUP PAGE', press ▲ ▼ to highlight {TV DISPLAY}, then press ►.
- Press ▲ ▼ to highlight one of the options below:

4:3 PAN SCAN -

Select this if you have a normal TV and want both sides of the



picture to be trimmed or formatted to fit your TV screen.

4:3 LETTER BOX -

Select this if you have a normal TV. In this case, a wide picture with black



bands on the upper and lower portions of the TV screen will be displayed.

16:9 – Select this if you have a wide-screen TV.



3 Select an item and press OK.

TIPS:

To return to the previous menu, press **4**. To remove the menu, press **SYSTEM MENU**.

01-39 DVP5100_EU_05

30

17/03/05, 1:36 A1 39 246 15641

Progressive - turning on/off

In the progressive scan mode, you can enjoy the high quality picture with less flickers. It only works when you have connected the DVD player's Y Pb Pr jacks to your TV that supports the progressive video input. Otherwise, the a distorted picture will appear on the TV. For proper progressive scan set up, see page 16.

In 'VIDEO SETUP PAGE', press ▲ ▼ to highlight {PROGRESSIVE}, then press ►.

<u>OFF</u>

To disable Progressive Scan function.

<u>ON</u>

To enable Progressive Scan function.

 Press ▲ ▼ to select a setting, then press
 OK to confirm your selection.
 → Follow the instructions shown on the TV to confirm the selection (if any).
 → If a distorted picture appears on the TV screen, wait for 15 seconds for auto recovery.

Picture Setting

This DVD Player provides three predefined sets of picture colour settings and one personal setting which you can define yourself.

 In 'VIDEO SETUP PAGE', press ▲ ▼ to highlight {PICTURE SETTING}, then press
 .

STANDARD

Select this for standard picture setting.

BRIGHT

Select this will make the TV picture brighter.

<u>SOFT</u>

Select this will make the TV picture softer.

PERSONAL

Select this to personalise your picture colour by adjusting the brightness, contrast, tint and colour (saturation).

Press ▲ ▼ to select a setting, then press OK to confirm your selection.

TIPS:

01-39 DVP5100_EU_05

To return to the previous menu, press ◀. To remove the menu, press **SYSTEM MENU**.

31

31

If you select {PERSONAL}, then proceed to steps

→ The 'PERSONAL PICTURE SETUP' menu appears.



Press ▲ ▼ to highlight one of the following options.

BRIGHTNESS

Increase the value will brighten the picture or vice versa. Choose zero (0) for average setting.

CONTRAST

Increase the value will sharpen the picture or vice versa. Choose zero (0) to balance the contrast.

<u>TINT</u>

Increase the value will darken the picture or vice versa. Choose zero (0) for average setting.

COLOUR

Increase the value will enhance the colour in your picture or vice versa. Choose zero (0) to balance the colour.

- S Press < ► to adjust the setting that best suit your personal preference.</p>
- 6 Repeat steps 4~5 for adjusting other colour features.
- Press OK to confirm.

Switching the YUV/RGB

This setting allows you to toggle the output of the video signal between RGB (on scart) and Y Pb Pr (YUV).

In 'VIDEO SETUP PAGE', press ▲ ▼ to highlight {COMPONENT}, then press ▶.

<u>YUV</u>

Select this for Y Pb Pr connection.

<u>RGB</u>

Select this for Scart connection.

Press ▲ ▼ to select a setting, then press OK to confirm your selection.

Warning:

When the player is set to Y Pb Pr (YUV), some TV may not properly synchronise with player on the SCART connector.

TIPS:

To return to the previous menu, press ◀. To remove the menu, press **SYSTEM MENU**.

01-39 DVP5100_EU_05

32

Preference Page

- Press twice to stop playback (if any), then press SYSTEM MENU.
- Press ◀► to select the 'Preference Setup' icon.
- Press OK to confirm.

1. North	$\blacksquare)$		Ē
Pref	erence Pa	ge	
Audio Subtitle Disc Me Parenta PBC Mp3 / J Passwo	enu I Deg Nav		
Go To Pi	eference P	age	

Audio, Subtitle, Disc Menu

These menus contain various language options for audio, subtitle and disc menu which may be recorded on the DVD. For details, see page 18.

Restricting playback by Parental Control

Some DVDs may have a parental level assigned to the complete disc or to certain scenes on the disc. This feature lets you set a playback limitation level. The rating levels are from 1 to 8 and are country dependent. You can prohibit the playing of certain discs that are not suitable for your children or have certain discs played with alternative scenes.

In 'PREFERENCE PAGE', press ▲ ▼ to highlight {PARENTAL}, then press ▶.

Preference Pag	e
Audio	1 KID SAFE
Subtitle	2 G
Disc Menu	3 PG
	4 PG 13
PBC	5 PGR
Mp3/Jpeg Nav	6 R
Password	7 NC17 🗸 🗸
Set KID SAFE	

- Press ▲ ▼ to highlight a rating level for the disc inserted and press OK.
 → To disable Parental controls and have all Discs play, select {8 ADULT}.
- Use the numeric keypad (0-9) to enter the six-digit password (see page 34 "Changing the password").
 → DVDs that are rated above the level you selected will not play unless you enter your six-digit password.

Helpful Hints:

 VCD, SVCD, CD have no level indication, so parental control function has no effect on these type of discs. This applies to most illegal DVD discs.

 Some DVDs are not encoded with a rating though the movie rating may be printed on the Disc cover. The rating level feature does not work for such Discs.

TIPS:

To return to the previous menu, press ◀. To remove the menu, press **SYSTEM MENU**.

33

33

PBC

You can set the PBC to ON or OFF. This feature is available only on Video CD 2.0 with playback control (PBC) feature. For details, see page 22.

MP3/JPEG Menu - turning on/off

MP3/JPEG Navigator can be set only if the disc is recorded with menu. It allows you to select different display menus for easy navigation.

In 'PREFERENCE PAGE', press ▲ ▼ to highlight {MP3/JPEG NAV}, then press ►.

WITHOUT MENU

Select this to display all the files contained in the MP3/Picture CD.

WITH MENU

Select this to display only the folder menu of the MP3/Picture CD.

Press ▲ ▼ to select a setting, then press
 OK to confirm your selection.

Changing the Password

The same password is used for both Parental Control and Disc Lock. Enter your six-digit password when prompted on the screen. The default password is <u>136 900</u>.

In 'PREFERENCE PAGE', press ▲ ▼ to highlight {PASSWORD}, then press ► to select {CHANGE}.



Use the numeric keypad (0-9) to enter your old six-digit password.
 → When doing this for the first time, key in '<u>136 900</u>'.

→ If you forget your old six-digit password, key in '<u>136 900</u>'.

- Inter the new six-digit password.
- G Enter the new six-digit password a second time to confirm.
 → The new six-digit password will now take effect.
- **5** Press **OK** to confirm.

TIPS:

To return to the previous menu, press ◀. To remove the menu, press **SYSTEM MENU**.

34

01-39 DVP5100_EU_05

17/03/05, 1:36 A139 246 15641

Setting the DivX Subtitle font

You can set the font type that supports the recorded DivX subtitle.

In 'PREFERENCE PAGE', press ▲ ▼ to highlight {DivX SUBTITLE}, then press ►.

STANDARD

A standard list of English subtitle fonts provided by this DVD Player.

CYRILLIC

Select this to display a cyrillic subtitle fonts.

Press ▲ ▼ to select a setting, then press OK to confirm your selection.

Helþful Hint:

 Software upgrades that supports other fonts can be downloaded from www.philps.com/support

Restoring to original settings

Setting the DEFAULT function will reset all options and your personal settings to the factory defaults, except your password for Parental Control and Disc Lock.

- In 'PREFERENCE PAGE', press ▲▼ to highlight {DEFAULT}, then press ► to select {RESET}.
- Press OK to confirm.
 All settings will now reset to factory defaults.

TIPS:

01-39 DVP5100_EU_05

To return to the previous menu, press ◀. To remove the menu, press **SYSTEM MENU**.

35

Troubleshooting

WARNING

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock.

If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy a problem by following these hints, consult your dealer or Philips for help.

Problem	Solution
No power	 Check if the AC power cord is properly connected. Press the STANDBY ON on the front of the DVD system to turn on the power.
No picture	 Refer to your TV's manual for correct Video In channel selection. Change the TV channel until you see the DVD screen. Check if the TV is switched on. If the progressive scan feature is activated but the connected TV does not support progressive signals or the cables are not connected accordingly, see page 16 for proper progressive scan set up or deactivate the progressive scan feature as below: Turn off your TV progressive scan mode or turn on to interlaced mode. Press and hold EJECT on the DVD Player. When the disc is ejected, press and hold EJECT again, and numeric keypad '1' on the remote control at the same time for few seconds.
Distorted picture	 Sometimes a small amount of picture distortion may appear depending on the disc being played back. This is not a malfunction.
Completely distorted picture or black/white picture with DVD	 Connect DVD Player directly to the TV. Make sure the disc is compatible with the DVD/ Player. Ensure that the DVD Player's TV Type is set to match that of the Disc and your TV.
No sound or distorted sound	Adjust the volume.Check that the speakers are connected correctly.
No audio at digital output	 Check the digital connections. Check if your receiver can decode MPEG-2 or DTS and if not, please make sure the digital output is set to PCM. Check if the audio format of the selected audio language matches your receiver capabilities.
No sound and picture	 Check that the RGB/SCART cable is connected to the correct device (See Connecting TV).

Visit us at www.philips.com/support for service support

36

01-39 DVP5100_EU_05

17/03/05, 1:36 A 39 246 15641

Troubleshooting

Solution
 The DVD+R/CD-R must be finalised. Ensure the disc label is facing up. Check if the disc is defective by trying another disc. If you have recorded a Picture CD or MP3/Window Media[™] Audio CD yourself, ensure that your disc contains at least 10 pictures or 5 MP3/Windows Media[™] Audio tracks. Region code incorrect.
 Check the disc for fingerprints/scratches and clean with a soft cloth wiping from centre to edge.
 Reset the unit by switching the player off, then on again.
 Aim the Remote Control directly at the sensor on the front of the player. Reduce the distance to the player. Replace the batteries in the Remote Control. Re-insert the batteries with their polarities (+/- signs) as indicated.
 To completely reset the player, unplug the AC cord from the AC outlet for 5-10 seconds.
 Operations may not be permitted by the disc. Refer to the instructions of the disc jacket.
 Use a commonly available cleaning CD/DVD to clean the lens before sending the DVD Player for repair.
 Press STOP twice before selecting System Menu. Depending on the disc availability, some menu items cannot be selected.
 Check that the DivX file is encoded in 'Home Theater' mode with DivX 5.x encoder.
 Check that the output of the video signal is switch t 'YUV'.
 The audio codec may not be supported by the DVI player.
 Check that file size of the movies does not exceed the file size of the CD disc during burning.

Visit us at www.philips.com/support for service support

37

Specifications

TV STANDARD (PAL/50Hz) (NTSC/60Hz)

Number of lines 625 Playback

525 Multistandard (PAL/NTSC)

0.7 Vpp — 75 ohm 1 Vpp — 75 ohm 0.7 Vpp — 75 ohm

VIDEO PERFORMANCE 12 bit, 108MHz

Video DAC	
YPbPr	
Video Output	
RGB (SCART)	

VIDEO FORMAT

Digital Compression	MPEG 2 for DVI MPEG 1 for VCE MPEG-4 DivX	
DVD	50Hz	60Hz
Horiz. resolution	720 pixels	720 pixels
Vertical resolution	576 lines	480 lines
VCD	50Hz	60Hz
Horiz. resolution	352 pixels	352 pixels
Vertical resolution	288 lines	240 lines

AUDIO FORMAT Digit

Analog Sound Stereo

multi-channel sound

tal	MPEG/AC-3/	compressed Digital
	PCM	16, 20, 24 bits
		fs, 44.1, 48, 96 kHz
	MP3(ISO 9660)	96, 112, 128, 256
		kbps & variable
		bit rate fs, 32, 44.1,
		48 kHz

Dolby Surround compatible downmix from Dolby Digital

AUDIO PERFORMANCE

DA Converter	24 bit, 192 kHz	
DVD	fs 96 kHz	4Hz- 44kHz
	fs 48 kHz	4Hz- 22kHz
SVCD	fs 48 kHz	4Hz- 22kHz
	fs 44.1kHz	4Hz- 20kHz
CD/VCD	fs 44.1kHz	4Hz- 20kHz
Signal-Noise (1kHz)		> 100 dB
Dynamic range(1kHz)		> 90 dB
Crosstalk (1kHz)		> 100 dB
Distortion/noise (1kH	z)	> 85 dB
MPEG MP3	MPEG Audio L3	

CONNECTIONS

Scart Output	Euroconnector
YPbPr Output	Cinch 3x
Video Output	Cinch (yellow)
Audio Output(L+R)	Cinch (white/red)
Digital Output	1 coaxial
	IEC60958 for CDDA / LPCM
	IEC61937 for MPEG 1/2,
	Dolby Digital

CABINET

Dimensions (w x h x d)	435 x 37 x 265 mm
Weight	Approximately 2.0 kg

POWER CONSUMPTION

Power Supply Rating	230V; 50Hz
Power consumption	< 10 W
Power consumption in Standby mode	< 0.8 W

Specifications subject to change without prior notice

38

01-39 DVP5100_EU_05

17/03/05, 1:36 A1 39 246 15641

Glossary

Analog: Sound that has not been turned into numbers. Analog sound varies, while digital sound has specific numerical values. These jacks send audio through two channels, the left and right.

Aspect ratio: The ratio of vertical and horizontal sizes of a displayed image. The horizontal vs. vertical ratio of conventional TVs. is 4:3, and that of wide-screens is 16:9.

AUDIO OUT Jacks: Jacks on the back of the DVD System that send audio to another system (TV, Stereo, etc.).

Bit Rate: The amount of data used to hold a given length of music; measured in kilobits per seconds, or kbps. Or, the speed at which you record. Generally, the higher the bit rate, or the higher the recording speed, the better the sound quality. However, higher bit rates use more space on a Disc.

Chapter: Sections of a picture or a music piece on a DVD that are smaller than titles. A title is composed of several chapters. Each chapter is assigned a chapter number enabling you to locate the chapter you want. **ComponentVideo Out Jacks:** Jacks on the back of the DVD System that send high-quality video to a TV that has ComponentVideo In jacks (R/G/B, Y/Pb/Pr, etc.).

Disc menu: A screen display prepared for allowing selection of images, sounds, subtitles, multi-angles, etc recorded on a DVD.

Digital: Sound that has been converted into numerical values. Digital sound is available when you use the DIGITAL AUDIO OUT COAXIAL or OPTICAL jacks. These jacks send audio through multiple channels, instead of just two channels as analog does.

DivX 3.11/4.x/5.x: The DivX codec is a patentpending, MPEG-4 based video compression technology, developed by DivXNetworks, Inc., that can shrink digital video to sizes small enough to be transported over the internet, while maintaining high visual quality.

Dolby Digital: A surround sound system developed by Dolby Laboratories containing up to six channels of digital audio (front left and right, surround left and right, center and subwoofer).

DTS: Digital Theatre Systems. This is a surround sound system, but it is different from Dolby Digital. The formats were developed by different companies. **JPEG:** A very common digital still picture format. A still-picture data compression system proposed by the Joint Photographic Expert Group, which features small decrease in image quality in spite of its high compression ratio.

MP3: A file format with a sound data compression system. "MP3" is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. By using MP3 format. one CD-R or CD-RW can contain about 10 times as much data volume as a regular CD can. **Multichannel:** DVD is specified to have each sound track constitute one sound field. Multichannel refers to a structure of sound tracks having three or more channels.

Parental Control: A function of the DVD to limit playback of the disc by the age of the users according to the limitation level in each country. The limitation varies from disc to disc; when it is activated, playback will be prohibited if the software's level is higher than the user-set level.

<u>PCM (Pulse Code Modulation):</u> A system for converting analog sound signal to digital signal for later processing, with no data compression used in conversion.

Playback control (PBC): Refers to the signal recorded on video CDs or SVCDs for controlling reproduction. By using menu screens recorded on a Video CD or SVCD that supports PBC, you can enjoy interactive-type software as well as software having a search function.

Progressive Scan: It displays all the horizontal lines of a picture at one time, as a signal frame. This system can convert the interlaced video from DVD into progressive format for connection to a progressive display. It dramatically increases the vertical resolution.

Region code: A system for allowing discs to be played back only in the region designated beforehand. This unit will only play discs that have compatible region codes. You can find the region code of your unit by looking on the product label. Some discs are compatible with more than one region (or ALL regions).

Surround: A system for creating realistic threedimensional sound fields full of realism by arranging multiple speakers around the listener.

Title: The longest section of a picture or music feature on DVD, music, etc., in video software, or the entire album in audio software. Each title is assigned a title number enabling you to locate the title you want. **VIDEO OUT jack**: Jack on the back of the DVD System that sends video to a TV.

39

Language Code

1511

Abkhazian	6566
Afar	6565
Afrikaans	6570
Amharic	6577
Arabic	6582
Armenian	7289
Assamese	6583
Avestan	6569
Aymara	6589
Azerhaijani	6590
Bahasa Melayu	7783
Bashkir	6665
Belarusian	6669
Bengali	6678
Bihari	6672
Bislama	6673
Bokmål, Norwegian	7866
Bosanski	6683
Brezhoneg	6682
Bulgarian	6671
Burmese	7789
Castellano Español	6983
Castellano, Español Catalán	6765
Catalán Chamorro Chechen	6772
Chechen	6769
Chewa; Chichewa; Nyanj	
	9072
Chuang: Zhuang	9065
Chuang; Zhuang Church Slavic; Slavonic	6785
Chuvash	6786
Corsican	6779
Česky	6783
Dansk	6865
Dansk Deutsch	6869
Dzongkha	6890
nglish	6978
Esperanto	6979
stonian	6984
Euskara	6985
Ελληνικά	6976
aroese	7079
Français	7082
Frysk	7089
Fijian	7074
Gaelic; Scottish Gaelic Gallegan Georgian	7168
Gallegan	7176
Georgian	7565
Gikuyu; Kikuyu Guarani	7573
Guarani	7178
Gujarati	7185
Hausa	7265
Herero	7290
Hindi	7273
Hiri Motu	7279
Hrwatski	6779
do	7379
nterlingua (Internationa	
nterlingue	7365
nuktitut	7385

Inupiaq	7375
Irish	7165
Íslenska	7383
Italiano	7384
lvrit	7269
Japanese	7465
Javanese	7486
Kalaallisut	7576
Kannada	7578
Kashmiri	7583
Kazakh	7575
Kernewek	7587
Khmer	7577
Kinyarwanda	8287
Kirghiz	7589
Komi	7586
Korean	7579
Kuanyama; Kwanyama	7574
Kurdish	7585
Lao	7679
Latina	7665
Latvian	7686
Letzeburgesch;	7666
Limburgan; Limburger	7673
Lingala	7678
Lithuanian	7684
Luxembourgish;	7666
Macedonian	7775
Malagasy	7771
Magyar Malawalawa	7285
Malayalam Malayaa	7776 7784
Maltese Manx	7186
Maori	7773
Marathi	7782
Marshallese	7772
Moldavian	7779
Mongolian	7778
Nauru	7865
Navaho; Navajo	7886
Ndebele, North	7868
Ndebele, South	7882
Ndonga	7871
Nederlands	7876
Nepali	7869
Norsk	7879
Northern Sami	8369
North Ndebele	7868
Norwegian Nynorsk;	7878
Occitan; Provencal	7967
Old Bulgarian; Old Slavonic	6785
Oriya	7982
Oromo	7977
Ossetian; Ossetic	7983
Pali	8073
Panjabi	8065
Persian	7065
Polski	8076
Português	8084

Pushto	8083
Russian	8285
Quechua	8185
Raeto-Romance	8277
Romanian	8279
Rundi	8278
Samoan	8377
Sango	8371
Sanskrit	8365
Sardinian	8367
Serbian	8382
Shona	8378
Shqip	8381
Sindhi	8368
Sinhalese	8373
Slovensky	8373
Slovenian	8376
Somali	8379
Sotho; Southern	8384
South Ndebele	7882
Sundanese	8385
Suomi	7073
Swahili	8387
Swati	8383
Svenska	8386
Tagalog	8476
Tahitian	8489
Tajik	8471
Tamil	8465
Tatar	8484
Telugu	8469
Thai	8472
Tibetan	6679
Tigrinya	8473
Tonga (Tonga Islands)	8479
Tsonga	8483
Tswana	8478
Türkçe	8482
Turkmen	8475
Twi	8487
Uighur	8571
Ukrainian	8575
Urdu	8582
Uzbek	8590
Vietnamese	8673
Volapuk	8679
Walloon	8765
Welsh	6789
Wolof	8779
Xhosa	8872
Yiddish	8973
Yoruba	8979
Zulu	9085

40

01-39 DVP5100_EU_05

17/03/05, 1:36 AM 39 246 15641

Meet Philips at the Internet http://www.philips.com





3139 246 15641

41



Sgp-SL-0511/05-1

17/03/05, 1:36 B 39 246 15641



01-39 DVP5100_EU_05