

The front cover picture is based on concept design and not real product photo, reference only.

WATERPROOF TFT-LCD TV

USER MANUAL

10.4" / 15.4" / 17" / 19"





LUXURITE®
EXPAND YOUR VISION



Thank you for choosing LUXURITE waterproof LCD TV. Before using this product please read the instruction manual carefully which will ensure correct installation and ease of use. Please keep this manual for future reference. The information in this manual is subject to change without Prenotice.

Important Safety Information

- Do not attempt to remove the back of this TV; this can expose you to high voltage and risk of electric shock or fire.
 - Do not attempt to modify this product in any way as this will invalidate your warranty and expose the risk of electric shock or fire.
 - Only use the supplied AC DC transformer and ensure that the main power cord is plugged into a non damaged socket and away from any heat source. The power supply is not waterproof and must be positioned in a dry, well ventilated area away from water and moisture*.
 - Do not connect the TV direct to the mains socket without the converter*.
 - Position your TV so that no bright light, sunshine or direct heat can affect the TV.
 - If there are any unusual smells or sounds coming from the unit, disconnect the power and contact an authorised dealer or repair centre*.
 - The unit must be earthed to the main earth system of the building and must conform to the latest electrical safety regulations*.
 - When cleaning your TV do not apply any abrasive cleaners, wax, benzene, alcohol or clearing detergents. Chemical cleaners may fade, dissolve or crack the TV surface. We recommend a soft damp cloth and non abrasive cleaner.
- * Please note that the installation of your TV should be carried out by a technically competent person and must conform to all the relevant regulations. If in doubt please contact your supplying dealer or a qualified electrician.

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
<p>WARNING: TO PREVENT INJURY, THIS APPARATUS MUST BE SECURELY ATTACHED TO THE WALL IN ACCORDANCE WITH THE INSTALLATION INSTRUCTIONS.</p> <p>CAUTION: DO NOT REMOVE COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. BEWARE OF STATIC SENSITIVE PARTS.</p>		

CONTENTS

- I. Contents of package..... 1
- II. LCD instructions..... 1
 - 1. Front panel button indication1
 - 2. Connectors indication1
- III. Remote control instructions 2
- IV. Connection..... 3
 - 1. Connect the TV.....3
 - 2. Connect to AV/S-Video3
 - 3. Connect to the PC.....3
- V. On Screen Display (OSD) MENU..... 4
 - 1. ATV4
 - 2. DTV18
- VI. Trouble Shooting..... 22
- VII. Specification..... 23
- VIII. Installation Instructions..... 33



I. CONTENTS OF PACKAGE

 
Please check the following items are included in the package after opening, contact the distributor immediately if any of the items showing below are missing.

- LCD TV
- Remote control
- Power adapter
- User's manual

II. LCD INSTRUCTIONS


1. Front panel button indication (Optional)

This section is only applicable to models with touch buttons on the front panel.

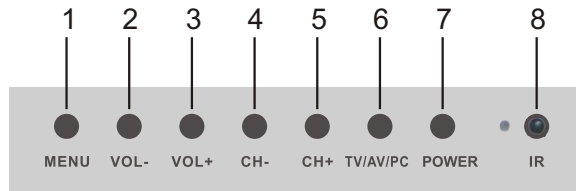


- (1) MENU: Press it to enter into OSD.
- (2)(3) "VOL-" "VOL+": Adjust the Volume/OSD Menu.
- (4)(5) "CH-" "CH+": Adjust the Channel/OSD Menu.
- (6) TV/AV/PC: Switch between TV/AV/PC mode.
- (7) Power Key: Power switch.
- (8) Remote receiving window.

 2. Connectors indication:

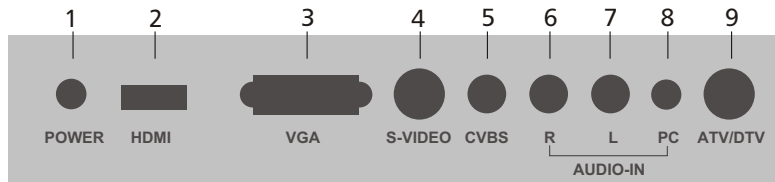


 - (1) DC 12V inlet: Dc 12V input.
- (2) HDMI: High-Definition Multimedia Interface.
- (3) PC signal inlet: VGA jack.
- (4) S-VIDEO connector: Input S - Vedio signal. for HDTV program.
- (5) AV IN inlet(Yellow): Input vido signal.
- (6) AUDIO IN-R inlct(Red): Input stereo audio signal to the right speaker.
- (7) AUDIO IN-L inlct(White): Input stereo audio signal to the Left speaker.
- (8) PC AUDIO IN: PC AUDIO INPUT CONNECTOR
- (9) ANT inlet: Antenna inlet.

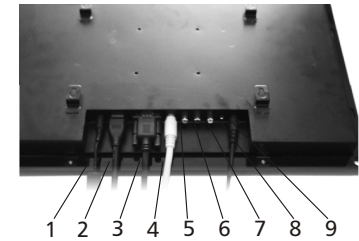

III. REMOTE CONTROL INSTRUCTIONS

 1. EPG Electronic Program Guide
2. FAV Favorite channels group
3. REVEAL Display program information
4. LCD MENU Pop screen display menu
5. EXIT Exit current menu to father level menu
6. ENTER Confirmation key
7. DISPLAY display current program information
8. AUTO In VGA mode, auto adjust the picture to the middle of screen
9. ASPECT Adjust aspect ratio (4: 3; 14: 9; 16: 9; Subtitle; Fullscreen; Zoom1; Zoom2)
10. NICAM Near Instantaneous Companded Audio Multiplex
11. INPUT Switching TV / SCART/ CVBS / S-VIDEO / VGA / HDMI / DTV
12. PMODE Picture mode
13. SMODE Sound mode
14. SLEEP Sleep Timer

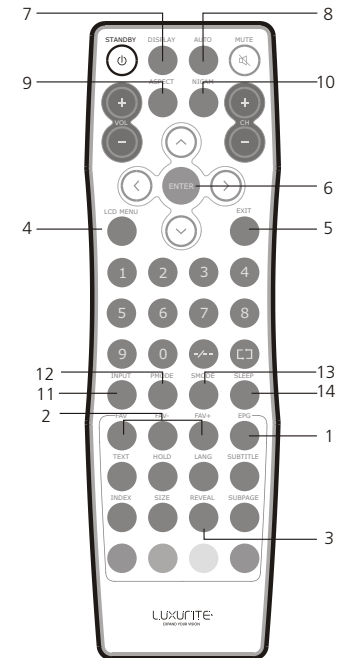

NOTE

- Aim the remote control at the infrared receiver window on the television When using.
- Avoid excessive pressure, dropping and disassembling of the remote control
- Avoid pressing keys continuously and quickly, Interval between sequential operations should be at least 2 seconds.

IV. CONNECTION

1. Connect the TV

- Make sure that LCD TV is power off
- Insert the CATV cable into antenna socket
- Turn on the TV
- Select TV mode
- Control the volume by “VOL- / VOL+”
- Using “CH+/CH-” to choose the channel
- LCD TV can be turned off by power button on remote control

2. Connect to AV/S-VIDEO device

- Make sure that both of AV/S-Video device and monitor are power off
- Connect AV device and LCD TV with AV cable or S-VIDEO cable
- Connect audio cable into the audio input jack on LCD TV
- Turn on the LCD TV , then turn on the AV/S-VIDEO device
- Select AV or S-VIDEO mode
- Control the volume by “VOL- / VOL+”
- LCD TV can be turned off by power button on remote control

3. Connect to the PC

- Make sure that both of PC and LCD TV are power off
- Connect PC and LCD TV with the D type VGA cable. Fasten the screws.
- Insert the AC adaptor port into power input jack, connect another port to the power supply (Range from 110V to 240V).
- Connect the audio cable
- Turn the LCD TV on , and then turn on the PC
- Set the input source to PC mode
- Control the volume by ◀▶
- LCD TV can be turned off by the power button on remote control

 
V. On Screen Display (OSD) MENU

ATV



In this manual, the OSD (On Screen Display) may be different from your TV’s, because this is just an example for the TV operation.

First Time Installation

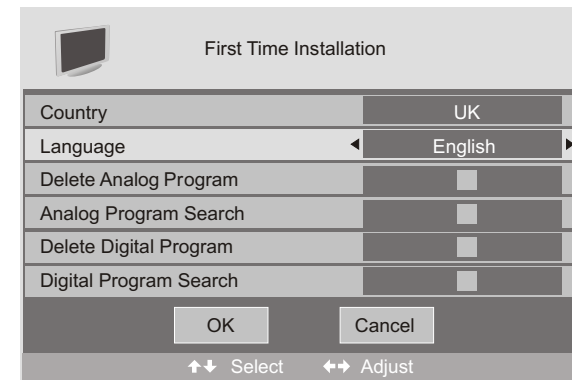

If this is the first time you open the TV and there is no programs in the TV memory, the **First Time Installation** menu will appear in the picture.

Country

Press ▼/▲ button and then use ◀/▶ to select the country.

Language

Press ▼/▲ button and then use ◀/▶ to select the OSD language.

Delete Analog Program

Press ▼/▲ button and then use ◀/▶ to select whether to delete all the analog programs.

Analog Program Search

Press ▼/▲ button and then use ◀/▶ to select whether to start searching analog programs.

Delete Digital Program

 
Press ▼/▲ button and then use ◀/▶ to select whether to delete all the digital programs.

Digital Program Search

Press ▼/▲ button and then use ◀/▶ to select whether to start searching digital programs.

After setting the items, select OK to finish the first time installation, or select Cancel to exit this menu.


If you cancelled the first time installation, it will remind you whether to set the first time installation next time.

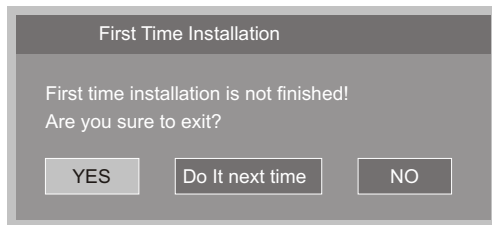

TV Information

Program Information

 Press DISPLAY or NICAM button to display the program information.

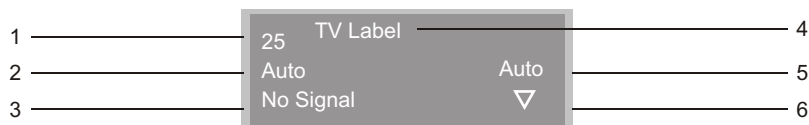

1. The number of current program.
2. The colour system of current program, could be selected in **Manual Tuning** menu (an option of **SETUP** menu).
3. The name of current program.
4. The label of current program, you can label it in **Manual Tuning** menu (an option of **SETUP** menu).
5. The sound system of current program, could be selected in **Manual Tuning** menu (an option of **SETUP** menu).
6. The NICAM mode of current program.

 
▼ If the icon of NICAM mode is red, it means the current program supplies multi NICAM signals, and you can select it by pressing **NICAM** button.

The NICAM modes and relative icons:



VIDEO menu options

Press MENU button on the front panel or LCD-MENU on the remote control to display the main menu.

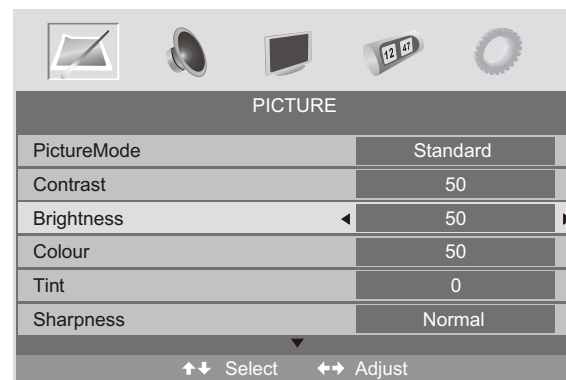

- Press ◀/▶ button to select **PICTURE** in the main menu.
- Press ▼/▲ button to select the option that you want to adjust in the **PICTURE** menu.
- Press ◀/▶ button to adjust.

- When you are satisfied with your adjustment, press the LCD-MENU button to return to the previous menu or press the EXIT button to exit the main menu.

Picture Mode

Select Picture Mode in PICTURE menu. (Available picture mode: Standard, Personal, Movie, Sport, Mild, Game.)

If you change the value of Contrast, Brightness, Colour, Tint, Sharpness or Colour temperature on the picture menu, the picture mode will be changed to "Personal" automatically. You may select the picture mode directly by pressing PMODE button.

 
TIPS: You can press PMODE button on the remote control, to select the Picture Mode directly.

Contrast

Press ▼/▲ button and then use ◀/▶ to adjust the contrast of the picture.



After adjust the value you want, press LCD-MENU button to return to the preview MENU.

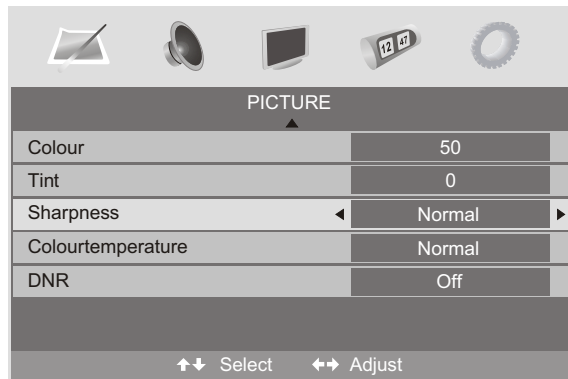

Brightness

Press ▼/▲ button and then use ◀/▶ to adjust the brightness of the picture.

Colour

Press ▼/▲ button and then use ◀/▶ to adjust the colour saturation.

NOTE: This option is invalid in PC mode, and it will be shown in gray.

Tint

Press ▼/▲ button and then use ◀/▶ to adjust the tone of colour when your system is in NTSC.

Sharpness

Press ◀/▶ To select the sharpness mode of your TV. (Available Sharpness Mode: Normal, Sharp, Sharpest, Softest, Soft.)

Colour temperature

Select an optimum colour temperature mode to suit your eyes for viewing among Normal, Warm and Cold.

 
NOTE: This option is available only in PC mode.

DNR (Digital Noise Reduction)

If the broadcast signal received is weak, you can select the DNR option to reduce the video noise level between Off, Low, Mid and High.

AUDIO menu options

Press MENU button on the front panel or LCD-MENU on the remote control to display the main menu.

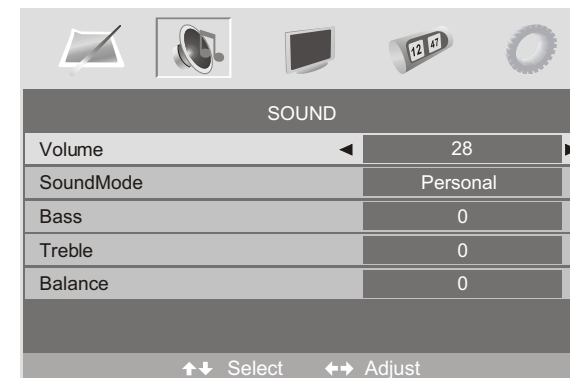

- Press the ◀/▶ button to select SOUND in the main menu.
- Press the ▼/▲ button to select the option that you want to adjust in the SOUND menu.
- Press the ◀/▶ button to adjust.
- When you are satisfied with your adjustment, press the LCD-MENU button to return to the previous menu or press the EXIT button to exit the main menu.

Volume

Press ▼/▲ button and then use ◀/▶ to adjust the sound level.



After adjust the value you want, press LCD-MENU button to return to the preview MENU.

Sound Mode

Select Sound Mode in SOUND menu. (Available sound mode: Personal, Voice, Music, Theatre.)

If you change the value of Bass and Treble on the Sound menu, the sound mode will be changed to "Personal" automatically.

You may select the sound mode directly by pressing SMODE button.

TIPS: You can press SMODE button on the remote control to select the Sound Mode directly.

Bass

Press ▼/▲ button and then use ◀/▶ to increase or decrease the level of the lower-pitched sounds.

Treble

Press ▼/▲ button and then use ◀/▶ to increase or decrease the level of the higher-pitched sounds.

Balance

Press ▼/▲ button and then use ◀/▶ to adjust the audio output between left and right speakers.

Setup menu options

Press MENU button on the front panel or LCD-MENU on the remote control to display the main menu.

NOTE: SETUP menus are different for different input sources, if the input source is selected HDMI / YPbPr / VGA and there are no relative input signal, SETUP menu will be unavailable.

SETUP menu of TV input:



- Press the ◀/▶ button to select SETUP in the main menu.
- Press the ▼/▲ button to select your option what you want to adjust in the SETUP menu.
- Press the ◀/▶ button to adjust.
- When you are satisfied with your adjustment, press the LCD-MENU button to return to the previous menu or press the EXIT button to exit the main menu.

 
Country

This option allows you to select the country.


Auto tuning

This option allows you to tune the channels that can be received automatically.

Note: Before you perform Auto Tuning, you must choose the country where you are by selecting COUNTRY option.

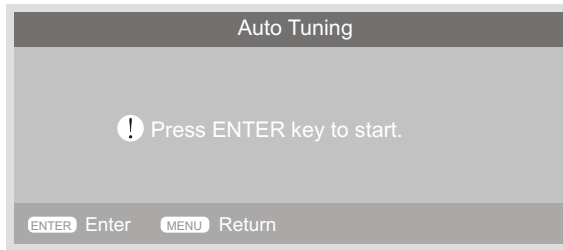

Press ENTER key to start.

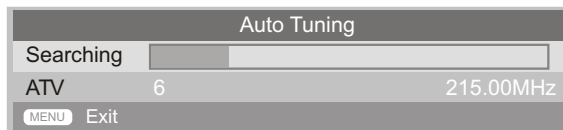 

You can press LCD-MENU button to stop auto tuning and close the OSD menu.

Manual Tuning

This option allows you to perform Manual Tuning.

Note: Before you perform Manual Tuning, you must choose the country where you are by selecting Country option.

- Press ◀/▶ to select Manual tuning in SETUP menu.
- Press ▼/▲ to perform your selection, the menu of Manual tuning will display on the screen.



Program

The current program number. Press ◀/▶ to select the upper or lower program.

Sound System

Press ◀/▶ to select a corresponding sound system, such as DK, L/L' , BG.

Colour System

Press ◀/▶ to select a corresponding colour system, such as Auto, PAL, SECAM.

Program Label

This option allows you to label a channel, you can also relabel the programs have been labeled.

- Select a channel you want to labeled.
- Press ▼/▲ select Program Label in SETUP menu.
- Press ▼/▲ to perform your selection. The menu of program label will display as below:



- Press the numeric buttons to input the numbers directly or press ▼/▲ to select the letters.
- Press ◀/▶ to move the cursor.
- Press ENTER, LCD-MENU or EXIT button to confirm and return to previous menu.

AFT (Auto Fine Tune)

 
Due to weak signals or a wrong antenna configuration, some of the channels may not be tuned to the best reception condition. AFT function allows you to fine tune channel selected(the frequency of channel is around the value in **Manual Search** option).

Manual Search



This option has two functions:


- Set the frequency of channel for AFT option.
- Press ▶ button for 3+ seconds and it will start auto tuning from this frequency.

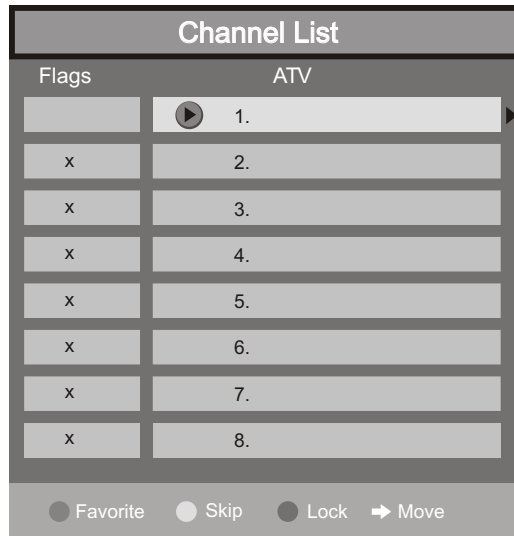

Program Edit


This function allows you to sort the TV programs according to your preferences, as following:

 - Press ▼/▲ to select Program Edit in SETUP menu.
- Press ◀/▶ to enter into the sub menu, a channel list will display.
- Press ▼/▲ to select the channel in the list which you would like to sort.
- Press ▶ to perform your selection.
- Press ▼/▲ to select the location you would like to place the channel.
- Press ◀ to perform you selection.
- Press LCD-MENU to return to the previous menu or press EXIT to exit.

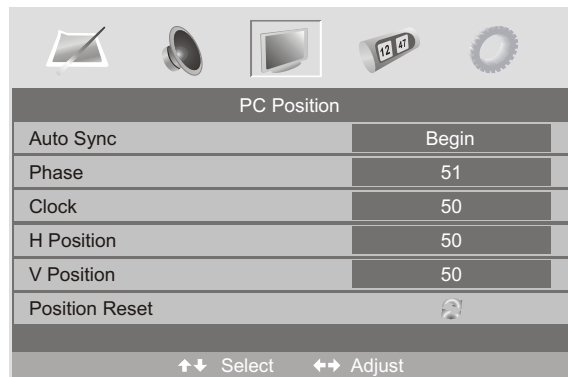


SETUP menu of VGA input (for setting the PC picture position):

 SETUP menu of HDMI input (for setting the HDMI picture position):

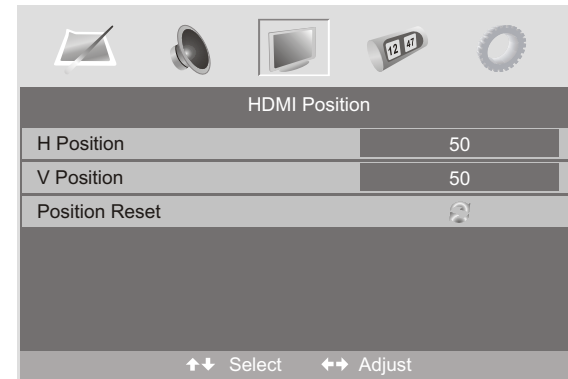

 SETUP menu of YPbPr input (for setting the YPbPr picture position):

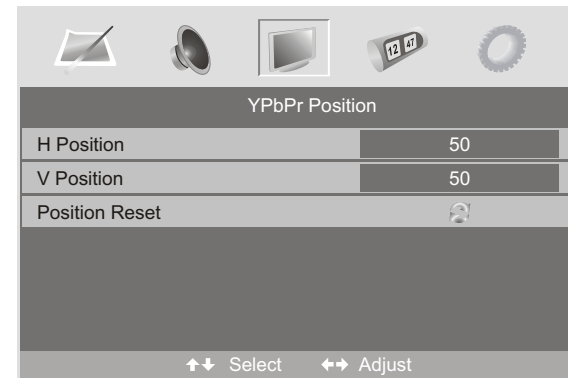

Timer menu options

Press MENU button on the front panel or LCD-MENU on the remote control to display the main menu.

- Press the ◀/▶ button to select TIMER in the main menu.
- Press the ▼/▲ button to select your option what you want to adjust in the TIMER menu.

- Press the ◀/▶ button to adjust.
- When you are satisfied with your adjustment, press the LCD-MENU button to return to the previous menu or press the EXIT button to exit the main menu.



Sleep Timer

Select the sleep time to put automatically the TV in standby mode. Timer can be selected as 0min, 15min, 30min,45min,60min,75min,90min,105min,120min. Also you can select the sleep time by pressing SLEEP button repeatedly.

 
OSD Timer

You can select the time when the OSD display on the screen such as: 5Sec,10Sec,15Sec, 20Sec,25Sec,30Sec.

Function menu options

Press **MENU** button on the front panel or **LCD-MENU** on the remote control to display the main menu.

- Press the ◀/▶ button to select FUNCTION in the main menu.
- Press the ▼/▲ button to select your option what you want to adjust in the FUNCTION menu.
- Press the ◀/▶ button to adjust.
- When you are satisfied with your adjustment, press the LCD-MENU button to return to the previous menu or press the EXIT button to exit the main menu.

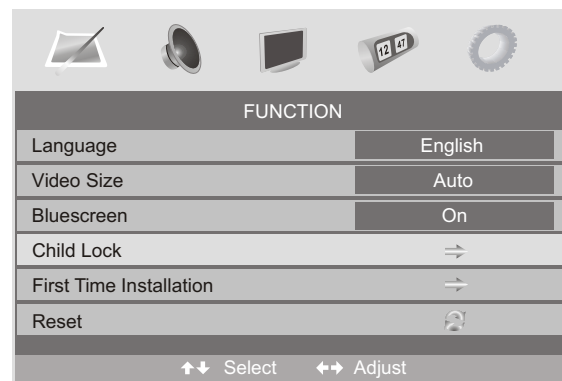

Language

Press ◀/▶ to select the OSD language.

Video Size

This option allows you to select the screen display mode which best corresponds to your viewing requirements.

Note: The available aspect mode may be different in different input signal.

 
Blue screen

This option allows you to select the blue background on or off. If on, the screen background will turn blue at very weak or no signal condition.


Child Lock

Press ENTER or ▶ button to set the child lock.

You need to enter the PIN code if the Child lock is set “on” , and the default PIN code is empty, you can press ENTER button directly to enter.



 TIPS: The superuser's (administrator's) password is 4711.

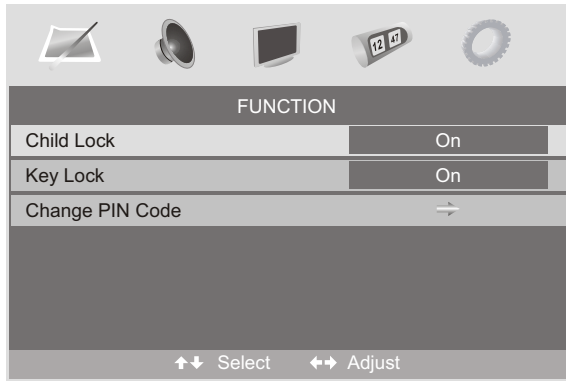

Child Lock

 
Press ENTER or ► button to set the child lock.

Key Lock

Press ENTER or ► button to set the key lock.

Change PIN Code

Press ► button to enter Change PIN Code menu.

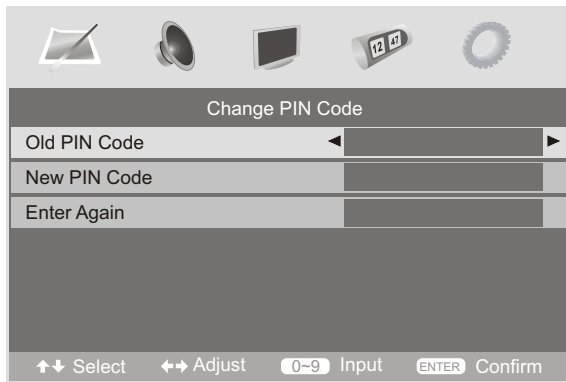

Old PIN Code

Press 0~9 buttons to enter the correct old PIN code, you can not change the PIN code if you entered a wrong PIN code.

New PIN Code

Press 0~9 buttons to enter the new PIN code you want.

Change PIN Code

Press 0~9 buttons to enter the PIN code you entered in the **New PIN Code** menu again to confirm the new PIN code.

First Time Installation

Press ► button to open the **first time installation** menu, and the operation of this menu is in page 3.

Reset

Press ENTER or ► button to reset the TV to the factory default.

DTV

DVB Operation

Program List

 
Channel List options

Press ENTER button to open the Channel List, then Press ▼/▲ to select the channel you want to watch.



Favorite List options


Press FAV button to open the Favorite List, then Press▼/▲ to select the channel you want to watch.

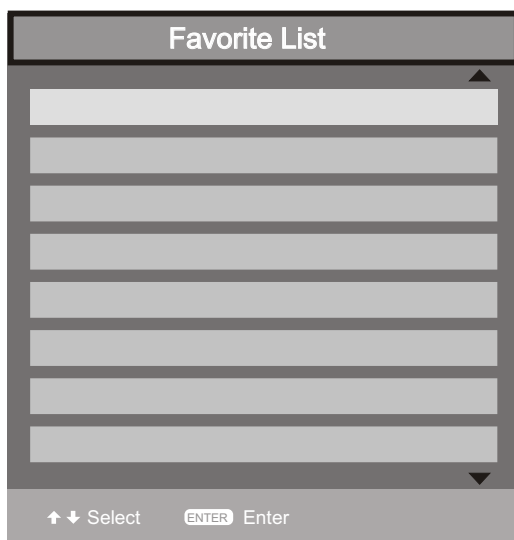

NOTE: Only the channels that you selected to FAV in Program Edit Menu could be displayed in Favorite List.

Channel Search options

 - Press the◀/▶ button to select SETUP in the main menu.
- Press the▼/▲ button to select your option what you want to adjust in the SETUP menu.
- Press the◀/▶ button to adjust.
- When you are satisfied with your adjustment, press the LCD-MENU button to return to the previous menu or press the EXIT button to exit the main menu.

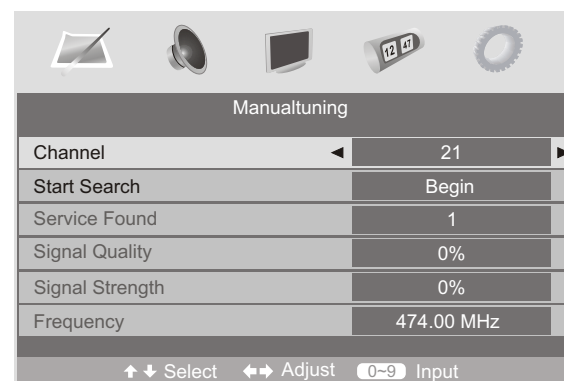

Press ▼/▲ button to select Manual Search, Press ENTER or ▶ button to set the Manual Tuning.

Channel

The current channel number. Press◀/▶ to select the upper or lower channel, Press 0~9 to select the channel directly.

Start Search

To select whether to start searching in begin/searching/finished.

Service Found

The services be found.

Signal Quality

The signal quality of current channel.

Signal Strength

The signal strength of current channel.

Frequency

The frequency of current channel.

 
Program Edit

This function allows you to edit the DTV programs according to your preferences, as following:



EPG Menu

- Use EPG button on the remote control to display the EPG menu directly as below:

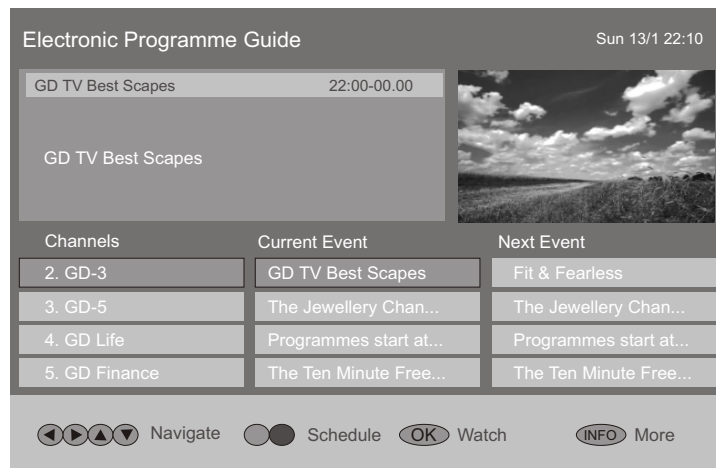

VI. TROUBLE SHOOTING

If you are concerned about the performance of your TV please check the following chart for possible solutions. If the problem still exists please contact your supplying dealer who may be able to offer additional advice.

PROBLEM	CHECK ITEM
No picture on screen and no sound from speakers.	Insert the AC power cord plug securely in AC power outlet . Make sure the remote control is not on standby.
No picture / No picture from AV terminal.	Check the brightness setting of the display. Make sure a cable with no VIDEO input signal is connected to the S-VIDEO INPUT terminal. Check the input source is set to AV mode.
Picture is displayed, but no sound from the speakers.	Check the sound setting. Make sure the sound is not muted. Make sure the speakers are connected properly. Make sure the connectors of the optional speaker system are securely inserted.
Picture is too dark.	Make sure BRIGHTNESS setting is not set too low. Check to see BRIGHTNESS setting.
Remote control does not work.	Change the batteries. Make sure the infrared transmitter window is not receiving strong light such as light from fluorescent lamps.
The picture is not sharp. The picture moves.	The reception may be weak. The state of the broadcast may also be bad. Make sure the antenna is facing the right direction. Make sure the outside antenna is not disconnected.
The picture is doubled or tripled. (TV mode only)	Make sure the antenna is facing the right direction. There may be reflected electric waves from mountains or buildings.


PROBLEM	CHECK ITEM
There are stripes on the screen or colour fade. The picture is spotted. (TV mode only)	Is the unit receiving interference from other devices? Transmission antennas of radio broadcasting stations and transmission antennas of amateur radios and cellular phones may also cause interference Use the unit as far apart as possible from devices that may emit high frequency electromagnetic waves.
Show NO SIGNAL	VGA cable is connected well. Check power of PC is turned on.
Picture is not in the centre (PC mode only)	Use the Auto Adjust function or adjust H-Position V-Position
Stripe picture in Close Window (PC mode only)	Use the Auto Adjust function or adjust the Phase and Clock.

VII. SPECIFICATION


Due to technology changes or improvements, changes may be made without pre notice, please confirm specifications with your distributors or retailers before purchase.

ITEM	SPEC
LCD SIZE	10.4" /15.4" /17" /19"
Brightness	250cd/ m ² , 300cd/ m ² ,300cd/ m ² ,400cd/ m ²
Life	50,000 hours
View angle	90/110, 90/110/, 100/130, 160/160. (Up down/left right)

ITEM	SPEC		
Resolution	10.4" : 800x600@60Hz 15.4" : 1280x800@60Hz 17.0" : 1680x1050@60Hz 19.0" : 1440x900@60Hz		
System	Video system	PAL, SECAM, DVB-T	
	Audio system	BG, DK, I, L/L'	
Input	DTV (DVB-T)	Modulation	COFDM 2K/8K QPSK,16QAM,64QAM
		Video System	MPEG-II MP@ML
		Audio System	MPEG-1/2 layer 1,2,3
		Basic Functions	EPG,Subtitle,Teletext(EURO),MHEG-5(UK)
	ATV	75 ANT.	
	AV,S-video	AV Cable input, S-video input	
	PC	DB 15 VGA Input	
	Audio	Audio 1 (R/L speaker input) Audio 2 (R/L speaker input)	
HDMI	480i, 480p, 576i, 576p, 720p,1080i, 1080p		
Amplify	2Wx2		
OSD Languages	English, French, German, Italian, Spanish, Portuguese.		
Power supply	DC12V		
Power consumption	≤42W		
Accessories	Remote controller, Cell, AC adapter, AC wire.		

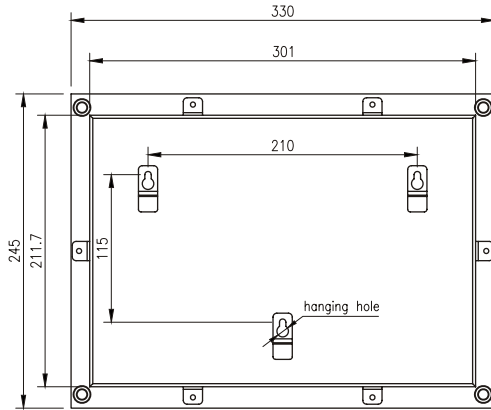 

TV BACK VIEW

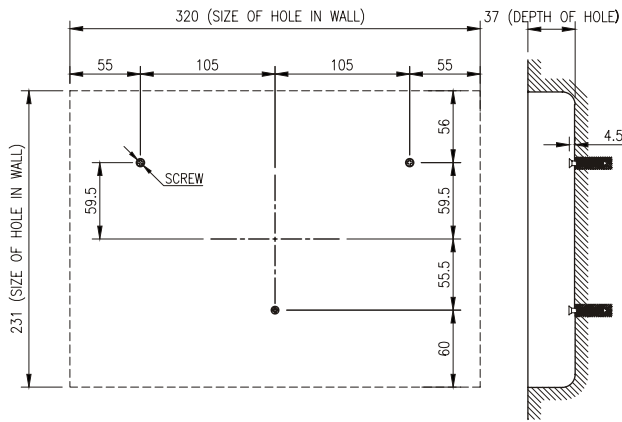 


FRONT VIEW OF HOLE


SIDE VIEW

INSTALLATION INSTRUCTION

 1. Make a hole of size 320X230X37MM(width/highness/depth)in the wall for TV installation
2. Locate the screws as shown in the illustration(Front view of the hole)
3. Put the TV into the hole, raise it a slight distance to make the hanging holes in the back of TV point at the screws in the wall
4. Hang the TV on the screws

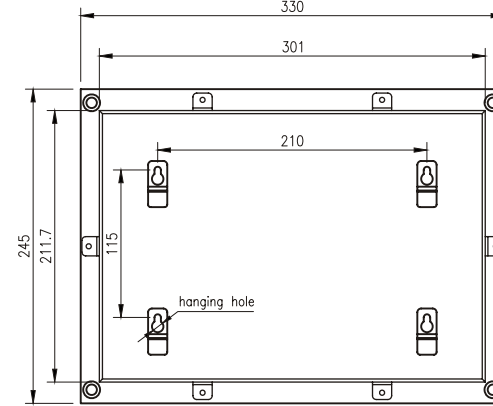

TV BACK VIEW

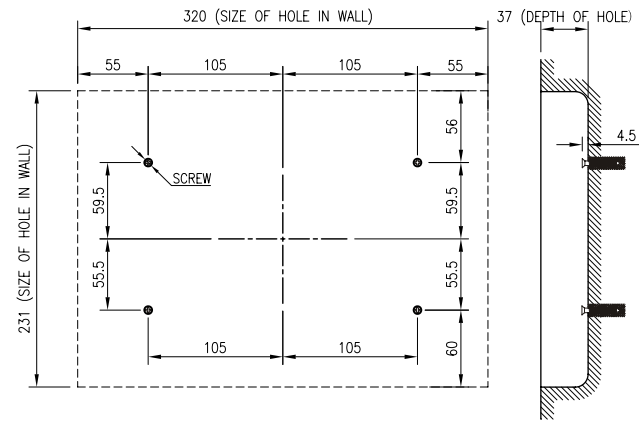 


FRONT VIEW OF HOLE

SIDE VIEW


INSTALLATION INSTRUCTION

 1. Make a hole of size 320X231X37MM(width/highness/depth)in the wall for TV installation
2. Locate the screws as shown in the illustration(Front view of the hole)
3. Put the TV into the hole, raise it a slight distance to make the hanging holes in the back of TV point at the screws in the wall
4. Hang the TV on the screws



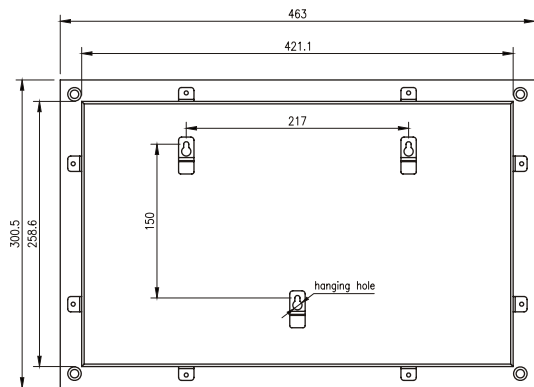

TV BACK VIEW

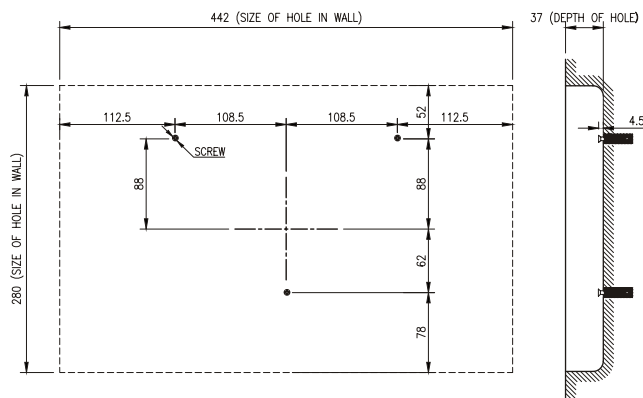 


FRONT VIEW OF HOLE


SIDE VIEW

INSTALLATION INSTRUCTION

 1. Make a hole of size 442X280X37MM(width/highness/depth)in the wall for TV installation
2. Locate the screws as shown in the illustration(Front view of the hole)
3. Put the TV into the hole, raise it a slight distance to make the hanging holes in the back of TV point at the screws in the wall
4. Hang the TV on the screws

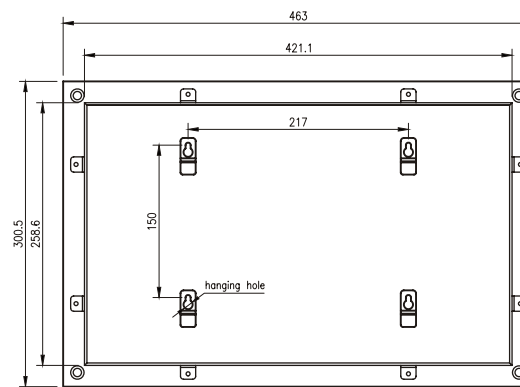

TV BACK VIEW

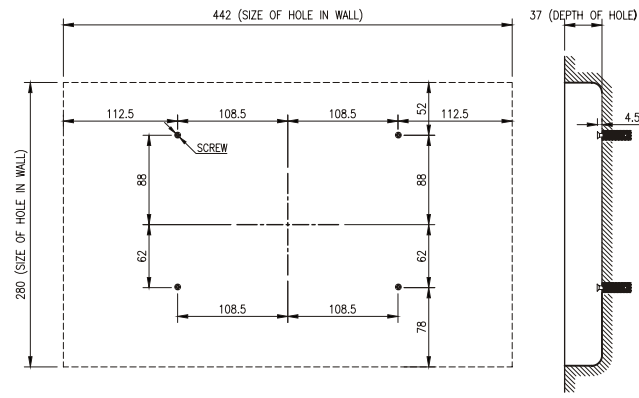 


FRONT VIEW OF HOLE

SIDE VIEW


INSTALLATION INSTRUCTION

 1. Make a hole of size 442X280X37MM(width/highness/depth)in the wall for TV installation
2. Locate the screws as shown in the illustration(Front view of the hole)
3. Put the TV into the hole, raise it a slight distance to make the hanging holes in the back of TV point at the screws in the wall
4. Hang the TV on the screws




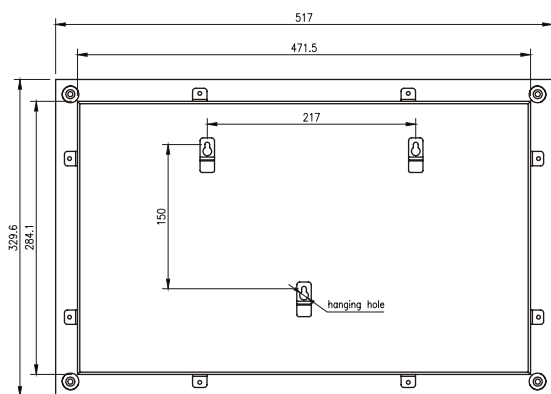

TV BACK VIEW

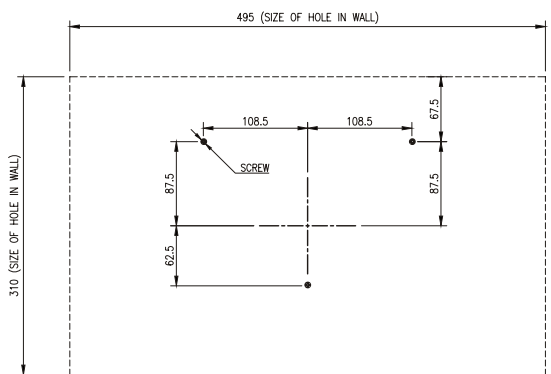 


FRONT VIEW OF HOLE

 


SIDE VIEW

INSTALLATION INSTRUCTION

 
1. Make a hole of size 495X310X37MM(width/highness/depth)in the wall for TV installation
2. Locate the screws as shown in the illustration(Front view of the hole)
3. Put the TV into the hole, raise it a slight distance to make the hanging holes in the back of TV point at the screws in the wall
4. Hang the TV on the screws

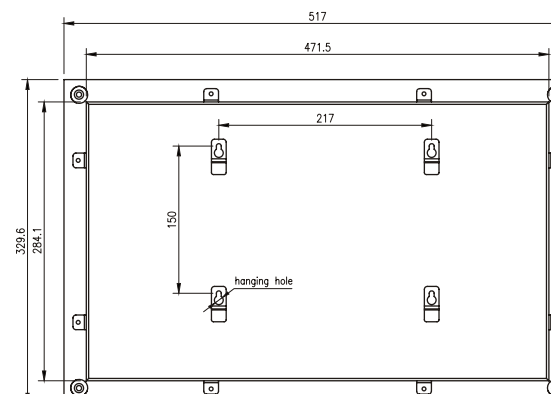

TV BACK VIEW

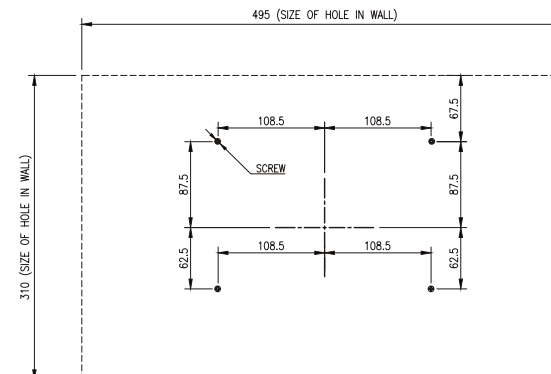 

FRONT VIEW OF HOLE

 


SIDE VIEW


INSTALLATION INSTRUCTION

 1. Make a hole of size 495X310X37MM(width/highness/depth)in the wall for TV installation
2. Locate the screws as shown in the illustration(Front view of the hole)
3. Put the TV into the hole, raise it a slight distance to make the hanging holes in the back of TV point at the screws in the wall
4. Hang the TV on the screws




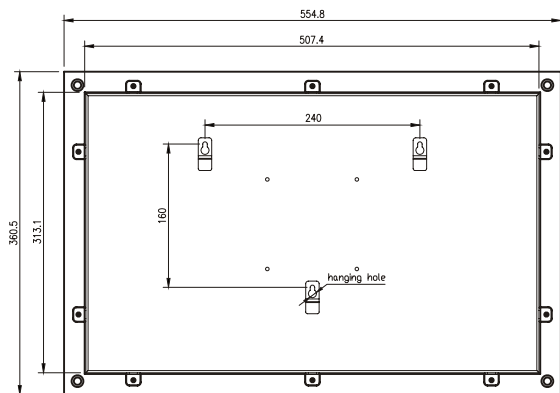

TV BACK VIEW

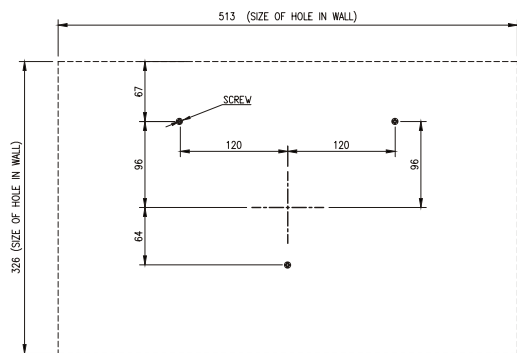 


FRONT VIEW OF HOLE

 


SIDE VIEW

INSTALLATION INSTRUCTION

 
1. Make a hole of size 513X326X45MM(width/highness/depth)in the wall for TV installation
2. Locate the screws as shown in the illustration(Front view of the hole)
3. Put the TV into the hole, raise it a slight distance to make the hanging holes in the back of TV point at the screws in the wall
4. Hang the TV on the screws

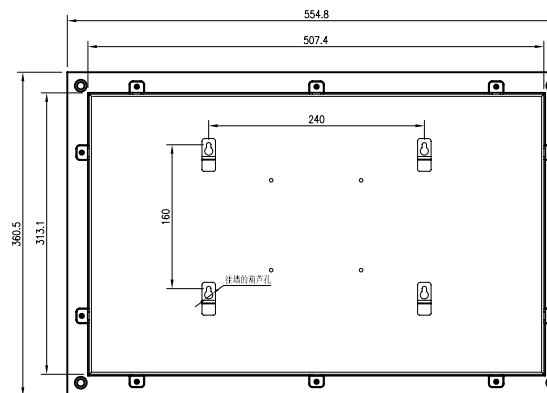

TV BACK VIEW

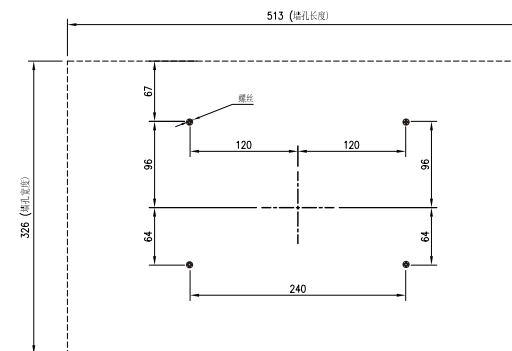 

FRONT VIEW OF HOLE

 

SIDE VIEW

INSTALLATION INSTRUCTION

 
1. Make a hole of size 513X326X45MM(width/highness/depth)in the wall for TV installation
2. Locate the screws as shown in the illustration(Front view of the hole)
3. Put the TV into the hole, raise it a slight distance to make the hanging holes in the back of TV point at the screws in the wall
4. Hang the TV on the screws



VIII. INSTALLATION INSTRUCTIONS

It is the installers responsibility to ensure that your Waterproof LCD TV is installed and sealed correctly. Your warranty will be void if problems occur due to faulty installation or poor sealing.

- Decide on the appropriate position to mount your TV and check for any cables, pipes or other hazards where the unit will be mounted.
- Carefully measure the position of the area of material to be removed in order to flush mount the TV using the dimensions suitable for your TV either 10.4" ,15.4" ,17" or 19" models as detailed on the appropriate diagram.
- When mounting in stud walls please check for any supporting framework behind the plasterboard or other finishing materials.
- Mounting depth required for all models is 37mm.
- Chase all cables into the wall at the bottom of the TV to reduce chances of water reaching the TV.
- When all the material is removed within the dimensions detailed to suit your size TV use an appropriate fixing device with the screws provided leaving a screw thread of 4mm to allow fixing to the TV brackets. In some cases alternative fixings/screws will be required available from hardware stores.
- Connect and check that all functions of the TV work before final fitting.
- Prior to final fitting ensure that the unit has sufficient silicone around the inner edge of the TV frame.
- Finish the outer edge of the screen by tiling or edging profile with suitable grout or silicone.

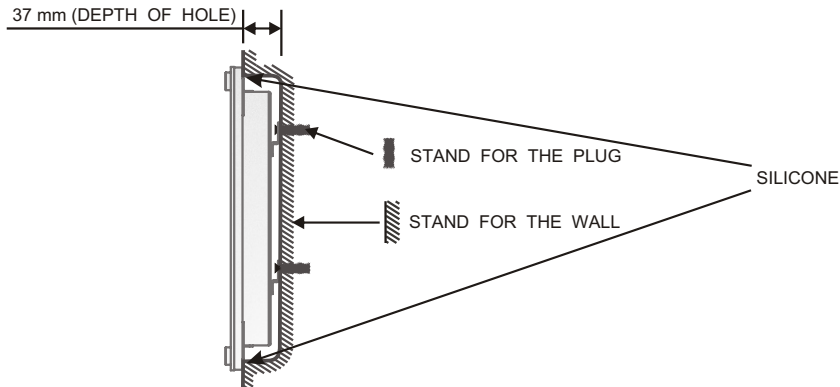

LUXURITE®
EXPAND YOUR VISION

WARRANTY CARD

COMMODITY: _____ PRODUCT MODEL: _____

INSPECTOR: _____ CUSTOMER NAME: _____

SERIES NO: _____ PURCHASING DATE: _____

CONTACT TEL: _____ INVOICE NO: _____

PRODUCTION DATE: _____

SELLER: _____

THROUGH THE TEST OF QUALITY CONTROL DEPARTMENT IN OUR COMPANY, THE PRODUCT HAS BEEN PROVED THAT THE FUNCTION PARA-METER HAS REACHED THE TECHNIQUE CRITERIA. THEY ARE PERMITTED TO LEAVE FACTORY.

REPAIR INFORMATION

DATE	CONDITION	REPAIRMAN

