

Tatung LCD TV

User Manual

Table of contents

1. General Information	3
2. Safety Precautions	4
3. Features	7
4. Connection	8
5. Controls Location	11
6. Accessories	12
7. Remote Control	13
Summary of Control Button	14
8. Controls & Adjustment	
A. General Adjustment	15
Turning the LCD-TV On and Off	15
View Menus and On-Screen Displays	15
Switching PC/Video/S-Video/TV/Component Modes	16
Switching Language Modes	16
Adjusting the Volume	17
How to enter the Menu Items	18
Setting the Sleep Timer	18
B. PC mode Adjustment	19
Adjusting Contrast and Brightness Settings	19
Adjusting the Picture Settings	20
Adjusting Image Settings	21
Adjusting the Audio Settings	22
Viewing Picture-in-Picture (PIP)	24
C. TV mode Adjustment	27
Adjustment the TV Settings	27
Special Sound Option	28
Adjusting the Picture Settings	29
Memorizing the Channel	30
Changing the Channel	33
How to use the Parent Control	34
How to Set up Restrictions Using the 'TV Rating'	37
How to Set up Restrictions Using the "MPAA Rating"	39
Viewing Closed Captions	41
D. AV/SV/CV mode Adjustment	42
Adjustment the AV/SV/CV settings	42

 
E. Other function explanation	43
9.OSD Language List.....	45
10. Troubleshooting.	50
11.Specifications.....	54

General Information

Tatung LCD TV is the latest multi-display active matrix TFT (thin film transistor) liquid crystal high brightness display unit. It is designed to use with VIDEO electronics appliances and PC.

Important Information

Warning: To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.

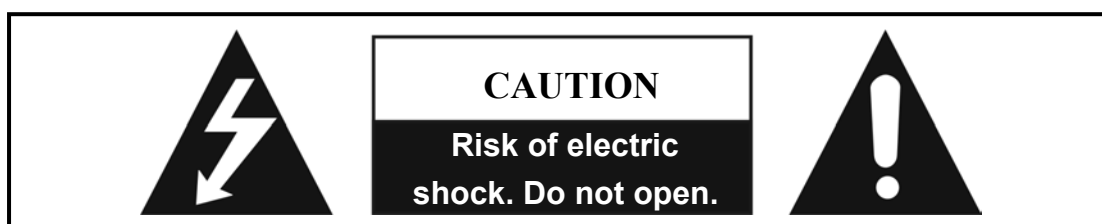

Caution: To reduce the risk of electric shock, do not remove the cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.

Note to CATV system installer: This reminder is provided to call CATV system Installer's attention to Article 820-40 of the National Electrical Code (Section 54 of Canadian Electrical Code, Part 1), that provides guidelines for proper grounding and, In particular, specifies that the cable ground shall be connected to the grounding system of the building as close as to the point of cable entry as practical.

Caution: FCC/ CSA regulations state that any unauthorized changes or modifications to this equipment may void the user's authority to operate it.

Important: One Federal Court has held that unauthorized recording of copyrighted TV programs is an infringement of U.S. copyright laws. Certain Canadian programs may also be copyrighted and any unauthorized recording in whole or in part may be in violation of these rights.

WARNING:

 
According to industry standards, there are certain numbers of defective pixels both bright and dark that are acceptable. Although we produce panels with more than 99.99 percent active cells, there still may be some cells that do not produce light or remain lit. For more information, please contact sales or the technical support at 800.827.2850.

Thank You for Choosing This Product

Your new LCD TV represents the latest product in television technology. We have designed it with easy-to-use on-screen menus and closed caption capabilities making it one of the best products in its class. We are proud to offer you a product that will provide convenient, dependable service and enjoyment for years to come.

Safety Precautions

1. **Cleaning:** Unplug the power cord from the AC outlet before cleaning the product. Use a damp cloth to clean the product. Do not use liquid or aerosol cleaners.
2. **Water and moisture:** Do not use the product near water, such as bathtubs, washbasins, kitchen sinks, laundry tub, swimming pools or wet basements.
3. **Heat sources:** Keep away from heat sources such as radiators, heaters, stoves and other heat-generating products (including amplifiers).
4. For added protection for this television equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna. This will prevent damage to the equipment due to lightning and power-line surges.
5. If an outside antenna is connected to the television equipment, be sure the antenna system is grounded to provide protection against voltage surges.

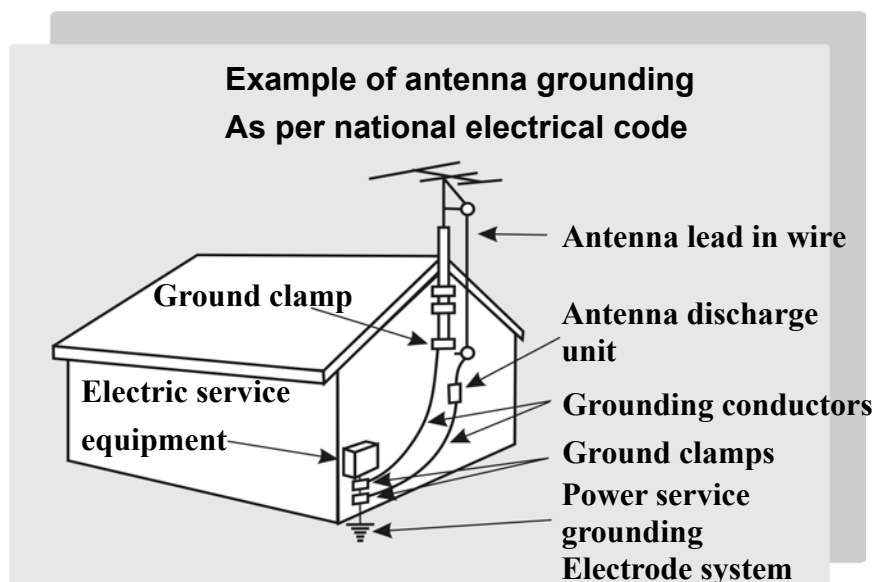

6. Stand: Do not place the product on an unstable cart, stand, tripod or table. Placing the product on an unstable base can cause the product to fall, resulting in serious personal injuries as well as damage to the product.

Use only a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. Use only mounting hardware recommended by the manufacturer.



7. Use care when moving the product on a rolling cart. Sudden stops, excessive force and an uneven floor surface may cause the product to fall from the cart.

8. Ventilation: The vents and other openings in the cabinet are designed for ventilation. Do not cover or block these vents and openings because insufficient ventilation can cause overheating and/or shorten the life of the product. Do not place the product on a bed, sofa, rug or other similar surface, because they can block the ventilation opening. This product is not designed for built-in installation, do not place the product in an enclosed environment such as a bookcase or rack, unless proper ventilation is provided or the manufacturer's instructions are followed.

9. The LCD panel is made of glass. Therefore, it can break when the product is dropped or struck.

10. The LCD panel is a technologically advanced product giving you fine picture details. Occasionally, a few non-active pixels may appear on the screen as a fixed point of blue, green or red. These non-active pixels are considered acceptable according to industry standards.

11. An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them may lead to severe personal injury.

 
Features

 
 
List of Features

Your TV was designed with the latest technology that includes the following special features:

1. Standard VESA mounting holes for use of a wall mount or robot arm.
2. Rotate and tilt features to optimize viewing.
3. Easy-to-use remote control.
4. Easy-to-use on-screen menu system.
5. PIP (picture in picture)
6. Headphone jack for private listening.
7. 16:9 letterbox format available depending upon source.
8. Built-in dual channel speakers.
9. Fine tuning control for the sharpest picture possible.
10. A built-in multi-channel sound decoder for stereo, mono, and SAP.
11. Automatic channel tuning up to 125 channels.
12. Sleep timer.
13. Adjustable picture and sound settings that are stored in the TV's memory.

Connection

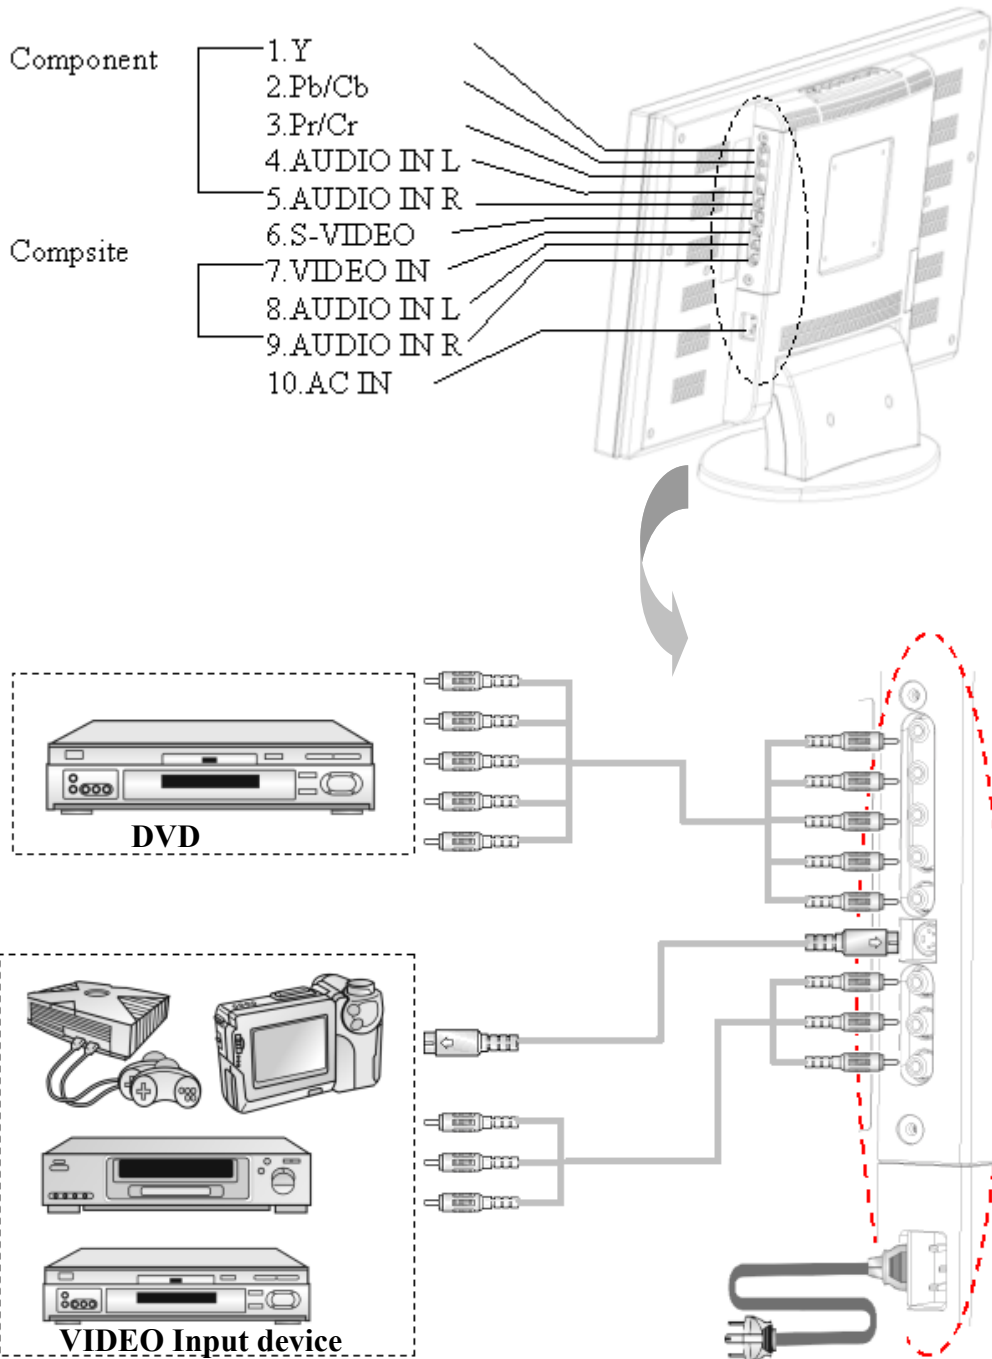

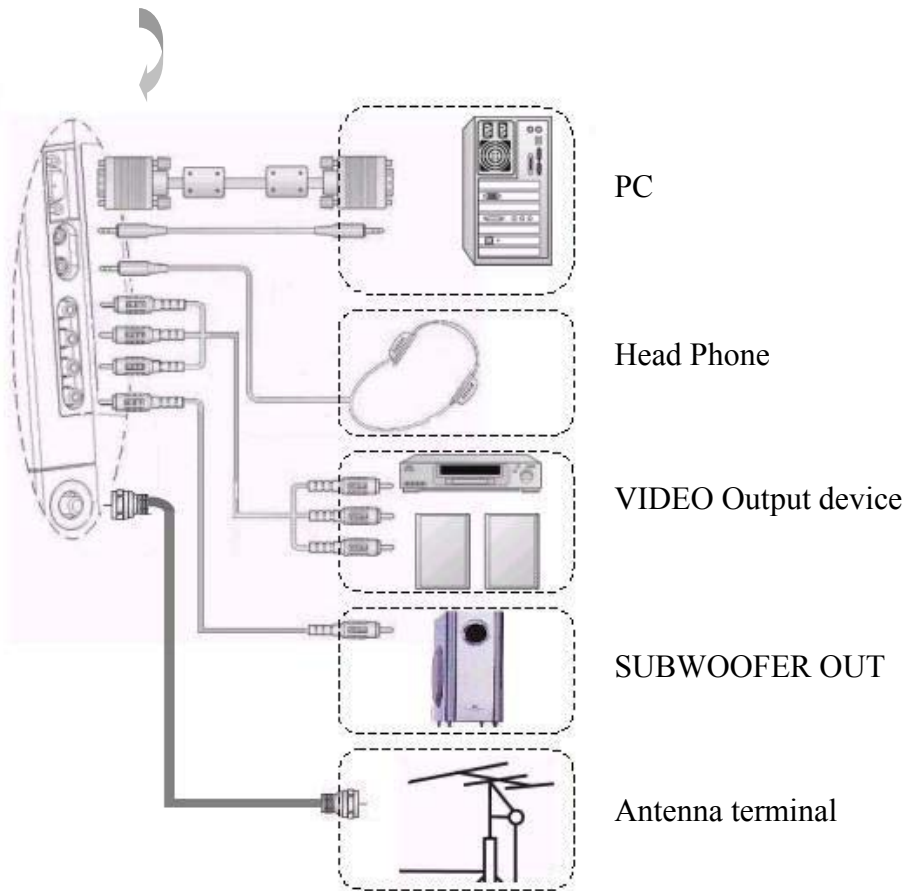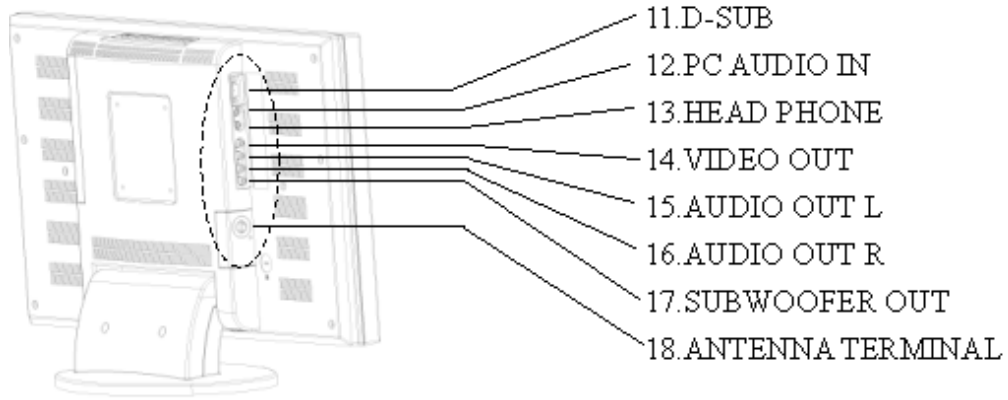

Control Location

These buttons control your TV's basic features including on-screen menus. To use the advanced features, you must use the remote control.

POWER: turn on or turn off the LCD TV.

 
SOURCE: set up the input source (PC, VIDEO, SV, TV, CV).

MENU: displays the main menu.

CHANNEL (down/up): change channels on sequence.

VOLUME(+/-): turn up or turn down the volume.

ASPECT RATIO: sets up the display (Normal, Periscope, Zoom or Full).

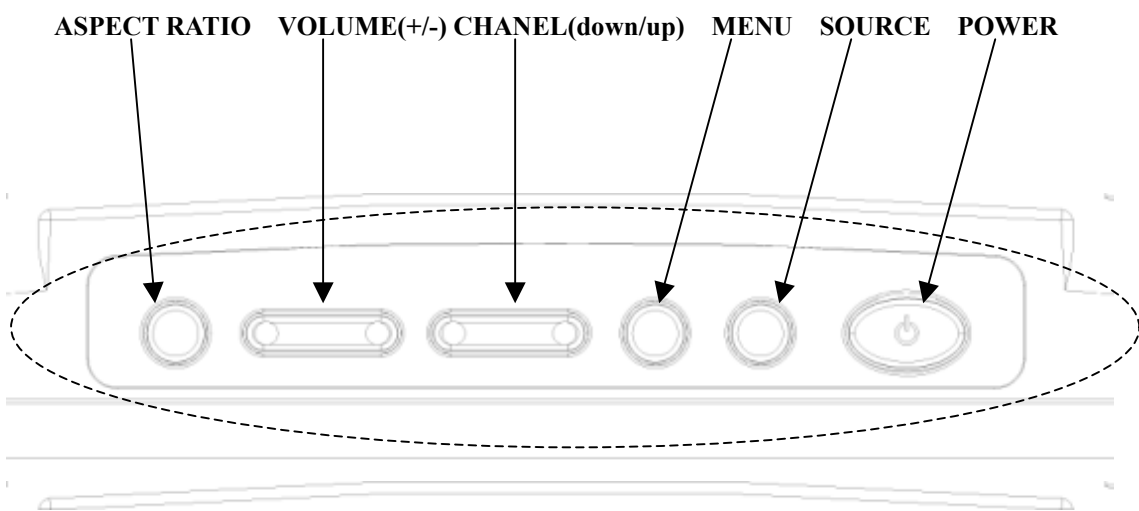

Speaker

 
Speaker



Remote sensor window

Aim the remote control at the sensor window.

Accessories

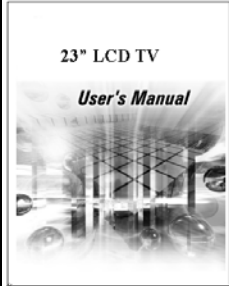

User's manual



Remote control & Batteries (4A x2)



15 Pin D-Sub Signal Cable



 
Antenna Cable



Power Cord

Remote Control

The remote control pad illustrates the basic functions or your remote control.

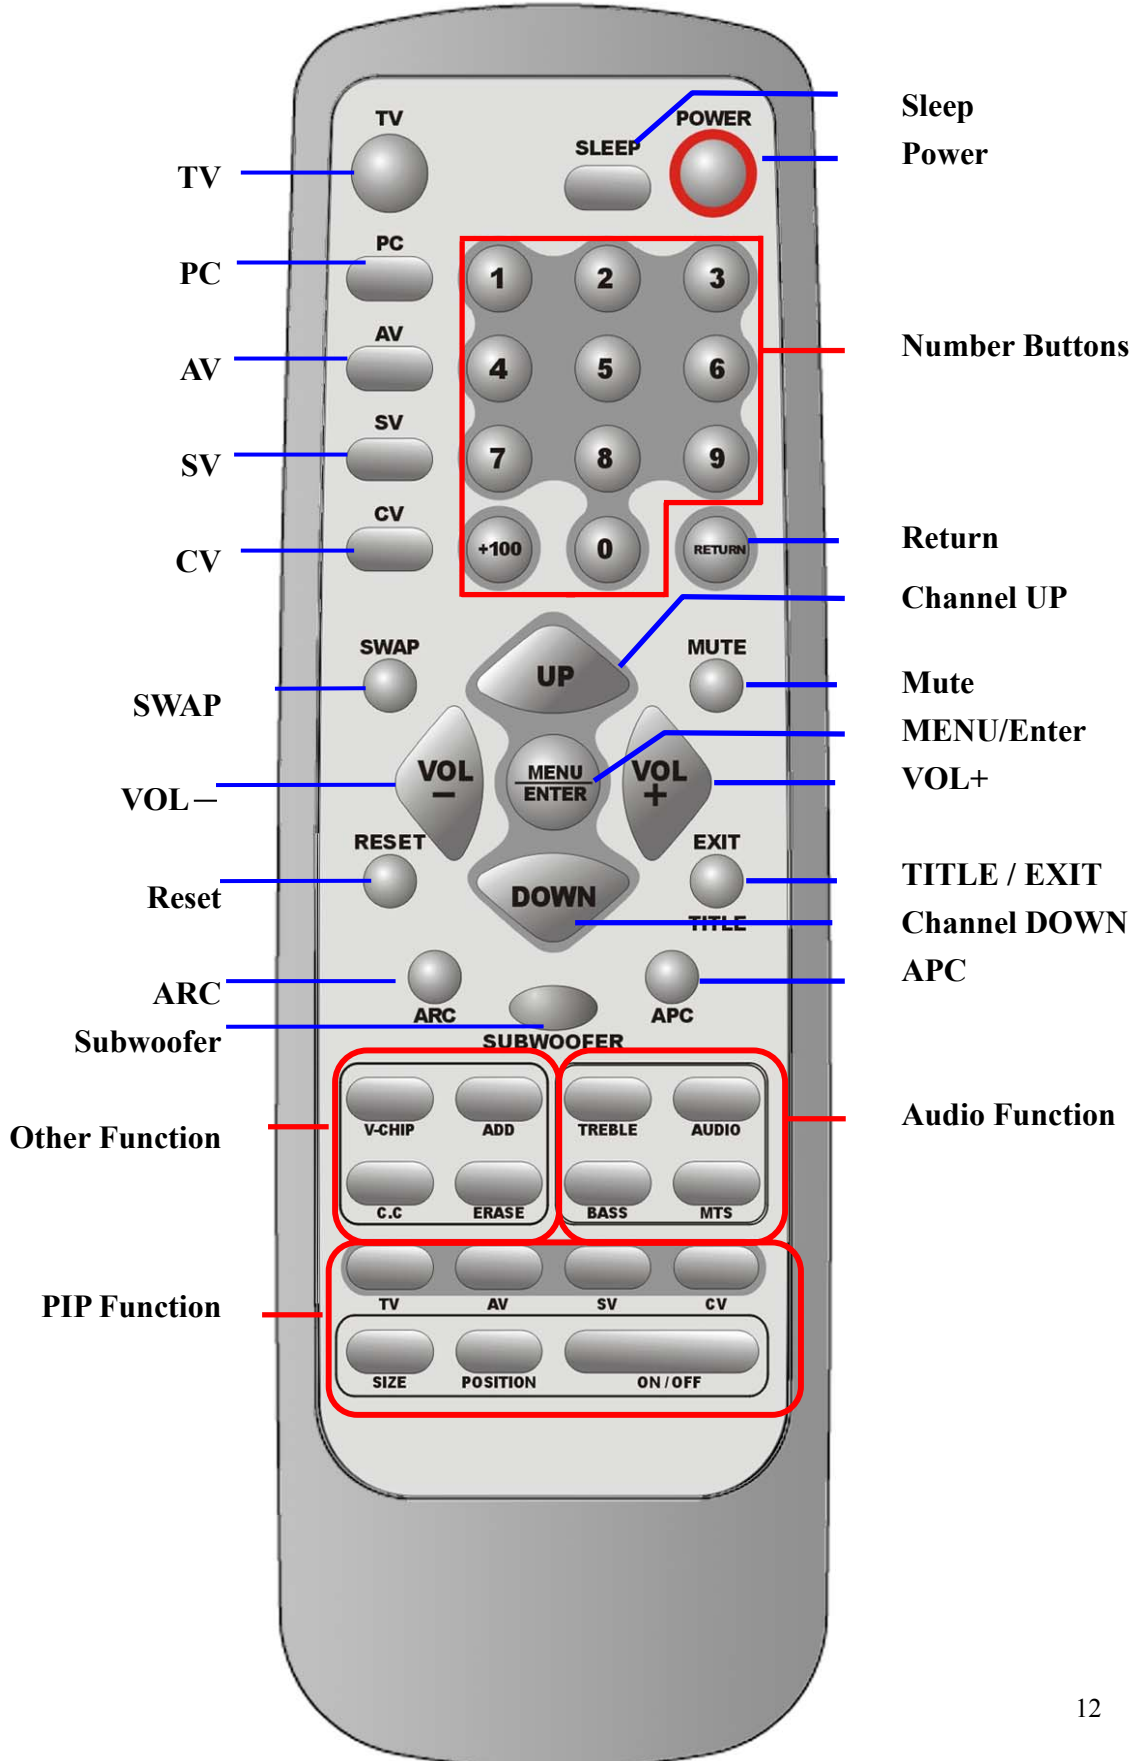

Controls & Adjustment

A. General Adjustment

Turning the LCD-TV On and Off:

To turn on the TV, plug the power cable into a 110V or 220V outlet. Press the **Power** button on the top of the panel or you can use the remote to turn the TV on.



An indicator light shows as follows:

In PC mode	---	Green light
In PC mode (power save)	---	Orange light
In TV, AV, SV, CV mode	---	Blue light

Viewing the Menus and On-Screen Displays:


Viewing the Menus

  1. With the power on, press the *MENU* Button. The main menu appears on the screen.

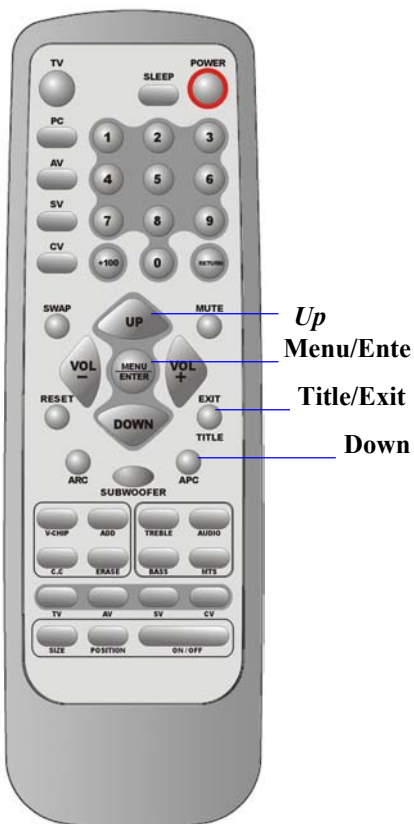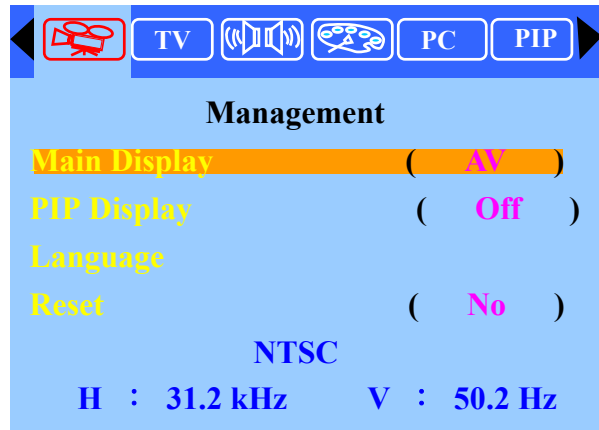

2. Use the *VOL (+)* or *VOL (-)* button to select one of the menu options. Then press the *ENTER* button to access the menu's Sub-menu.
3. Press the *EXIT* button to exit from the Menu.

 Switching PC/Video/S-Video/TV/Component Modes:

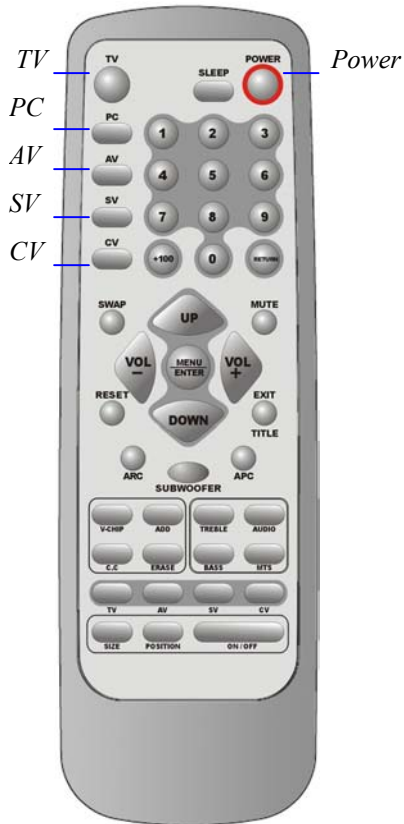

1. Turn on the power of the connected video equipment.
2. Press the applicable input source.

Press *TV* button to switch to TV mode.

 
Press *PC* button to switch to PC mode (VGA).

Press *AV* button to switch to AV mode.


Press *SV* button to switch to S-Video mode.

Press *CV* button to switch to CV mode (Y, Pb/Cb, Pr/Cr).

Switching Language Modes:

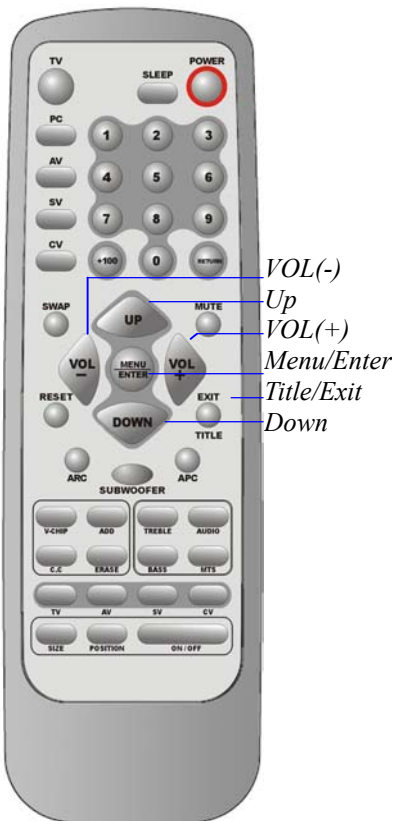

 1. Press the *MENU* button to display the main menu.
2. Press the *ENTER* button to enter **Management**.
Press the *UP* or *DOWN* button to select **Language**.
Then press the *ENTER* button.

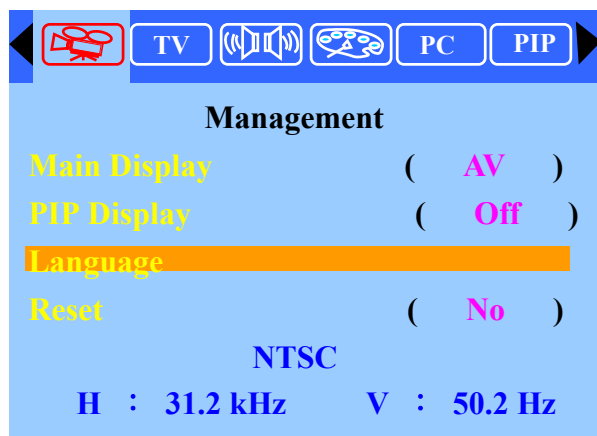

3. Press the *UP* or *DOWN* button to select the desired language mode then press the *ENTER* Button.



4. Press the *EXIT* button to exit OSD mode.

Adjusting the Volume:

Using Volume Control

Press the *VOL (+)* or *VOL (-)* button to increase or decrease the sound volume.

Using Mute

At any time, you can temporarily disable the sound using the Mute button.

1. Press the *MUTE* button and the sound is disabled.
2. Press the *MUTE* again or *VOL(+)* or *VOL(-)* button to turn the sound back to the previous level.

 
The mute function is automatically turned off when any of the following buttons is pressed: VOL(+) or VOL(-).



How to enter the Menu Items :



1. Press the **MENU** button to display the main menu screen.

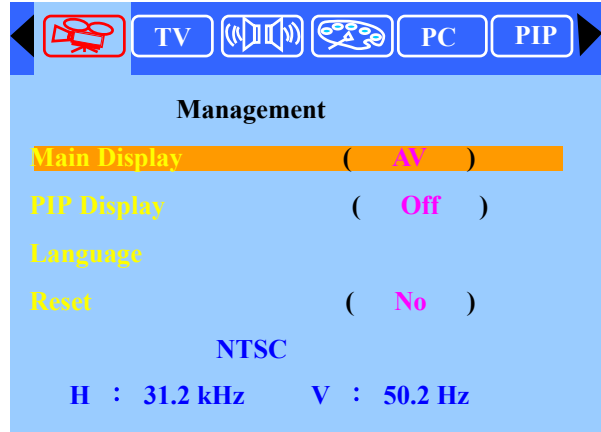

2. Use the **VOL(+)** or **VOL(-)** button to select one of the menu option. Then press the **ENTER** button to access the menu's Sub-menu.
3. Press the **VOL(+)** or **VOL(-)** button to make adjustments.
4. Press the **EXIT** button to return to the previous screen or exit from the Menu.

Setting the Sleep Timer:



Sleep

You can set the Sleep Timer to automatically turn off the LCD TV.

1. Press the **SLEEP** button to display the Sleep Timer screen.
2. Press the **SLEEP** button to set the sleep timer (in minutes).

The time can be set in increments of 30 minutes in the range between 30 and 90 minutes.

30 min → 60 min ~> 90 min → OFF

Note:

 
The Sleep Timer screen automatically disappears in

3 seconds.


B.PC mode Adjustment

Adjusting the Contrast & Brightness Settings:


You may need to perform separate adjustments for brightness and contrast for different video modes. Generally, PC mode will be best viewed with lower brightness and contrast settings than are appropriate for the other modes.

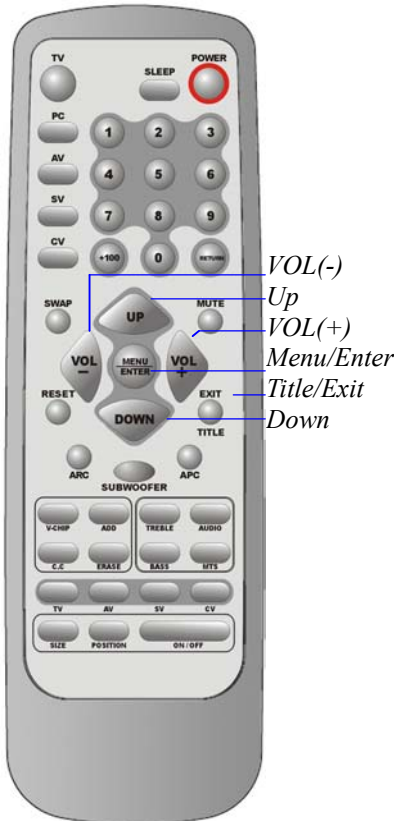

 1. Press the *MENU* button to display the main menu.

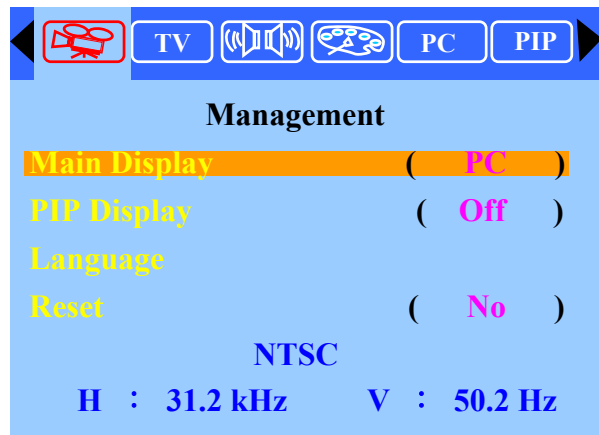

 2. Press the *VOL(+)* or *VOL(-)* button to move the cursor to **Picture Adjust**.

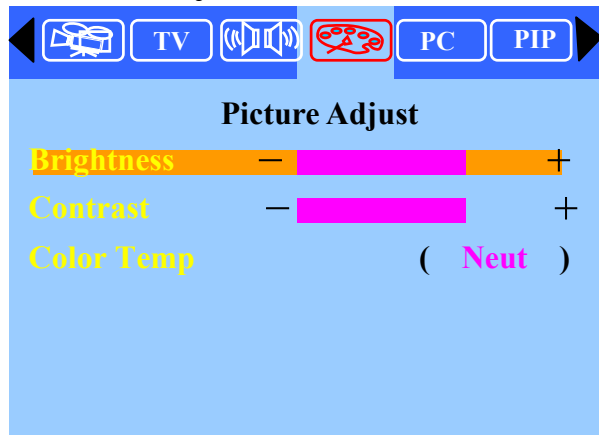

3. Press the *ENTER* button to enter **Color Adjust**.
4. Press the *UP* or *DOWN* button to the desired item (Brightness, Contrast).
5. Press the *VOL (+)* or *VOL (-)* button to set the desired item.

 
 





6. Press the *EXIT* button to return to the previous screen or exit.

Adjusting the Picture Adjust Settings:

1. Press the *MENU* button to display the main menu.

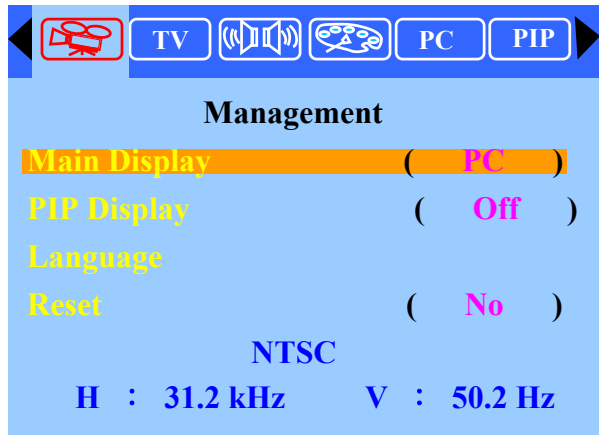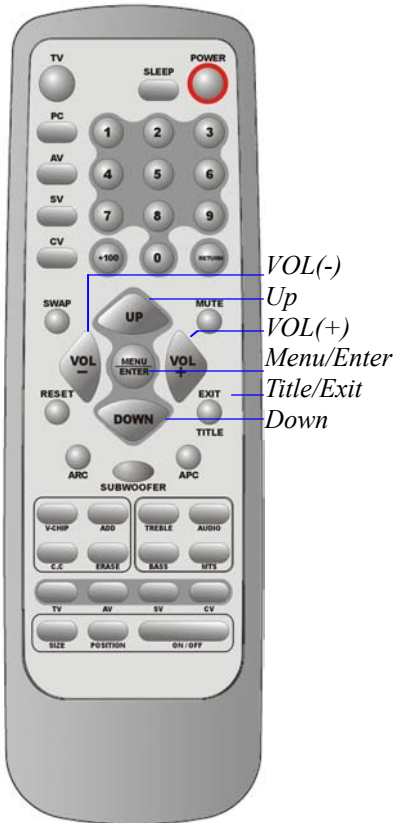

 2. Press the *VOL(+)* or *VOL(-)* button to move the cursor to **Picture Adjust**.

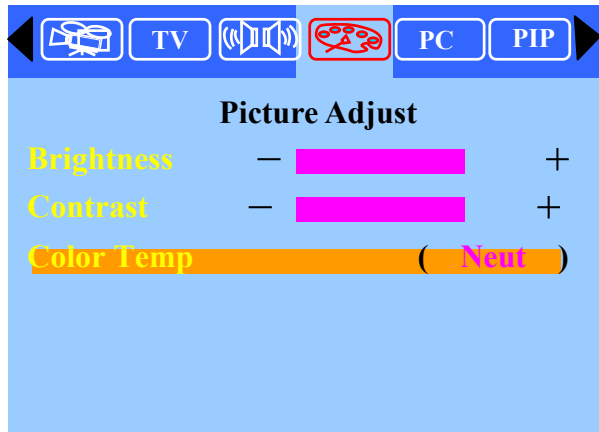


3. Press the *ENTER* button to enter **Picture Adjust**.

4. Press the *UP* or *DOWN* button to **Color temp (Neut.)**.

5. Press the *VOL (+)* or *VOL (-)* button to set the desired item (Cool Neutral Warm User).



 5.1 When selecting **user**, press the *ENTER* button to enter **User Color Adjust**.

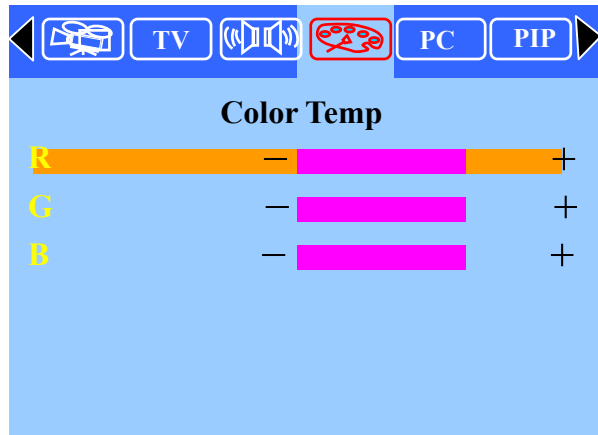

5.2 Press the *UP* or *DOWN* button to the desired item (**R, G, B**).

 
 
5.3 Press the *VOL (+)* or *VOL (-)* button to set the desired item (**R, G, B**).




6. Press the *EXIT* button to return to the previous screen or exit.

Adjusting the Image Adjust Settings :

1. Press the *MENU* button to display the main menu .

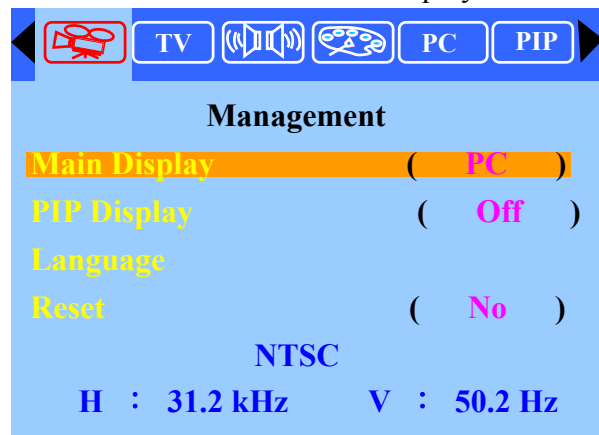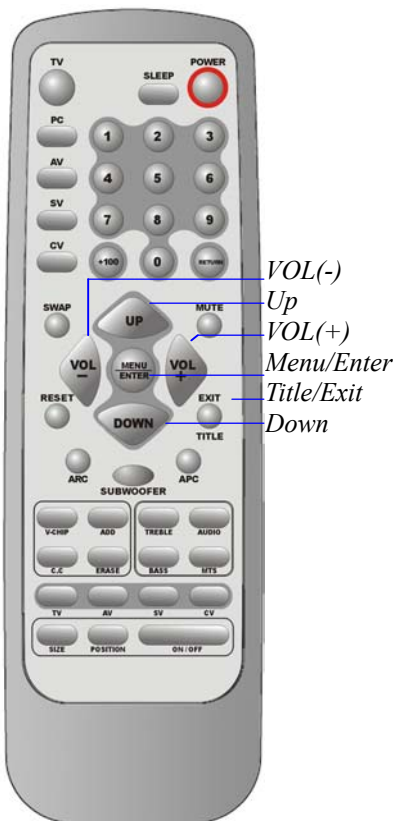

 2. Press the *VOL (+)*/*VOL (-)* button to move the cursor to **PC Adjust**.

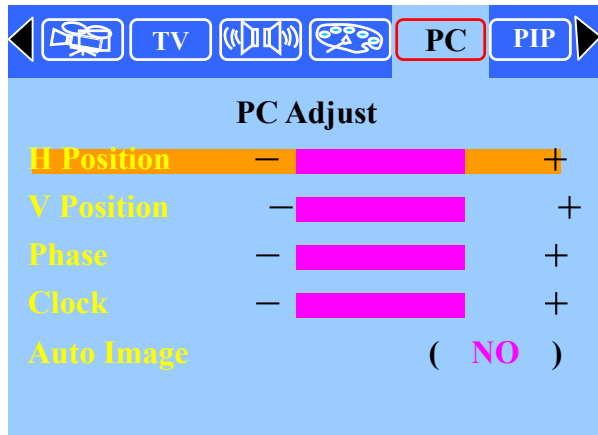


3. Press the *ENTER* button to enter **PC Adjust**.
4. Press the *UP* or *DOWN* button to the desired item (H. Position V. Position Phase. Clock. Auto Image).
5. Press the *VOL (+)* or *VOL (-)* button to set the desired item (H Position V Position Phase. Clock. Auto Image).




6. Press the *EXIT* button to return to the previous screen or exit.


Adjusting the Audio Adjust Settings :

  1. Press the *MENU* button to display the main menu .

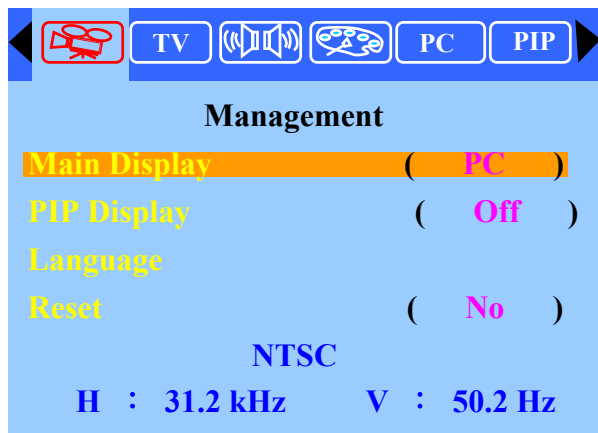

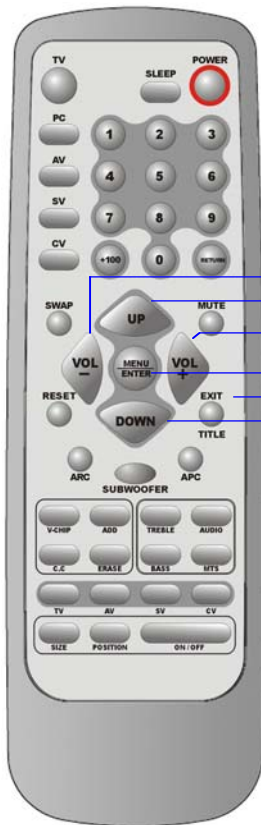

 2. Press the *VOL(+)* or *VOL(-)* button to move the cursor to **Audio Adjust**.

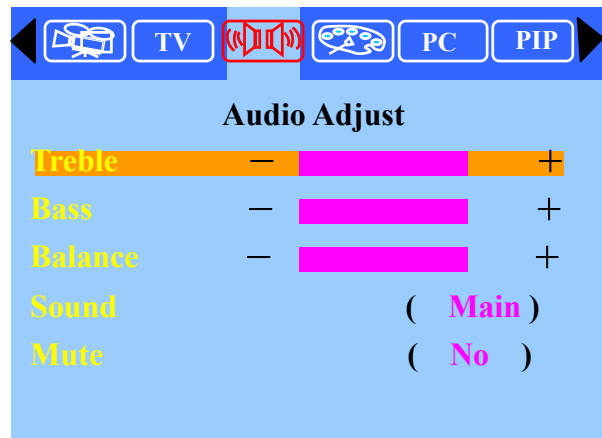



3. Press the *ENTER* button to enter **Audio Adjust**.


4. Press the *UP* or *DOWN* button to the desired item (Treble. Bass. Balance. Sound. Mute.).

5. Press the *VOL (+)* or *VOL (-)* button to set the desired item (Treble, Bass, Balance, Sound, Mute).



   Note:
When using the PIP feature in PC mode, you can listen to the sound of the sub screen instead of the main screen.

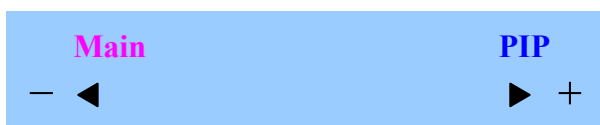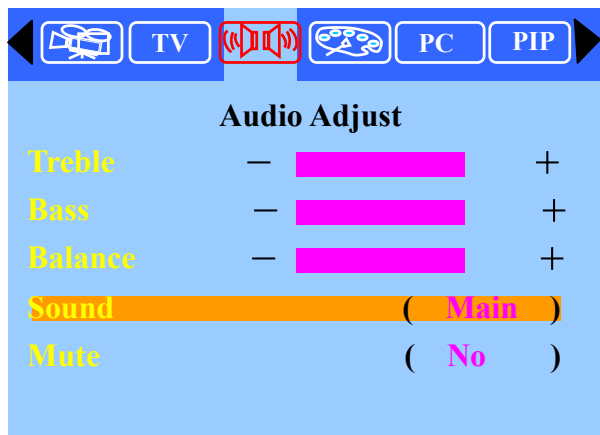


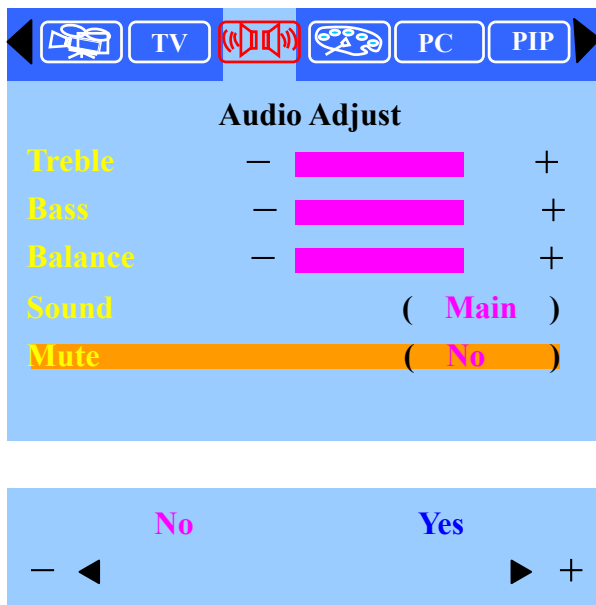

6. Press the *EXIT* button to return to the previous screen or exit.


Viewing Picture-in-Picture (PIP):

 PIP: When you select PC source as the main display, you can also select another source as sub-display: Video, S-video, TV and Component video. PC source cannot be used in PIP Display. You can use the PIP feature to simultaneously watch two video sources.

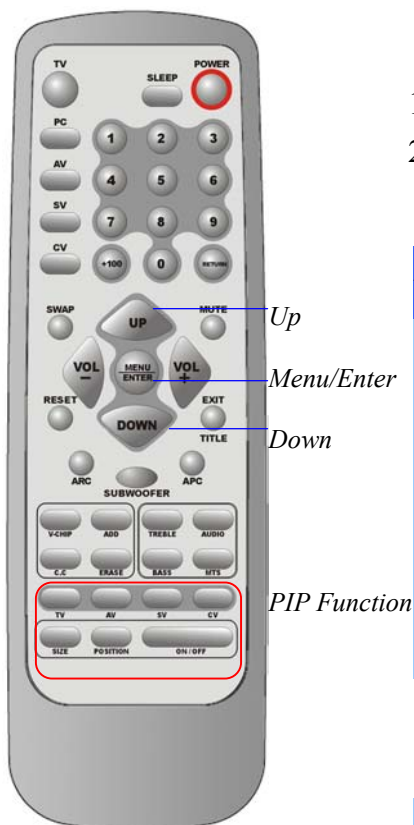


Activating Picture-in-Picture

 
1. Press the *MENU* button to display the main menu.
2. Press the *UP* or *DOWN* button to select the **PIP Display** and press the *MENU* button to select source.

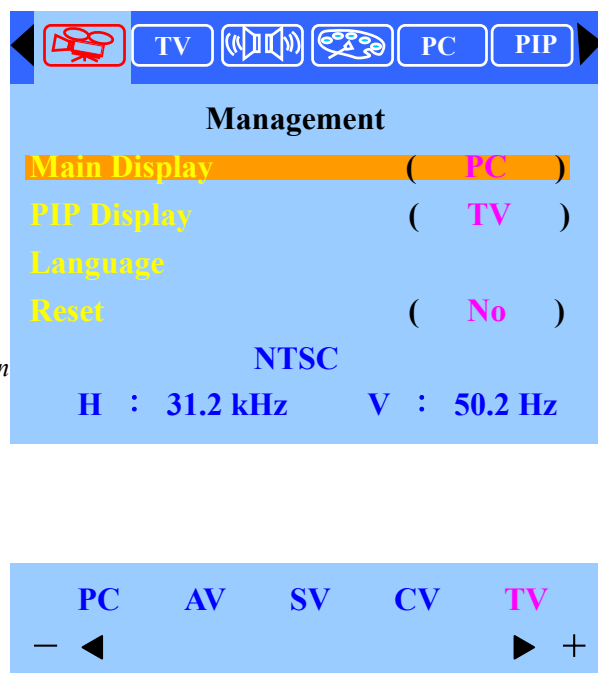

 3. Press the *VOL (+)* or *VOL (-)* button to select the desired source.
4. Return to previous OSD and press the *VOL(+)* or *VOL(-)* button to select the **PIP**.

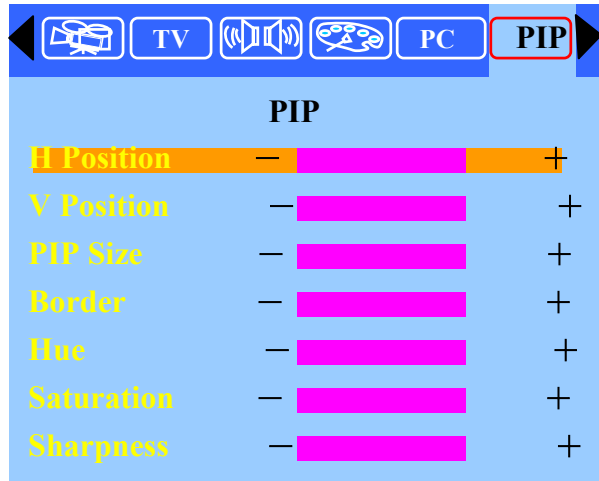

 5. Press the **ENTER** button to enter PIP.
6. Press the **UP** or **DOWN** button to select the desired item (H/V Position, PIP Size, Border, Hue, Saturation, Sharpness).
7. Press the *VOL (+)* or *VOL (-)* button to set the desired item.

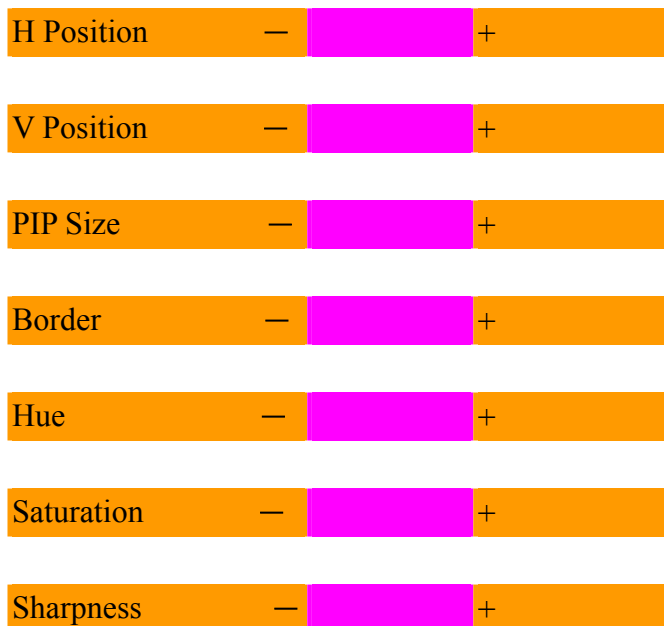

8. Press the **EXIT** button to return to the previous screen or exit from the Menu.

A shortcut to access the PIP menu: Simply press the PIP Function Button on the remote control.

Selecting a Signal Source (External A/V) for PIP

Press the *ON/OFF* button to display the PIP window.

Press the **AV SV CV TV** to select all of the available signal sources:

“Video”, “S-Video”, “DVD” and “TV”.

Changing the Position of the PIP Window

 
When you press the *Position* button repeatedly, the PIP window moves from corner to corner on the TV screen.

Changing the Size of the PIP Window


Press the *Size* button to alternate between a smaller and Larger PIP window.

C.TV mode Adjustment


Adjustment the TV adjust settings:

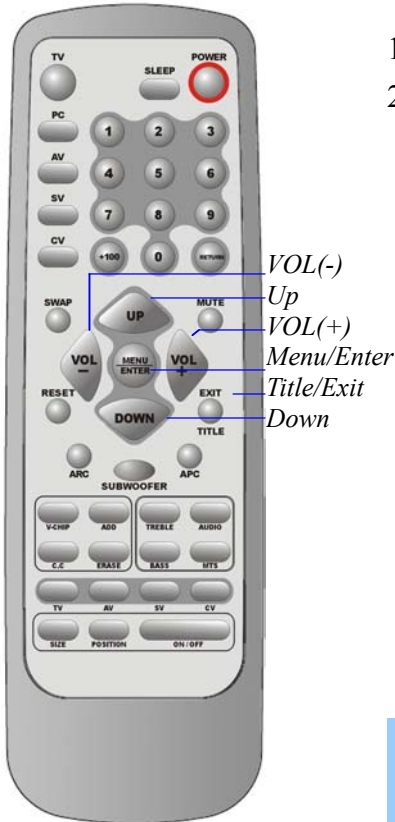

 1. Press the *MENU* button to display the main menu.
2. Press the *ENTER* button to enter **Management**
Press the *UP* or *DOWN* button to select the **Main Display (TV)**.

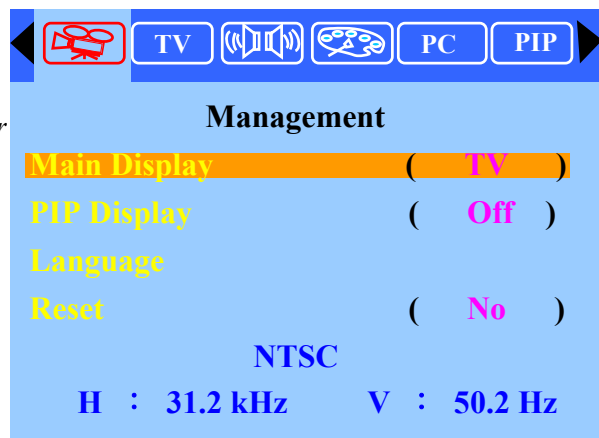

 3. Press the *VOL (+)* or *VOL (-)* button to select **TV** source.
4. Press the *EXIT* button to return to the previous screen Press the *VOL(+)* or *VOL(-)* button to select the **TV Setting**.

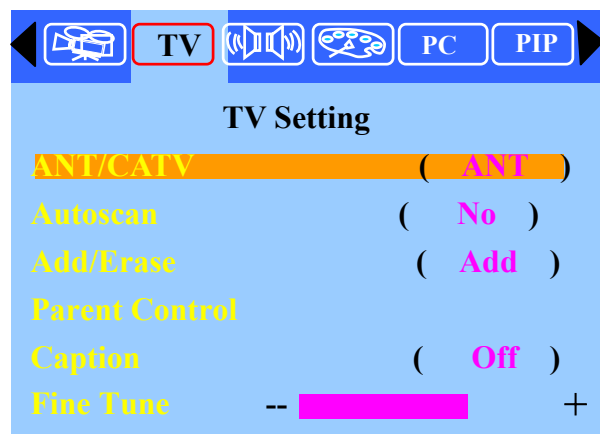

5. Press the *ENTER* button to **TV Setting**.
6. Press the *UP* or *DOWN* button to select the desired item.
7. Press the *VOL (+)* or *VOL (-)* button to set the desired item.
8. Press the **EXIT** button to return to the previous screen or exit from the Menu.

Special Sound Option:



Choosing a Multi-Channel Sound (MTS)

Soundtrack

 
Depending on the particular program being broadcast, you can listen to stereo, mono, or a Separate Audio Program. (SAP audio is typically a foreign-language translation; SAP may have unrelated information like News or Weather).

Choose **Stereo** for channels that are broadcasting in stereo.


Choose **Mono** for channels that are broadcasting in mono or are having difficulty receiving a stereo signal.

Choose **SAP** to listen to the Separate Audio Program, which is usually a foreign-language translation.


Adjusting the Picture settings:

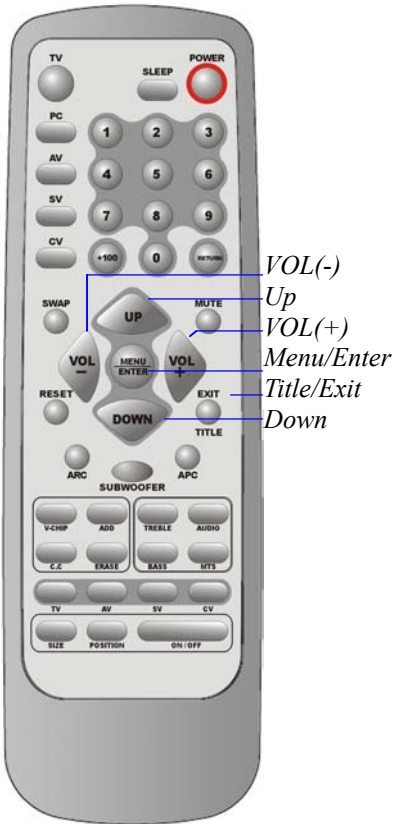

 1. Press the *MENU* button to display the main menu.
2. Press the *ENTER* button to enter **Management** Press the *UP* or *DOWN* button to select the **Main Display (TV)**.

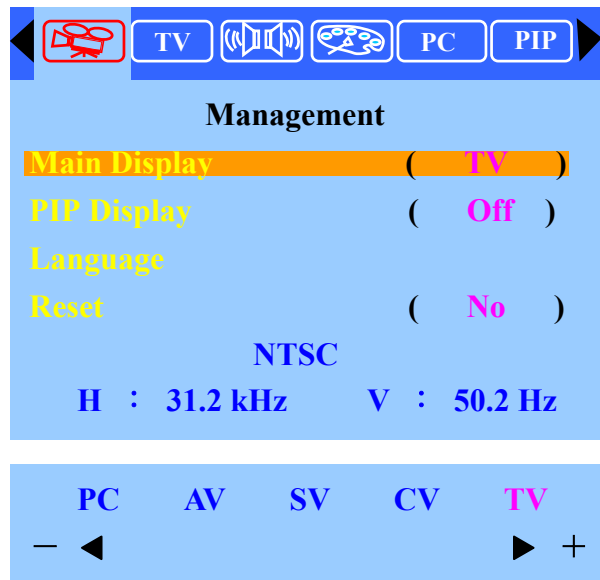

 3. Press the *VOL (+)* or *VOL (-)* button to select **TV** source.
4. Press the *EXIT* button to return to the previous screen Press the *VOL(+)* or *VOL(-)* button to select the **Picture Adjust** than Press the *ENTER* button.

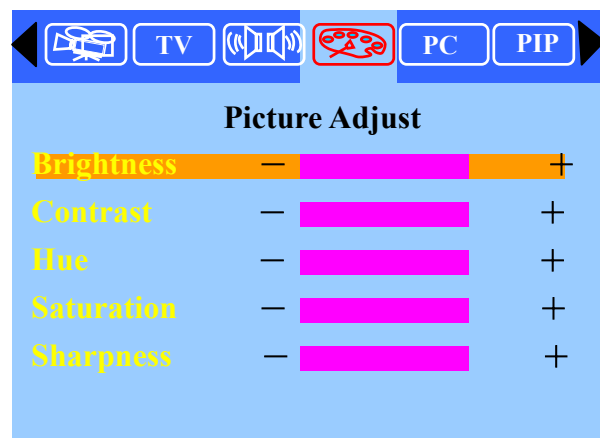

5. Press the *UP* or *DOWN* button to select the desired item.

6. Press the *VOL (+)* or *VOL (-)* button to set the desired item.



 
7. Press the *EXIT* button to return to the previous screen or exit from the Menu.

Memorizing the Channel:

Your TV can memorize and store all of the available channels for both standard broadcast (antenna) and cable channels. After the available channel are memorized, press the UP and Down button to scan through the channels. This eliminates the need to change channels by entering the channel digits.

There are two steps for memorizing channels:


Selecting a broadcast source, memorizing the channels (automatic) or adding/deleting channels (manual)

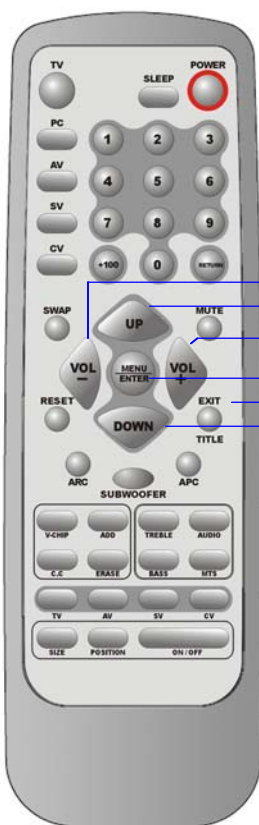

Selecting the Video Signal-source

Before your television can memorize the available channels, you must specify the type of signal source that is connected to the TV (i.e., an antenna or a cable system).

 
1. Press the *MENU* button to display the main menu.
 2. Press the *ENTER* button to enter **Management**
- Press the *UP* or *DOWN* button to select the **Main Display (TV)**.

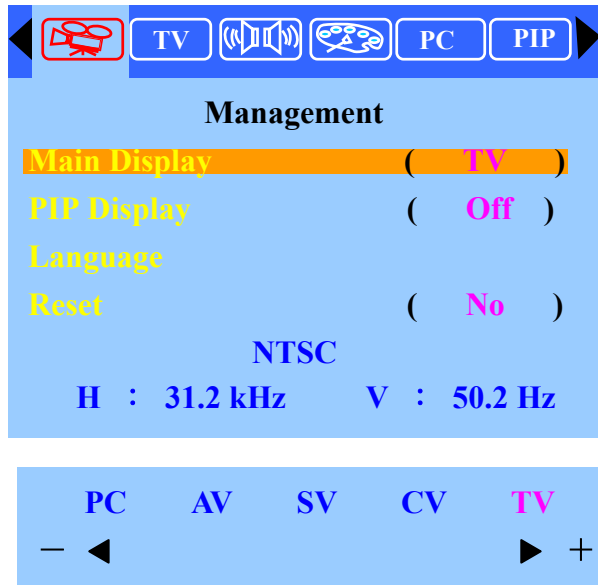

3. Press the *VOL (+)* or *VOL (-)* button to select **TV** source than press the *ENTER* button.
4. Press the *EXIT* button to return to the previous screen Press the *VOL(+)* or *VOL(-)* button to select the **TV Setting**.


Note:

 1. **ANT** is standard broadcast television received through your antenna for channels 2-69
2. **STD**, **IRC**, and **HRC** are all formats of cable TV. Contact your TV provider to find out which format is used in your area.

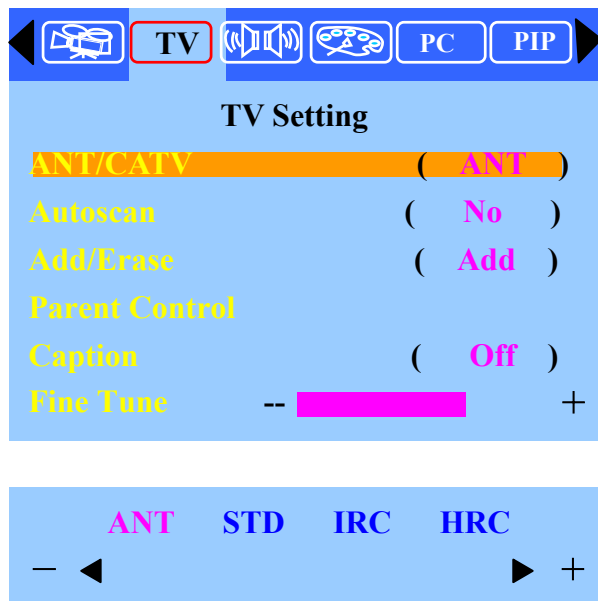


5. Press the *ENTER* button to **TV Setting**.
6. Press the *VOL (+)* or *VOL (-)* button to select **TV** system type than press the *ENTER* button.

 Storing Channel & Memory (Automatic Method)

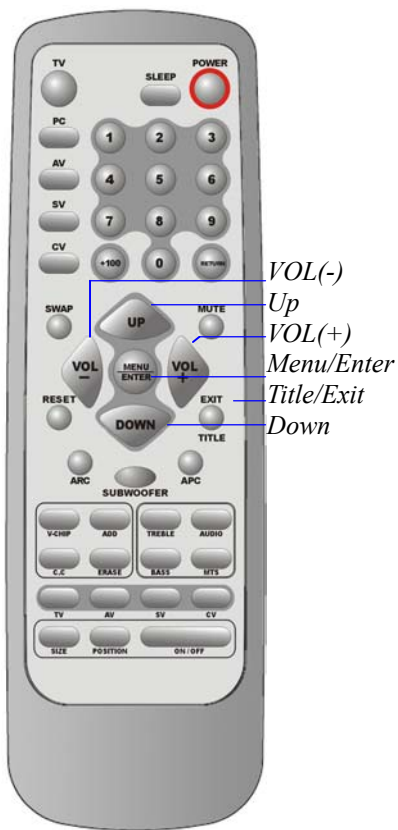

First, select the correct signal source (ANT, STD, IRC, HRC). See previous step.


 
1. Press the *MENU* button to display the main menu.
2. Press the *VOL(+)* or *VOL(-)* button to select the **TV Setting**.
3. Press the *ENTER* button to **TV Setting**.
4. Press the *UP* or *DOWN* button to select the **Auto scan (Yes)**.

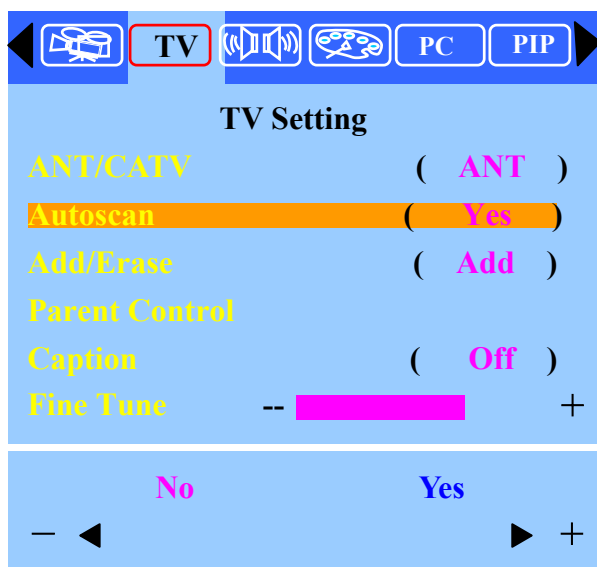

5. Press the *VOL (+)* or *VOL (-)* button to select “Yes”,
The TV automatically cycles through all of the available channels and stores them in memory. This takes about one or two minutes.
6. After all the available channels are stored, the CH program menu reappears.

Adding and Erasing Channels (Manual Method)

  1. Press the *MENU* button to display the main menu.
2. Press the *VOL(+)* or *VOL(-)* button to select the **TV Setting**.
3. Press the *ENTER* button to **TV Setting**.
4. Press the *UP* or *DOWN* button to select the **Add/Erase (Add)**.

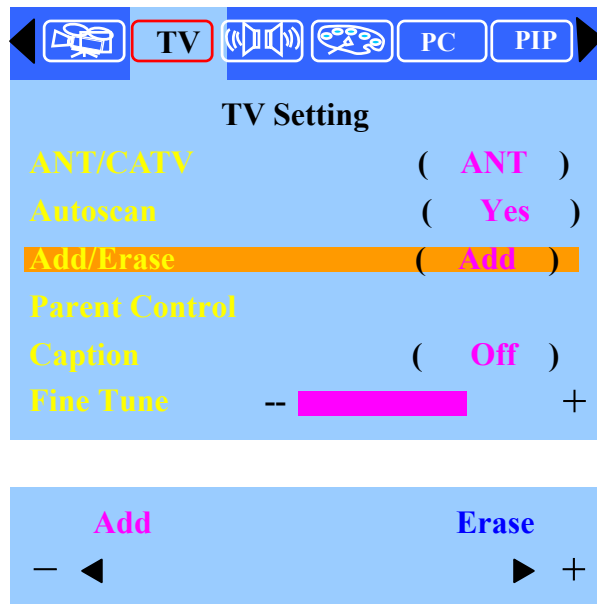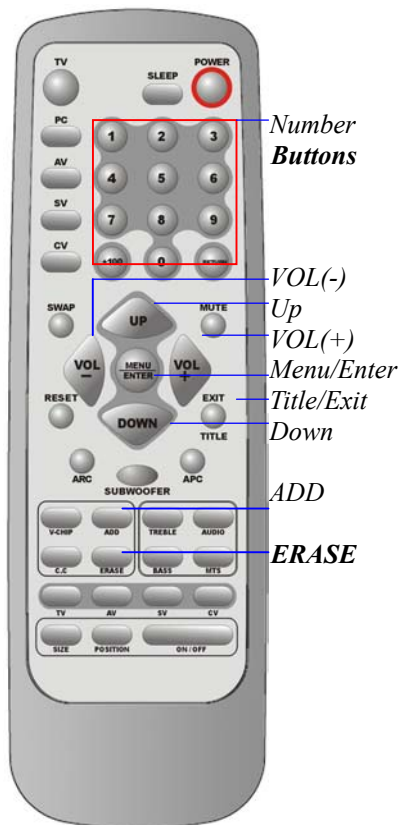

5. Press the *VOL (+)* or *VOL (-)* button to select **Add/Erase** than press the *ENTER* button.
6. You can use the *ADD/ERASE* button on the remote control to add/erase the channel directly.

You can view any channel including an erased channel by using the number buttons on the remote control. However, the channel you erased can't be memorized unless you do the steps as above.

Changing the Channel

 
This LCDTV set allows you to select up to 125 channels (1 to 125). To select a channel, enter a 2-or 3-digit number.

Using the Channel Buttons

1. Press the *UP* or *DOWN* button to change channels.

When you press the *UP* or *DOWN* button, the TV

changes channel in sequence. You will see all the channels that have been memorized, (the TV must be memorized). You will not see channels that were either erased or not memorized.

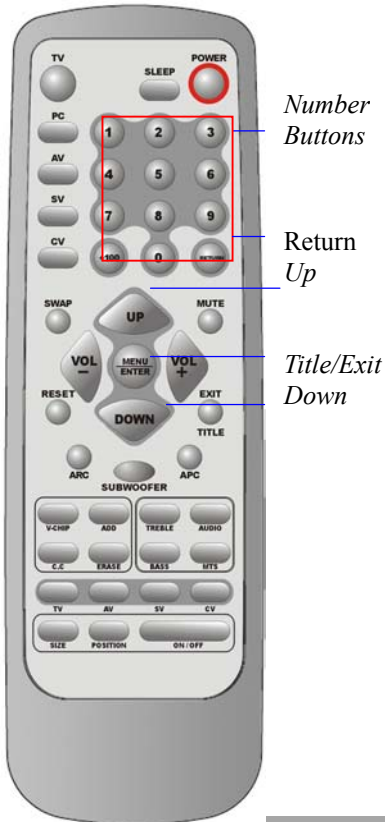

Directly Accessing Channel

Using the **Number buttons** to watch a specific channel.

For example, to select channel 27, press “2” then “7”. The TV will change channels.

When you use the number buttons, you can select channels that were either erased or not memorized. To select a channel over 100, press the +100 button. (For example, to select channel 122, press “+100” then “2”. then “2”).

 
How to using the Parent Control:

 
The Parental Control feature automatically locks out programming that is deemed inappropriate for children.

The user must first enter a PIN (Personal ID number) before any of the Parent Control restrictions can be setup or changed.

Setting Up Your Personal ID Number (PIN)

1. Press the **MENU** button to display the main menu.
2. Press the **VOL (+)** or **VOL (-)** button to select the **TV Setting**.
3. Press the **ENTER** button to **TV Setting**.
4. Press the **UP** or **DOWN** button to select the **Parent Control** than press the **ENTER** button.

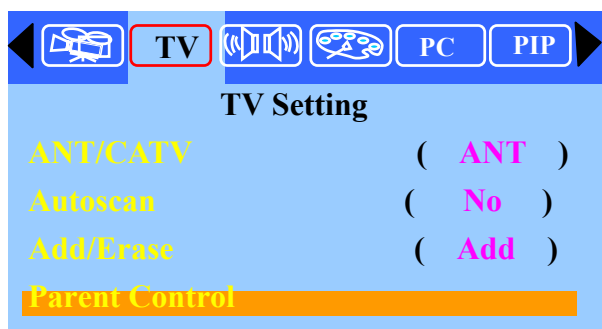

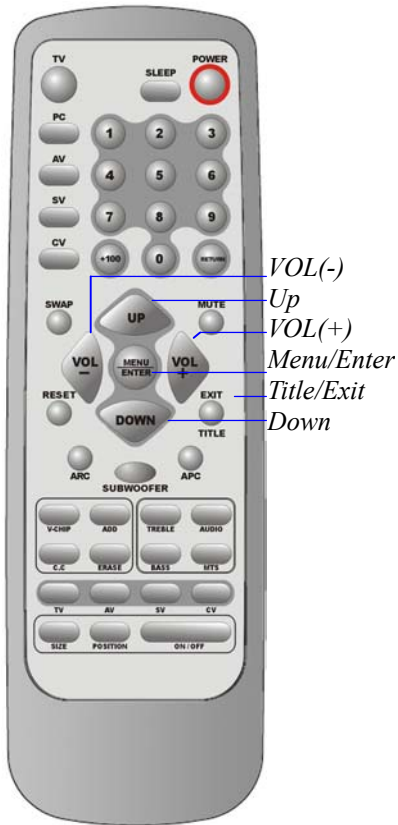

Please Enter Pin :
 --- --- --- ---

5. The “**Please Enter Pin**” screen will appear, enter your 4-digit PIN number. For the initial setup, you must enter 1234 (initial code).

 
6. After entering a valid PIN number, the **Parent Control** screen will appear, Press the *UP* or *DOWN* button to select the “**Change PIN**”.



Please Enter New Pin :
 --- --- --- ---

7. The Change PIN screen will appear. Choose any 4-digits for your PIN and enter them.


Change Pin OK!!

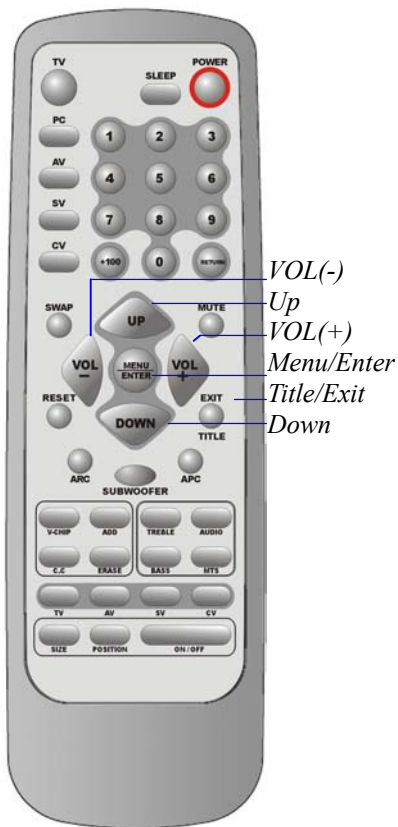

As soon as the 4-digits are entered, the “Change Pin OK!!” screen appears. Your PIN has been memorized. Press the EXIT button to exit.

How to Enable / Disable the Parent Control

 
1. Press the *MENU* button to display the main menu.
2. Press the *VOL (+)* or *VOL (-)* button to select the **TV Setting**.
3. Press the *ENTER* button to **TV Setting**.
4. Press the *UP* or *DOWN* button to select the **Parent Control** than press the *ENTER* button.
5. The “**Please Enter Pin**” screen will appear, enter your 4-digit PIN number.
6. After entering a valid PIN number, the **Parent Control** screen will appear, Press the *UP* or *DOWN* button to select the **Parent Control (ON)**”.

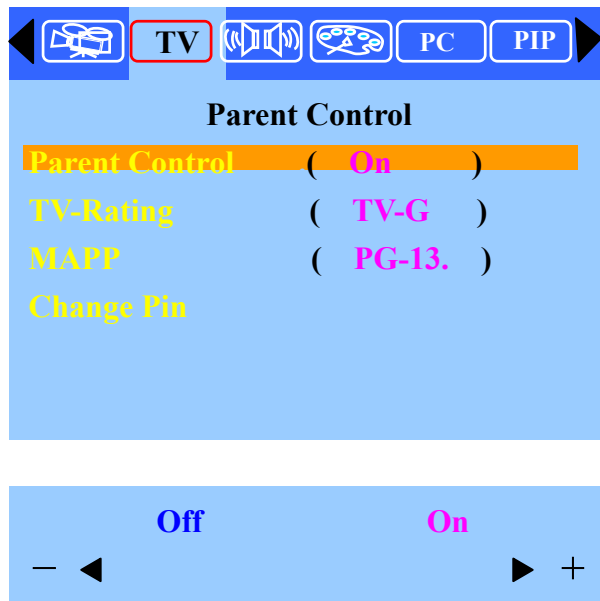


7. Press the *VOL (+)* or *VOL (-)* button to select **On** than press the *ENTER* button .The “**TV Rating**” and “**MPAA Rating** ” will lock out the program that you don’t want to watch. If you want to disable the Parental Control Function. Select “**Parent Control (OFF)**”. The locked programs will be released automatically.

How to Set up Restrictions Using the “TV Rating”:

 First, set up a personal identification number (PIN), and enable the Parent control. (See previous section). Parental restrictions can be set up using either of two methods: The TV Guidelines or MPAA rating.

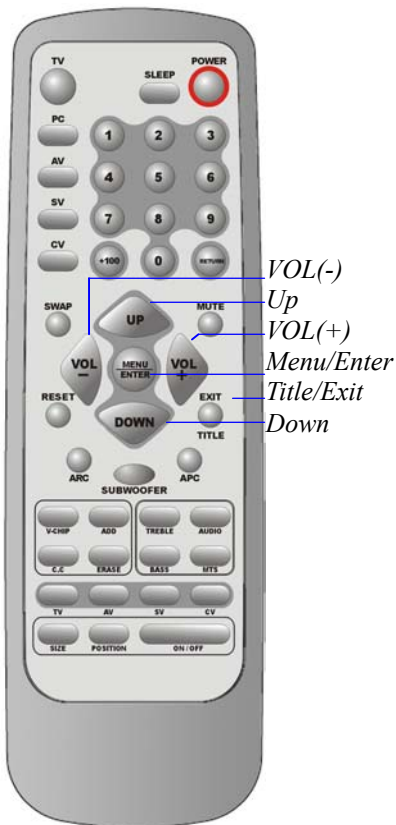

 1. Press the *MENU* button to display the main menu.
2. Press the *VOL (+)* or *VOL (-)* button to select the **TV Setting**.
3. Press the *ENTER* button to **TV Setting**.
4. Press the *UP* or *DOWN* button to select the **Parent Control** than press the *ENTER* button.
5. The “**Please Enter Pin**” screen will appear, enters your 4-digit PIN number.
6. After entering a valid PIN number, the **Parent Control** screen will appear, Press the *UP* or *DOWN* button to select the “**TV Rating (TV-G)**”.

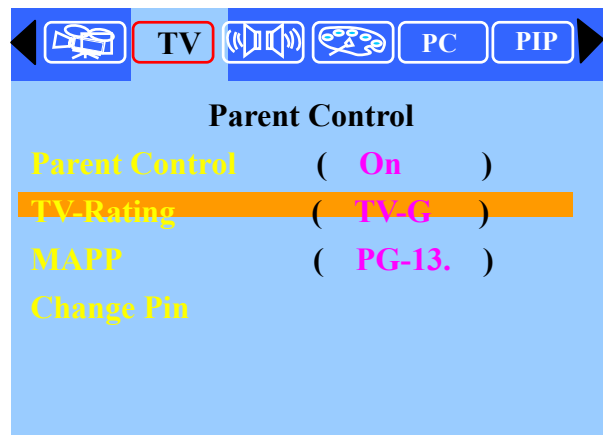

TV-Y	Young children
TV-Y7	Children 7 and over

TV-G	General audience
TV-PG	Parental guidance
TV-14	Viewers 14 and over
TV-14	Viewers 14 and over
TV-MA	Mature audience

	B/U	FV	D	L	S	V
TV-Y	--	--	--	--	--	--
TV-Y7	--	B	--	--	--	--
TV-G	B	--	--	--	--	--
TV-PG	B	B	B	B	B	--
TV-14	B	B	B	B	B	--

7.The “**TV Rating**” screen will appear, press the *UP* or *DOWN* button to select a particular TV category.

Press the *Enter* button to select “B”:

Note 1: The Parental Control will automatically block certain categories that are “More restrictive”. For example, if you block “**TV-GB**” then “**TV-PG B**”, “**TV-14 B**” and “**TV-MA B**” will automatically be blocked also. The Parental Control will automatically unblock certain categories that are “Less restrictive”. For example, if you block “**TV-G B**” then “**TV-Y U**” and “**TV-Y U**” will automatically be unblocked also.

Note 2:If you want unblock “**TV-G**”, you must block “**TV-PG B**” to let “**TV-G U**” be unblocked automatically.

8. Press the *VOL (+)* or *VOL (-)* button to select a particular TV category. Sub-rating. (FV, D, L, S, V)

Press the *Enter* button to select “B” or ”U”.

FV : Fantasy violence
D : Sexual suggestive dialog
L : Adult language
S : Sexual situation
V : Violence

TV-Rating						
	B/U	FV	D	L	S	V
TV-Y	U	--	--	--	--	--
TV-Y7	U	B	--	--	--	--
TV-G	B	--	--	--	--	--
TV-PG	B	U	B	B	B	--
TV-14	B	B	B	B	B	--
TV-MA	B	--	--	B	B	B
B:Block		--;UnBlock				

Note: The Parent control will automatically block certain categories that are

 
“More restrictive”. For example, if you block: L” sub-rating in TV-PG, then the “L” sub-rating in TV-14 and TV-MA will automatically be blocked also.

If the TV is turned to a restricted channel, the parent control will block it .The Screen will go blue and the following message will appear:


“ **Parent Control working Level:** **TV-G** ”


How to set up Restrictions using the MPAA Ratings:

The MPAA rating system uses the Motion Picture Association of America (MPAA) system, and its main application is for movies. (Eventually, movie videocassettes will be encoded with MPAA ratings). When the parent control lock is on, the TV will automatically block any programs that are coded with objectionable ratings (either MPAA or TV-Ratings).

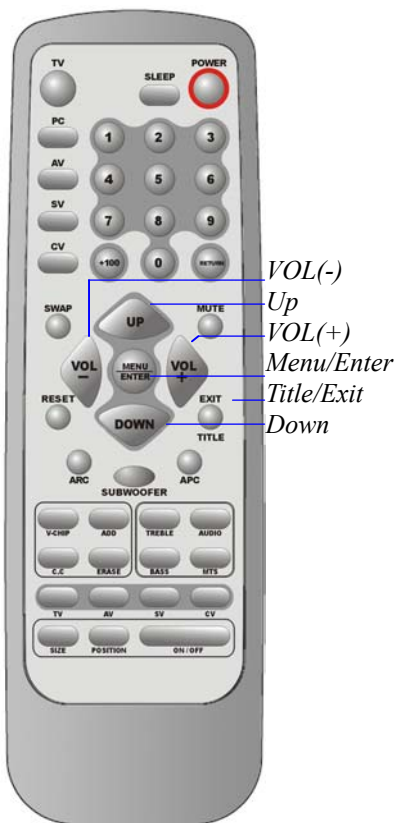

  1. Press the *MENU* button to display the main menu.
2. Press the *VOL (+)* or *VOL (-)* button to select the **TV Setting**.
3. Press the *ENTER* button to **TV Setting**.
4. Press the *UP* or *DOWN* button to select the **Parent Control** than press the *ENTER* button.
5. The “**Please Enter Pin**” screen will appear, enters your 4-digit PIN number.
6. After entering a valid PIN number, the **Parent Control** screen will appear, Press the *UP* or *DOWN* button to select the “**MPAA (PG-13)**” than press the *ENTER* button.

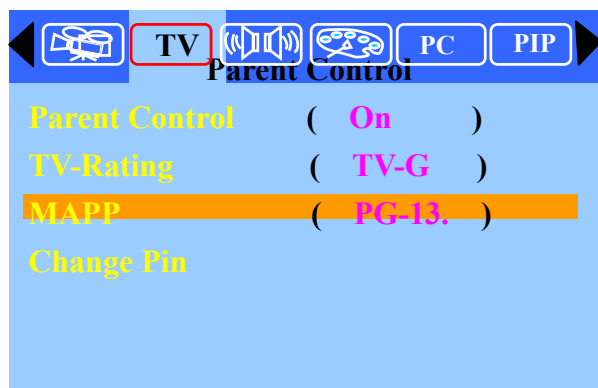

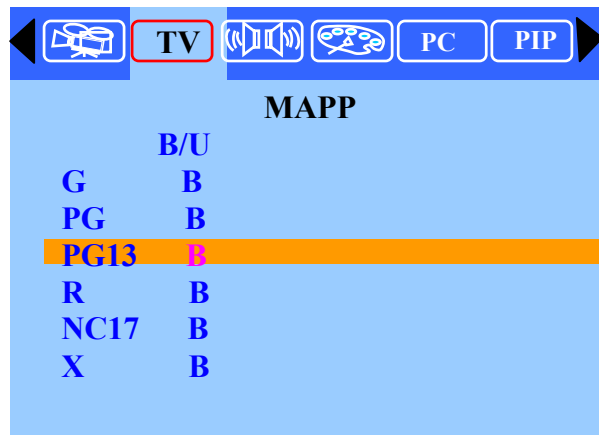

7. Press the *UP* or *DOWN* button to select a particular MPAA category.

Press the *Enter* button to select “B”.

G	: General audience (no restrictions).
PG	: Parental guidance suggested.
PG-13	: Parents strongly cautioned.
R	: Restricted. Children under 17 should be accompanied by an adult.
NC-17	: No Children
X	: Adults only under 17.

Note 1: The Parental Control will automatically block certain categories that are “More restrictive”. For example, if you block “**PG-13 B**” then “**R B**”, “**NC-17 B**” and “**X B**” will automatically be blocked also. The parental control will automatically unblock certain categories that are “Less restrictive”. For example, if you block “**PG-13 B**” then “**G U**” and “**PG U**” will automatically be unblocked also.

Note 2: If you want unblock “**MPAA PG-13**”, you must block “**R B**” to let “**PG-13 U**” be unblocked automatically.

If the TV is turned to a restricted channel, the parent control will block it. The Screen will go blue and the following message will appear.

 
 
 
“ **Parent Control working Level:** ”
MPAA PG-13

Viewing Closed Captions:

Your TV decodes and displays closed captions that are broadcast with certain TV shows. These captions are usually for the hearing impaired or foreign-language translations. All VCRs record closed caption signals from television programs, so home-recorded videotapes also provide closed captions. Most pre-recorded commercial videotapes provide closed captions as well. Check for the closed caption symbol in your television schedule and on the tape’s packaging:

Note: The Caption feature does not work with DVD or DTV signal.

1. Press the *MENU* button to display the main menu.
2. Press the *VOL (+)* or *VOL (-)* button to select the **TV Setting**.
3. Press the *ENTER* button to **TV Setting**.
4. Press the *UP* or *DOWN* button to select the **Caption**.

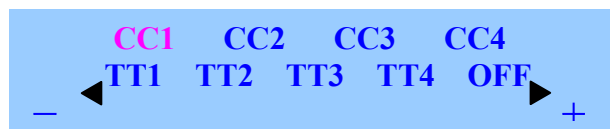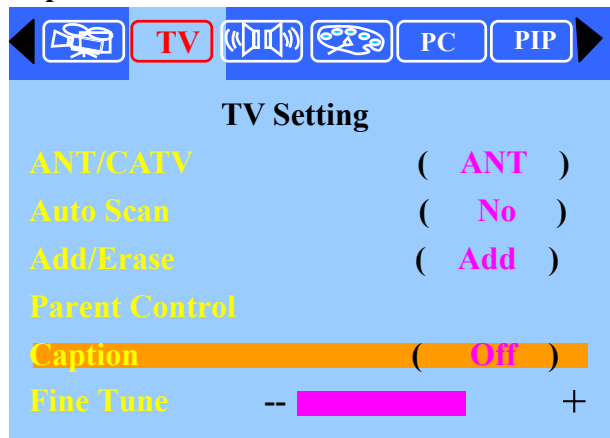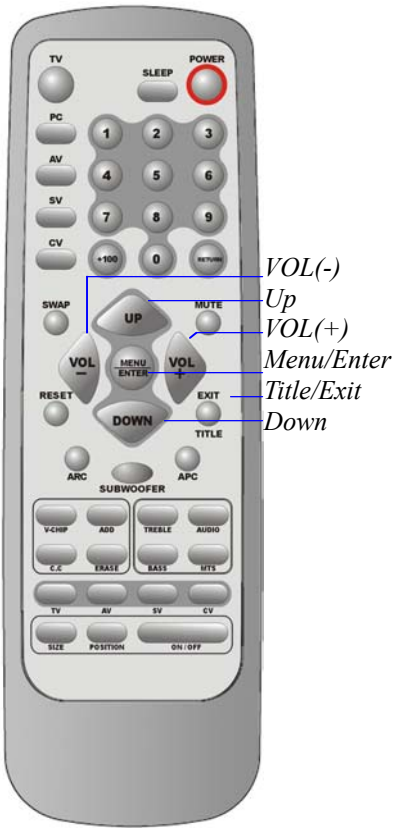

5. Press the *VOL (+)* or *VOL (-)* button to select “Caption ”or “Text” mode.
 If you don’t to display the closed captions, you can select **OFF** to eliminate it.

 
 
6. Depending on the particular broadcast, it might be necessary to make changes to “Channels” and “Field”: To make the change follow the same procedure as in Steps 4~5 above.

Different channels and fields display different information: Field 2 carries additional information that supplements the information in Field1. (For example, Channel 1 may have subtitles in English, while Channel 2 has subtitles in Spanish).

D: AV/SV/CV mode Adjustment

Adjustment the AV/SV/CV adjust settings:

1. Press the *MENU* button to display the main menu.
2. Press the *ENTER* button to enter **Management**. Press the *UP* or *DOWN* button to select the **Main Display (AV/SV/CV)**.

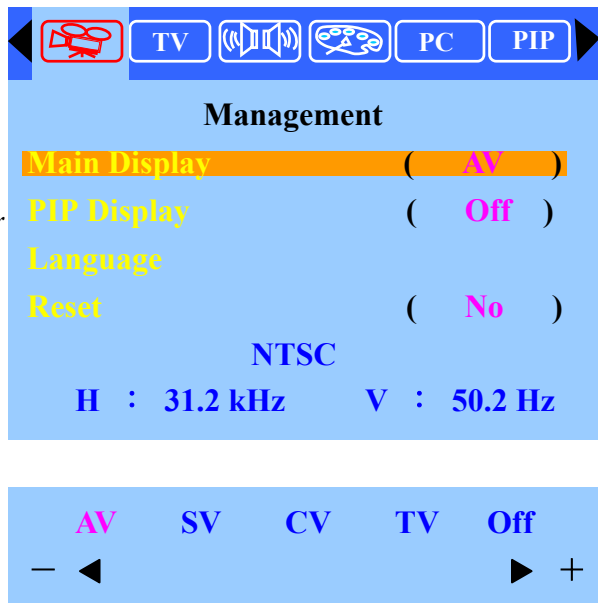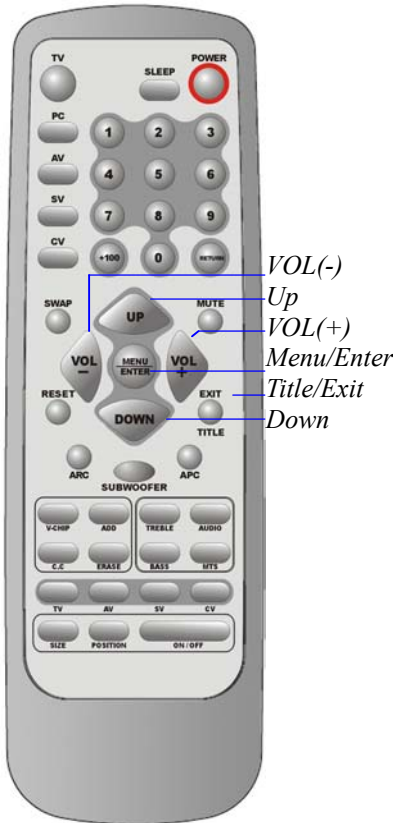

3. Press the *VOL (+)* or *VOL (-)* button to select **AV/SV/CV** source.
4. Press the *EXIT* button to return to the previous screen.
5. Press the *UP* or *DOWN* button to select the desired

item.

6. Press the *VOL (+)* or *VOL (-)* button to set the desired item.

7. Press the *EXIT* button to return to the previous screen or exit from the Menu.

NOTE: All the adjustment items in **AV/SV/CV** menu are described in TV mode menu, so you can refer to the TV mode adjustment.

E. Other functions explained

1. Use “**Channel up/down**” as function keys.

-When you press “Menu” to go into OSD, “**Ch up/down**” will become the up/down function control key.

2. To use “*VOL (+)* or *VOL (-)*” as the level control key.

-When you press “Menu” to go into sub control bar, the level can be adjusted by the “*VOL (+)* or *VOL (-)*”.

3. “Aspect” key (Screen Aspect Ratio).

ARC-Aspect Ratio Control.

***Normal:** This sets the aspect ratio to 4:3 for traditional TV programs. There will be a black bar at either of the screen.

***Periscope:** Expands 4:3 video sources to fit the 16:9 screen by magnifying the image at the edges of the screen. This creates less distortion at the center of the screen.

***Zoom:** Some DVD movies may not fill the top and bottom of the screen. The zoom function extends the height to fill the screen.

***Full:** This mode expands the width of 4:3 video sources evenly to fill the 16:9 screens. There will be distortion at the center of the screen as well as the edges.

4. “**APC**” Control key (Automatic Picture Control).

If you continue to press “**APC**” key you will see the display on the right upper screen to change to “**Normal**”, “**Clear**”, “**Dark**” or “**Theater**”.

For example, when the screen is showing a night scene or darker screen, you can use APC to change the screen to “Clear” and get a brighter picture. If the screen is too bright, you can use this **APC** key to change the screen to “normal” or “dark”.

5. MTS control key (multiple sources of sound).

-This LCDTV can reproduce the original sound track you choose: “Mono”, “Stereo” or “SAP”(sound audio program) to let you enjoy the best sound.

-MTS (Multi Channel Television Sound) means: This LCDTV has a built-in decoder to decode stereo sound or second audio program (SAP) from the TV broadcasting. (When the TV station has such built-in sound sources during broadcasting.).

6.”Reset” control key (recall factory’s initial setting).

-In PC mode: This will recall “Brightness”, “ Contrast”, “Color temp”, “Volume”, “ Treble”, “Bass”, and “Balance”, back to factory initial values.

-In Video mode: This will recall “Brightness”, “ Contrast”, “Hue”, “ Saturation”, “ Sharpness”, “ Volume”, “ Treble”, “ Bass”, “Balance”, back to initial factory values.

OSD Language List

English

Main Display	PIP Display	Main	PIP	H. Position
V. Position	PIP Size	Border	Language	Recall
ANT/CATV	Auto Scan	Add/Erace	Caption	Parent Control
Fine Tune	Bass	Treble	Balance	Sound
Mute	Brightness	Contrast	Hue	Saturation
Sharpness	Color Temp.	Warm	Cool	Neut.
User	R	G	B	U
Auto Image	V position	V Position	Clock	Phase
Add	Erace	TV-Rating	MPAA	Chang Pin
On	Off	Normal	Full	Zoom
Periscope	SAP	Stereo	Mono	Sleep OFF
Sleep 30	Clear	Normal	Dark	Theater
Volume	Power Down	Out of Range	Over size	No Signal
Cable no Insert	English	Yes	No	Please Enter Pin:
Wrong Code Try Again:	Please Enter New Pin:	V Chip Working Level:	INITIAL EEPROM	

French

Affichage Pri.	Affichage PIP	Pri.ncipal	PIP	Position H.
Position V.	Taille ISI	Frontière	Langue	Rappel
ANT/CATV	Balayage	Ajout./Effac.	Légende	Commande Parent
Feglaheimage	Graves	Aigus	Balance	Bruit
Muet	Luminosite	Contraste	Teinte	Saturation
Acuité	Temp. Couleur	Chaud	Frais	Neut.
Util.	R	V	B	O
Image Auto.	Position H	Position V	Horloge	Phase
Ajou.	Effa.	TV-Estimation	MPAA	Changer NIP
ON	OFF	Normal	Complètement	Zoom
Periscope	SÈVE	Stéréo	Mono	Sommeil off
Sommeil 30	Espace libre	Normal	Foncé	Théâtre
Volume	Mise hors tension	Hors de portée	Taille finie	Aucun Signal
Ne Câblez aucune insertion	Français	Oui	Non	Svp entrez goupille:
Code Faux Essai Encore:	Svp Entrez Nouvelle Num.:	V-Chip niveau de travail:	INITIAL EEPROM	

German

HauptcAnzeige	Anzeige PIP	Haupt.sächlich	PIP	H. Position
V. Position	PIP Größe	Rand	Sprache	Zurücksetzen
ANT/CATV	Autoscan	ADD/Löschen	Untertitel	Eltern.
Feineinstell.	Baß	Diskant	Balance	Ton
Stummer	Helligkeit	Kontrast	Farbton	Sättigung
Schärfe	Farbe Temp.	Warm	Kühl	Neut.
Benu.	R	G	B	U
Selbstbild	H Position	V Position	Takt	Fase
ADD	Lösc.	TV-Bewertung	MPAA	Chang Stift
Ein	Aus	Normal	Voll	Zoom
Periscope	SAFT	Stereo	Mono	Schlaf aus
Schlaf 30	Freier Raum	Normal	Dunkel	Theater
Lautstarke	Abschalten	Außerhalb des Bereichs	Übergröße	Kein Signal
Kabeln Sie keinen Einsatz	Deutsch	Ja	Nein	Bitte Betreten Sie Stift:
Fals. Code-Versuch Wieder:	Bitte Bet.Sie Neu Stift:	V Span-Funktion Niveau:	Ausgangs-EEPROM	

Spanish

Pantalla Pri.	Principal PIP	Principal	PIP	Posición H.
Posición V.	PIP Tamaño	Frontera	Lengua	Restaurar
ANT/CATV	Exploración	Agregue/Borre	Subtítulo	Control Padre
Sintonizar	Bajos	Agudos	Balance	Sonido
Silenciar	Brillo	Contraste	Matiz	Saturación
Agudeza	Temp. de Color	Cálid	Frío	Neut.
Usua.	R	V	A	D
Imagen Auto	Posición H	Posición V.	Reloj	Fase
Agre.	Borre	TV-Grado	MPAA	Cambiar código
ON	OFF	Normal	Por completo	Zoom
Periscopio	SAFT	Stereo	Mono	Sueño off
Sueño 30	Claro	Normal	Oscuro	Teatro
Volumen	Energía Abajo	Fuera de rango	Tamaño excesivo	Sin Señal
No Cablegrafe ningún relleno	Español	Sí	No	Por Entrar Pasador:
Código Error Inten. Otra:	Por Entrar Nuevo Pasador:	V-Chip Nivel De Trabajo:	INICIAL EEPROM	

繁體中文

主畫面	子畫面	主畫面	子畫面	水平位置
垂直位置	子畫面比例	外框	語言	回復
無線/有線	頻道搜尋	增加/消除	關閉字幕	節目分級
微調	低音	高音	平衡	音源
靜音	亮度	對比	色調	色濃度
清晰度	色溫	暖色	冷色	自然
使用者	紅	綠	藍	
自動調整	水平位置	垂直位置	時脈	相位
增加	消除	電視分級	電影分級	更新密碼
開啓	關閉	標準	全畫面	放大
廣視角	雙語	立體聲	單聲道	睡眠關閉
睡眠 30	明亮	標準	暗	劇院
音量	節電	頻率超過	尺寸超限	無訊號
訊號線未插	繁體中文	是	否	請輸入密碼
密碼錯誤再試一次	請輸入新密碼	V-Chip 動作層次	EEPROM 初始	

 
Troubleshooting

When there is no picture or sound



- Make sure the AC adapter is properly inserted in the Power outlet.
- Reception other than those of broadcasting stations can be considered.
- Make sure the input mode is set to TV.
- Make sure the main power switch of the main unit is on.

When there is no picture from AV.

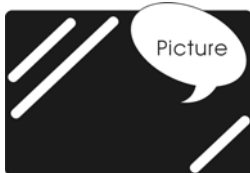

- Make sure the BLACK LEVEL is properly adjusted.
- The fluorescent lamp may have reached the end of service life.
- Make sure the video I/P terminal is not free of connections.

When there is no sound.



- Make sure the volume is not set to minimum.
- Make sure the sound is not set to mute.
- Make sure that headphones are not connected.

When there is no picture or sound, just noise.



- The reception may be weak.
- The state of the broadcast may also be bad.
- Make sure the antenna is not disconnected.

When there picture is not clear.



- The reception may be weak.
- The state of the broadcast may also bad.
- Make sure the antenna is not disconnected.

When the picture is light or improperly tinted.



- Check color adjustment.
- Check color system setting.

When there picture is too dark.



- Press the Brightness button.
- Check PICTURE and BLACK LEVEL adjustment.
- The fluorescent lamp may have reached the end of service life.

When there remote control does not work.



- Check the batteries of the remote controller.
- Make sure the remote sensor window is not under strong fluorescent lighting.
- The fluorescent lamp may have reached the end of service life.

When the picture is not sharp.



- The reception may be weak.
- The state of the broadcast may also be bad.
- Make sure the antenna is not disconnected.

When their picture moves.



- The reception may be weak.
- The state of the broadcast may also be bad.
- Make sure the antenna is not disconnected.

When the picture is doubled or tripled.



- Make sure the antenna is facing the right direction.
- There may be reflected electric waves from mountains or buildings.

The picture is spotted.



- There may be interference from automobiles, trains, high voltage lines, neon light, etc.
- There may be interference between the antenna cable and power cable. Try to pull them further apart.

When there are stripes on the screen or colors fade.



- Is the unit receiving interference from other devices?
- Transmission antennas of radio broadcasting station and transmission antennas of amateur radio and cellular phones may also cause interference.
- Use the units as far apart as possible from device that may cause possible interference.