

TELEFUNKEN

APPROVED

By Ian Aikman at 5:27 pm, Mar 09, 2006

USERS MANUAL

TLD 2703
TLD 3202
TLD 3203
TLD 3702
TLD 3703

LCD TV

SAFETY WARNINGS

- ◆ Before using this product, read and follow all warnings and instructions.
- ◆ This product is not intended for use by young children or infirm persons unless they are adequately supervised by a responsible person to ensure that they use this product safely.
- ◆ Young children should be supervised to ensure that they do not play with this product.
- ◆ This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.
- ◆ This product is intended for household use only and not for commercial or industrial use.

DO's and DON'T's

DO's





- ◆ Always power this product from an outlet with the same rating (voltage and frequency) as indicated on the rating label in the back of the product.
- ◆ If this product has been damaged (including cord or plug) take it to an accredited service technician for inspection, and if necessary, repair.
- ◆ Turn off and disconnect the power cable before cleaning or storing this product.
- ◆ Ensure this product does not get wet or splashed.
- ◆ Only use the A/C power adapter supplied with your product, or a replacement recommended by a qualified technician.
- ◆ Do not place naked flames, such as lighted candles, on the unit.
- ◆ Do not place objects filled with liquids, such as vases on the unit.

DON'Ts

- ◆ Do not install this product on top of other electrical equipment, on uneven surfaces
- ◆ Do not use or store this product in a place where it is subject to direct sun, heat, excessive dust or vibration.
- ◆ Do not use this product with wet hands.
- ◆ Do not clean this product with water or other liquids.
- ◆ Do not block or cover these slots and holes in the cabinet.
- ◆ Do not push foreign objects into cabinet slots or holes.
- ◆ The screen surface is easily scratched. Do not touch the screen with hands or any hard object.
- ◆ Do not pull the power cord when disconnecting power. Turn off the switch on the socket and pull the plug not the cord.
- ◆ Do not attempt to open this product yourself. There are no user serviceable parts inside.

LCD TV





Notes:

 <p>WARNING RISK OF ELECTRIC SHOCK DO NOT OPEN</p> 	<p>The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of insinuated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	
<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). REFER SERVICING TO QUALIFIED SERVICE PERSONNEL</p>	<p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance</p>	

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

Check the accessories

(TV accessories)

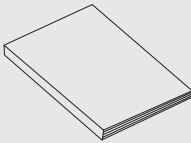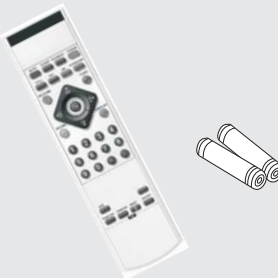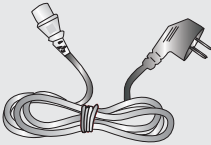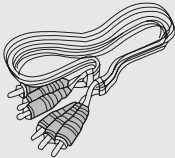	
<p>User manual</p>	<p>Remote control/batteries</p>
	
<p>Power cord</p>	<p>AV connection cable</p>


LCD TV

Contents

Safety precaution.....	2
Basic operation.....	2
Notes.....	3
Contents.....	4
LCD TV panel.....	5
LCD TV panel(continue).....	6
Remote control.....	7
Remote control.....	8
Connecting to antenna or TV radio network.....	9
Picture.....	10
Sound.....	13
PIP.....	15
Function.....	17
TV channel.....	20
Connecting to other devices.....	24
Trouble shooting.....	25
Warranty.....	26


LCD TV

 LCD TV Panel

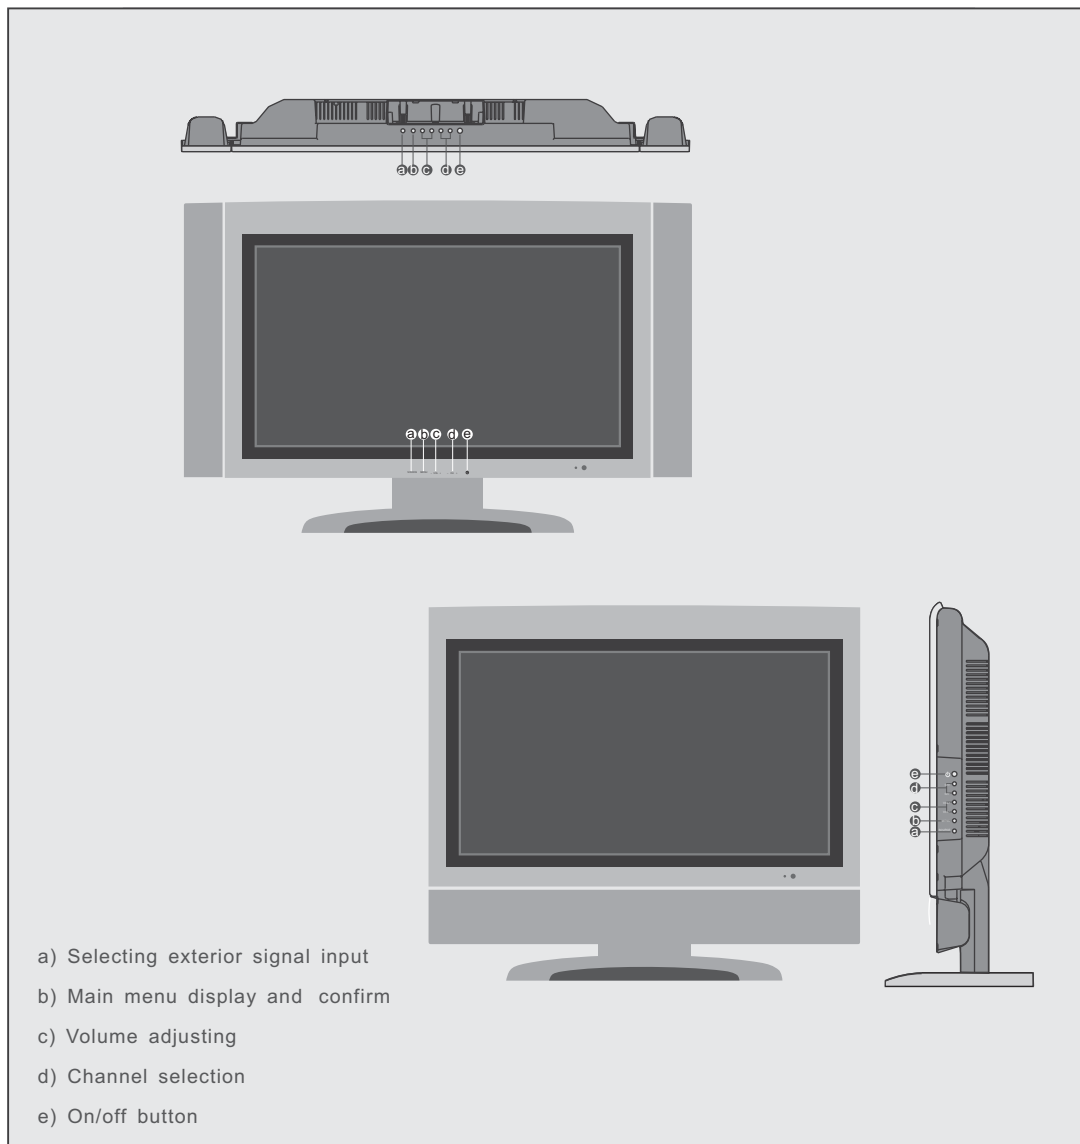

LCD TV

 LCD TV Panel(contiued)

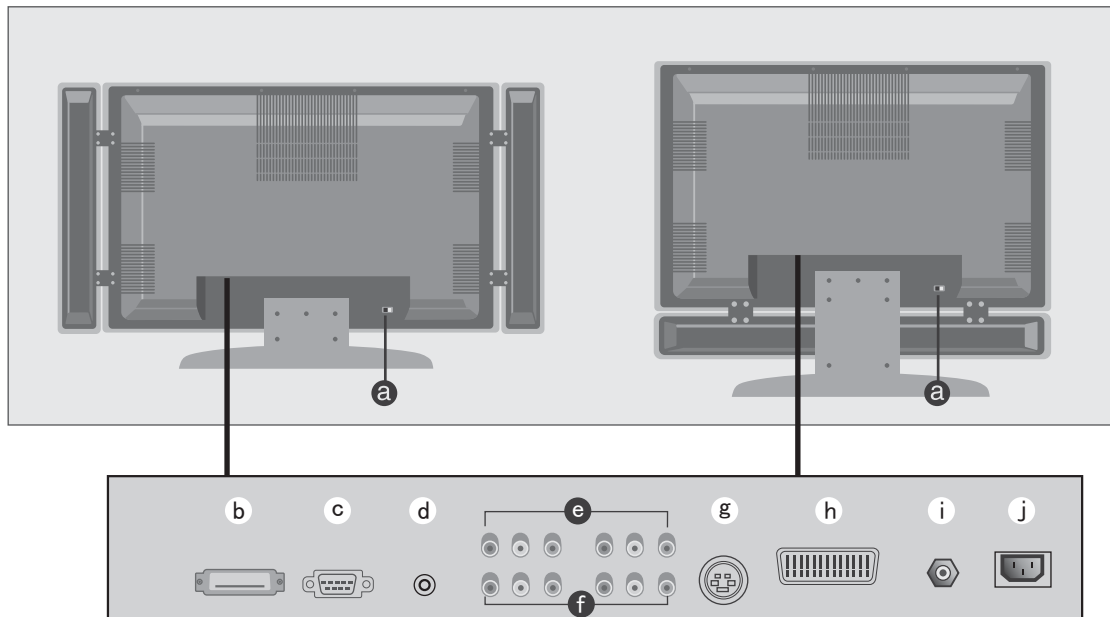

a)Power On/Off

Power On/Off

b)HDMI

High definition multi media interface

c)VGA

Input terminal of simulation signal of PC

d)PC Audio and HDMI Audio

Sound input terminal of RGB input and HDMI

e)Av2 L/R2, YPbPr2

Color difference component input terminal and AV2 input terminal and audio input terminal

f)Av1 L/R1 YPbPr1

Color difference component input terminal and AV1 input terminal and audio input terminal

g)S-Video

Color and brightness separation input terminal

h)SCART IN

SCART input terminal ,suit for European export machine.

i)VHF/UHF


Antenna/close circuit TV network port(75 Ohm VHF/UHF)

j)POWER

AC power input terminal

LCD TV

Remote control

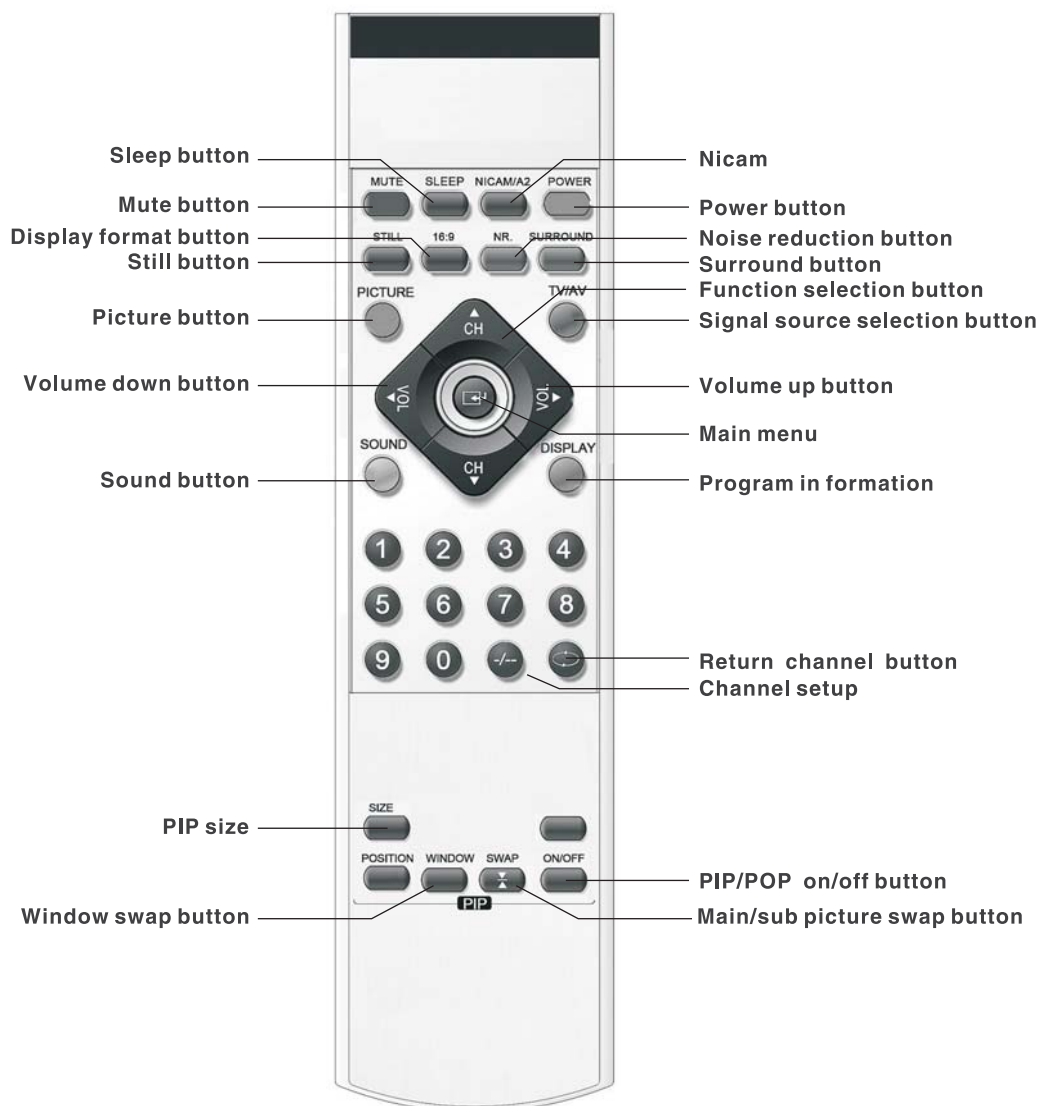

★Bright sunlight or lighting may cause erratic remote operation

LCD TV

Application instruction of remote control

Power (POWER): Power on/off button; press once to turn the TV on and press again to turn the TV off.

Signal (AV/TV): Signal source selection button, which allows the customer to select the signal source input.

Mute (MUTE): Mute button, press once to disable the speaker and press again to enable the speaker.

Sleep (SLEEP): Scheduled power off time button, which allows the customer to set the TV power off time according to the preset times displayed.

NICAM/A2 (NICAM/A2): NICAM button of TV, which allows the customer select the different sound systems (Australia ONLY uses A2 sound).

Still (STILL): Still button of TV menu, the TV picture will be frozen after pressing, press again to release.

16: 9: Picture size swap button, which allows the customer to swap the picture between different sizes (16:9 4:3 zoom1 and 2).

Noise reduction (NR.): Picture noise reduction button, which allows the customer to select different 3D noise reduction mode.

Surround (SORROUND): Surround button. Which allows the customer to select surround sound function.

Picture (PICTURE): Picture mode button of TV, which allows customer to select different picture modes.

Sound (SOUND): Sound mode button of TV, which allows customer to select different sound modes.

Display (DISPLAY): Message display button of TV, which allows the customer to view the channel, input status of TV.

0,1~9: TV channel selection button, which allows the customer to select the channel one to nine.

-/--: TV channel selection button, which allows the customer to select TV channels ten to one hundred

 :Channel revert button of TV, which allows the customer to watch the last TV channel.

Volume (VOL) ◀/▶ : Volume up and down button, which allows the customer to increase or decrease the volume.

Channel(CH)▲/▼:Channel up and down button, which allows the customer to increase or decrease the channel.

(MENU):OSD menu button, which allows the customer to enter the TV setup menu.

Size (SIZE): PIP size selection button, which allows the customer to select different PIP size

Position (POSITION): PIP position selection button, which draws a border around the secondary window.


Window (WINDOW): Focus window button, which draws a border around the secondary window.

Swap (SWAP): Main window and sub-window swap button, which allows the customer to swap programs between main window and sub-window.

On/Off (ON/OFF): PIP on/off button, which allows the customer to turn on/off the PIP function of TV.

LCD TV

Connecting to antenna or TV radio network

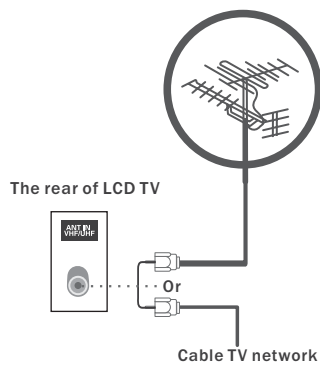

In order to receive TV program, signal should be received from one of the following signal sources:

- ◆ Outdoor antenna.
- ◆ Cable TV network.
- ◆ Satellite broadcast network


1. In these three cases, the input cable of antenna or TV network should be plugged in the 75 Ohm coaxial cable jack at the rear side of LCD TV.

2. Indoor antenna is NOT recommended for this TV

When installing LCD TV, quality 75 Ohm coaxial Cable must be used. If other coaxial cable is used, there may be noise and image disturbances.



Connecting digital TV Set Top Box

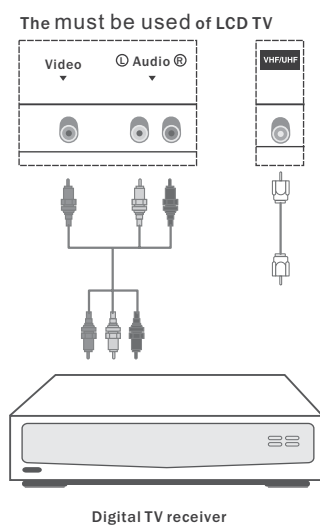

In order to receive digital TV programs, a Digital TV STB MUST be connected to the rear of the LCD TV.


Connect the coaxial cable connector to

- ◆ The output terminal.
- ◆ The antenna input terminal.


For further instruction refer to the receiver instruction manual

LCD TV


Picture

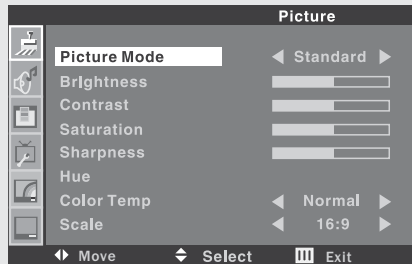


1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/▼" button to select the "Picture" menu.
2. Press the "VOL▶" button on the remote control to enter the "Picture" menu, then press "CH▲/CH▼" button to select "Picture mode" and press "VOL◀/▶" button to select the picture mode such as standard, soft, vivid and user.
3. Press the "MENU" button on the remote control to return to upper menu.

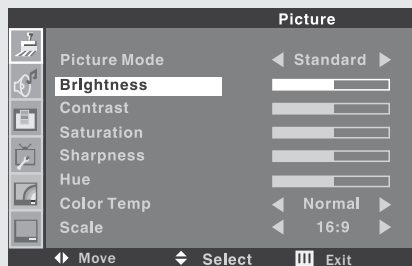

1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select the "Picture" menu.
2. Press the "VOL▶" button on the remote control to enter the "Picture" menu, then press "CH▲/CH▼" button to select "brightness"
3. Press the "VOL◀/▶" button on the remote control to enter brightness adjustment menu to adjust "Brightness"
4. Press the "MENU" button on the remote control to return to upper menu.

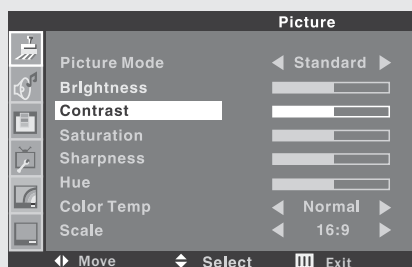


1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select the "Picture" menu.
2. Press the "VOL▶" button on the remote control to enter the "Picture" menu, then press "CH▲/CH▼" button to select "Contrast"
3. Press the "VOL◀/▶" button on the remote control to enter Contrast adjustment menu to adjust "Contrast"
4. Press the "MENU" button on the remote control to return to upper menu.


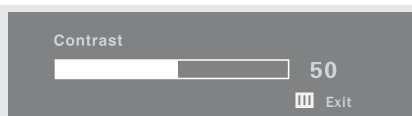


LCD TV


 
Picture

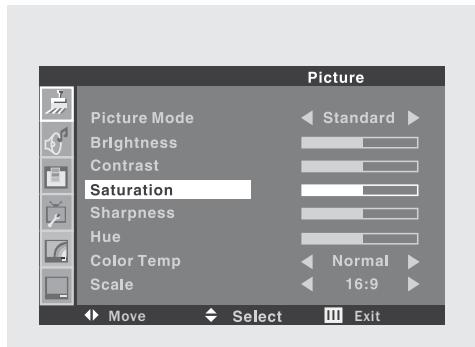

  1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select "Picture" menu.
2. Press the "VOL▶" button on the remote control to enter the "Picture" menu, then press "CH▲/CH▼" button to select "Saturation"
3. Press the "VOL◀/▶" button on the remote control to enter Saturation adjustment menu to adjust "Saturation"
4. Press the "MENU" button on the remote control to return to upper menu.

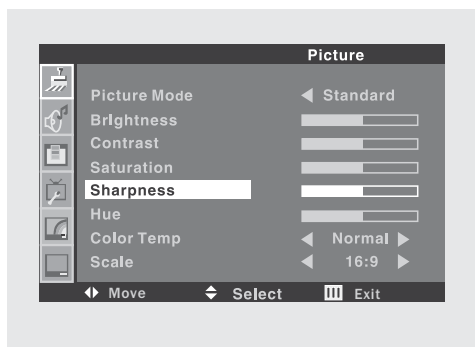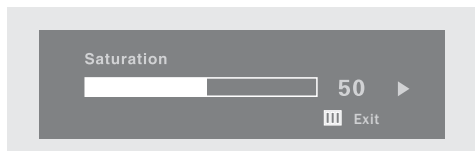

  1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select the "Picture" menu.
2. Press the "VOL▶" button on the remote control to enter the "Picture" menu, then press "CH▲/CH▼" button to select "Sharpness"
3. Press the "VOL◀/▶" button on the remote control to enter Sharpness adjustment menu to adjust "Sharpness"
4. Press the "MENU" button on the remote control to return to upper menu.

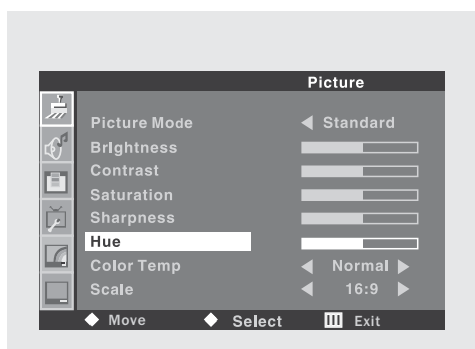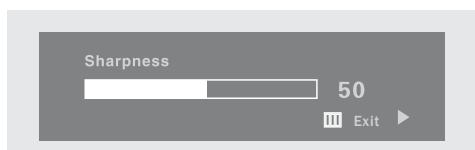


1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select the "Picture" menu.
2. Press the "VOL▶" button on the remote control to enter the "Picture" menu, then press "CH▲/CH▼" button to select "Hue"

LCD TV


Picture



3. Press the “VOL ◀/▶” button on the remote control button to enter Hue adjustment menu to adjust “Hue”
4. Press the “MENU” button on the remote control to return to upper menu.

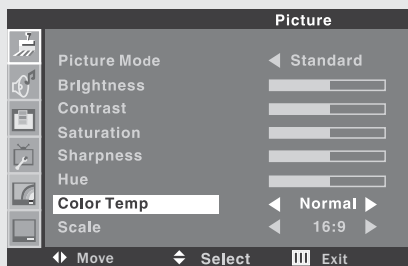

 
1. Press the “MENU” button on the remote control to enter the OSD menu, then press “CH▲/CH▼” button to select the “Picture” menu.
2. Press the “VOL▶” button on the remote control to enter the “Picture” menu, then press “CH▲/CH▼” button to select “Color Temp.” and press “VOL◀/▶” button to select color temperature mode (cool, warm, normal and user).
3. Press the “MENU” button on the remote control to return to upper menu.

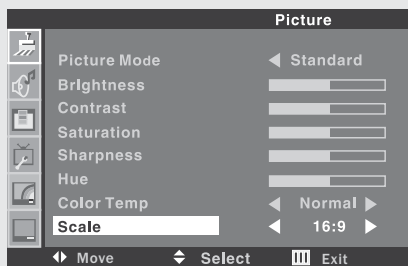


1. Press the “MENU” button on the remote control to enter the OSD menu, then press “CH▲/CH▼” button to select the “Picture” menu.
2. Press the “VOL▶” button on the remote control to enter the “Picture” menu, then press “CH▲/CH▼” button to select “Scale” press “VOL◀/▶” button to select display mode such as (16:9, 4:3, ZOOM1, ZOOM2).
3. Press the “MENU” button on the remote control to return to upper menu.

LCD TV



Sound

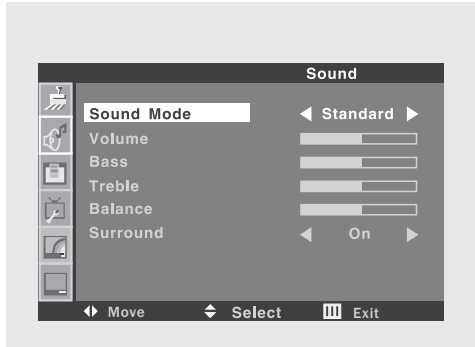


1. Press the “MENU” button on the remote control to enter the OSD menu, then press “CH▲/CH▼” button to select The “Sound” menu.
2. Press the “VOL▶” button on the remote control to enter the “Sound” menu, then press “CH▲/CH▼” button to select “Sound Mode” and press “VOL◀/▶” button to select sound mode such as standard, news, movie and user.
4. Press the “MENU” button on the remote control to return to upper menu.

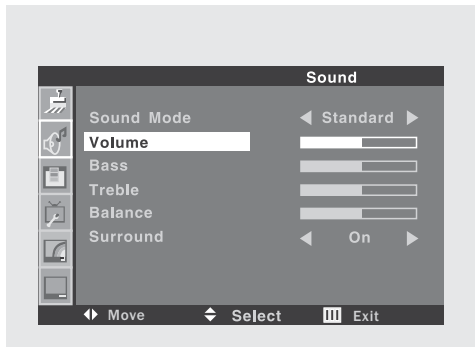

1. Press the “MENU” button on the remote control to enter the OSD menu, then press “CH▲/CH▼” button to select The “Sound” menu.
2. Press the “VOL▶” button on the remote control to enter the “Sound” menu, then press “CH▲/CH▼” button to select “Volume”
3. Press the “VOL◀/▶” button on the remote control to enter Volume adjustment menu to adjust “Volume”
4. Press the “MENU” button on the remote control to return to upper menu.

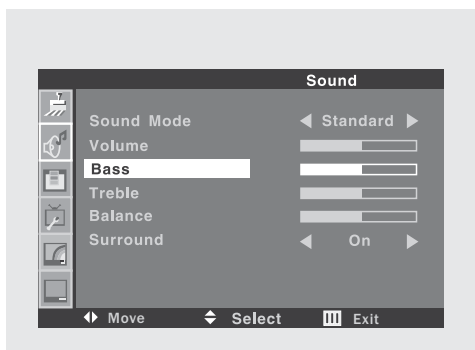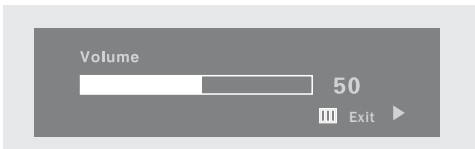


1. Press the “MENU” button on the remote control to enter the OSD menu, then press “CH▲/CH▼” button to select the “Sound” menu.
2. Press the “VOL▶” button on the remote control to enter the “Sound” menu, then press “CH▲/CH▼” button to select “Bass” .
3. Press the “VOL◀/▶” button on the remote control to enter Bass adjustment menu to adjust “Bass”
4. Press the “MENU” button on the remote control to return to upper menu.

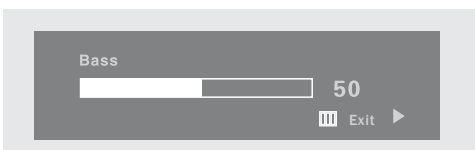


LCD TV



Sound

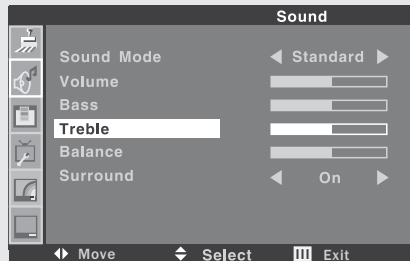

 1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select the "Sound" menu.
2. Press the "VOL▶" button on the remote control to enter the "Sound" menu, then press "CH▲/CH▼" button to select "Treble".
3. Press the "VOL◀/▶" button on the remote control button to enter Treble adjustment menu to adjust "Treble".
4. Press the "MENU" button on the remote control to return to upper menu.

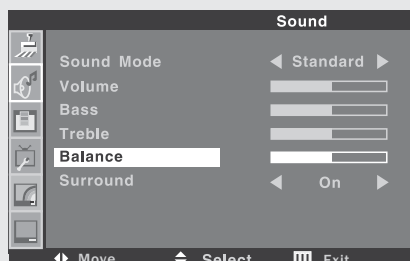

  
1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select The "Sound" menu.
2. Press the "VOL▶" button on the remote control to enter the "Sound" menu, then press "CH▲/CH▼" button to select "Balance"
3. Press the "VOL◀/▶" button on the remote control button to enter Balance adjustment menu to adjust "Balance".
4. Press the "MENU" button on the remote control to return to upper menu.

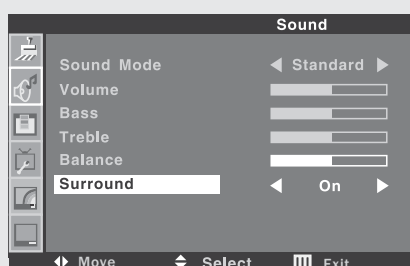


1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select the "Sound" menu.
2. Press the "VOL▶" button on the remote control to enter the "Sound" menu, then press "CH▲/CH▼" button to select "Surround" and press "VOL◀/▶" button to select surround on/off.
3. Press the "MENU" button on the remote control to return to upper menu.

LCD TV

 
PIP

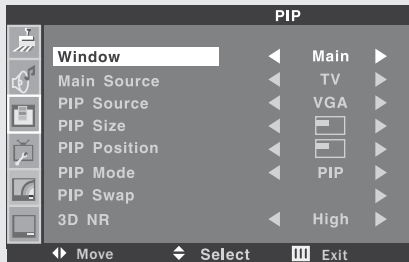

 
1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select the "PIP" menu.
2. Press the "VOL ►" button on the remote control to enter the "PIP" menu, then press "CH▲/CH▼" button to select "Window" and press "VOL◀/►" button to select the main window and sub-window in the window.
3. Press the "MENU" button on the remote control to return to upper menu.

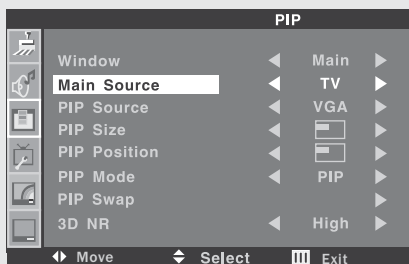

 1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select the "PIP" menu.
2. Press the "VOL ►" button on the remote control to enter the "PIP" menu, then press "CH▲/CH▲" button to select "Main Source" and press "VOL◀/►" button to select the signal input terminal of main window.
3. Press the "MENU" button on the remote control to return to upper menu.

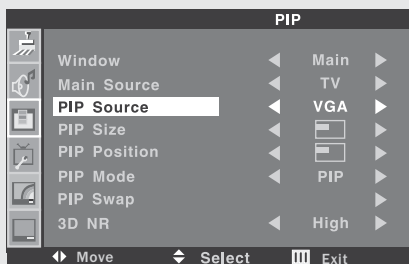

 
1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select the "PIP" menu.
2. Press the "VOL ►" button on the remote control to enter the "PIP" menu, then press "CH▲/CH▼" button to select "PIP Source" and press "VOL◀/►" button to select the signal input terminal of main window.
3. Press the "MENU" button on the remote control to return to upper menu.

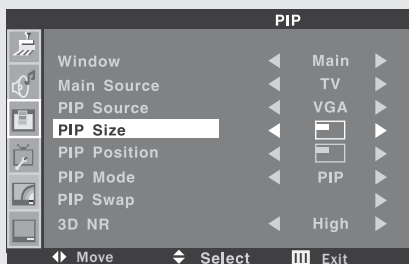


1. Press the "MENU" button on the remote control to enter the OSD menu, the press "CH▲/CH▼" button to select the "PIP" menu.
2. Press the "VOL ►" button on the remote control to enter the "PIP" menu, then press "CH▲/CH▼" button to select "PIP Size" and press "VOL◀/►" button to adjust the size of the sub-window.
3. Press the "MENU" button on the remote control to return to upper menu.

LCD TV


PIP

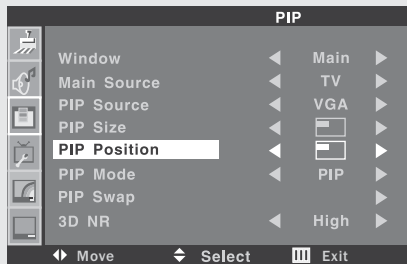


1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select the "PIP" menu.
2. Press the "VOL ►" button on the remote control to enter the "PIP" menu, then press "CH▲/CH▼" button to select "PIP position" and press "VOL◀ / ►" button to adjust the position of the sub-window.
3. Press the "MENU" button on the remote control to return to upper menu

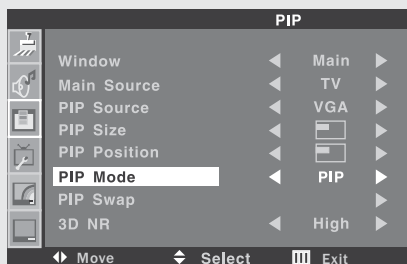

1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to Select the "PIP" menu.
2. Press the "VOL ►" button on the remote control to enter the "PIP" menu, then press "CH▲/CH▼" button button to select "PIP Mode" and press "VOL◀ / ►" button to select pip mode such as pip, pop, 9WIN and OFF.
3. Press the "MENU" button on the remote control to return to upper menu

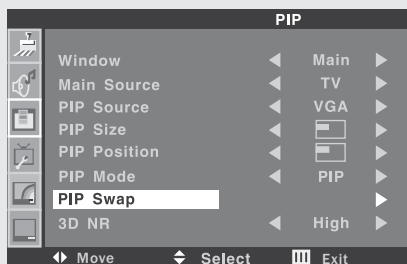

 
1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select the "PIP" menu
2. Press the "VOL ►" button on the remote control to enter the "PIP" menu, then press "CH▲/CH▼" button to select "PIP Swap" and press "VOL◀ / ►" button to swap picture between main window and sub-window.
3. Press the "MENU" button on the remote control to return to upper menu

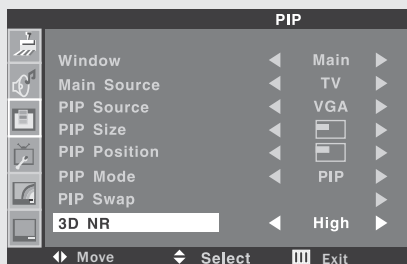


1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select the "PIP" menu
2. Press the "VOL ►" button on the remote control to enter the "PIP" menu, then press "CH▲/CH▼" button to select "3D NR" and press "VOL ◀ / ►" button to select 3D NR function such as high, mid, low and off
3. Press the "MENU" button on the remote control to return to upper menu

LCD TV

 
Function

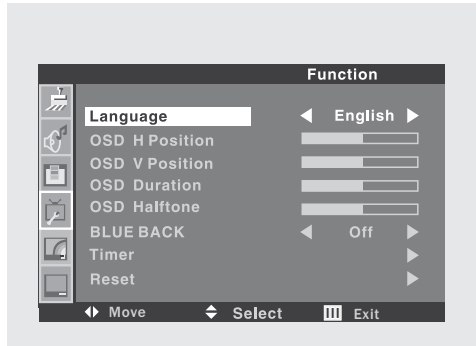

 
1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select the "Function" menu.
2. Press the "VOL▶" button on the remote control to enter the "Function" menu, then press "CH▲/CH▼" button to select "Language" and press "VOL◀/▶" button to select the desired language.
3. Press the "MENU" button on the remote control to return to upper menu.

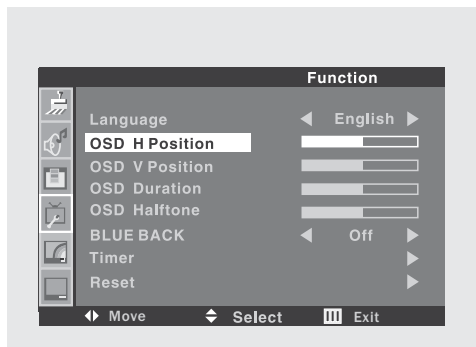

1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select the "Function" menu.
2. Press the "VOL▶" button on the remote control to enter the "Function" menu, then press "CH▲/CH▼" button to select "OSD H Position" and press "VOL◀/▶" button to adjust the horizontal position of OSD.
3. Press the "MENU" button on the remote control to return to upper menu.

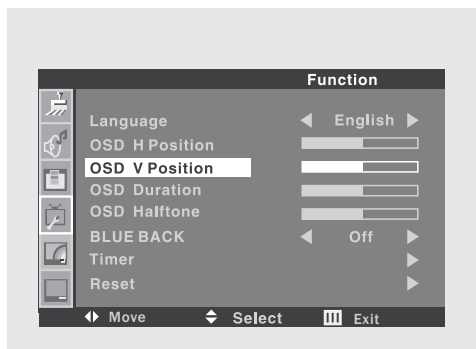

1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select the "Function" menu.
2. Press the "VOL▶" button on the remote control to enter the "Function" menu, then press "CH▲/CH▼" button to select "OSD V Position" and press "VOL◀/▶" button to adjust the vertical position of OSD.
3. Press the "MENU" button on the remote control to return to upper menu.

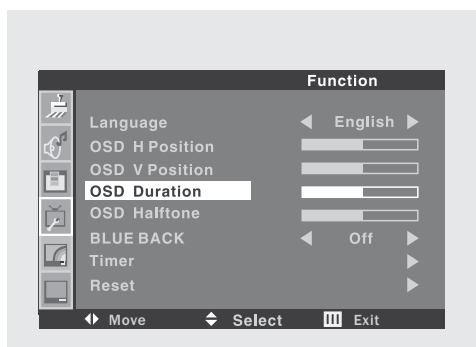


1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select the "Function" menu.
2. Press the "VOL▶" button on the remote control to enter the "Function" menu, then press "Ch▲/CH▼" button to select OSD Duration".

LCD TV



Function




3. Press the “VOL ◀/▶” button on the remote control button to enter OSD Duration adjustment menu to adjust “OSD Duration” .
4. Press the “MENU” button on the remote control to return to upper menu

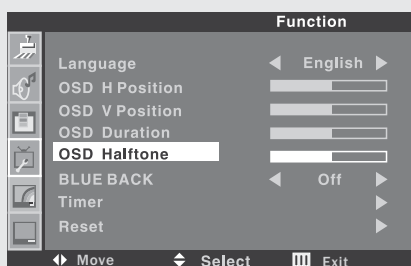

 1. Press the “MENU” button on the remote control to enter the OSD menu, then press “CH▲/CH▼” button to select The “Function” menu.
 2. Press the “VOL▶” button on the remote control to enter the “Function” menu, then press “CH▲/CH▼” button to select “OSD Halftone”
 3. Press the “VOL◀/▶” button on the remote control button to enter OSD Halftone adjustment menu to adjust “OSD Halftone”
- Press the “MENU” button on the remote control to return to upper menu.

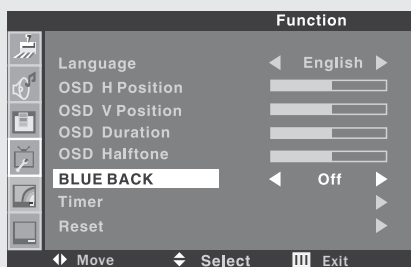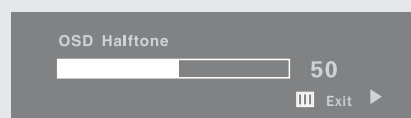


1. Press the “MENU” button on the remote control to enter the OSD menu, then press “CH▲/CH▼” button to select the Function menu.
 2. Press the “VOL▶” button on the remote control to enter the “Function” menu, then press “CH▲/CH▼” button to select Blue Back and press “VOL◀/▶” button to select blue back on/off function.
- Press the MENU button on the remote control to return to upper menu.

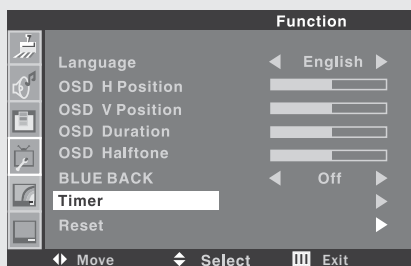

1. Press the “MENU” button on the remote control to enter the OSD menu, then press “CH▲/CH▼” button to select the “Function” menu .
2. Press the “VOL▶” button on the remote control to enter the “Function” menu, then press “CH▲/CH▼” button to select “Timer”


LCD TV

Function

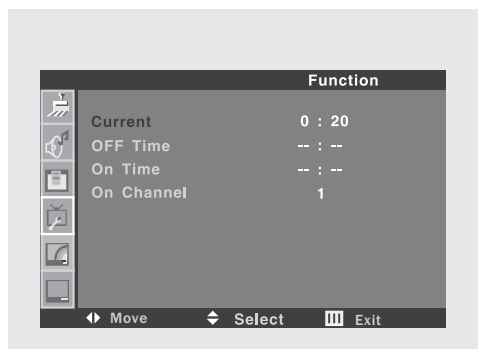

3. Press the "VOL◀/▶" button on the remote control button to enter Timer setting menu, then press "CH▲/ Ch▼" button to select different items, and press "VOL◀/▶" button to adjust Current, Off Time, On time and On Channel.

4. Press the "MENU" button on the remote control to return

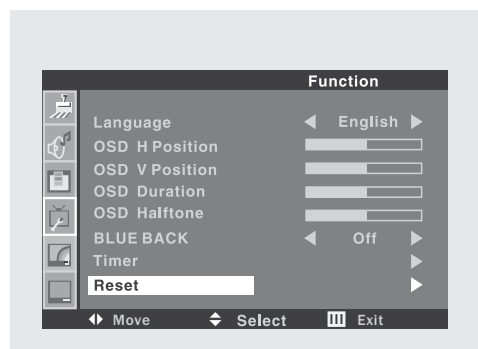

1. Press the "MENU" button on the remote control to enter the OSD menu, then press


"CH▲/ CH ▼" button to select The "Function" menu.

2. Press the "VOL▶" button on the remote control to enter the "Function" menu, then press "Ch▲ Ch▼" button to select "Reset" and press "VOL ◀/▶" button to reset factory default.


3. Press the "MENU" button on the remote control to return to upper menu.

LCD TV



TV

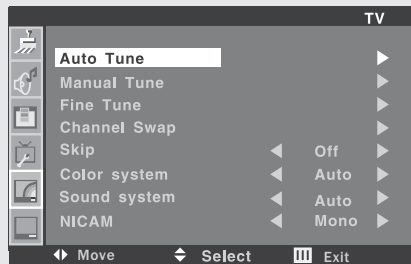

1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select The "TV" menu.
2. Press the "VOL▶" button on the remote control to enter the "TV" menu, then press "CH▲/CH▼" button to select "Auto Tune".
3. Press the "VOL◀/▶" button on the remote control button to enter Auto Tune adjustment menu to adjust "Auto Tune".
4. Press the "MENU" button on the remote control to return to upper menu.

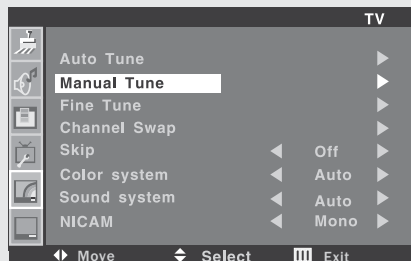

 
1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select The "TV" menu.
2. Press the "VOL▶" button on the remote control to enter the "TV" menu, then press "CH▲/CH▼" button to select "Manual Tune".
3. Press the "VOL◀/▶" button on the remote control button to enter Manual Tune adjustment menu to adjust "Manual Tune".
4. Press the "MENU" button on the remote control to return to upper menu.

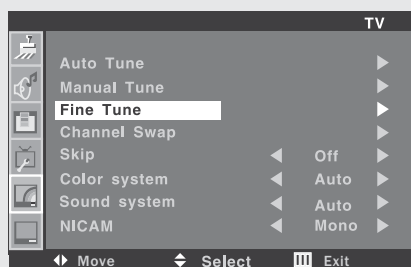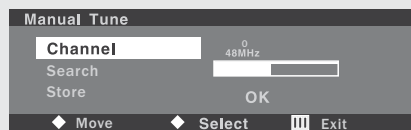


1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select The "TV" menu.
2. Press the "VOL▶" button on the remote control to enter the "TV" menu, then press "CH▲/CH▼" button to select "Fine Tune".

LCD TV



TV

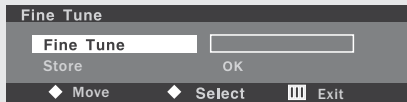


3. Press the "VOL◀/▶" button on the remote control button to enter Fine Tune adjustment menu to adjust "Fine Tune".
4. Press the "MENU" button on the remote control to return to upper menu.

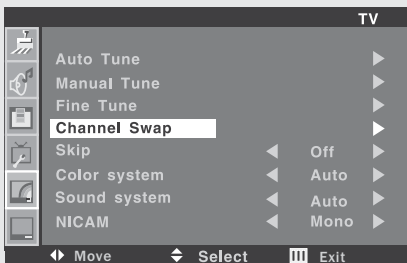

1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select The "TV" menu.
2. Press the "VOL ▶" button on the remote control to enter the "TV" menu, then press "CH▲/CH▼" button to select "Channel Swap".
3. Press the "VOL◀/▶" button on the remote control button to enter Channel Swap adjustment menu to adjust "Channel Swap".
4. Press the "MENU" button on the remote control to return to upper menu.

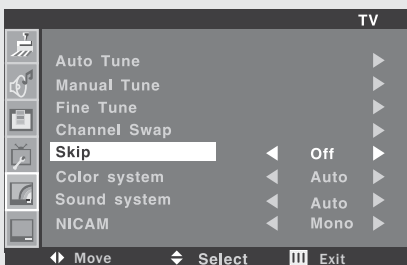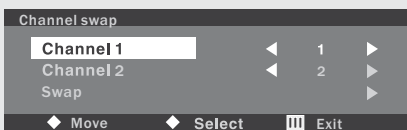

 
1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select the "TV" menu.
2. Press the "VOL ▶" button on the remote control to enter the "TV" menu, then press "CH▲/CH▼" button to select "Skip" and press "VOL ◀/▶" button to select on/off.
3. Press the "MENU" button on the remote control to return to upper menu.

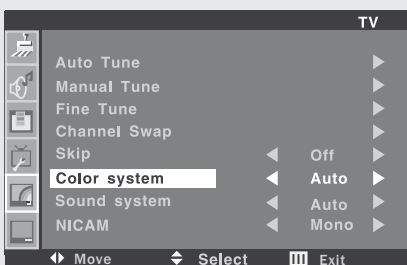


1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select the "TV" menu.
2. Press the "VOL ▶" button on the remote control to enter the "TV" menu, then press "CH▲/CH▼" button to select "Color system" and press "VOL ◀/▶" button to select proper color system mode.
3. Press the "MENU" button on the remote control to return to upper menu.

LCD TV

TV

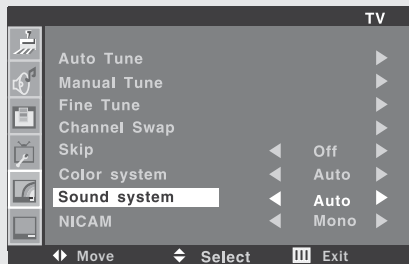

 1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select the "TV" menu.
2. Press the "VOL▶" button on the remote control to enter the "TV" menu, then press "CH▲/CH▼" button to select "Sound system" and press "VOL◀/▶" button to select proper sound system mode.
3. Press the "MENU" button on the remote control to return to upper menu.

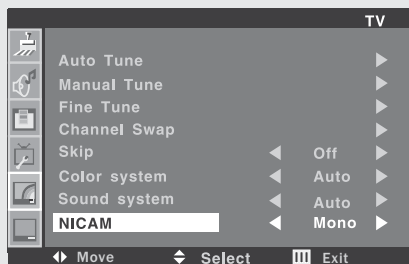

1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select the "TV" menu.
2. Press the "VOL▶" button on the remote control to enter the "TV" menu, then press "CH▲/CH▼" button to select "NICAM" and press "VOL◀/▶" button to adjust Select NICAM.
3. Press the "MENU" button on the remote control to return to upper menu.

PC




1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select the "PC" menu.
2. Press the "VOL▶" button on the remote control to enter the "PC" menu, then press "CH▲/CH▼" button to select "H Position" and press "VOL◀/▶" button to adjust Select "H Position"
3. Press the "MENU" button on the remote control to return to upper menu.



1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select the "PC" menu.
2. Press the "VOL▶" button on the remote control to enter the "PC" menu, then press "CH▲/CH▼" button to select "V Position" and press "VOL◀/▶" button to adjust Select "V Position"
3. Press the "MENU" button on the remote control to return to upper menu.

LCD TV

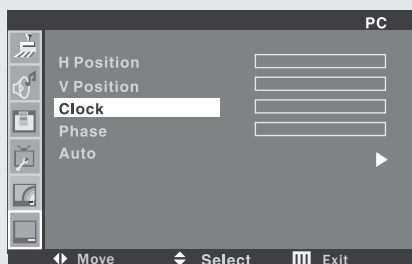

1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select the "PC" menu.
2. Press the "VOL ▶" button on the remote control to enter the "PC" menu, then press "CH▲/CH▼" button to select "Clock" and press "VOL ◀/▶" button to adjust Select "Clock"
3. Press the "MENU" button on the remote control to return to upper menu.



1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select the "PC" menu.
2. Press the "VOL ▶" button on the remote control to enter the "PC" menu, then press "CH▲/CH▼" button to select "Phase" and press "VOL ◀/▶" button to adjust Select "Phase"
3. Press the "MENU" button on the remote control to return to upper menu.



1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select the "PC" menu.
2. Press the "VOL ▶" button on the remote control to enter the "PC" menu, then press "CH▲/CH▼" button to select "Auto" and press "VOL ◀/▶" button to adjust Select "Auto"
3. Press the "MENU" button on the remote control to return to upper menu.


TV/AV

TV
AV1
AV2
SVIDEO
SCART
YPBPRI
YPBPR2
VGA
HDMI

- Press "TV/AV" key to enter the signal source menu.
Press "CH▲/CH▼" key to select signal source.
Press VOL "◀/▶" key to sure.
Press "TV/AV" key to exit signal source menu.

LCD TV

Connecting to exterior devices

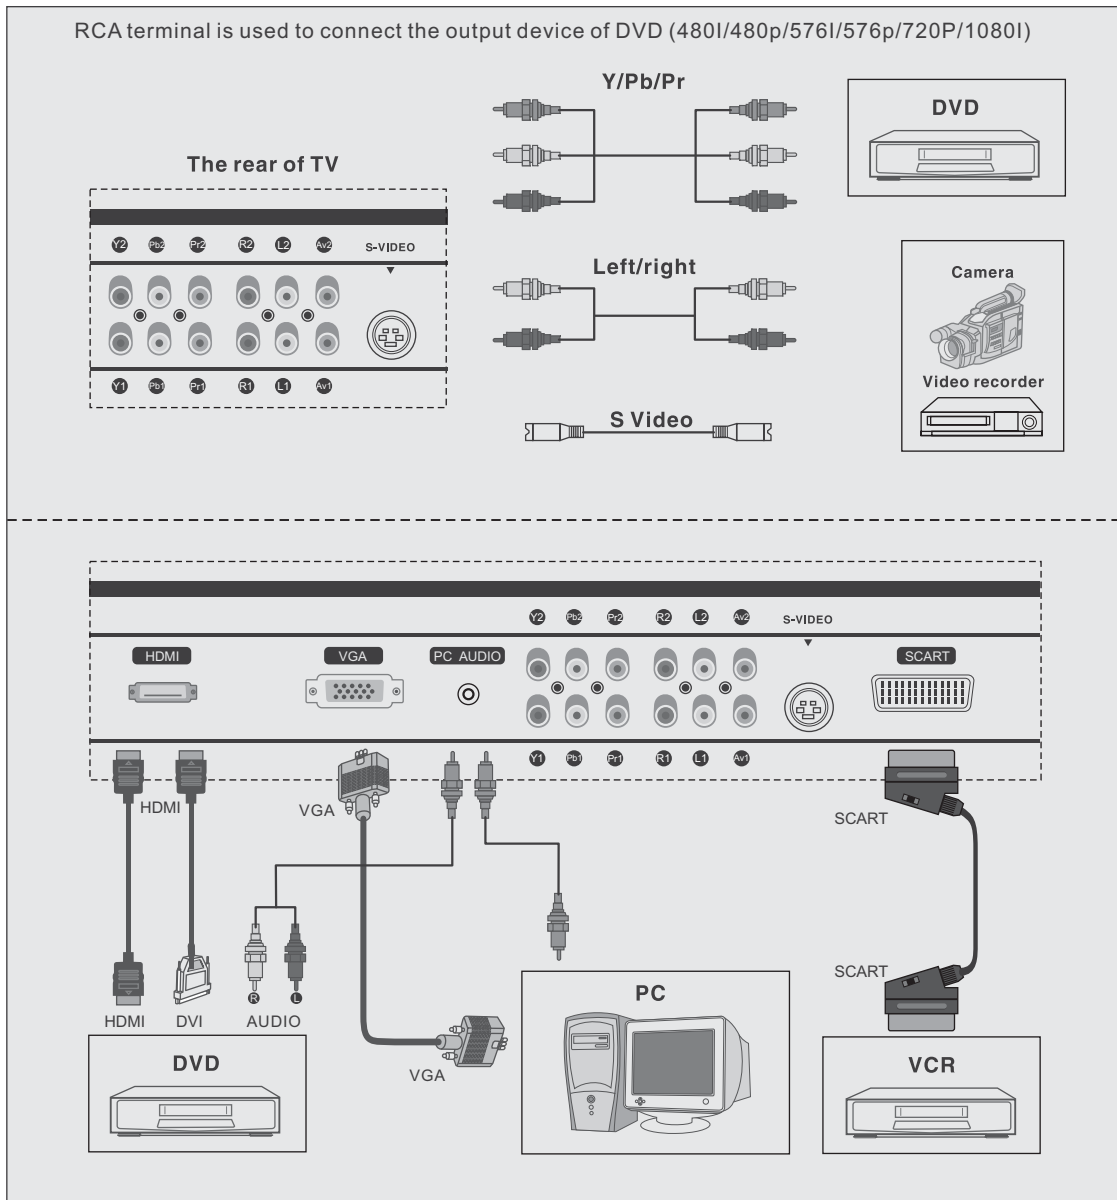


Notes:

- 1.Y-Pb-Pr1 /Av1/ S-Video use a common Audio in.
- 2.Y-Pb-Pr2 / Av2 use a common Audio in.
- 3.Y-Pb-Pr of DVD is corresponding to Y-Pb-Pr of LCD TV.

- 4.Scart to Scart from a VCR
- 5.DVI to HDMI and using the PC audio
- 6.PC to VGA also using the PC audio
- 7.AV IN and YPbPr from a DVD

LCD TV

Trouble shooting: please contact the maintenance personnel in advance.

 Perform some basic troubleshooting procedures as the following before you contact your local support center . If the problem still exists, please record the model and serial number of your TV, and contact your local support center.

No sound and picture:

- ◆ Check if power cord is properly connected to the wall AC outlet and the outlet is electrified.
- ◆ Make sure you have pressed power on/off button on the front panel
- ◆ Check brightness and contrast setting.
- ◆ Checking volume setting.

Picture ok, no sound:

- ◆ Check volume setting.
- ◆ Check if Mute button on remote controller is pressed

No picture or only monochrome picture:

- ◆ Check color system setting
- ◆ Sound system

Interfered sound or picture:

- ◆ Try to find out the equipment that brings interference and keep it away.
- ◆ Try to plug power cord into another AC outlet

Poor picture or picture distortion:

- ◆ Check the antenna (direction and location) and /or cable connection.

Remote control cannot work:

- ◆ Replace batteries with new ones
- ◆ Clean the upper edge of remote controller (IR transmitter)
- ◆ Check contacts of the battery box.

Attach purchase
receipt here

~ Warranty ~

IMPORTANT: PLEASE RETAIN THIS WARRANTY CARD WITH YOUR PURCHASE RECEIPT

This product is covered by a 12 month warranty from the date of purchase when the appliance is used solely for domestic purposes. For commercial use, the product is covered by a 90 day warranty from the date of purchase.

The warranty is valid against mechanical or electrical defects if the product is used in accordance with the instructions and provided that it is not connected to an unsuitable supply, dismantled or interfered with or damaged in any way.

Under this warranty any parts found to be defective will be repaired or replaced free of charge, or the unit will be exchanged with like or similar, solely at the discretion of Prima Australasia.

To obtain service under warranty, purchase receipt is required. This warranty in no way affects your rights under statutory law.

Retailer: _____

Date of purchase: _____

Name of product: _____

Model number: _____

If the product you have purchased is/becomes faulty, please contact the place of purchase for their returns policy and procedure. You must retain your proof of purchase for your warranty to be valid.

WARRANTY SERVICES:
PO BOX 326, BRAESIDE, VIC, 3195
TEL: 1300 366 155



**Should you encounter any problem
DO NOT RETURN THIS PRODUCT TO THE STORE
before reading the instructions carefully.**

**If you need further assistance
call our Customer Care Centre
on 1300 366 155**

**No product will be accepted at the store without a
reference number issued by the Customer Care Centre
above, along with your original store receipt.**

**CUSTOMER CARE CENTRE – OPERATING HOURS
Monday-Friday 8.30am-5.00pm(AEST)**



DISTRIBUTED IN AUSTRALIA BY:
Prima Australasia Pty Ltd.
PO BOX 326, Braeside, Vic 3195
TEL: 1300 366 155
www.primaaustralasia.com.au

SOUTHERN AFRICA DISTRIBUTION BY:
Nu World Industries Pty Ltd.
PO BOX 8964, JHB 2000
TEL: (011) 321-2111/Service: 0800 110 812
www.nuworld.co.za