 


TESCO

User guide

THDVD17
HDMI DVD Player

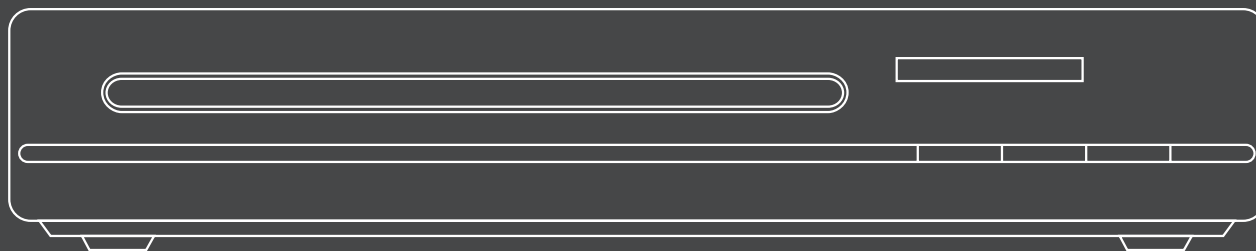

IMPORTANT SAFETY INFORMATION



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

Read these instructions.

Keep these instructions.

Heed all warnings.

Follow all instructions.

Do not use this apparatus near water.

Clean only with a dry cloth.

Do not block any ventilation openings.

Install in accordance with the manufacturer's instructions.

Do not install or operate near any heat sources such as radiators, stoves, or other apparatus that produce heat.

Unplug this apparatus during lightning storms or when unused for long periods of time.

Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is

damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Warning: To reduce the risk of fire or electrical shock, do not expose this product to rain or moisture. The product must not be exposed to dripping and splashing and no object filled with liquids such as a vase of flowers should be placed on the product.

No naked flame sources such as candles should be placed on the product. No naked flame sources such as candles should be placed on the product.

Batteries (a battery pack or installed batteries) shall not be subject to excessive heat such as sunshine, fire or the like.

Caution: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this device.

Caution: Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous exposure.



These labels tell you that the unit contains a Laser component. Do not stare at the laser lens.

When the disc tray is open a safety interlock disconnects power to the laser. Do not defeat this safety interlock.

IMPORTANT

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ELECTRICAL INFORMATION

Mains Supply: The mains operating voltage is marked on a rating plate on the back panel.

The means of disconnecting this appliance from the mains supply is the AC mains plug. This should be unobstructed and readily operable at all times.



BATTERY CAUTIONS

BATTERY WARNINGS

The handset uses a battery. There is a risk of fire and burns if batteries are handled improperly. Do not disassemble, crush, puncture, short external contacts, or dispose of in fire or water.

Replace the handset battery only with a battery of the same voltage and type.

Discard used batteries in accordance with recycling regulations in force in your area.

CAUTIONS IN USE

GENERAL CAUTIONS

CAUTION: During playback, the disc spins at high speed, do not lift or move the player, doing so may damage the disc.

CAUTION: When the player is stopped the disc is still rotating at a very high speed. Leave the disc to come to a rest before removing it.

CARE OF DISCS

DVD discs are fragile. Treat them with care. Always store them upright in their packing; away from direct sunlight, heat and damp.

When handling discs, hold the disc's outer edge and/or the centre spindle hole. Do not touch the disc surface. Never bend or flex a disc.

Clean the disc surface with a soft, dry cloth. Wipe the disc surface gently, radially, from centre toward the outer edge. Never apply solvents to the surface of a disc.

INDEX

IMPORTANT SAFETY INFORMATION.....	1
BATTERY CAUTIONS	2
CAUTIONS IN USE.....	2
INDEX.....	3
INTRODUCTION.....	3
PLAYER FEATURES	4
DVD REGION CODES	4
NOTICES.....	4
CONTROLS AND CONNECTIONS	5
REMOTE CONTROL HANDSET.....	6
CONNECTING DIGITAL VIDEO AND AUDIO	7
CONNECTING ANALOGUE VIDEO AND AUDIO	8
GETTING STARTED.....	9
PLAYING A DVD	10
PROGRAM PLAY OF A DVD OR AUDIO CD	14
PLAYING DIGITAL PHOTOS.....	15
SETTING UP THE PLAYER	16
GENERAL SETUP PAGE.....	17
AUDIO SETUP PAGE.....	18
VIDEO SETUP PAGE	19
PREFERENCE PAGE.....	20
TROUBLESHOOTING	21
CARE AND CLEANING	21
SPECIFICATIONS.....	22
WARRANTY	22

INTRODUCTION

Read this manual before using your player.

The Player is set to play Region 2 discs.

The player will accept the following formats (among others): DVD, DVD+R, DVD+RW, DVD-R, DVD-RW, CD-DA, CD, CD-R, CD-RW, Picture CD.

The following formats are not acceptable:

DVD discs with other region codes.

Improperly formatted recordable discs. This may include discs which are not finalised.

The player has built in copyright protection technology. If a video recorder is connected to the player, the video output image may be distorted during recording.

UNPACKING

The carton should contain:

- THDVD17 DVD player
- Remote control with batteries
- User guide

If any items are missing or damaged, contact your nearest TESCO store for a replacement. Have your receipt ready when you call. Retain the packaging. If you dispose of it, do so having regard to any recycling regulations in your area.

PLAYER FEATURES

DVD, DVD+R, DVD+RW, DVD-R, DVD-RW, CD-DA, CD, CD-R, CD-RW, Picture CD capable

TV format: PAL, NTSC, Auto (switchable)

Digital AV out: HDMI

Analogue AV out: SCART

DVD features:

Multi Subtitle select

Multi Language select

Multi Angle select

Other features:

On screen display menu

Multi-level zooming



DVD REGION CODES

DVD discs and players are covered by a worldwide agreement which limits playback of DVD discs to specific regions as determined by the software manufacturer. Most DVDs come marked with a region coding. A disc specified as playable in one region may not play on a player designed for a different region. A disc specified as universal or with no region coding (Code 0) may be played in any region.

The regions are:

Region 1: Canada, USA

Region 2: Europe, Japan, Mid. East, South Africa

Region 3: South-East Asia

Region 4: Australia, Caribbean, Central & South America, New Zealand

Region 5: Africa, Former Soviet Union, India, North Korea, Pakistan

Region 6: China

THIS PLAYER PLAYS REGION 2 AND REGION FREE , UNIVERSAL (0) DISCS.

NOTICES

IMPORTANT NOTE

DVD discs contain various features. Many features are determined by the program or software content on the DVD disc itself. Some procedures in this manual cannot be performed if the disc does not support the feature. Also, some discs may need special settings which are unsupported by the player.

The player has built in copyright protection technology that prevents copying from a DVD disc to any media.

If a video recorder is connected to the player, the video output image will be distorted.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation.

 
Reverse engineering or disassembly is prohibited.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trade marks of Dolby Laboratories.

CONTROLS AND CONNECTIONS


FRONT VIEW

1. Disc tray
2. Open/close button
3. Display
4. Play/pause button
5. Remote control sensor
6. Stop button
7. Standby button

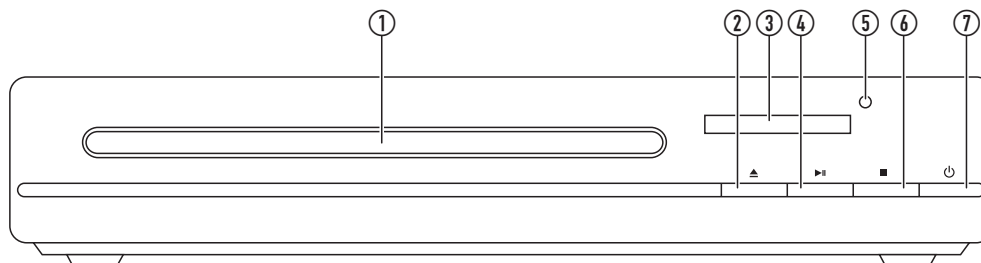


BACK VIEW

 1. Power cable
2. HDMI digital video output
3. SCART analogue video output

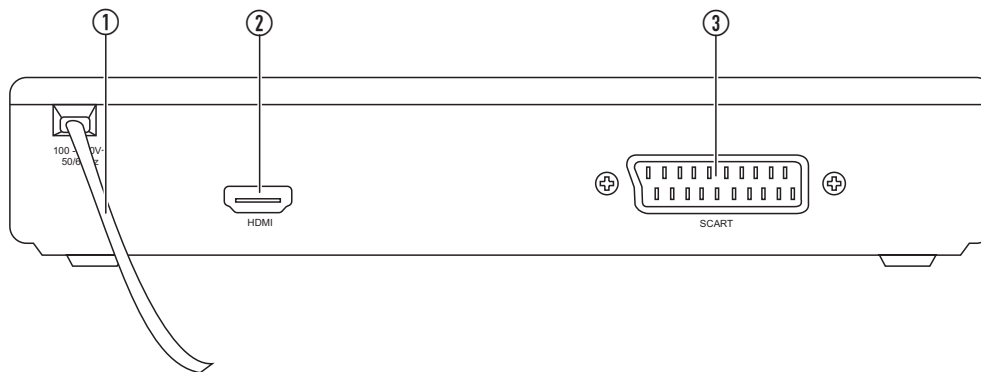

REMOTE CONTROL HANDSET

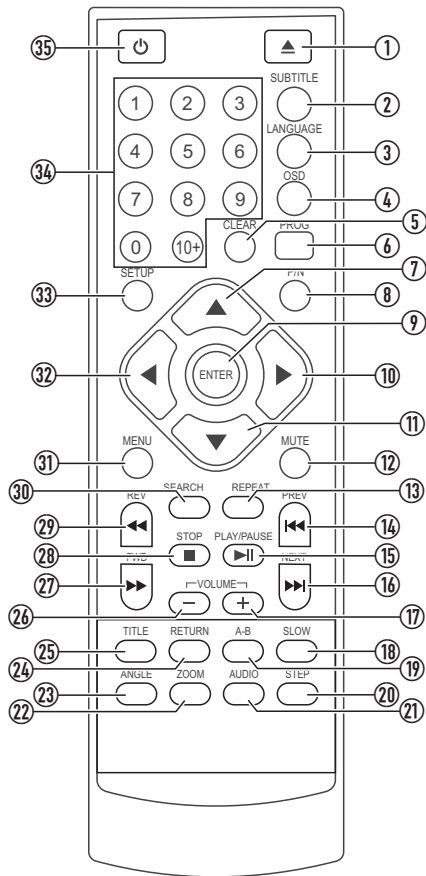 


1. Open/Close
2. Subtitle
3. Language
4. On-Screen display
5. Clear
6. Program
7. Up cursor
8. PAL/NTSC
9. Enter
10. Right cursor
11. Down cursor
12. Mute
13. Repeat
14. Previous Chapter/Track
15. Play/Pause
16. Next Chapter/Track
17. Volume up
18. Slow motion
19. A-B repeat
20. Step
21. Audio
22. Zoom
23. Angle
24. Return
25. Title
26. Volume down
27. Scan forward
28. Stop
29. Scan reverse
30. Search
31. Menu
32. Left cursor
33. Setup
34. Numeric keypad
35. Standby


FITTING/REPLACING THE BATTERIES

When fitting the batteries in the remote control, refer to the diagrams.

 
1. Press the battery door catch (arrowed). While holding the catch, lift off the door.



 2. Fit one of the AAA batteries (supplied) into the upper battery compartment, observing polarity as shown.



 3. Fit the second AAA battery into the lower compartment. Press it down as shown, then tuck the end of the battery into the compartment.



4. When replacing the batteries, use only the same AAA type specified.
5. Re-Fit the battery cover.

Dispose of used batteries with regard to the recycling regulations in your area. Do NOT short circuit batteries or throw them into water, the general rubbish or in a fire.

Weak batteries can leak and damage the remote control. Replace them in good time!

CONNECTING DIGITAL VIDEO AND AUDIO



 
CAUTION: Always disconnect the player, TV, and any other AV system components from the mains before making or changing any connections.

HDMI CONNECTION TO A TV

Your player has a digital HDMI output for digital video and audio.

If your TV features a compatible connector, always use this for the best performance.


- Connect an HDMI cable (not supplied) as shown between the HDMI output of the player and a free HDMI input of the TV.

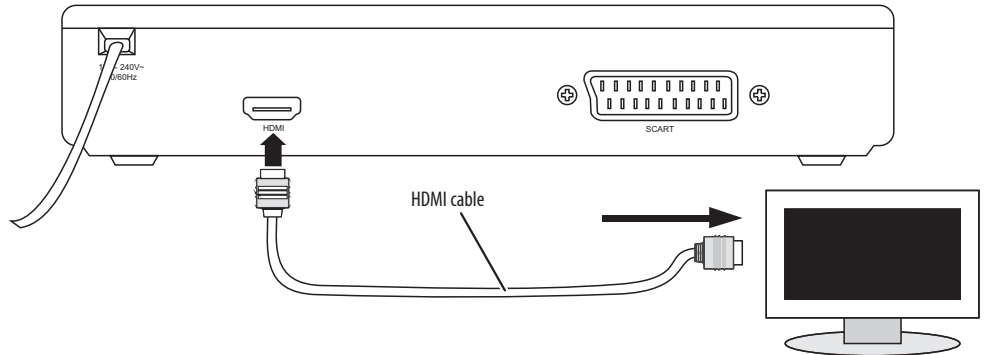

HDMI CONNECTION TO AN (OPTIONAL) SURROUND-SOUND DECODER

If your audio-visual system includes a separate surround-sound decoder with HDMI input and output connections, you can use two HDMI cables (not supplied) to connect your player to the decoder and then to the TV.

 - Connect one HDMI cable between the HDMI output of the player and a free HDMI input of the surround-sound decoder.
- Connect a second HDMI cable between the HDMI output of the decoder and a free HDMI input of the TV.

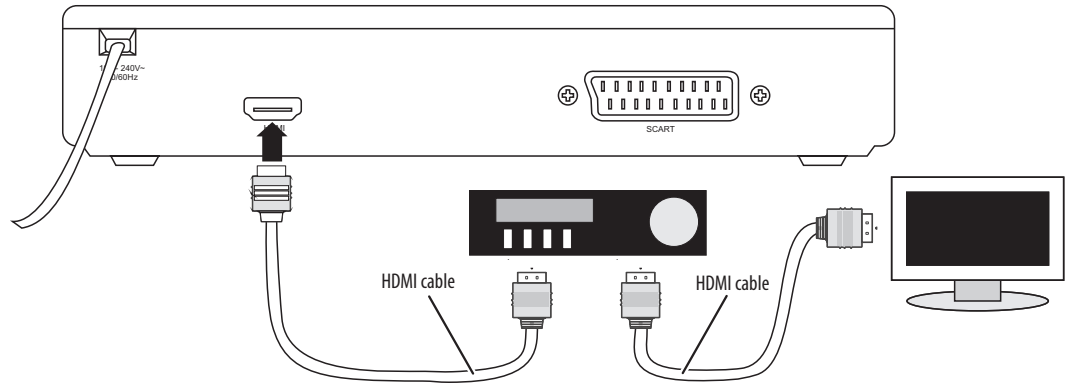

CONNECTING ANALOGUE VIDEO AND AUDIO

 


CAUTION: Always disconnect the player, TV, and any other AV system components from the mains before making or changing any connections.

SCART CONNECTION TO A TV

To connect to a SCART input you will need a SCART cable (not supplied).

Connect the SCART connector at one end of the cable to the player as shown, then connect the other connector to a free SCART input of the TV.

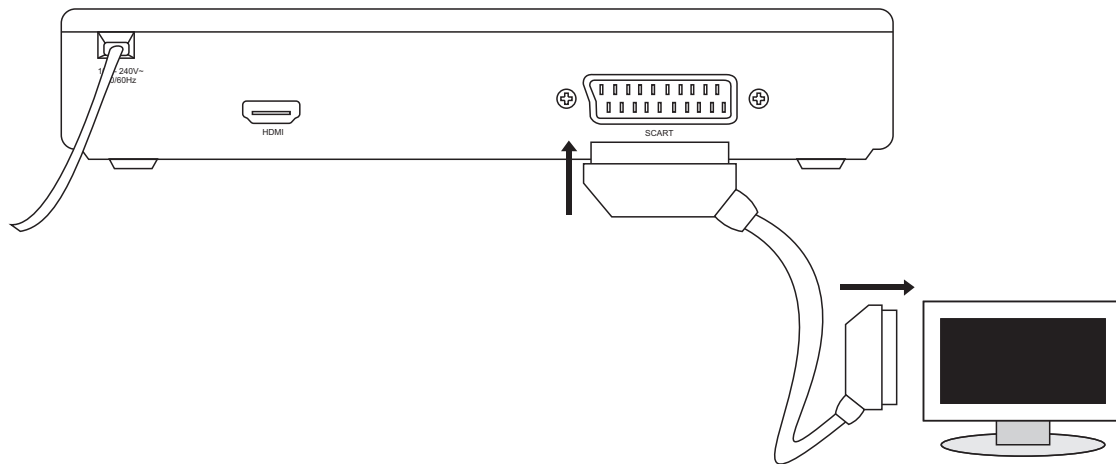

GETTING STARTED

CONNECTING POWER

- Check that the mains voltage marked on the rating plate on the back panel is the same as the voltage in your area.
- Plug the mains plug into the wall socket.
- Switch the mains power on at the socket.

The display will light briefly with the legend 'OFF'.

POWER CONTROL

Switching on the player:

- Press the  button.

The player will switch on and the display will show the legend 'LOAD'. If a disc is loaded, it will start to play automatically.

Switching off the player:

- Press the  button.

The player will switch off and the display will light briefly with the legend 'OFF'.

USING THE REMOTE HANDSET

Point the handset at the infrared receiving window of the player, located on the front panel. The handset must be no more than 3 metres from the player and at an angle of no more than 30° for reliable operation. If handset operation is erratic in sunlight, move the player into the shade.



REMOTE CONTROL AND FRONT PANEL OPERATION

The text of this instruction book describes functions that are controlled by the remote control.

A standby button and three of the function buttons are also duplicated on the front panel for convenient operation when you are close to the unit.



LOADING/REMOVING A DISC

Loading a disc:

- Press the  button to open the disc tray.
- Holding the disc by the edges, place the disc on the tray with the label uppermost.
- Press the  button to close the disc loading tray.

The unit will read the disc and automatically start playing the disc from the beginning.

Removing a disc:

- Press the  button to open the disc loading tray.
- Holding the disc by the edges, lift the disc off the loading tray and place it back in the case.
- Press the  button to close the disc loading tray.

PLAYING A DVD

PLAYING A DVD DISC

- Load the disc and wait for the title menu to appear.
- Navigate to the menu option to play the movie with the ◀▶▲▼ buttons.
- Press ENTER to select this option.

The movie will begin to play.

PLAYBACK CONTROL

Play Pause:

- Press the ▶⏸ button at any time to pause the movie and display a still-frame.
- Press the STEP button to advance the still-frame one frame at a time.
- Press the ▶⏸ button again to return to play the movie.

Slow motion:

- You can choose to play the movie in slow motion.
- Press the SLOW button repeatedly to set the slow motion speed. Choose from - 1/2X → 1/4X → 1/8X → 1/16X → Normal.

Fast picture search:

- Press the ▶▶ or ◀◀ button repeatedly to fast search forward or backward through the movie.

Each time you press the button, the speed will change 2X → 4X → 8X → 16X → 32X → Normal.

- Press ▶⏸ to resume play.

To change chapter:

Most DVD movie discs are divided into chapters so you can skip to convenient points within the movie.

- Press the ▶▶ or ◀◀ button to skip to the next or previous chapter.

Jump to a chapter:

- To jump directly to a chapter, enter a number from the keypad to open the chapter entry screen.
- For chapters 1 - 9, enter a number on the numeric keypad to jump directly to the chapter. For chapter 10 or above, press the 10+ button repeatedly to set the first digit of the chapter you want, then enter the second digit on the numeric keypad.

Once the number has been entered, the player will skip directly to the selected chapter.

To stop the disc:

- Press the ■ button.

Play will stop, holding at the point you stopped the disc.

- To resume playing the disc from the point where you stopped, press the ▶⏸ button.

 
To completely stop the disc:

- Press the ■ button twice.

The disc will stop.

Repeat play:

- Press the REPEAT button repeatedly to step through the repeat mode options.

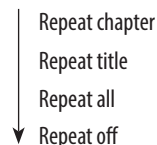

Repeat A-B:

A-B repeat enables you to choose the start and end of a section within a DVD and repeat it continuously.

- Press A-B to mark the start of the section you want to repeat.
- Press A-B again to mark the end of the section you want to repeat.

This section will now repeat constantly.

- Press A-B again to clear A-B repeat.

PLAYING A DVD

To set the volume:

The volume may be set from the remote control.

- Press the **VOLUME+** button to increase the volume.
- Press the **VOLUME-** button to decrease the volume.

Muting the sound:

- Press the **MUTE** button to mute and un-mute the sound from the speakers.

MUTE will be displayed on-screen when the sound is muted.

Root and title menus:

- Press **MENU** to display the Root menu from the disc.
All the user choices available on the disc are driven from this menu.

- Press **TITLE** to display the Title menu.

The title menu may contain one or several titles.

NOTE: On many DVD discs the **TITLE** and **ROOT** menus are the same.

Selecting items from the menus:

- Navigate to the item with the ◀ ▶ ▲ ▼ buttons.
- Press **ENTER**.

Camera angle:

Some discs will include the option to view from a choice of camera angles.

To change camera angle -

- Press the **ANGLE** button repeatedly to step through the camera angles that are available on the disc.

NOTE: There are very few discs that include multi-angle views.

Zoom:

While a DVD is playing you can zoom in closer to the picture.

- Press the **ZOOM** button repeatedly to change the zoom setting from $2X \rightarrow 3X \rightarrow 4X \rightarrow 1/2X \rightarrow 1/3X \rightarrow 1/4X \rightarrow Normal$.
- When zoom is set greater than 100%, press the ◀ ▶ ▲ ▼ buttons to pan the screen view around the image.
- To exit zoom, press the **ZOOM** button again.

Return:

Press return to return to the previous menu.

PLAYING A DVD

On-screen display:

An On Screen Display (OSD) disc status indicator will be displayed at the top of the screen when certain functions are executed, or when the **OSD** button on the remote control is pressed. When different discs are loaded the indicators may change.

To change the on-screen display:

- Press the **OSD** button repeatedly.

The display modes will change on the screen.

To switch off the on-screen display:

- Press the **OSD** button repeatedly until the display banner disappears.

Changing the audio settings of a DVD:

The player allows you to select a preferred language, TV and audio format from those included on the DVD video disc.

- Press the **AUDIO** button repeatedly.

The choices available depend on the disc and may include different audio formats and languages.

Changing the video format:

Press the **P/N** button repeatedly to change the video format.

The video format will step between AUTO, NTSC and PAL settings.

AUTO is the recommended setting unless you have a TV that can only reproduce NTSC or PAL formats.

Selecting subtitles

- Press the **SUBTITLE** button repeatedly.

The choices available depend on the disc.

- To cancel the subtitle display, press the **SUBTITLE** button repeatedly until the subtitles switch off.

Search the disc:

You can search for a particular chapter or a time point within a chapter or title using the **SEARCH** feature.

- Press the **SEARCH** button repeatedly until you see the search option you want.
- Enter the search information with the number keypad.

When you complete entry, play will jump to the point you selected.

PLAYING AN AUDIO CD

PLAYING AN AUDIO CD

- Load an Audio CD into the player.

The player will read the disc. Most CDs will start playing automatically.

The elapsed time of the track playing will be displayed.

If the TV is switched on the navigation screen will be shown.

Play/Pause:

- Press the ►|| button at any time to pause playback.
- Press the ►|| button again to continue to play the disc.

To change track:

- Press the ►|◀ or ◀◀ button to skip to the next or previous track.

Direct access track selection:

You can jump directly to a track using the numeric keypad.

- For tracks 1 - 9, enter a number on the numeric keypad to jump directly to the track. For track 10 or above, press the 10+ button repeatedly to set the first digit of the track you want, then enter the second digit on the numeric keypad.

Once the number has been entered, the player will skip directly to the selected track.

Fast search:

- Press the ►► or ◀◀ button repeatedly to fast search forward or backward.

Each time you press the button, the speed will change 2X → 4X → 8X → 16X → 32X → Normal

- Press ►|| to resume play.

To set the volume:

- Press the VOLUME+ button to increase the volume.
- Press the VOLUME- button to decrease the volume.

To stop the disc:

- Press the ■ button.

Play will stop, holding at the point you stopped the disc.

- To resume playing the disc from the point where you stopped, press the ►|| button.

To completely stop the disc:

- Press the ■ button twice.

The disc will stop.

Search the disc:

You can search for a particular track or a time point within a disc or track using the SEARCH feature.

- Press the SEARCH button repeatedly until you see the search option you want.
- Enter the search information with the number keypad.

When you complete entry, play will jump to the point you selected.

 
Changing the audio mode:

- Press the AUDIO button repeatedly to change the audio mode.

The audio mode will change to play the left channel only, right channel only, mix the channels or play in stereo.

Repeat play:

- Press the REPEAT button repeatedly to step through the repeat mode options.



Repeat A-B:

A-B repeat enables you to choose the start and end of a section within a CD and repeat it continuously.

- Press A-B to mark the start of the section you want to repeat.
- Press A-B again to mark the end of the section you want to repeat.

This section will now repeat constantly.

- Press A-B again to clear A-B repeat.

PROGRAM PLAY OF A DVD OR AUDIO CD

You can program up to 20 chapters (DVD) or tracks (audio CD) to play in your preferred sequence.

- Press PROG.

The program screen will open. The first 10 program entries are shown.



Entering a program:

- Use the ◀ ▶ ▲ ▼ buttons to highlight the program entry you want to change.
- Enter the Title and Chapter numbers (DVD) or Track number (CD) in sequence with the numeric keypad. Use the 10+ button to enter numbers greater than 9.
- As you complete each entry, the next line will be highlighted.
- Continue to enter all the chapters/tracks in your program in this way.
- Press CLEAR if you want to clear an entered number.
- Press ▶▶ or ◀◀ to step between the first and second pages of program entries.

Exiting program entry:

- If you want to leave the program entry screen and erase the program you entered, highlight 'EXIT' at the bottom of the screen.
- Press ENTER.

The program screen will close.

Playing the program:

- When you have completed entry, highlight 'START' at the bottom of the screen.



- Press ENTER.

The program will start to play.

Clearing a program:

- Press ■ to stop play.
- Press ■ again.

Program repeat:

- While playing a program, repeat modes can be set in the normal way.

PLAYING DIGITAL PHOTOS

 
PLAYING A CD-ROM OR DVD-ROM CONTAINING JPG PHOTO FILES

You can also play a disc containing digital photos (.JPG). The files may all be saved to the 'root' folder of the disc or they may be saved in folders.

Loading a CD-ROM or DVD-ROM:

- Load the disc in the same way as a DVD.

The main screen will appear

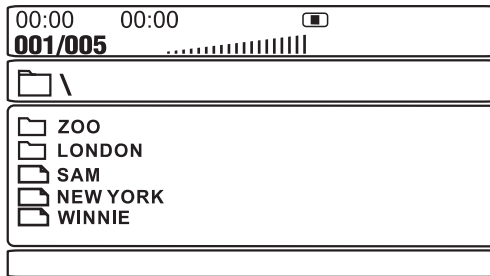

A disc may contain only files or may have one or more folders with files within the folders.

- Use the ▲ ▼ buttons to select a folder or file.
- Press ENTER.

If you have selected a file:

A slideshow will start with the photo you selected.

If you have selected a folder:

- Press ▲ ▼ to navigate to the files you want to play.
- Press ENTER to start play.

The file will play.

To return to the main screen:

- Press MENU.

Playback control:

- Control the playback of slideshows with the ►||, ►►, ◀◀ playback control buttons.

Additional controls for photo slideshows:

You can rotate the photo on-screen if required.

- Press the ►|| button to pause the slideshow.
- Press ◀ to rotate a photo anti-clockwise by 90°.
- Press ► to rotate a photo clockwise by 90°.
- Press ▲ to mirror a photo vertically.
- Press ▼ to mirror a photo horizontally.

Stopping a slideshow:

- Press MENU to stop a slideshow and return to folder view.

Zoom and pan:

While a slideshow is playing you can zoom in closer to the picture.

- Press the ►|| button to pause the slideshow.
- Press the ZOOM button.

Zoom 100% will be displayed.

- Press the ►► or ◀◀ button repeatedly to zoom in and out in the range 50% to 200%.
- When zoom is set greater than 100%, press the ◀ ►▲ ▼ buttons to pan the screen view around the image.
- To exit zoom, press the ZOOM button again.

SETTING UP THE PLAYER

The setup menu enables you to customise language and display preferences, and to match your audio and video components.

 
To open the setup menu:

- Press the **SETUP** button.

The Setup menu will open at the General setup page.


To change to another setup page:

- Press the ◀ or ▶ button.

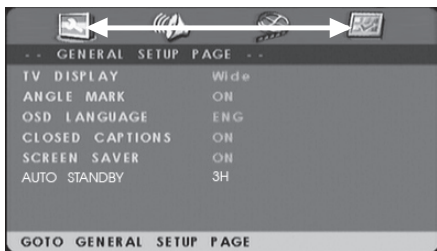


Navigating the setup screens:

 - Press the ▼ button to move down to the list of settings.
- Press the ▲ or ▼ button to move up or down the list.

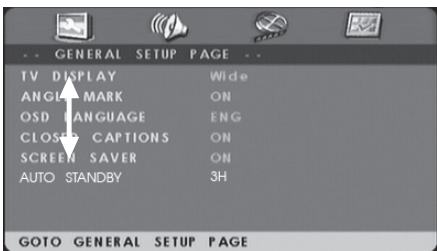


- When the setting you want to change is highlighted, press the ▶ button.

 A list of options for this setting will open.

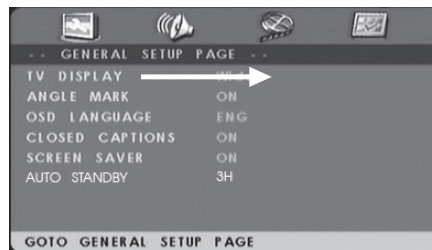

 - Press the ▲ or ▼ button to move up or down the list of options.

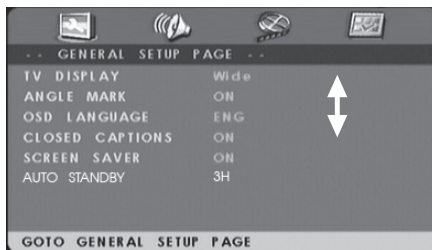

- Press **ENTER** to select an option.
- Press ◀ to move back to the list of settings.

 
From the list of settings:

- Press ◀ to move up to select another setup page.

To close the setup menu:

- Press the **SETUP** button.

GENERAL SETUP PAGE

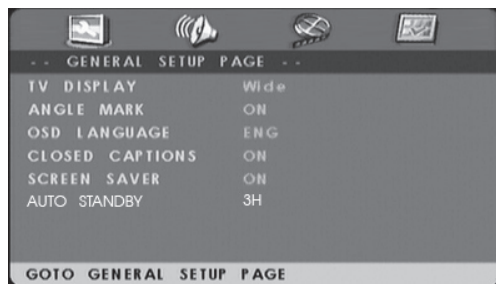

Choose the General setup page to:

- Change the TV display format.
- Enable/disable multi-angle selection.
- Change the on-screen language setting.
- Switch captions on or off.
- Change the Auto Standby setting.

GENERAL SETUP PAGE

TV display

- Choose from 4:3 Pan Scan (Normal PS), 4:3 Letter Box (Normal LB), 16:9 (Wide).

Angle mark

- This enables/disallows the user to select different camera angles.
NOTE: Very few DVD movies include multiple camera angles.

OSD language

- Set the language for the on-screen display menus.

Closed captions

- Choose ON to display on-screen captions.
NOTE: DVDs may not always include on-screen captions.

Screen saver setting

- Choose ON or OFF.

Auto Standby

- Auto Standby is an energy-saving feature that will set the player to Standby after period of inactivity. Choose an Auto Standby time of 3 or 4 hours, or select 'OFF' to disable Auto Standby.

AUDIO SETUP PAGE



Choose the Audio setup page to:

- Set how the player downmixes multiple audio channels.
- Set up the Dolby Digital audio decoder.

AUDIO SETUP PAGE

 
Downmix

- Choose from LT/RT or Stereo (factory setting).

Dolby Digital

- The Dual Mono sub-option enables you to choose normal operation (stereo), to route the left or right channel soundtrack to both speakers or to set for mono sound.
- The Dynamic sub-option enables you to set the dynamic range of the sound. The factory setting is 'Off', change to a higher setting if you are listening in a noisy place.


VIDEO SETUP PAGE

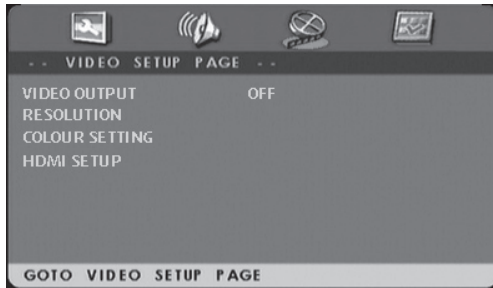

VIDEO SETUP PAGE

Choose the Video setup page to:

 - Set the RGB output of the SCART connector
- Set the video resolution.
- Set the screen sharpness, brightness, contrast, hue and saturation.
- Change HDMI settings.

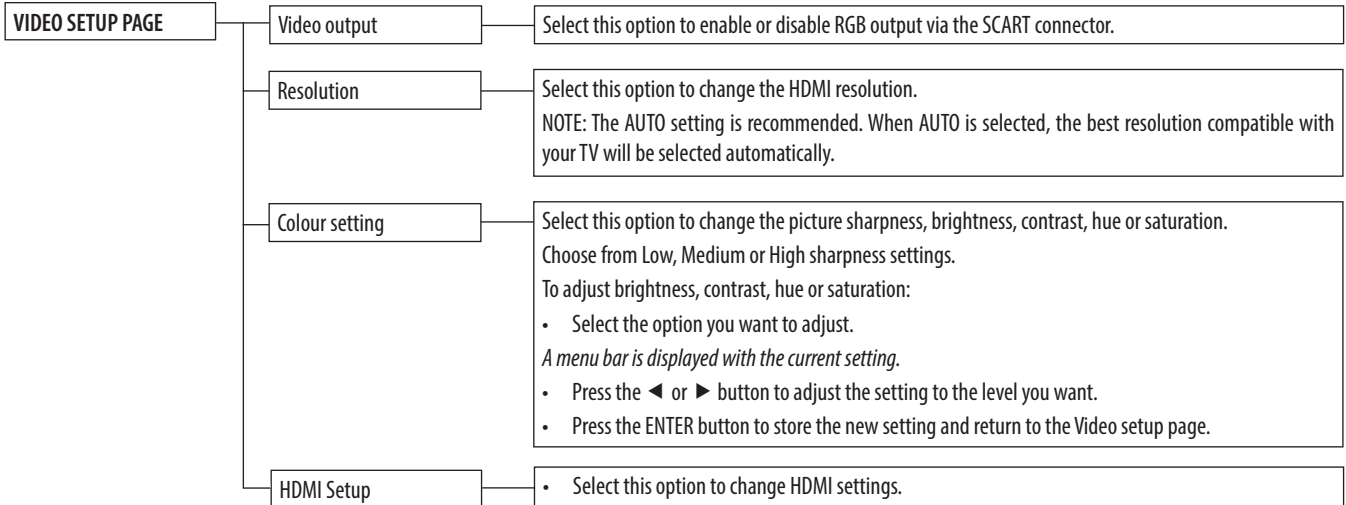


PREFERENCE PAGE



NOTE: The Preference page cannot be opened when a disc is playing.

Choose the Preference page to:

 - Set the TV system.
- Set the default audio language.
- Set the default subtitle language.
- Set the default disc menu language.
- Restore all settings to the factory default.

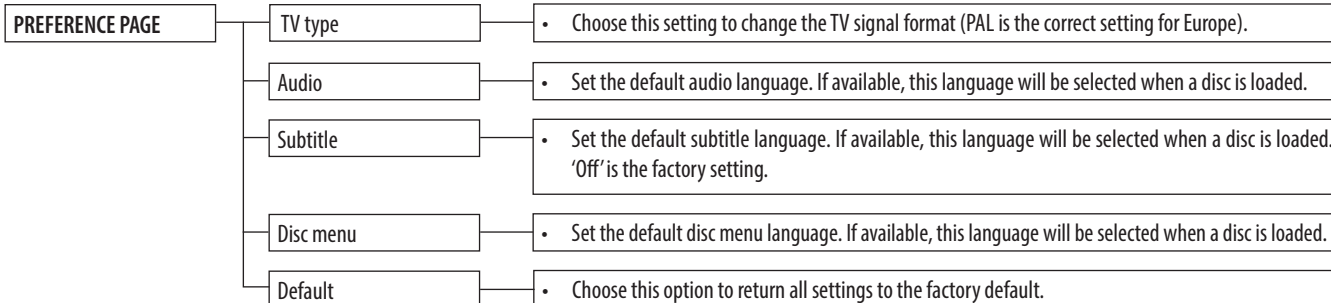

TROUBLESHOOTING

TROUBLESHOOTING

If your DVD player is not working properly use this guide before contacting Tesco. Before investigating a problem, always switch off the player and any connected units.

SYMPTOM	CORRECTIVE ACTION
No power	Check that the power cord is connected securely.
No Sound	Is the volume control turned up?
Interference or scrolling	Due to the effect of copy protection on the disc Avoid connecting to a recorder or TV/VCR combination.
Disc will not play Disc skips Disc Distorts	The DVD+-RW you played should be finalized. Ensure the disc is correctly inserted. Make sure the disc is free from scratches & marks. Insert a playable disc. (Check disc type and system). Is the disc Region 2?
No forward or reverse scan	Some discs prohibit rapid scanning or title and chapter skip. You can't advance through the opening credits and warning information at the beginning of movies.

CARE AND CLEANING

AFTER USING YOUR PLAYER

- Remove the disc from the disc tray.
- Close the disc tray.
- Set the player to Standby.

CLEANING

Occasionally wipe the player with a lint free duster. Never clean the player with liquids or solvents.

Do NOT clean the inside of the player tray with a cloth. Lightly blow out any dust. If your discs skip or don't play properly, this is more likely to be caused by damage or dirt on the disc rather than any fault of the unit.

SPECIFICATIONS

Power supply: 100 - 240 V~, 50/60 Hz

Power consumption: 10 W Max

Weight: 0.7 kg



Class II construction double insulated.

This product must not be connected to earth.



WARRANTY

Your Tesco appliance is covered by a warranty for 12 months from the date of purchase. If a fault develops during this period, please contact the TESCO electrical help line. Please have your original purchase receipt with you when you call. This warranty in no way affects your consumer rights,



UK: Waste electrical products/batteries should not be disposed of with household waste. Separate disposal facilities exist, for your nearest facilities. See www.recycle-more.co.uk or in-store for details.

RO1: Produced after 13th August 2005. Waste electrical products/batteries should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



Tesco Stores Ltd, Welwyn Garden City AL7 1GA, U.K.

Tesco Helplines:

Landlines 0800 323 4060 (Freephone from a BT landline).

Mobiles 0330 123 4060 (Calls cost no more than calls to geographic numbers eg. 01 or 02 and are included in inclusive minutes and discount schemes).