 


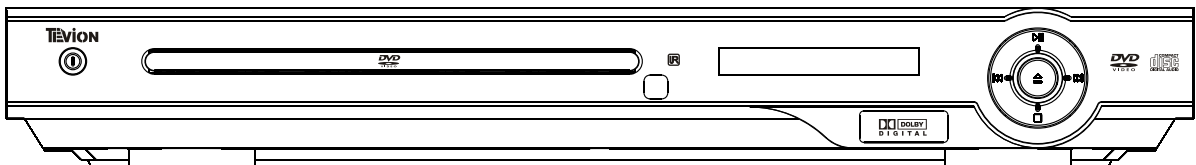

DVD PLAYER DVD7072

User's Guide



After Sales Support

Now you have purchased a Tevion® product you can rest assured in the knowledge that as well as your 3 year parts and labour warranty you have the added peace of mind of dedicated helplines :



Content

Introduction

■ Safety Precautions	2
■ Important Safety Instructions	3
■ Caution	5
■ Features	6
■ Front Panel and Rear Panel Illustration	7
■ Remote Control	8

Connections


■ Connecting to a TV set	9
■ Connecting to an AV Receiver with Digital Audio Input	10

Advanced Features

■ Mode and Features Setup	11
■ Remote Control Operation	19
■ Mp3 Playback	23
■ Kodak Picture CD Playback	24

Others

■ Troubleshooting	25
■ Remote control preparation	26
■ Specifications	27

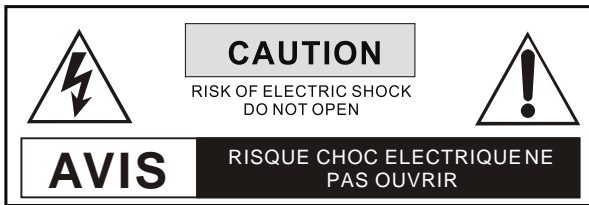 

THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE UNIT'S CABINET THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.



THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE MANUAL ACCOMPANYING THE UNIT.



THE MAINS PLUG USED AS THE DISCONNECT DEVICE, THE DISCONNECT DEVICE SHALL REMAIN READILY OPERABLE.



THE APPARATUS SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.



THE APPLIANCE COUPLER IS USED AS THE DISCONNECT DEVICE, THE DISCONNECT DEVICE SHALL REMAIN READILY OPERABLE.



ALWAYS REMEMBER TO REMOVE THE PLUG FROM THE MAINS SOCKET BEFORE DISCONNECTING THE POWER LEAD FROM THE BACK OF THE UNIT.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or cords.

WARNING:

TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THE UNIT TO RAIN OR MOISTURE. NEVER ATTEMPT TO OPEN THE CABINET, DANGEROUS HIGH VOLTAGES ARE PRESENTED IN THE UNIT. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

CAUTION:

TO PREVENT ELECTRIC SHOCK, MATCH WIDE- BLADE PLUG WITH WIDE SLOT AND FULLY INSERT. THE APPARATUS SHALL NOT BE EXPOSED TO WATER AND NO OBJECTS FILLED WITH LIQUID SUCH AS VASES SHALL BE PLACED ON THE APPARATUS.

CAUTION:

THE UNIT EMPLOYS A LASER SYSTEM. TO ENSURE THE PROPER USE OF THE UNIT, READ THIS MANUAL CAREFULLY AND KEEP IT FOR FUTURE REFERENCE.

IF THE UNIT REQUIRES SERVICING, CONTACT THE SELLER OR SEE "TROUBLESHOOTING".

TO PREVENT DIRECT EXPOSURE TO THE LASER RADIATION, DO NOT OPEN THE CABINET. VISIBLE LASER MAY RADIATE WHEN THE CABINET IS OPENED OR THE INTERLOCKS ARE DEFEATED. DO NOT STARE INTO THE LASER BEAMS.

CAUTION:

THE DVD VIDEO PLAYER IS A CLASS 1 LASER PRODUCT. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

AS THE LASER BEAM USED IN THIS DVD VIDEO PLAYER IS HARMFUL TO THE EYES, DO NOT ATTEMPT TO DISASSEMBLE THE CABINET. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

WARNING:

FCC REGULATIONS STATE THAT ANY CHANGE OR MODIFICATION TO THE EQUIPMENT, NOT EXPRESSLY APPROVED BY MAKER OR ITS AUTHORIZED PARTIES, COULD VOID USER'S AUTHORITY TO OPERATE THIS EQUIPMENT.

1. Read Instructions

All the safety and operating instructions should be read before the product is operated.

2. Retain Instructions

The safety and operating instructions should be retained for future reference.

3. Heed Warnings

All warnings on the product and in the operating instructions should be adhered to.

4. Follow Instructions

All operating instructions should be followed.

5. Cleaning

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

6. Attachments

Do not use attachments not recommended by the product manufacturer as they may cause hazards.

7. Water and Moisture

Do not use this product near water for example, near a bathtub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.

8. Accessories

Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

9. Portable Cart Warning

A product and cart combination should be moved with care. Quick stop, excessive force, and uneven surface may cause the product and cart to overturn.

10. Ventilation

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

11. Power Sources

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.

12. Grounding or Polarization

This product may be equipped with a polarized current line plug. Do not defeat the safety purpose of the polarized plug.

13. Power Cord Protection

Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.



(Symbol provided by RETAC)

14. Lightning

For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power lines surges.

15. Power Lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

16. Overloading

Do not overload wall outlets, extension cords, or integral convenience receptacles, as this can result in a risk of fire or electric shock.

17. Object and Liquid Entry

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

18. Servicing

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

19. Damage Requiring Service

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- A) When the power-supply cord or plug is damaged;
- B) If liquid has been spilled, or objects have fallen into the product;
- C) If the product has been exposed to rain or water;
- D) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation;
- E) If the product has been dropped or damaged in any way;
- F) When the product exhibits a distinct change in performance this indicates a need for service;

20. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

21. Safety Check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

22. Wall or Ceiling Mounting

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

23. Heat

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

- Please use the original box and packing materials for safe transportation of this product.

- It is normal for the cover and rear panel to become warm after the player has been operated for an extended period of time.

- Do not move this product during playback. Doing so may cause damage to the pickup and the disc.

 
Press **OPEN/CLOSE** on the front panel or remote to open or close the disc tray. Do not push or touch the tray while it is being opened or closed.

- Full compatibility with MPEG4, DVD, CD, MP3, Kodak Picture CD, CD-R and CD-RW (finalised)
- Screensaver
- Multiple playback modes: programme, Search
- Coaxial digital audio output
- S-video, composite video and component (Y, Pb, Pr) video outputs

Disc formats supported by this player:



MPEG4 files on discs



Multi-angle



Dolby Digital



Subtitle choices



 
MP3 files on CD-R/CD-RW



Audio choices



DVD video



TV Aspect Ratio modes



 
Parental Lock

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

The product complies with the KODAK Picture CD format and will display KODAK Picture CDs. The "KODAK Picture CD Compatible" logo is a trademark of Eastman Kodak Company and is used with permission.


Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works. © 1992-1997 Dolby Laboratories, Inc. All rights reserved.

LED screen

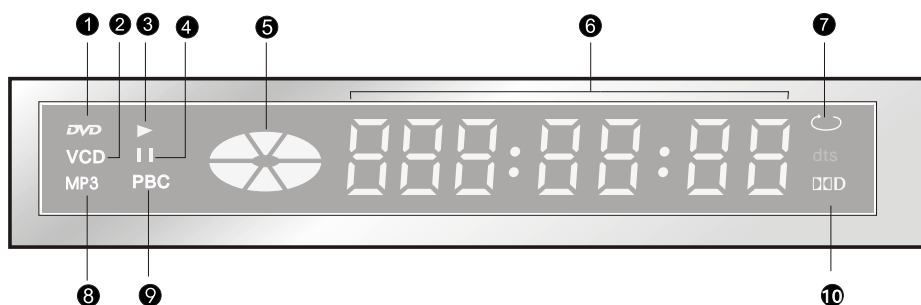


- ① DVD DISC
- ② VCD
- ③ PLAY
- ④ PAUSE
- ⑤ DISC PLAY
- ⑥ PLAY TIME
- ⑦ REPEAT
- ⑧ MP3 DISC
- ⑨ PBC
- ⑩ DOLBY DIGITAL

 Front panel

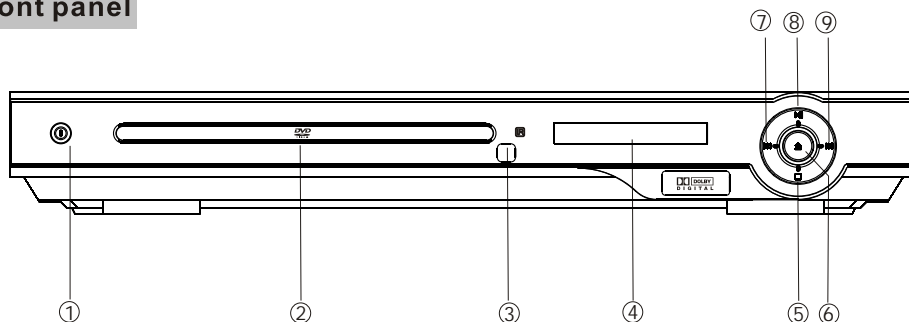


- ① POWER
- ② CD DOOR
- ③ SENSOR
- ④ LED SCREEN
- ⑤ STOP BUTTON
- ⑥ OPEN/CLOSE BUTTON
- ⑦ PREV BUTTON
- ⑧ PLAY/PAUSE BUTTON
- ⑨ NEXT BUTTON

 Rear panel

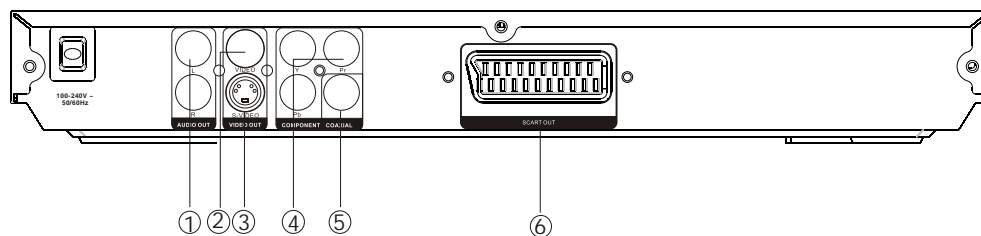

- ① 2.0CH Audio output (L, R)
- ② COMPOSITE VIDEO output jack
- ③ S-VIDEO output jack
- ④ Component Video output (Y, Pb, Pr)
- ⑤ Digital Audio COAXIAL output jack
- ⑥ SCART OUT

 
Remote Control

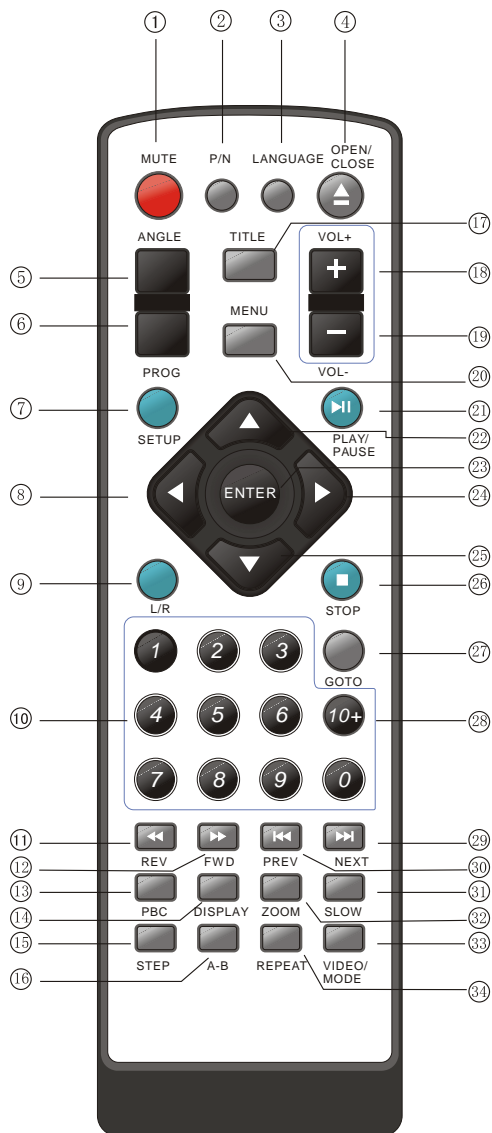

- | | |
|-----------------------|----------------|
| 1.MUTE | 21.PLAY/PAUSE |
| 2.P/N | 22.UP |
| 3.LANGUAGE | 23.ENTER |
| 4.OPEN/CLOSE | 24.RIGHT |
| 5.ANGLE | 25.DOWN |
| 6.PROGRAMME | 26.STOP |
| 7.SETUP | 27.GOTO |
| 8.LEFT | 28.10+ |
| 9.L/R | 29.NEXT |
| 10.NUMERICAL KEY PAD; | 30.PREVIOUS |
| 11.REVERSE | 31.SLOW |
| 12.FORWARD | 32.ZOOM |
| 13.PBC | 33.VIDEO /MODE |
| 14.DISPLAY | 34.REPEAT |
| 15.STEP | |
| 16.A-B REPEAT | |
| 17.TITLE | |
| 18.VOLUME INCREASE | |
| 19.VOLUME DECREASE | |
| 20.MENU | |

Note:

 
1. Please note that reference numbers for the remote are described at the beginning on page 18 of this manual.
2. In this manual, "←" "→" "↑" "↓" will be used to represent different NAVIGATION ARROWS on the remote respectively.
3. In order to operate any of the remote functions, you must first press the Power button on the DVD player.

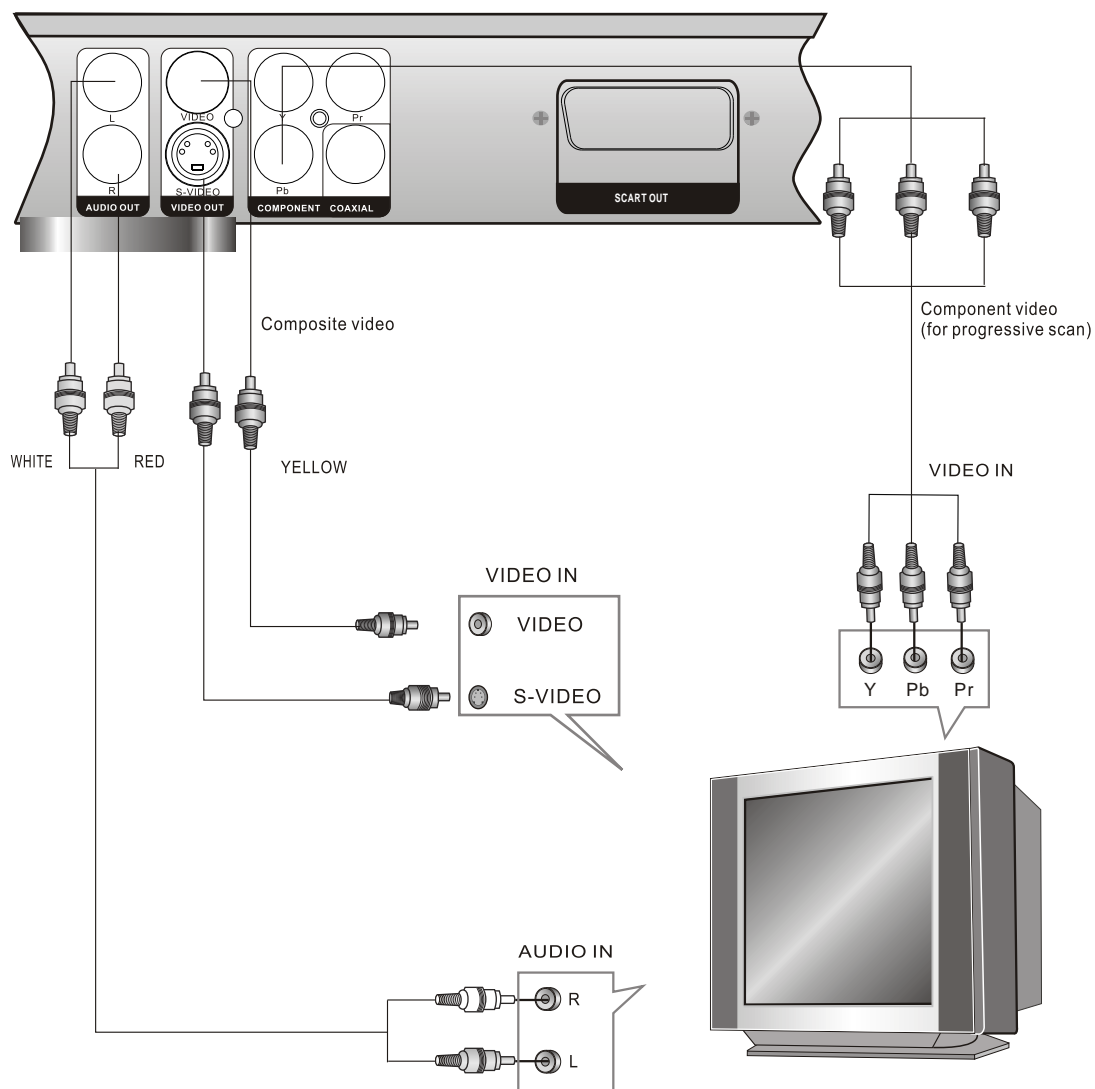

Notes:

There are three ways of connecting the player's AV output to the TV set:

 1. S-video cable and left/right audio cable [set the (Video Type) to (S-Video)].
2. Composite video cable and left/right audio cable.
3. Component video cable and left/right audio cable [set the (Video Type) to (Y, Pb, Pr)].

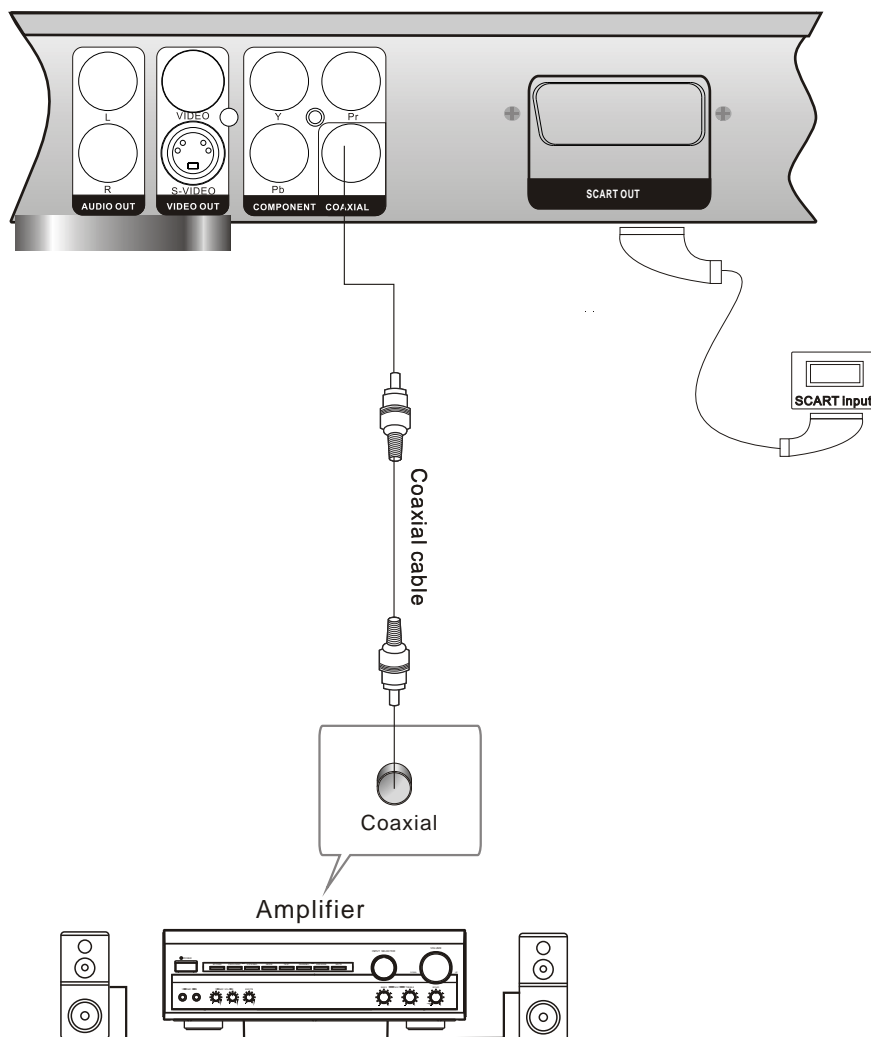


Notes:

1. The DVD audio setting output need to be settled for the “SPDIF/PCM” or “SPDIF/RAM” mode. (Refer to P.11)
2. After connecting Video signal to the television, you can see the image by selecting the video input channels. If connected to the “AVI” , TV need to switch to the “AVI” . Please refer to the TV set connecting.
3. The Amplifier will output voice after audio receive Coaxial signal. It requires the Amplifier to select the Coaxial input.

1. General Steps of setup menu

 
- A) Press STOP when playing disc, then you press the setup button, the main setup menu appears.

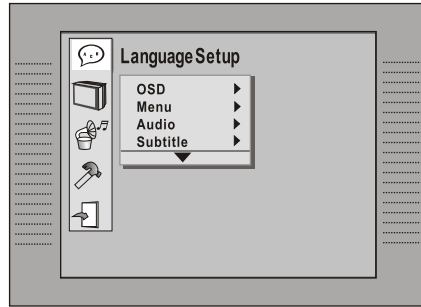


Notes:

Player make sure the mode is in stop mode.

 - B) Press the Down and Right arrow buttons to highlight the icon of the desired page, then press the Down or Right arrow button to activate that page. For example, if you want to setup the screen setup page, press Down to highlight the screen setup icon, the screen setup page will be displayed on the screen.

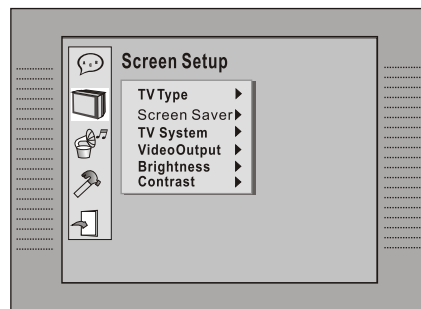

 - C) Press the Down arrow button to highlight the desired option. Press Enter or press Right to select. The choices of that option appear on the right. For example, press the Down arrow button to highlight the Video Output option, then press Enter to select, the brightness choices appear on the right.

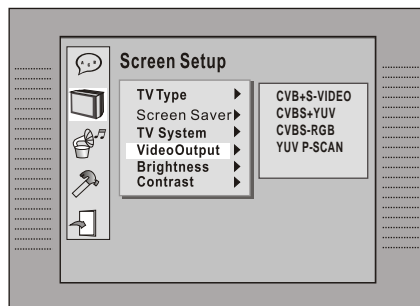


- A) Press the Arrow buttons to highlight the Exit Setup option, then press Enter or Setup again to exit Setup Menu.

2. Setup Items Introduction


2.1 LANGUAGE SETUP

 The language setup options are illustrated below:

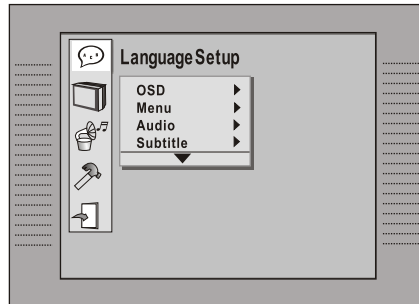

2.1.1 OSD LANGUAGE

 Highlight the OSD LANGUAGE option, and press the Arrow buttons to choose the OSD language you prefer. Press Enter to confirm, and it will display OSD in that language.

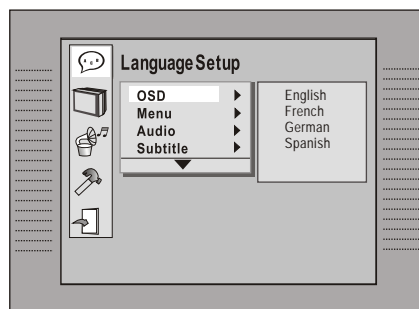


2.1.2 MENU

Highlight the MENU option, and press the Arrow buttons to choose the menu language you prefer. Press Enter to confirm. If the disc you are playing has that Language available. It will display the menu in the language.


Notes:

 If your preferred language is not available, the disc's default language will be played.

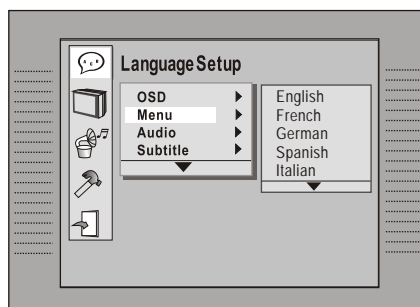


2.1.3 AUDIO

 Highlight the AUDIO option, and press the Arrow buttons to choose the audio language you prefer. Press Enter to confirm. If the disc you are playing has that language available, it will output that language.

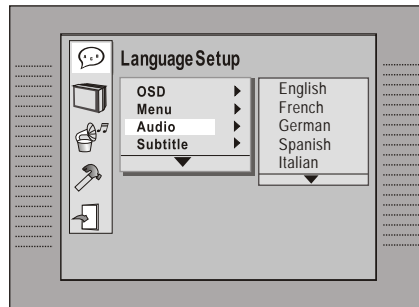


2.1.4 SUBTITLE

 Highlight the SUBTITLE option, and press the Arrow buttons to choose the subtitle language you prefer. Press Enter to confirm. If the disc you are playing has that language available, it will display subtitles in that language.

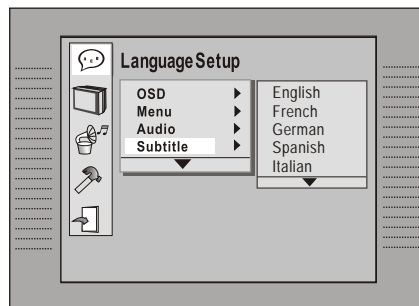


2.1.5 EXTERNAL SUBTITLE

 Highlight the EXTERNAL SUBTITLE option, and press the Arrow buttons to choose the supported subtitle language when playing MPEG4 format discs.

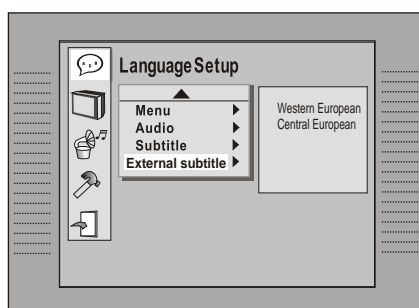


2.2 SCREEN SETUP

 The system setup options are illustrated below:

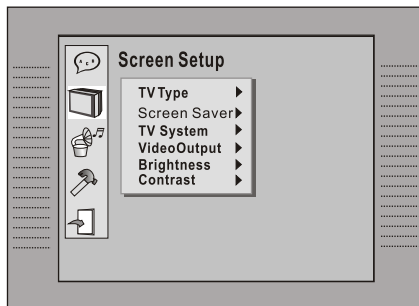


2.2.1 TV TYPE

 According to the TV type, you can choose 4:3PS, 4:3LB or 16:9 .

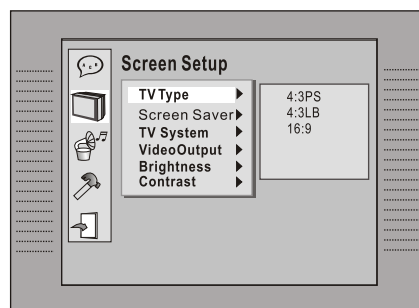


2.2.2 SCREEN SAVER

 If the SCREEN SAVER is on. The player display DVD logo for a long time. DVD player will show a lively image on TV . If SCREEN SAVER is off. DVD player will display DVD logo all the time when no disc or finished play disc.

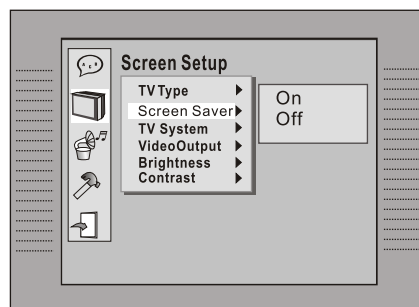


2.2.3 TV SYSTEM

 According to the colour System of the TV, you can choose the TV System.

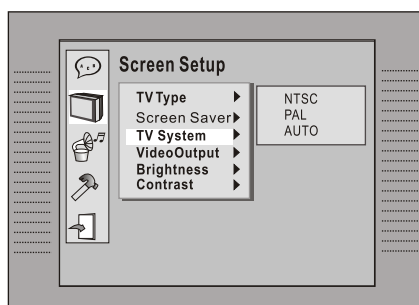


2.2.4 VIDEO OUTPUT

 According to the output jack of TV set, you can choose CVBS+S-VIDEO, CVBS+YUV ,YUV P-SCAN.

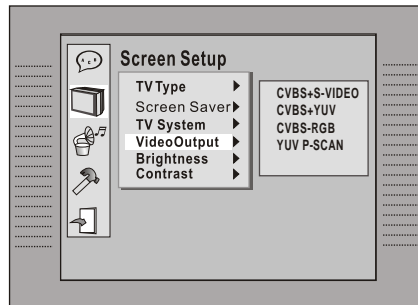


2.2.5 BRIGHTNESS

 According to the Brightness, you can choose Normal, Bright or soft .

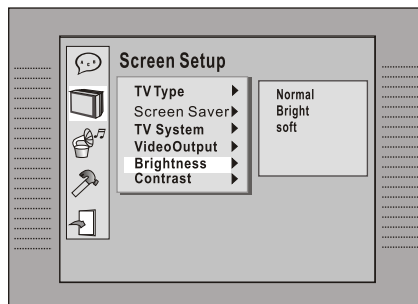

2.2.6 CONTRAST

 Use the Up and Down arrow buttons to move the scroll and adjust the contrast.

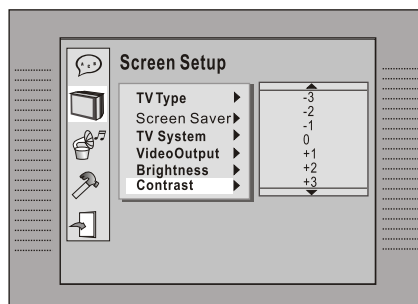


2.3 AUDIOSETUP

The audio setup options are illustrated below:



2.3.1 DIGITAL OUT

 Highlight the DIGITAL OUT option, and press the Arrow buttons to choose the audio output mode you prefer. Press Enter to confirm. There are 3 optional audio output modes: SPDIF / RAW, and SPDIF/ PCM,OFF.

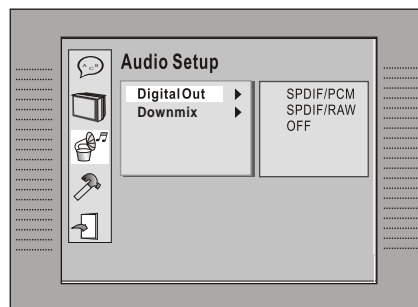


Notes:

When digital output is NOT in use, It is recommended to turn " OFF " , the digital output setting for the purpose on minimizing circuit interference.


2.3.2 DOWNMIX

 There are two modes, one is LO/RO, one is LT/RT.

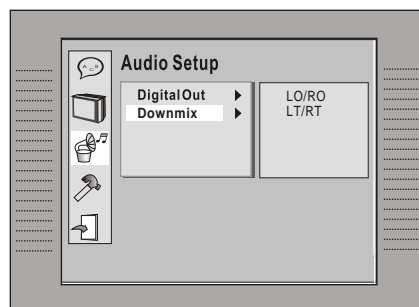


2.4 CUSTOM SETUP

 The custom setup options are illustrated below:

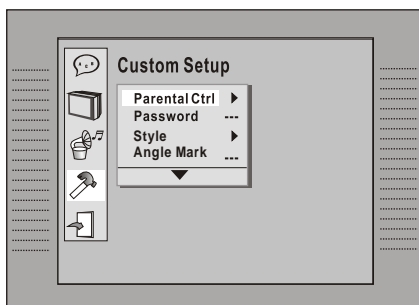


2.4.1 PARENTALCTRL

 Parental Ctrl:1,2:G,3:G,4:PG13,5,6:R,7:NC17,8 the eight levels. The first level discs are open to people of ever age and eight level only suitable for the adult. If you want to change the parental ctrl setting, enter the user' s age control item and then enter four digital password. The default password is 6666(if you are using this player for the first time, just input this code).If the input code has been confirmed , the level setting up menu will appear. Move the cursor to choose the expected level and press ENTER button to confirm and memory it. Move the cursor to the "ENTER" and press ENTER button to confirm and withdraw to the "user setup" menu or press setup button to directly with draw from the operation.

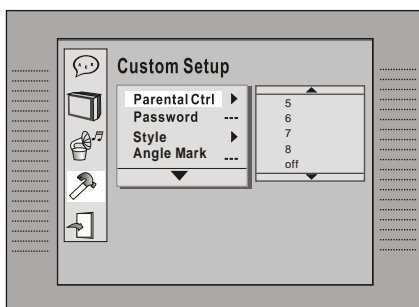


2.4.2 PASSWORD

 The password option is initially locked, and you can not set the ratings limit or change the password. In order for the Ratings feature to work, the password mode must be turned on. If you want to set the ratings limit, you will need to enter the default password. Which is 6666. then press Enter to confirm. To change the password, you will be prompted for the old password, then be prompted for new one. Enter a 4-digit number (this is your password). But the PASSWORD to the factory defaults.

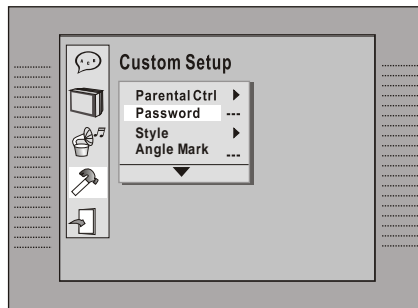


2.4.3 STYLE

 According to Style, you can choose Style 1, Style 2, Style 3 or Style 4.

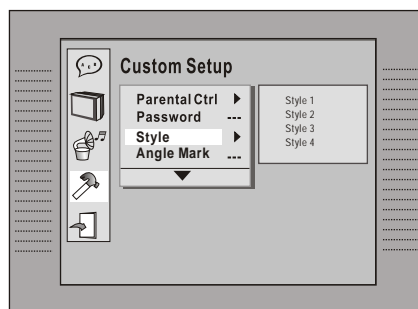


2.4.4 ANGLE MARK

 On and off are the two choices for this item. If in the ON mode, when playing a disc which the content is multi-angle shot, you may press the ANGLE button on the remote control to enjoy the scene in different angles.

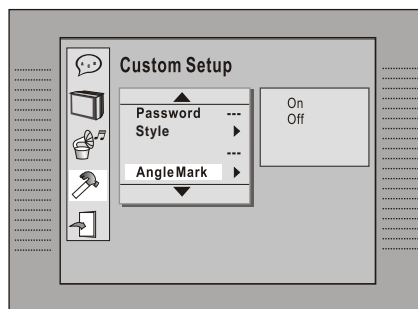

2.4.5 DEFAULT

 The default setup options to restore factory setup settings. This removes any changes you may have made.

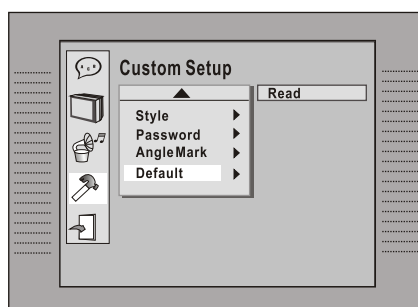


DISPLAY




During playback, press DISPLAY to show the current time counter position.

 
DVD mode - OSD

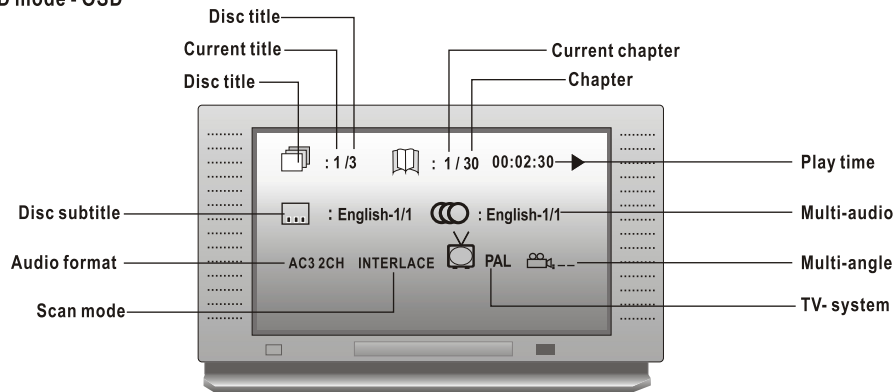



CD mode - OSD

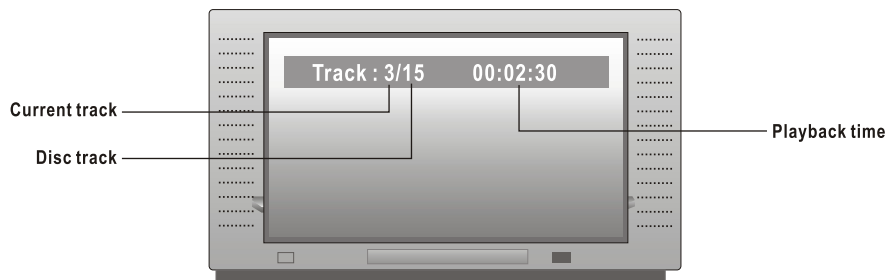 


GOTO

 

  During playback, press GOTO show the current time counter position.

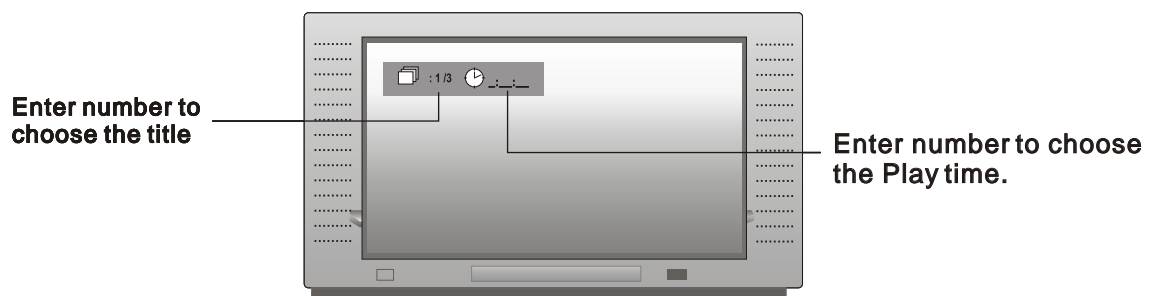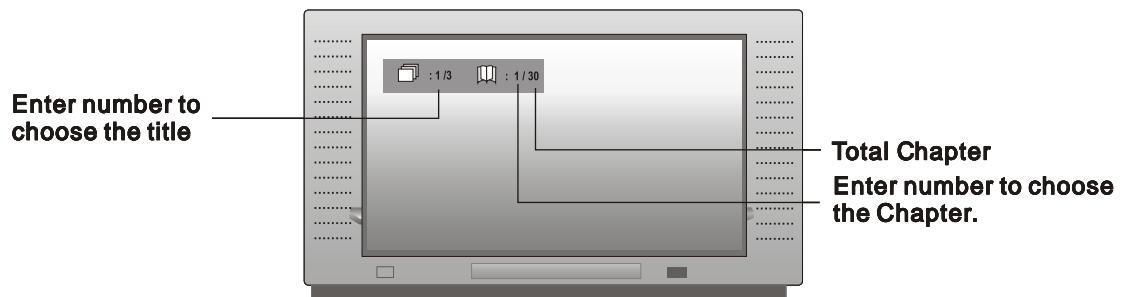

MUTE

 

- Press MUTE to mute the Audio output.
- Press MUTE again to resume normal Audio output.

OPEN/ CLOSE



- To open the disc tray, press OPEN/CLOSE.
- To close the disc tray, press OPEN/CLOSE again.

0-10+ keys



- These keys are used to input the time, as well as title, chapter and track numbers.
- When a numeric item is displayed on the screen, press the 0-10+ keys to select the desired entry, and press ENTER to confirm.

A-B



- During playback, press A-B to select point A.
- Press it again to select point B. The player will repeat the section from A to B automatically.
- Press A-B third time to cancel A-B repeat and clear points A and B.

*Note: 1. During CD playback, points A and B must be within the same track.
During DVD playback, points A and B can be selected from different chapters.
2. This function is subject to the disc.*



- During DVD or CD playback, press and hold ►► to scan forward. The player will review the disc at 2, 4, 8, 16 and 32 times normal speed as follows:



Press PLAY to resume normal playback.



- During DVD or CD playback, press and hold ◀◀ to scan in reverse. The player will review the disc at 2, 4, 8, 16 and 32 times normal speed as follows:



Press PLAY to resume normal playback.

PREV



 
- Press PREV to skip to previous chapter or track.

NEXT



- Press NEXT to skip to the next chapter or track.

STOP



- Press STOP once during playback to stop and hold playback.
- Press PLAY to resume playback from the point you pressed STOP.
- Press STOP twice to stop playback completely.

PLAY/ PAUSE



- Press PLAY/PAUSE from stop mode to start play.
- Press PLAY/PAUSE during playback to pause playback.
- Press PLAY/PAUSE to resume normal playback.

MENU



- During DVD, playback, press MENU to return to the programme menu.
- Note: This function is subject to the disc.

TITLE



- During DVD, playback, press TITLE to display the DVD title menu or play the first title.
- Note: This function is subject to the disc.

VIDEO/ MODE



- Press the VIDEO/MODE button to select INTERLACE-YUV,P-SCAN, YPBPR,S-VIDEO.
- When you have selected the incorrect output your screen will go blank. Continue to hit the VIDEO/MODE button to retrieve the correct connection.

REPEAT



- Select to press REPEAT to select Repeat Title, Repeat chapter, Repeat off during DVD playback.
- Press REPEAT to select Repeat Single, Repeat all and Repeat off (CD or Other).

VOL+ VOL-



- Press volume < VOL+> button to increase Volume.
- Press < VOL-> button to reduce volume till to no volume output.

ZOOM



- During DVD playback, press ZOOM to magnify the image as follows:



ANGLE



- During DVD playback
- Press ANGLE to view scenes from different camera angles.
 - Press ANGLE repeatedly to change from one camera angle to another.
- Note: This function is disc specific.

LANGUAGE

During DVD playback



 
● Press LANGUAGE repeatedly to select from up to 5 Audio language/formats.

Note: This function is disc specific.


PROG



While [programme] is on, press ENTER to display the [programme] submenu:

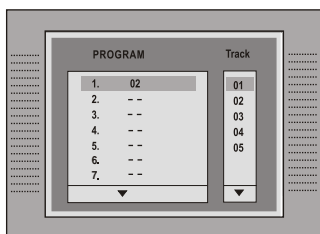

 Input the track numbers in the order you would like them to be played. When you finish the inputting, select [Play programme] and then press ENTER to play the tracks in the new programmed order. Select [Clear All] and press ENTER to clear all the numbers you have input.

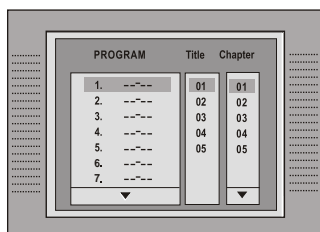

Input the title number and the chapter number in the desired order. Then select [Play programme] and press ENTER to play the chapters in the order you have set.. Select [Clear All] and press ENTER to clear all the numbers you have input.

SLOW



● Press slow repeatedly to slow motion playback at variable speeds.

 
L/R



● When a DVD is played, the active dubbing language will be shown. When a SVCD or VCD is played the left track, right track or stereo will be displayed accordingly.

● When a bilingual story VCD is played, you may press the button to select the language desired.

When a MPEG and a Mp3 disc is loaded, the screen will be displayed as follows:

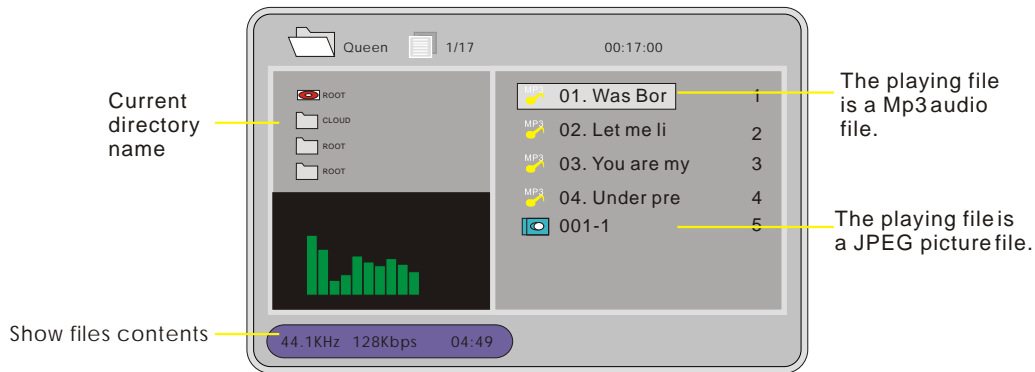

Press \uparrow \downarrow to select the file when the cursor appears in the file window.

Press \rightarrow to play the current file selected by the cursor.

Press \leftarrow \rightarrow to switch between the directory window and the file window.

Note: During Mp3 playback, Forward Scan and Reverse Scan are not available.

Note: The player will not identify or play a MP3 disc under the following conditions:
the recording format is not supported(make sure the files are in MP3 format),the disc is badly scratched, damaged or dirty, the disc is not finalised.

The introduction of KODAK Picture CD

A Kodak Picture CD has the size and shape of a regular CD. You can order a KODAK Picture CD simply by checking the box on the photo finishing envelope when you drop off a roll of film (35 mm or Advanced Photo System (APS) color print film) at the time of processing in Kodak Express store displaying "Kodak Picture CD" sign. When your order is returned, you receive your prints, negatives, and your full roll of pictures safely stored on your KODAK Picture CD. Each KODAK Picture CD brings you the tools to enhance, share and manage your pictures on your computer. You can also record the JPEG picture into CD-R or CD-RW with the CD-Rewriter yourself.

- Note:** 1. The Max. Size of JPEG Picture can be supported: 3840X3840 pels
 2. JPEG stands for Joint Picture Experts Group. It is the first International Standard on Still Picture Compressing: ISO 10918-1, constituted by the Committee on Still Picture Compressing Standard of ISO. The pictures on KODAK Picture CD are stored in this format (JPEG). This player can decode the JPEG pictures in KODAK Picture CD and playback the pictures in different modes.

Now, you can playback Kodak Picture CDs on this player and view your wonderful pictures on your TV in the comfort of your living room.

When a Kodak Picture CD is inserted to a player an automatic slide show is launched. Each picture in the Kodak Picture CD will be displayed consecutively in a slide-show fashion and will be scaled to fit in the whole TV screen.

General function:


- You can set slideshow transition modes for any pictures.
- Press **PAUSE** to stop playing.
- Press **◀** or **▶** to see the previous or next picture.
- Press **PLAY** to continue slideshow transitions.
- Press **STOP** to return to root menu.

IMAGE ROTATION

- Press the **DIRECTION** button (↑ ↓ ← →) to rotate the image as you prefer.

Zoom Function:

 This player provides both Zoom in/out and Zoom pan function. Press the **ZOOM** consecutively, the picture will zoom in/out in turn as follows:



- Note:** During the **ZOOM** function, slide show transitions and image rotation are disabled.
 Q off: close zoom, press **PLAY** again to resume slide show transition mode.

If you have any questions, please consult the troubleshooting guide below.

NO PICTURE OR SOUND

- Ensure the power button is on.
- Ensure the power outlet is operational.
- Ensure the power cord is not damaged.
- Ensure the power plug is connected firmly to the outlet.

PICTURE BUT NO SOUND

- Ensure the audio jacks are securely connected.
- Ensure the audio connector is not damaged.
- Ensure the volume is turned up in VOL/CH setup.
- Ensure you have set the player's AUDIO settings correctly.
- Ensure you have entered the correct AV input for your TV.
- Ensure the audio is not set to mute.

SOUND BUT NO PICTURE

- Ensure the video jacks are securely connected.
- Ensure you have entered the correct AV input for your TV.
- Ensure the video connector is not damaged.
- Ensure you have set the player's VIDEO settings correctly.

POOR PICTURE OR SOUND

- Ensure you have set the player's AUDIO settings correctly.
- Ensure the disc is not scratched or stained.
- Ensure the AV connector or the output terminal is not damaged.

"BAD DISC" DISPLAYED

- Ensure the disc is not warped, damaged or deformed.
- Ensure the disc is not badly stained or damaged.
- Ensure the disc format is compatible with the player.
- Please check whether you have tried to play a software CD. If so, please restart the player.

REMOTE NOT WORKING

- Make sure the Main unit's POWER button is on
- Ensure the remote batteries are working.
- Point the remote control directly at the player's IR sensor.
- Remove any obstacles between the remote and the IR sensor.

UNIT NOT WORKING

 
- Turn off the power, and then turn it on again.

"NO DISC" DISPLAYED


- Ensure you have put the disc on the tray.
- Ensure the disc is not upside down.
- Ensure the disc is not distorted, stained or scratched.

Battery installation


1. Open the cover

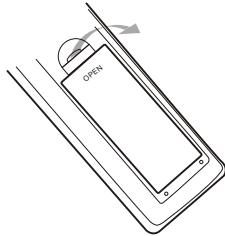


 
2. Install batteries

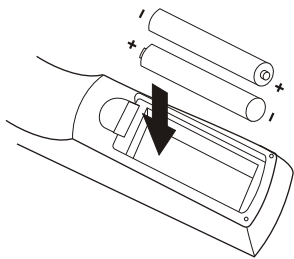

 3. Close the cover

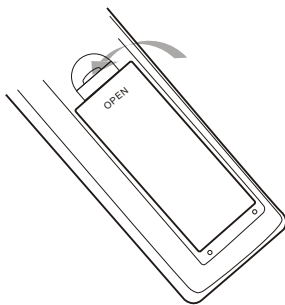

Using the remote

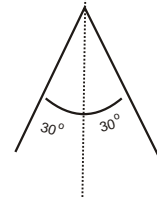  

Notes:

- Point the remote control directly at the player's remote sensor.
- Do not leave the remote control in an extremely hot or humid place.
- Do not spill water or put anything wet on the remote control.

Power requirements: AC 100-240 Volt, 50/60Hz

Power consumption: 15W

Video standard: NTSC/PAL/AUTO

Unit Weight: 1.4kg

Video out

Video out: 1.0V(p-p)/75 Ω sync, negative polarity, RCA pin jack x 1

S-video output connector(separate Y、C signal output connector):

Y output: 1.0V(p-p)/75 Ω sync, negative polarity

C output: 0.286V(p-p)/75 Ω

Audio out

2.0 channel out: RCA pin jack(L,R) x 2

Coaxial out: 0.5V(p-p)75 Ω ,RCA pin Jack x 1

Frequency response: 20Hz to 20kHz

S/N ratio:>90dB

Total harmonic distortion: <0.0025%

[Accessories]

Video/ Audio cable x 1

Remote Control x 1

User's Manual x 1

Battery x 2

Specifications are subject to change without notice.

Weight and dimensions are approximate.



If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advise. (Waste Electrical and Electronic Equipment Directive.)

TEVION[®] DVD PLAYER

VISION

WARRANTY CARD

Congratulations! You have made an excellent choice with the purchase of this quality product. Our commitment to quality also includes our service. Should you, contrary to expectations, experience defects due to manufacturing faults during private use within 36 months of the date of purchase we shall be liable for warranty in accordance with statutory warranty regulations provided that:

- the device was not put to any use other than the intended
- was not overloaded
- was not used with the wrong accessories
- repairs were not carried out by any other than the authorized workshop

The warranty certificate is only valid in connection with the receipt. Please keep both in a safe place. This warranty does not affect your statutory rights.

This purchase is guaranteed for a period of three years beginning on the day of purchase. Keep your purchase receipt safe as proof of date of purchase. The guarantee can only be extended for the duration of any repair required.

During the warranty period defective devices can be sent freight prepaid to the service address stated on the back cover of this document. We will, at our discretion, either repair or exchange the device in accordance with warranty legislation.

Please enclose the following when sending your product in for repair:

1. Receipt (proof of purchase)
2. This warranty certificate with the fault report form overleaf complete with your name, contact details and fault description.

If the original receipt is not enclosed the repair will be charged in all cases. After the warranty has expired you can still send defective devices for repairs freight prepaid to the address stated below. Quotes as well as repairs after the warranty period period are to be paid for in all cases.

Ensure that the product is sent well packed as no responsibility can be accepted for items lost or damaged in transit.

This warranty does not affect your statutory rights.



TEVION[®]
VISION **DVD PLAYER**

FAULT REPORT CARD

Name _____

Address _____

Email _____ Daytime Tel No _____

Fault Description _____

In order to deal with your enquiry as quickly and efficiently
as possible please contact the below helpline numbers:

HELPLINENUMBERS -UK 01422 263270
ROI 1890 812049

KEYELECTRONICS
UNIT 20, ENTERPRISE CITY
MEADOWFIELD AVENUE
SPENNYMORE
COUNTY DURHAM
DL16 6JF