

# TOPFIELD

---

## TRF-7260

### User Manual

*High Definition*

*Digital Terrestrial Receiver*

*Personal Video Recorder*

*Default PIN: 0000*



**DVB**  
Digital Video  
Broadcasting



### **- The TF RCU app for iPhone**



The RCU application is available to download from the App Store.  
(currently for iPhone only)

Download the TF RCU app to control this unit with your smart phone.

\* iPhone and App Store are registered trademarks of Apple, Inc.

### **- Compatible RCU support**

 
The TRF-7260 supports compatible RCU usage for the PVR set.

Menu > Settings > Miscellaneous > Type of RCU

\* The RCU code is required for this feature.

\*\* Please visit <http://topfield.com.au/> for more information.


## Precautions

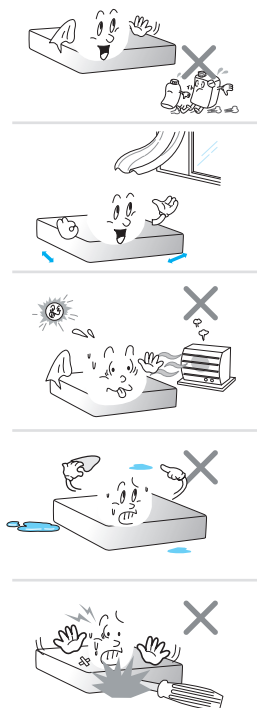

- Clean with a dry cloth only.
- Do not block any of the ventilation openings.
- When placed in a cabinet, make sure there is a minimum space of 10 centimetres around it.
- Do not install near any heat sources or in direct sunlight as this will impair cooling.
- Do not operate this product near water.
- Do not try to change the plug or defeat its safety purpose.
- This product is designed for indoor use only.
- Place the digital receiver on a firm and level surface.
- Do not lay any objects such as magazines on this unit.
- Do not overload power outlets. Doing so may result in a risk of fire or electrical shock.
- Never open this unit's casing under any circumstances, or the warranty will be void.
- Unplug this unit during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Reverse engineering or disassembly is prohibited.
- Batteries, including those which contain no heavy metals, may not be disposed with other household wastes. Please dispose of used batteries in an environmentally sound manner. Find out the legal regulations which apply in your area.
- The mains plug shall remain readily operable so that it can be removed easily to disconnect the power.
- Operate the digital receiver at temperatures between 0 to 45 °C.
- The mains voltage must range between 90 and 250 volts. Check it before plugging the digital receiver to the wall socket. For the power specification, refer to the table below.


Input voltage	90 to 250 V AC, 50/60 Hz
Power consumption	30 W at maximum in active Under 5 W in passive standby

## Front Panel

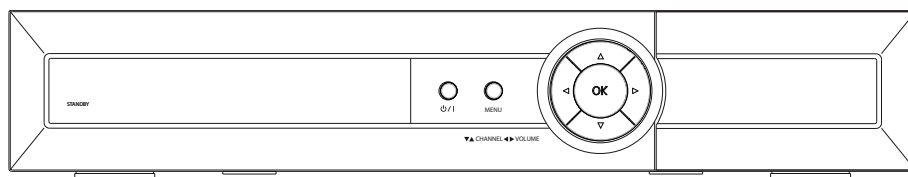 

- STANDBY** light lights up while the digital receiver is in standby mode.
- ⏻/⏻** switches the digital receiver between standby mode and active mode.
- MENU** displays the main menu. Also, returns to previous menu from a sub-menu.
- ▼, ▲CHANNEL** switch to the previous or next service. Also, navigate in menus and interactive screens.
- ◀, ▶VOLUME** decrease or increase the volume. Also, change values for menu options.
- OK** displays the services list. Also, selects a menu item.

## Rear Panel

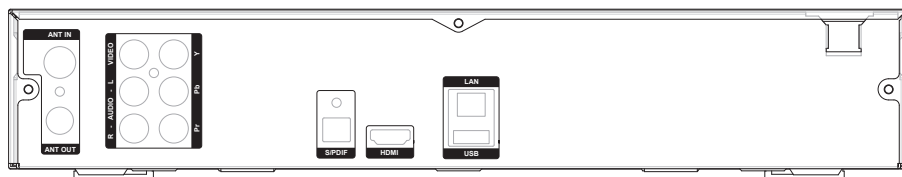 


ANT IN	Terrestrial broadcasting signal input socket (5V, Max.100mA)
ANT OUT	Terrestrial broadcasting signal output socket through the ANT IN socket for other receiver
VIDEO	Composite video output socket for the television set (yellow)
AUDIO R/L	Stereo audio output socket for television or audio receiver (white/red)
Y/Pb/Pr	Component video output socket for the television set (green/blue/red)
S/PDIF	Digital audio output socket for the audio-video receiver
HDMI	Audio and video output socket for high definition television set
LAN	Local area network port
USB	USB port for firmware update and data transfer (USB 2.0 Host, 5V DC, 500mA Max.)

## Connecting the TV

 
**Connect any components before plugging the power cord into the wall outlet.**  
**If you encounter any problems setting up your product, please contact your local retailer.**

1. Connect the antenna cable to the ANT IN socket.
2. Choose a setup that matches the connection ports on your TV.
  - We recommend using the HDMI connection for the highest quality HD picture.
  - For a higher quality use the component connection.
  - For a basic connection to your television use the composite connection.


### a) HDMI connection (HDMI)

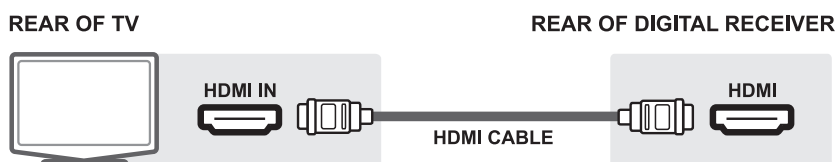

### b) Component connection (YPbPr)

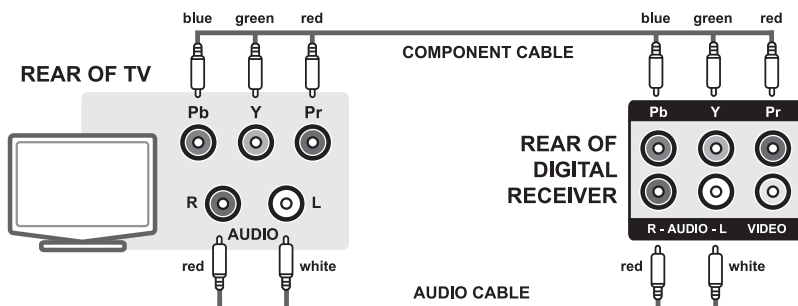 



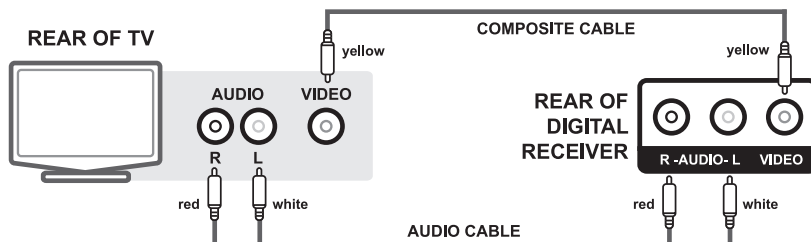 




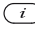 







### c) Composite connection (VIDEO)




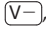 
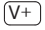 























## Remote control

### NOTE

The actual images or number of buttons may be different depending on the type of remote control provided by the manufacturer.

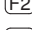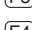  - 1**  switches the digital receiver between standby mode and active mode.
- 2**  mutes the sound. Press again to switch it back on.
- 3**  changes video resolution.
- 4**  changes aspect ratio.
- 5**  not used in this model.
- 6**  switches over between television services and radio services.
- 7** Numeric buttons are used to enter a service number for service change or to specify values for menu options.
- 8**  switches over between the current service and the previously viewed one.
- 9**  displays the service information box.  
Also, displays more information about a programme.
- 10**  selects audio track or sound mode.
- 11**  not used in this model.
- 12**  selects a subtitle track.
- 13**  sets sleep timer in 10 minute increments.
- 14**  displays the main menu.  
Also, returns to the previous menu from a submenu.
- 15**  displays the electronic programme guide.
- 16**  allow you to choose an item from the menu.  
Also, navigate through the electronic programme guide or interactive services.


- 17** ◀, ▶ allow you to change the options for a menu item.  
Also, navigate through the electronic programme guide or interactive services.
- 18**  displays the services list. Also, selects menu items.
- 19**  exits a menu or hides on-screen information.
- 20**  displays the list of recorded programmes that are stored in the internal hard drive.
- 21** ,  decrease or increase the volume.
- 22** ,  switch to the previous/next service.
- 23**  starts reverse playback. Subsequent presses increase the rewind speed.
- 24**  pauses live television or playback of a recorded programme.
- 25**  resumes normal playback speed, or displays the progress bar for navigation on playback or time-shift. To play a recorded programme, see button **30** .
- 26**  starts fast forward playback. Subsequent presses increase the playback speed.
- 27**  starts recording.
- 28**  stops playback, recording, or jumps back to live television from time-shifted television.
- 29**  starts slow motion playback. Subsequent presses change the playback speed.
- 30**  displays the list of recorded programmes that are stored in the internal hard drive.
- 31**  has different functions per menu.
- 32**  jumps back to the beginning of the recording on playback.
- 33**  jumps to the end of the recording on playback.
- 34**  displays connected device list.
- 35**  has different functions per menu.
- 36**  makes a bookmark on playback or time-shift.
- 37**  jumps to next bookmark position.
- 38**  edits a recording.
- 39**  not used in this model.
- 40**  displays the favourite list.


Functions of the colour buttons will be guided on the screen.

#### NOTE

 
In order to use the Topfield RCU for your TV, refer to the Universal RCU setup for TV guide: Menu > Information.

## First Time Installation


- 1 After having connected the appropriate cables from the digital receiver to your TV, make sure the power cord of the digital receiver is plugged into a wall socket and turn the unit **ON** using the switch on the back of the unit.
- 2 Check that your TV set is turned on.
- 3 Check that your TV set is on the correct video channel so that you can see the Menu from the Digital Receiver.
- 4 Insert the batteries into the remote control.
- 5 Press the  button on the remote control or the Circular button on the front face of the unit to turn the Digital Receiver on.

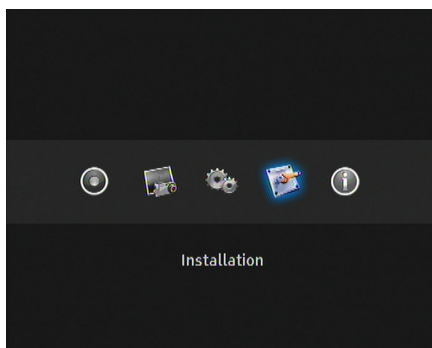

 - 6 The main menu will appear on your screen. Now it's time to scan your channels, using your remote highlight **Installation**.

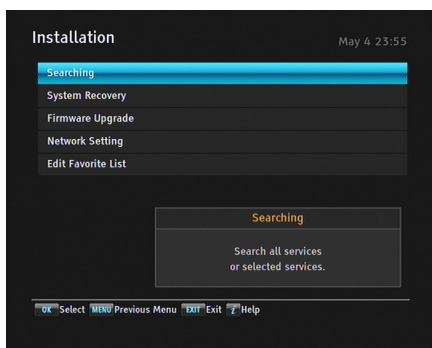

 - 7 Now highlight **Searching** and press **OK** button.

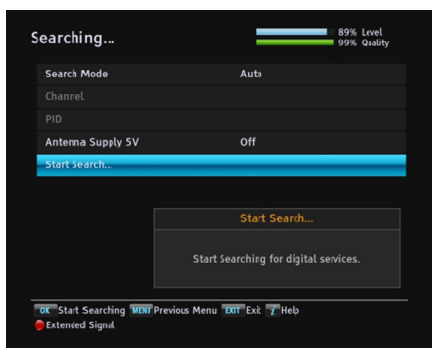


8 Set the Search Mode to Quick Scan then move down to Start Search and press **OK** button.




9 Once all the channels have been searched you will be told how many channels have been found. Press **OK** button and then **EXIT** button.

## Watching TV

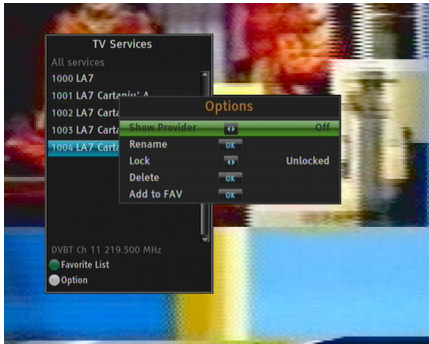 

1. Now that the service search is complete, press the **[OK]** button to view the services list.
2. On the services list, press the **[P+]** or **[P-]** button to navigate your desired service. You can also switch to your desired service by entering its service number with the numeric buttons.
3. To select a service to watch, press the **[OK]** button.

## Electronic programme guide

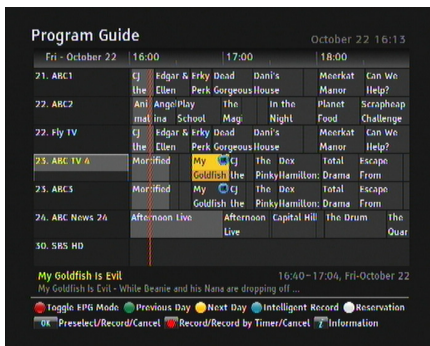 


1. Press the **[GUIDE]** button to display the electronic programme guide (EPG).
2. To see detailed information of a desired programme, put the highlight bar on the programme with the **[V+]** or **[V-]** button and press the **[i]** button.
3. To switch to another service, press the **[P+]** or **[P-]** button.

### NOTE

 The free to air EPG (Electronic Program Guide) guide does not automatically populate. To populate the EPG guide on every channel you must visit each service/channel at least once a week for a few minutes or until the guide has fully populated for the full seven days. EPG updates can also occur while you are watching TV and jumping from channel to channel.

## Recording and Playback

### Instant recording

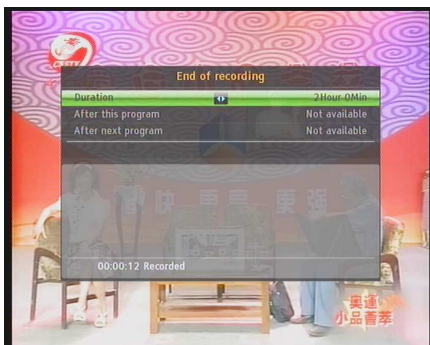

1. Press the **(F1)** button on the live screen to start recording.
2. When recording has started, press the **(F1)** again to set the recording duration as shown in the left figure.
3. While recording, you can watch or record another service. To record another service, switch to the service and press the **(F1)**.


- **Duration:** Set the desired recording duration with the **(V-)** and **(V+)** buttons and press the **(OK)** button; the recording will end at the specified time.
- **After this program:** If the information about the next programme is provided by the electronic programme guide, the current recording will stop at the time when the current programme is scheduled to end.
- **After next program:** The current recording will stop at the time when the next programme is scheduled to end.



To stop recording, press the **(EXIT)** button; then a box like the left figure appears, which shows the programmes currently being recorded. Select recording by using navigation buttons then press **(OK)** button to stop the recording.

## Timer Recording

 **MENU** > **PVR** > **Reservation** > **(F1)**

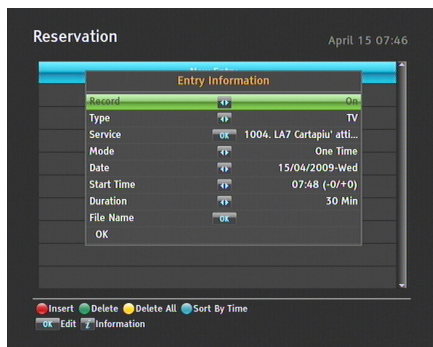


You can set a programme to be recorded at a specific time.

1. To add a new timer event, press the **(F1)** button, and a box like the left figure appears.
2. Set the options as you desire and select the OK. The new timer event will be saved to the timer list.

## Playback

 **MENU** > **PVR** > **Recorded Program (or  )** > **(OK)** > **Play**

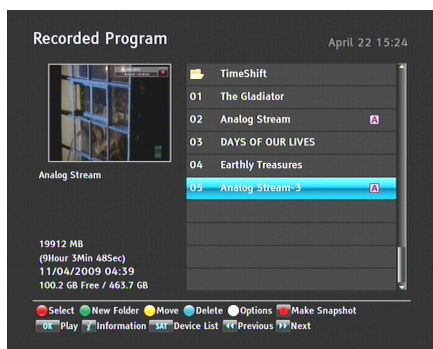

1. Select a desired recording and press the **(OK)** button.
2. To play from beginning, set the Starting Position option to **Beginning**; to play from the point that you have stopped at the last time, set it to **Continuing**.
3. Select the **Play** to start playback.

### NOTE

This recorder can record four channels simultaneously, however, this is controlled by the channel frequency. Each channel has other programmes under the one frequency (E.g. Channel Nine has 9, 9HD, GO, GEM) (Channel ABC has ABC News 24, ABC1, ABC2, ABC3, etc.). This recorder can record two programmes on each channel frequency simultaneously. (E.g. 10.TEN Digital plus 11.One HD and 90.GEM plus 99.Go!) While recording the above combination of programmes you can also playback a pre-recorded show.





Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.



#### **Correct disposal of this product**

This marking shown on the product or its literature indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product or their local government office for details of where and how they can dispose this product for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

At any time during the life of a product Topfield Co., Ltd. may change or modify the hardware or software on any product to introduce new features or improve the functionality of the product.