


Contents

SETTING UP	
Safety Precautions – some do's and don'ts for you to be aware of	3
Installation and important information	4
The remote control – an at-a-glance guide	5
Connecting external equipment – a guide to connecting equipment to the back of the television	6
Connections and controls – switching on the television, standby, using the side controls, headphone socket, connecting equipment to the side of the television	9
Tuning the television – digital tuning, programme sorting	11
Tuning the television – auto tuning, manual tuning	12
Tuning the television – analogue tuning, programme sorting and manual tuning	13
Tuning the television – fine tuning	14
Tuning the television – analogue autostore, choosing a language	15
CONTROLS AND FEATURES	
General controls – time display, stereo/bilingual transmissions	16
General controls – child lock, PIP/PA P	17
Sound controls – volume, sound mute, balance, effect, headphone	18
Sound controls – equalizer, AVL	19
Picture format	20
Picture controls – picture mode, hue, noise reduction, V cr mode	21
Timers	22
Digital programme guide and on-screen information	23
Digital parental controls – setting the pin, mode	24
Digital settings – favourite programmes, locked programmes, encrypted programmes	25
Digital settings continued – audio languages, subtitles, reset tv, common interface	26
Digital settings continued – version, auto upgrade and search for new software	27
Input selection, AV connections, PC RGB sound mode and analogue switch-off	28
PC Mode	30
PC input typical display modes	32
TEXT SERVICES	
Digital text and interactive services, analogue text – control buttons	35
PROBLEM SOLVING	
Questions and answers	36
Notes – for your own records	38
Specifications and accessories – technical information about the television, supplied accessories	40-41-42

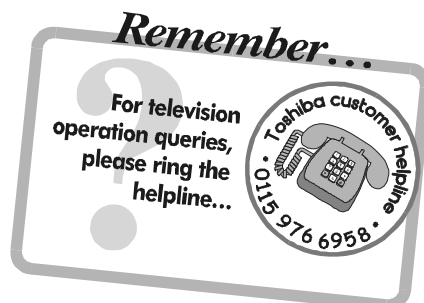

Safety Precautions

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken to obtain the best results and for safety to be assured. Please read the points below for your own safety. They are of a general nature, intended to help with all electronic consumer products and some points may not apply to the goods you have just purchased.

Air Circulation

Leave at least 10cm clearance around the television to allow adequate ventilation. This will prevent overheating and possible damage to the television. Dusty places should also be avoided.

Heat Damage

Damage may occur if the television is left in direct sunlight or near a heater. Avoid places subject to extremely high temperatures or humidity, or locations where the temperature is likely to fall below 5°C (41°F).

Mains Supply

For 17WLT56B model:

IMPORTANT: The TV set is designed to operate on 12 V DC. For this, an adaptor is used which gives 12 V voltage. Connect this adaptor to a system that supplies 230 V AC 50Hz.

For 20WLT56B and 23WLT56B models:

IMPORTANT: The TV set is designed to operate on 24 V DC. For this, an adaptor is used which gives 24 V voltage. Connect this adaptor to a system that supplies 230 V AC 50Hz.

DO ensure that the television is not standing on the mains lead. DO NOT cut off the mains plug from this equipment, this incorporates a special Radio Interference Filter, the removal of which will impair its performance. In the UK, the fuse fitted in this plug is approved by ASTA or BSI to BS1362. It should only be replaced by a correctly rated and approved type and the fuse cover must be refitted. This set requires an earthed supply. IF IN DOUBT PLEASE CONSULT A COMPETENT ELECTRICIAN.

Do

DO read the operating instructions before you attempt to use the equipment.

DO ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made and in accordance with the manufacturers' instructions. Switch off and withdraw the mains plug before making or changing connections.

DO consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

DO be careful with glass panels or doors on equipment.

Do not

DON'T remove any fixed cover as this may expose dangerous voltages.

DON'T obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment.

DON'T allow electrical equipment to be exposed to dripping or splashing or objects filled with liquids, such as vases, to be placed on the equipment.

DON'T place hot objects or naked flame sources, such as lighted candles or nightlights on, or close to equipment. High temperatures can melt plastic and lead to fires.

DON'T use makeshift stands and NEVER fix legs with wood screws. To ensure complete safety, always fit the manufacturers' approved stand, bracket or legs with the fixings provided according to the instructions.

DON'T listen to headphones at high volume, as such use can permanently damage your hearing.

DON'T leave equipment switched on when it is unattended, unless it is specifically stated that it is designed for unattended operation or has a standby mode. Switch off by withdrawing the plug, make sure your family know how to do this. Special arrangements may need to be made for people with disabilities.

DON'T continue to operate the equipment if you are in any doubt about it working normally, or it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

ABOVE ALL - NEVER let anyone, especially children, push or hit the screen, push anything into holes, slots or any other openings in the case.

NEVER guess or take chances with electrical equipment of any kind - it is better to be safe than sorry.

THE MAINS PLUG IS USED AS A DISCONNECTING DEVICE AND THEREFORE SHOULD BE READILY OPERABLE.


Installation and important information

Where to install

Locate the television away from direct sunlight and strong lights; soft, indirect lighting is recommended for comfortable viewing. Use curtains or blinds to prevent direct sunlight falling on the screen.

Place on a sturdy platform, the mounting surface should be flat and steady. It should then be secured to the wall with a sturdy tie using the clip on the back of the television, this will prevent it from falling over.

Make sure the television is located in a position where it cannot be pushed or hit by objects and that small items cannot be inserted into slots or openings in the case.

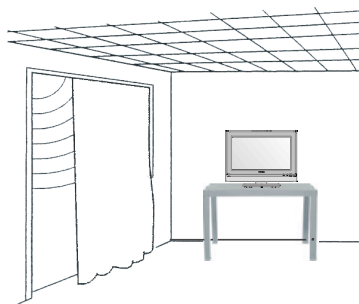

Please take note

EXCLUSION CLAUSE

Toshiba shall under no circumstances be liable for loss and/or damage to the product caused by:


- i) fire;
- ii) earthquake;
- iii) accidental damage;
- iv) intentional misuse of the product;
- v) use of the product in improper conditions;
- vi) loss and/or damage caused to the product whilst in the possession of a third party;
- vii) any damage or loss caused as a result of the owner's failure and/or neglect to follow the instructions set out in the owner's manual;
- viii) any loss or damage caused directly as a result of misuse or malfunction of the product when used simultaneously with associated equipment;

Furthermore, under no circumstances shall Toshiba be liable for any consequential loss and/or damage including but not limited to the following, loss of profit, interruption of business, the loss of recorded data whether caused during normal operation or misuse of the product.


If stationary images generated by text services, channel identification logos, computer displays, video games, on screen menus, etc. are left on the television screen for any length of time they could become conspicuous, it is always advisable to reduce both the brightness and contrast settings.

The remote control

Simple at-a-glance reference of your remote control.

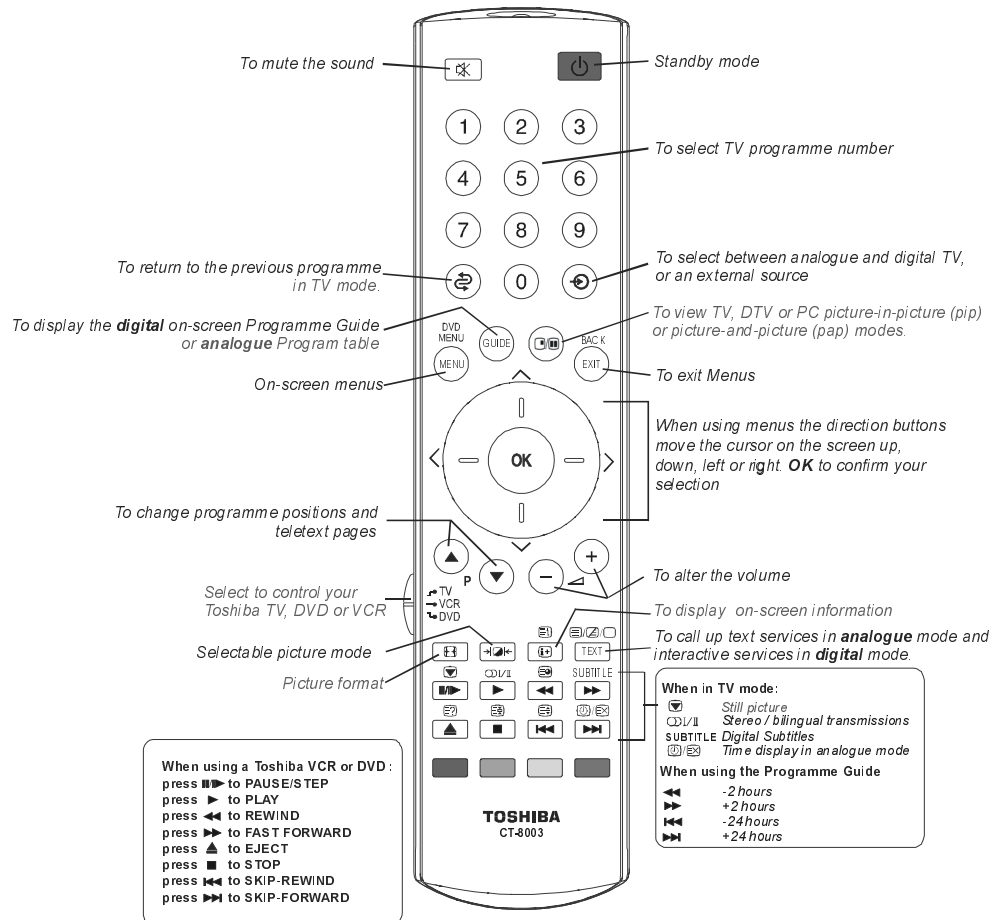

Inserting batteries and effective range of the remote

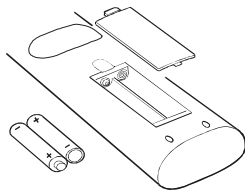

Remove the back cover to reveal the battery compartment and make sure the batteries are inserted the right way round. Suitable battery types for this remote are AAA, IEC R03 1.5V.


Do not combine a used, old battery with a new one or mix battery types. Remove dead batteries immediately to prevent acid from leaking into the battery compartment. Dispose of them in a designated disposal area.

The performance of the remote control will deteriorate beyond a distance of five metres or outside an angle of 30 degrees from the centre of the television. If the operating range becomes reduced the batteries may need replacing.

Connecting external equipment

For 17WLT56B model:


Before connecting any external equipment, disconnect from the main power.

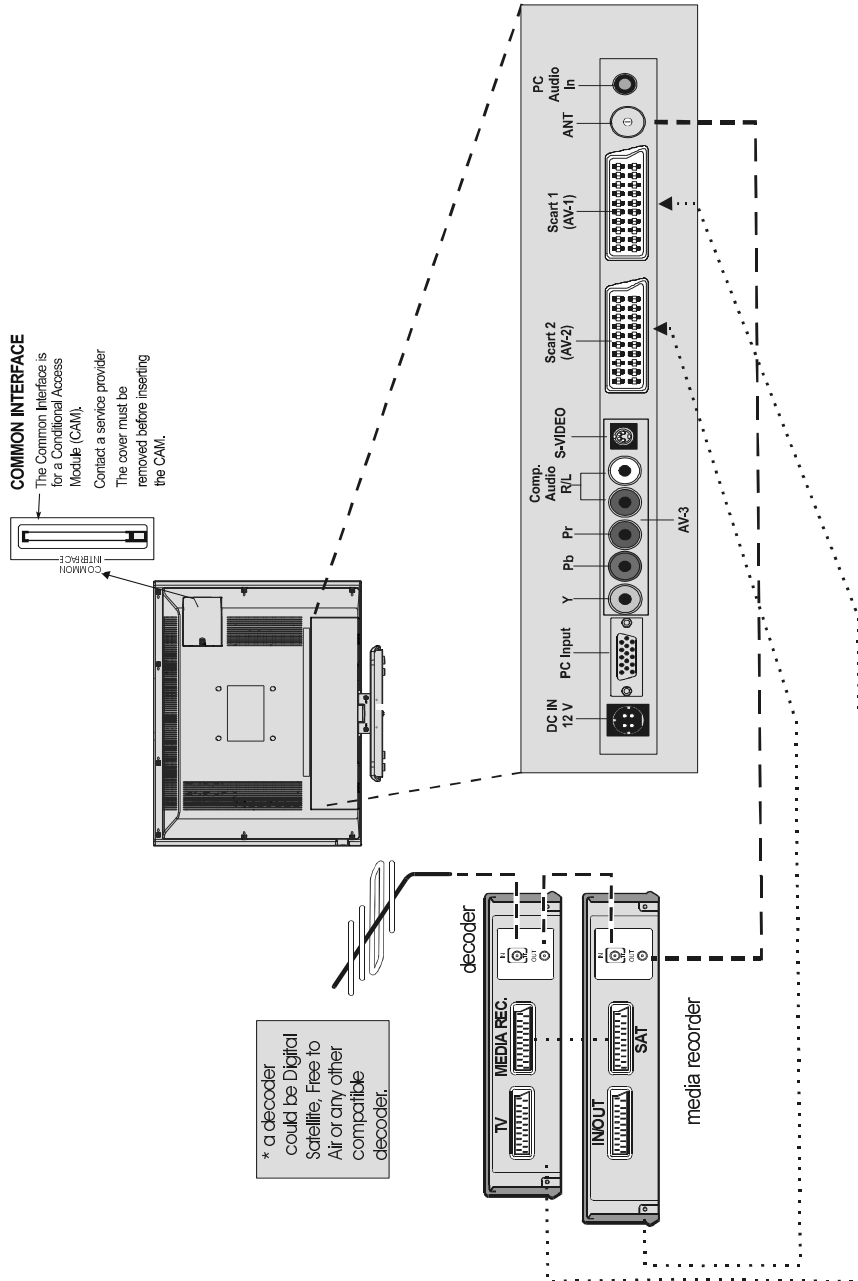

Connecting external equipment

For 20WLT56B and 23WLT56B models:

Before connecting any external equipment, disconnect from the main power.

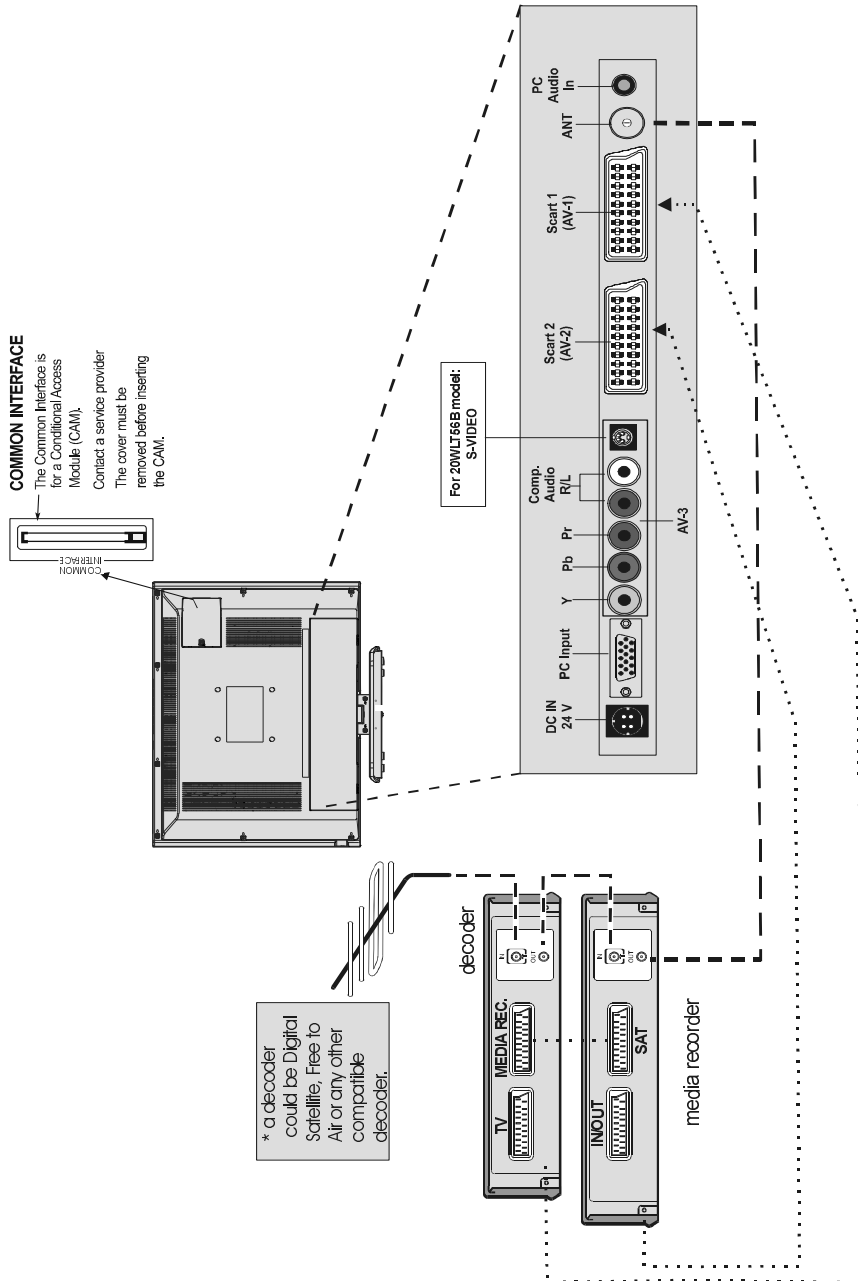

Aerial cables: 

Connect the aerial to the socket on the rear of the television. If you use a decoder and/or a media recorder it is essential that the aerial cable is connected through the decoder and/or through the media recorder to the television.

SCART leads: 

Connect the media recorder **IN/OUT** socket to the television. Connect the decoder **TV** socket to the television. Connect the media recorder **SAT** socket to the decoder **MEDIA RECORDER** socket.


Before running **APS (AUTO PROGRAMMING SYSTEM)** put your decoder and media recorder to **Standby**.

A wide variety of external equipment can be connected to the back of the television, therefore the relevant owners manuals for all additional equipment must be referred to.

We recommend **SCART 1** for a decoder and **SCART 2** for a media recorder.

For 17WLT56B and 20WLT56B models:

If connecting **S-VIDEO** equipment, set the **INPUT** for **AV-3S**. See *page 28*.

If the television automatically switches over to monitor external equipment, return to normal television by pressing the desired programme position button. To recall external equipment, press  to select between **ATV, AV-1, AV-2, AV-2S, YPbPr, AV-3S, PC RGB** or **DTV**.

For 23WLT56B model:

If connecting **S-VIDEO** equipment, set the **INPUT** for **AV-4S**. See *Page 29*.

If the television automatically switches over to monitor external equipment, return to normal television by pressing the desired programme position button. To recall external equipment "source button icon" to select between **ATV, AV-1, AV-2, AV-2S, YPbPr, AV-4, AV-4S PC RGB** or **DTV**.


Connecting the PC via PC RGB input

- Power off both computer and TV before making any connections.
- Connect the PC cable to the PC RGB input of your TV and to the 15-pin connector on the rear of your computer.
- Tighten the screws on the plugs until the connectors are fastened securely.
- If you are using Windows operating system running on a PC with a Microsoft Plug&Play compatible video card, your system will select the appropriate timing for your monitor.

Connections and controls

For 17WLT56B and 20WLT56B models:

Whilst all the necessary adjustments and controls for the television are made using the remote control, the buttons on the top of the television may be used for some functions.

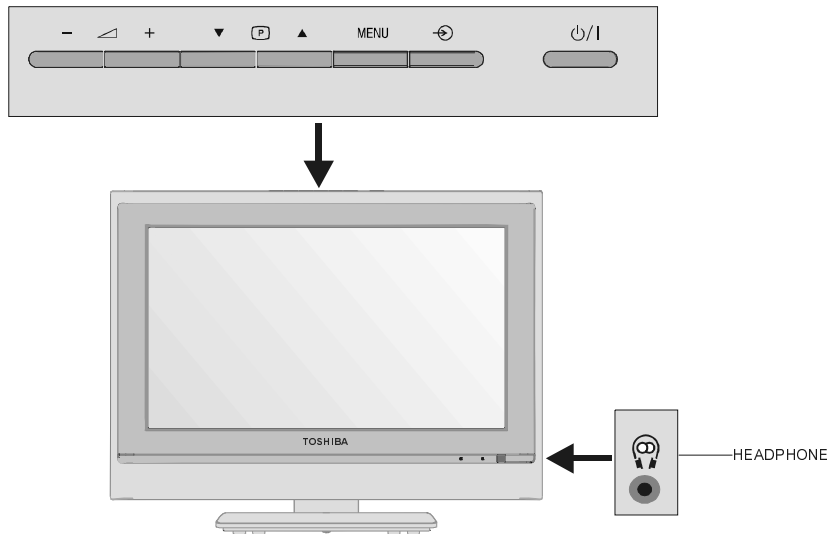

Switching on

Connect the power supply cord to the system. Then the TV switches itself to the standby mode and the power lamp becomes red on the front of the TV. Then press a number, ▲P▼ or I/O on the remote control to see the screen. Then the LED will turn GREEN.

To put the television into Standby press I/O on the remote control; another GREEN LED appears briefly followed by RED LED when in standby.

To view the television press I/O again or any of the number buttons. The picture may take a few seconds to appear.

Using the remote control

Press the MENU button on the remote control to see the menus.

To use the options press the ^ and v button on the remote control to move up and down through them and OK, < or > to select the required choice. Follow the on screen instructions. The functions of each menu are described in detail throughout the manual.

Using the controls and connections

Using the control buttons on the top of the TV:

- To alter the volume press + ▽ — .
- To alter the programme position press ▲ P ▼ on the top of the TV.
- Press MENU and + ▽ — and ▲ P ▼ to control the menu options.
- Press MENU to finish.

When connecting mono sound equipment to AV-3, connect the audio output of the equipment to the L or R socket on the rear side of the television, then press I/II to select Dual I for left mono or Dual II for right mono.

To select the Input, press ↻ until the YPbPr is highlighted in Source menu as described on page 28. The television will automatically sense the type of signal.

Please always refer to the owner's manual of the equipment to be connected for full details.


Please note: Inserting the headphone jack will mute the sound from all speakers.

Connections and controls

For 23WLT56B models:

A wide variety of external equipment can be connected via the sockets located on the side of the television.

Whilst all the necessary adjustments and controls for the television are made using the remote control, the buttons on the top of the television may be used for some functions.

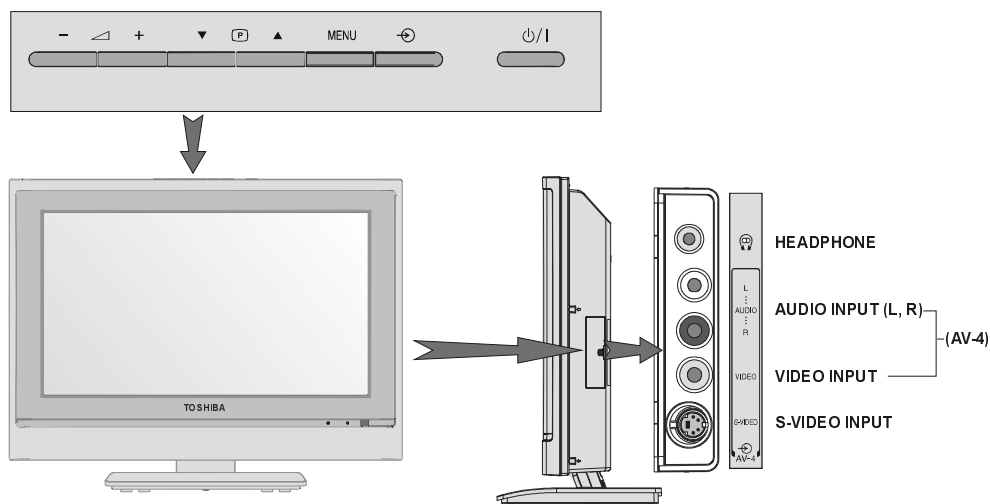

Switching on

Connect the power supply cord to the system. Then the TV switches itself to the standby mode and the power lamp becomes red on the front of the TV. Then press a number, **▲P▼** or **⏻** on the remote control to see the screen. Then the LED will turn GREEN.

To put the television into Standby press **⏻** on the remote control; another GREEN LED appears briefly followed by RED LED when in standby.

To view the television press **⏻** again or any of the number buttons. The picture may take a few seconds to appear.

Using the remote control

Press the **MENU** button on the remote control to see the menus.

To use the options press the **▲** and **▼** button on the remote control to move up and down through them and **OK**, **<** or **>** to select the required choice. Follow the on screen instructions. The functions of each menu are described in detail throughout the manual.

Using the controls and connections

Using the control buttons on the top of the TV:

- To alter the volume press + **▲** -
- To alter the programme position press **▲P▼** on the top of the TV.
- Press **MENU** and + **▲** - and **▲P▼** to control the menu options.
- Press **MENU** to finish.

When connecting mono sound equipment to **AV-4**, connect the audio output of the equipment to the L or R socket on the right side of the television, then press **⏻** to select Dual I for left mono or Dual II for right mono.

To select the Input, press **⏻** until the **AV-4** is highlighted in **Source** menu as described on page 29. The television will automatically sense the type of signal.

Please always refer to the owner's manual of the equipment to be connected for full details.

Please note: Inserting the headphone jack will mute the sound from all speakers.

Digital Tuning, programme sorting


Before switching on the television put your decoder and media recorder to **Standby** if they are connected and ensure the aerial is connected. To set up the television use the buttons on the remote control as detailed on page 5.

- 1 Connect the mains plug to the TV and press any numbered button or standby button on the remote control, the **Welcome** screen will appear. This screen will appear the first time that the television is switched on and each time the television is reset.




- 2 Press **OK** to start tuning.
- 3 The **Auto tuning** screen will appear and the television will start to search for available stations.

The progress bar will move along the line.

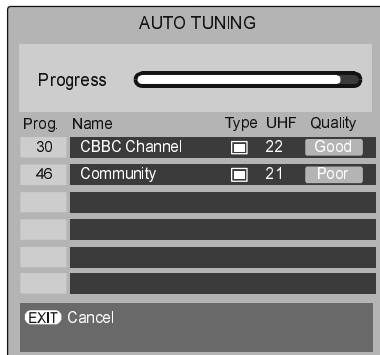

You must allow the television to complete the search.

When the search is complete the Auto tuning screen will display the total number of services found.

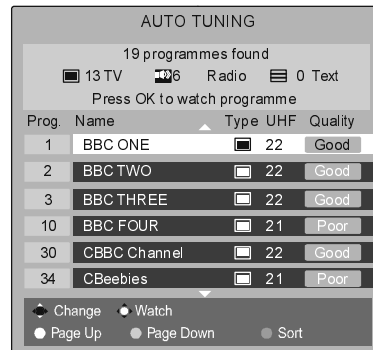

- 4 Use **^** or **v** to move through the list to select a programme then press **OK** to view.

Programme sorting


- 1 The station order may be changed, for instance if the picture is unclear or the signal is weak. Press **MENU**, the **SETUP MENU** will appear on the screen.
- 2 Use **v** to move down through the list and highlight **Programmes**. Press **OK**.



Digital programme sorting continued, auto tuning, manual tuning

- 3 With the list of stations now showing use \wedge or \vee to highlight the station you want to move and press \rightarrow .

The selected station will be moved to the right of the screen.

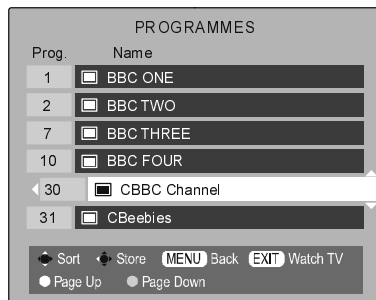

- 4 Use \wedge or \vee to move through the list to your preferred position. As you do so the other stations will move to make room.


- 5 Press \leftarrow to store your move.

Repeat as necessary, then press **EXIT**.

Auto tuning

Auto tuning will completely re-tune the television. All current programmes and settings, i.e. favourites and locked programmes, will be lost.

- 1 Select the **SETUP MENU** and use \vee to highlight the **Auto tuning**. Press **OK**.
- 2 A screen will appear warning that previous digital programmes and settings will be deleted. Press **OK** to continue with the **Auto tuning**.

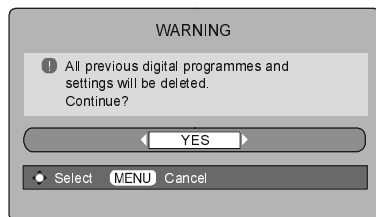

The television will start to search for all available stations.

You must allow the television to complete the search.

When the search is complete the **Auto tuning** screen will display the total number of services found.



The station order may be changed, for instance if the picture is unclear or the signal is weak, using **Programmes** as previously described.

Manual tuning


The feature is available for service engineers or can be used for direct channel entry if the multiplex channel is known.

- 1 Select **Manual Tuning** from the **SETUP MENU** and press **OK**.
- 2 Enter the multiplex number using the number buttons. The television will automatically search for that multiplex.


When the multiplex is found any channels not currently on the programme list will be added and the programme information at the top of the screen will be updated.

- 3 Repeat as necessary. Press **EXIT** to finish.





Analogue Tuning, programme sorting and manual tuning

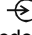The television can be tuned to all available **analogue** stations. Pressing , **source select** will appear on the screen. Select **ATV** to put the television into **analogue** mode. To return to **digital** viewing select **DTV**, **DTV** will appear on the screen.

Note: When the television is switched off the mode being viewed at the time will automatically be selected when the television is switched back on.

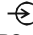- 1 Press  to select analogue mode. The **Initial APS** screen will appear the first time that the analogue mode is selected and each time the television is re-tuned.

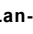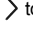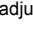



- 2 Use  to select the **Country** and **Language** items and press  or  to adjust.
- 3 Press  to select **Continue**, then press **OK** to start **APS**.
- 3 The television will start to search for available stations. The progress bar will move along the line.


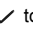
APS Is Running Please Wait...

You must allow the television to complete the search.

When the search is complete the television will automatically select programme position 1. This may not be a clear picture or the signal may be weak, so the station order can be changed using **Program** which will appear on the screen.

Program	P 01		
▶01	C-01	11	----
02	C-02	12	----
03	C-03	13	----
04	C-04	14	----
05	S-01	15	----
06	S-02	16	----
07	----	17	----
08	----	18	----
09	----	19	----
10	----	20	----
Name		Insert	
Delete		Autostore	

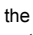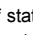- 4 With the list of stations now showing use  or  to select the station you want to move and press **GREEN** button.


- 5 Use  or  to move through the list to the preferred position, then press **GREEN** button again. The selected station will be moved to the new position.


Repeat as necessary, then press **EXIT**.



If the television cannot be connected to a media recorder/decoder with a SCART lead or if a station on another **system** is required, a programme position can be manually tuned in.

Manual tuning

*To allocate a programme position on the television for a decoder and media recorder: turn the decoder on, insert a pre-recorded film into the media recorder and press **PLAY**, then manually tune.*

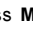
- 1 Press **MENU** and using  select **Install** menu.

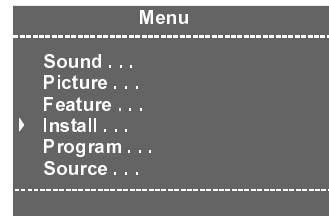

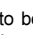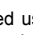- 2 When **Install** menu is entered, **Programme** item is selected. Key in the programme position to be tuned using  or  buttons or using the number buttons on the remote control, we suggest *Programme 0* for a media recorder.

Manual tuning continued, fine tuning

The television can be tuned-in manually using **Install** menu. For example: if the television cannot be connected to a media recorder/decoder with a SCART lead or to tune-in a station on another **System**.

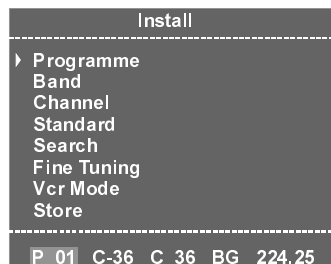


- Use \checkmark to select **Search** then press \langle or \rangle to search. The television will start searching for channels.
- Each signal will show on the television, if it is not your media recorder press \langle or \rangle to re-start the search.
- When your media recorder signal is found, save the selection by pressing \checkmark until **Store** is selected, then press \langle , \rangle or **OK** button to save. *Stored* message appears on the bottom of the menu.
Repeat for each *programme position* to be tuned then press **EXIT** to finish.

Fine tuning

FINE TUNING should not be required unless there is interference or a weak signal.

- Select the programme, then press **MENU** and select **Install**.
- Using \checkmark select **Fine Tuning**, and use \langle or \rangle to adjust to get the best picture and sound.

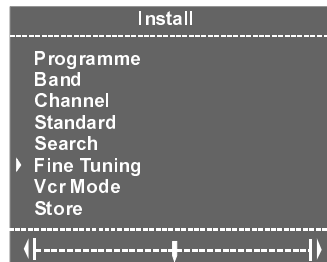

- To save the selection press \checkmark until **Store** is selected, then press \langle , \rangle or **OK** button. *Stored* message will appear on bottom of the menu.


You can store the settings in the menu via pressing **OK** button while the **Install** menu is on the screen.

Analogue autostore, choosing a language


Autostore

When the **Autostore** feature is selected all channels and settings will be lost, the television will return to factory settings and then re-tune.

- 1 Press **MENU** and using \surd select **Program** menu.

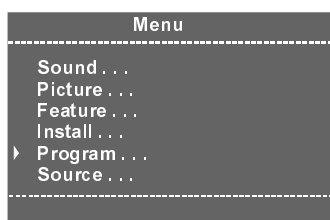

- 2 Press \langle or \rangle or **OK** button, the **Program** screen will appear on the screen. Press the **BLUE** button to start **Autostore**.

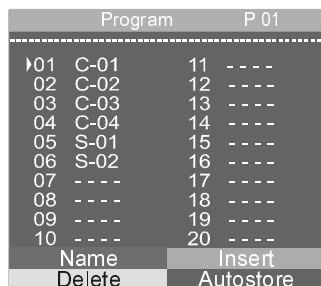

- 3 Press \surd button to select **Country** item and use \langle or \rangle to adjust it.



- 4 Press **EXIT** button to cancel **Autostore** or \langle , \rangle or **OK** button to start.

APS Is Running Please Wait...

You must allow the television to complete the search.


When the search is complete the television will automatically select programme position 1. This may not be a clear picture or the signal may be weak, so the station order can be changed using **Program** which will appear on the screen.

- 5 Press **EXIT** to finish.

Choosing a language

The **Language** feature allows the menus to be shown in a variety of languages.

- 1 Press **MENU** and using \surd select **Feature** menu.
- 2 Press \surd to select **Language**, then use \langle or \rangle to select the required language.

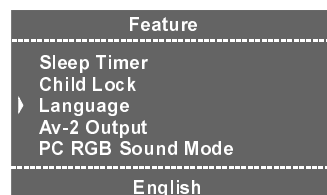

- 3 Press **MENU** to return to the previous menu or press **EXIT** to return to the main picture.

General controls, time display, stereo/bilingual transmissions

Selecting programme positions

To select a programme position use the numbered buttons on the remote control.

Programme positions can also be selected using ▲P and P▼.

To revert to the previous programme position press ↶.


To display on-screen information i.e. programme position, subtitle, audio-track availability in **digital** mode press ⓘ. Press again to clear.

By pressing ⓘ in **analogue** mode, programme number and name, sound mode and picture format information appears on the screen.


REMEMBER: To move between **digital** and **analogue** modes, press ↷ till **DTV** is selected in **Source menu** for **digital**, press ↷ repeatedly to select **ATV** for **analogue TV**.

∧ or ∨ buttons can be used to navigate through the sources in **Source menu**, too.

For 17WLT56B and 20WLT56B models:

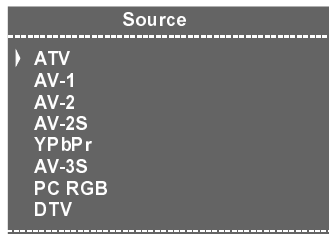

For 23WLT56B model:

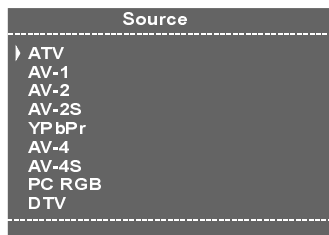

The Time Display - analogue only

The time display facility allows the current (text service) time to be seen on the television screen.

Press ⓘ/⊞ whilst watching a normal television broadcast to see a time display from the broadcaster.

Stereo and Bilingual transmissions

If stereo or dual language broadcasts are transmitted the word **Stereo** or **Dual** will appear on the screen each time programme positions are changed, disappearing after a few seconds. If the broadcast is not in stereo the word **Mono** will appear.

Stereo... Press ⏪/⏩ to select **Stereo** or **Mono**.

Bilingual... Bilingual transmissions are rare. If they are transmitted the word **Dual** will display. Choose the required programme number and if the word **Dual I** appears press ⏪/⏩ to select **Dual II** or **Dual I** again.

In **digital** mode:

⏪/⏩ appears during channel change and the ⓘ bar if the current programme has more than one audio track.

Press ⏪/⏩ to select between audio languages.

Child lock, PIP/PAP

Child lock


CHILD LOCK disables the buttons on the top of the television. All buttons on the remote control can still be used.

- 1 If in digital mode, press **MENU**, using ∇ select **TV Setup** from the **SETUP MENU**, then press **OK**.



- 2 **Analogue TV** menus will appear on the screen.

Press \wedge or ∇ to select **Feature** and press \langle or \rangle to enter the menu.

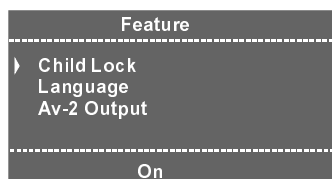

- 3 If in analogue mode, press \wedge or ∇ to select **Feature** and press \langle or \rangle to enter the menu. Press ∇ to choose **Child Lock** and press \langle or \rangle to set it **On** or **Off**.

When **CHILD LOCK** is selected, a reminder will appear when any of the panel buttons on the top of the television are pressed. Once the television has been switched off it can **ONLY** be brought out of standby using the remote control.

PIP (Picture-In-Picture)

PIP feature allows you to watch another programme in a small window placed on the main picture.

- 1 Press \square/\square button to display the PIP window.
- 2 If in digital mode:
Press **OK** to activate the PIP window (seen with a green border) and then press \rightarrow to select an available source.
- 3 If in analogue mode, only digital mode can be seen in the PIP window. Press **OK** to activate a window.
- 4 Press \langle , \rangle to set the PIP window position and \wedge , ∇ to adjust the PIP window size (if PIP window is activated).
- 5 Press \square/\square twice to exit PIP.

PAP (Picture-And-Picture)

PAP feature splits the screen into two windows and allows you to watch two programmes at the same time.

- 1 Press \square/\square button twice to display the PAP window.
- 2 Press **OK** to activate a window and then press \rightarrow to select an available source.
- 3 Press \langle or \rangle to change the position of the windows.
- 4 Press \square/\square button again to exit PAP.

Sound controls — volume, sound mute, balance, effect, headphone

All sound controls are available in both **digital** and **analogue** modes. To access the **Sound** menu in **digital**: press **MENU** and using ∇ select **TV Setup**, press \langle , \rangle or **OK** to bring up the **Sound** menu. To access the **Sound** menu in **analogue**: press **MENU** and using \langle , \rangle or **OK** enter the **Sound** menu.

Sound controls

Volume

Press $\triangleleft+$ or $-\triangleleft$ on the remote control to adjust the volume.


In the **Sound** menu use \langle or \rangle to adjust the volume level while **Volume** item is selected.

Sound Mute

Press \times once to turn the sound off and again to cancel.

Sound balance

- 1 Press **MENU**, main menu will appear. Sound is the selected item which is indicated with an arrow on the left side. Press \langle , \rangle or **OK** to enter the **Sound** menu.

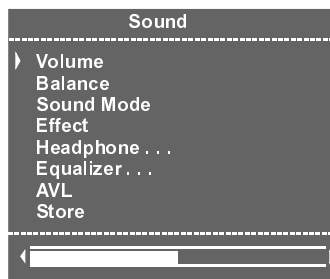

- 2 Press ∇ to select **Balance** and \langle or \rangle button to adjust the settings.
- 3 Press ∇ to select **Store** and then \langle , \rangle or **OK** to save the settings. Press **EXIT** to finish.

Effect

Effect creates a synthetic sound effect for movies and television shows recorded in mono.

- 1 In the **Sound** menu press ∇ to highlight **Effect**.
- 2 Use the \langle or \rangle to set **Effect** to On or Off.

- 3 Press ∇ to select **Store** and then \langle , \rangle or **OK** to save the settings. Press **MENU** to return to the previous menu or **EXIT** to finish.


Headphone

The **Headphone** feature allows you to alter the sound from headphones when connected to the socket on the side of the television.

- 1 Select the **Sound** option from the main menu.
- 2 Use ∇ to select **Headphone** then press \langle or \rangle to enter the menu.



- 3 Using \wedge or ∇ select an option and then \langle or \rangle to adjust to suit personal taste.

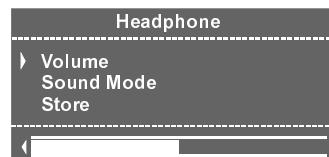

- 4 To save the adjustments, select the **Store** item and press \langle , \rangle or **OK**.
- 5 Press **EXIT** to finish.


Sound controls continued —

equalizer, AVL

Equalizer

The **Equalizer** feature has a number of sound settings to select from; **User**, **Flat**, **Pop**, **Rock**, **Jazz** or **Classic**. These settings are all preset and cannot be altered. The **User** setting can be altered and stored to suit personal preference.

- 1 Select the **Sound** option from the main menu.
- 2 In the **Sound** menu, use \checkmark to select **Equalizer** then press **OK**, \leftarrow or \rightarrow to enter the menu.

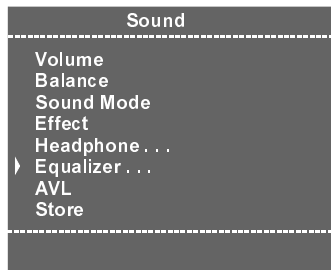

- 3 Press \leftarrow or \rightarrow to select **User**.




- 4 Using \wedge or \vee select a frequency and then \leftarrow or \rightarrow to adjust to suit personal taste.
- 5 Press \checkmark to select **Store** and then \leftarrow , \rightarrow or **OK** to save the settings. Press **EXIT** to finish.

AVL - Auto Volume Limiter


AVL limits high volume levels and prevents the extreme changes in volume that can occur when channels are changed or a programme switches to a commercial.

- 1 In the **Sound** menu press \checkmark to highlight **AVL**.
- 2 Use \leftarrow or \rightarrow to set **AVL** to On or Off.
- 3 Press \checkmark to select **Store** and then \leftarrow , \rightarrow or **OK** to save the settings. Press **EXIT** to finish.

Picture format

Depending on the type of broadcast being transmitted, programmes can be viewed in a number of formats. Press the  button repeatedly to select between **Auto**, **4:3**, **Wide**, **Cinema**, **Subtitle** or **Super Live**.

When **Auto** is selected the format being displayed is determined by the picture being broadcast.

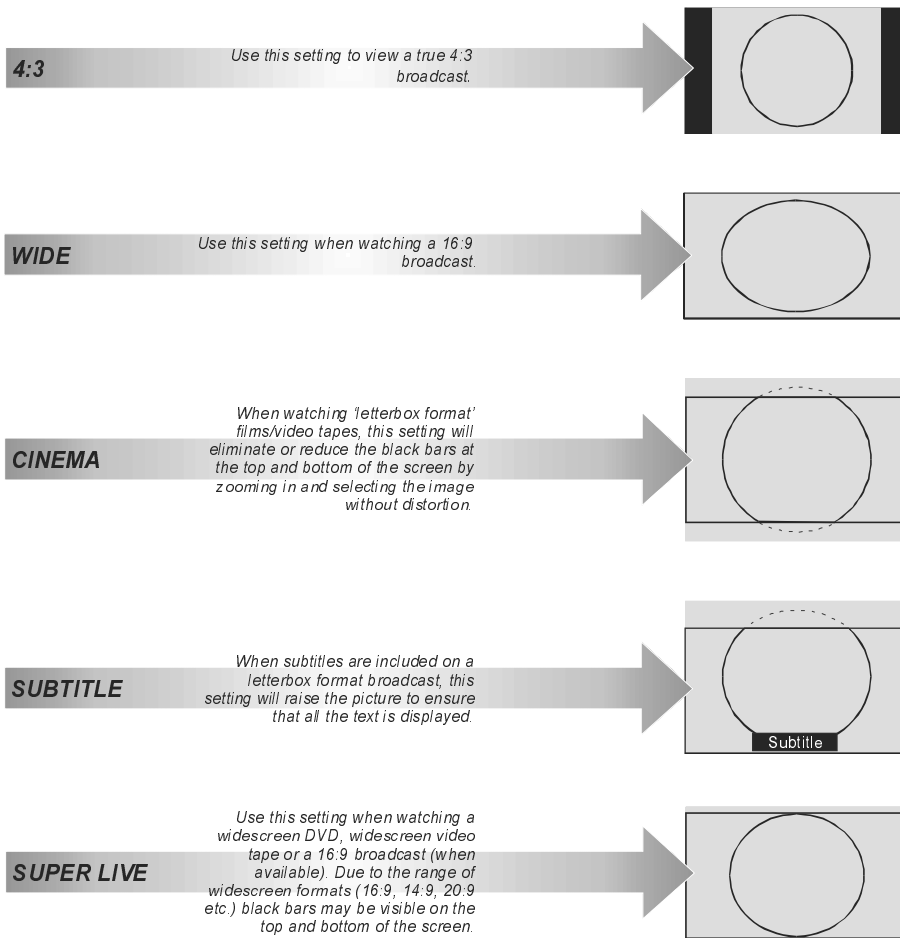

Using the special functions to change the size of the displayed image (i.e. changing the height/width ratio) for the purposes of public display or commercial gain may infringe on copyright laws.

Picture controls — picture mode, hue, noise reduction, Vcr mode


The picture controls are available in both **digital** and **analogue** modes. To access the **Picture** menu in **digital**: press **MENU** and using \downarrow select **TV setup**, press \wedge or \downarrow to select the **Picture** option, press **OK**, \leftarrow or \rightarrow to enter the menu. To access the **Picture** menu in **analogue**: press **MENU** and using \wedge or \downarrow select the **Picture** option.

Picture mode

This television offers the choice of personalising the picture style. Press \rightarrow \leftarrow to view the different styles available:

PICTURE MODE 1 to 3 are preset options and **PICTURE MODE M** stores your own settings.

- 1 Select the **Picture** option from the main menu.
- 2 Press \downarrow to select **Picture Mode** and then \leftarrow or \rightarrow to select **M**.

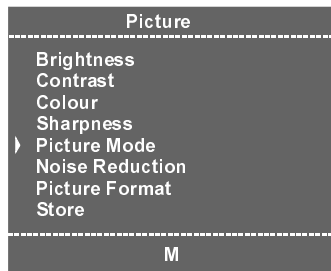

- 3 Using \wedge or \downarrow select **Brightness**, **Contrast**, **Colour** and **Sharpness**; then use \leftarrow or \rightarrow to adjust to suit personal taste.
- 4 Press \downarrow to select **Store** then press \leftarrow , \rightarrow or **OK** button to save the adjustments. *Stored* message appears on the bottom of the menu.
You can store the settings in the menu via pressing **OK** button while the Picture menu is on the screen.

Hue

This item is displayed in Picture menu when the TV receives an NTSC signal in AV mode.

- 1 In the **Picture** menu press \downarrow until **Hue** is selected.
- 2 Press \leftarrow or \rightarrow buttons to adjust **Hue** to suit your preference.

Noise Reduction


Noise Reduction 'softens' the screen representation of a weak signal to reduce the noise effect.

- 1 In the **Picture** menu press \downarrow until **Noise Reduction** is selected.
- 2 Press \leftarrow or \rightarrow to select between **Minimum**, **Medium**, **Maximum** and **Off**. The differences may not always be noticeable.

Vcr Mode

When **Vcr Mode** is set to **On**, the picture on the screen is locked into position. This stops any movement that might be noticeable when viewing a picture from a VCR.

- 1 Press **MENU** and using \wedge or \downarrow select **Install** menu.
- 2 Press \downarrow until **Vcr Mode** is selected.

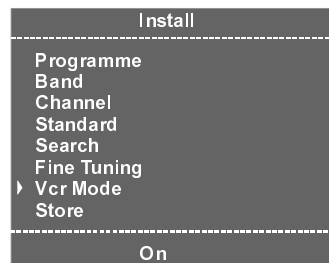

- 3 Press \leftarrow or \rightarrow to set it **On** or **Off**.
- 4 Press **MENU** to return to the previous menu or **EXIT** to finish.

Timers

Remember: When viewing in **digital** mode if **analogue** is required press \leftarrow , **Source** menu appears on the screen and select **ATV**. To return to **digital** viewing, select **DTV** in **Source** menu.


Programme timers - digital

This feature sets the television timers to record programmes. The **"Repeat"** feature can be set to record **"daily"** and **"weekly"** to ensure a series of programmes are recorded.


- 1 Press **MENU** and \leftarrow or \rightarrow to select the **TIMER MENU**.



- 2 Press \downarrow to select **Programme Timers**, then press **OK** to select. Your TV must be on or in standby mode when a programme timer to due to start.

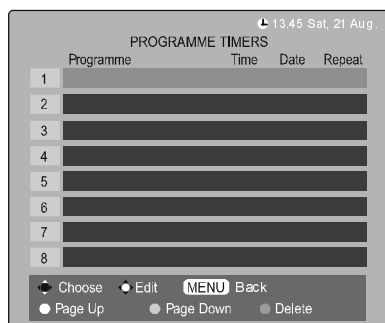

- 3 Press \downarrow to select the first programme to be recorded, then press **OK**. The **SET TIMER** menu will now appear.
- 4 Press \wedge or \vee to go through the list adding the details of the programme to be recorded by using the number buttons and \leftarrow or \rightarrow to make selections.

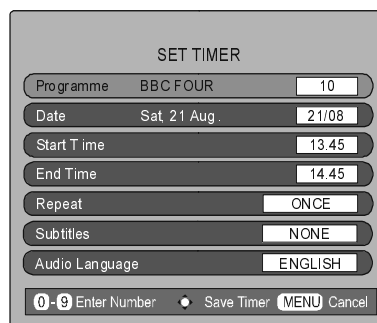


- 5 When all the details have been entered press **OK** to save the timer.

Please Note: When a timed programme is about to start recording, an information screen will appear, the television will then change automatically to the required channel. Cancelling this will also cancel the recording.

Sleep timer - analogue

The television can be set to turn itself **OFF** after a certain time.

- 1 Press **MENU** and \wedge or \vee to select **Feature**. Then press \leftarrow , \rightarrow or **OK** to enter the menu.
- 2 To set the number of minutes in which the television will turn off press \leftarrow or \rightarrow . This will increase or decrease in steps of 15 minutes.

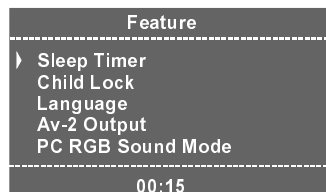


Digital Programme Guide and on-screen information


When viewing in digital mode the on-screen information and guide give access to programme details for all available channels. Recording can also be set from **both** the information screen and guide.

Information

- 1 Select information by pressing **INFO**, the information screen will appear giving details of the channel and programme currently being viewed.

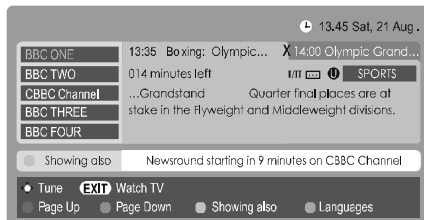

- 2 To see details of any of the other channels currently available, press **^** or **v** to scroll up/down the list. As the channel is selected details of the programme currently being broadcast will appear.
- 3 Pressing the **YELLOW** button will activate Showing also, giving details of the programmes which have or are due to start on other channels.
- 4 To record the following programme, with the information guide showing, press **>**. The Tune option at the bottom of the screen will change to Record, press **OK**. The SET TIMER screen will appear.

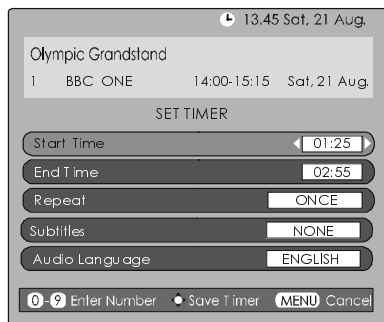

- 5 Press **^** or **v** to go through the list adding details of the programme to be recorded by using the number buttons and **<** or **>** to make selections. Press **OK** to save.

Guide

- 1 Select the on-screen guide by pressing **GUIDE**, the guide screen will appear highlighting details of the channel and programme currently being viewed.

This may take a few moments to appear.



- 2 Press **<** or **>** for information of other programmes scheduled for the channel selected.
- 3 For details of other channels currently available, press **^** or **v** to scroll up and down the channel list. As the channel is selected details of the programme currently being broadcast will appear, then press **<** or **>**.
- 4 Press the **INFO** button for more information about the currently highlighted programme.


Digital parental controls - setting the pin, mode

There are a number of parental controls which can block specific channels being viewed, and which can only be accessed with a security PIN code when in digital mode.


Once you've entered the PIN code, you do not need to enter it again until next time you power-on TV. To restore PIN code entry again (e.g. for parental controls on locked programmes) press STANDBY twice.

Setting the PIN


- 1 Press **MENU** and **>** to select **FEATURE MENU**.

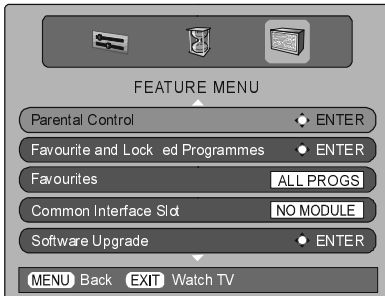

- 2 Use **∨** to select **Parental Control** then press **OK**.
- 3 Press **∨** to highlight **Change Pin** then press **OK**.

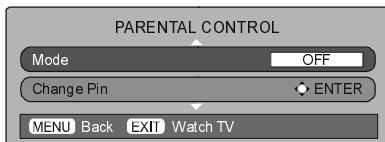

- 4 Using the number buttons enter a four digit number, when these have been entered the screen will ask you to confirm them by entering them again.

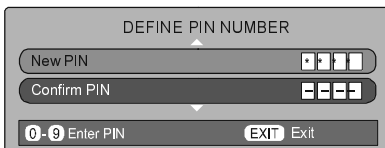

- 5 Press **MENU** to go back to the Parental Control screen. The PIN number is now set.

Mode

This feature locks various menus to prevent the television being retuned or the settings being overridden.

- 1 In the **PARENTAL CONTROL** menu press **∨** to select **Mode**.



- 2 Use **<** or **>** to choose between **ON**, **OFF**, **LOCK MENU** and **LOCK INSTALL**.

When menus that have been locked are now selected, they will only become available when the PIN is entered.

Digital settings - favourite programmes, locked programmes, encrypted programmes


Selecting Favourite Programmes

Favourite Programmes creates a list of the digital channels that are watched most. Four lists can be created, this can be a mixture of television, text and radio channels.

- From the FEATURE MENU press \checkmark to select **Favourite and Locked Programmes** and press OK.



- Use \wedge or \vee to go through the list of channels pressing OK to select the ones required, a tick will appear in the box.
- Press $\>$ to select List 2. Follow the same procedure to make the selection. When all favourites have been selected press **MENU** to return to the **FEATURE** menu.
- Use \vee to highlight **Favourites** and \langle or \rangle to select between **TV**, **FAV-1**, **FAV-2**, **FAV-3**, **FAV-4**, **ALL PROGS**. The number of favourites available depends on how many lists have been created.

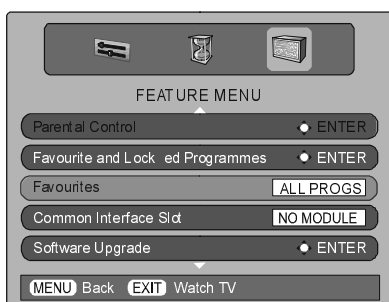


- Press **EXIT**.

Using the \blacktriangle **P** \blacktriangledown buttons will only access those channels in **Favourite List 1** when **FAV-1** is selected.

Locking Programmes

Locked programmes stops the viewing of selected digital channels, which can only be accessed by entering the PIN.

- From the **FEATURE MENU** press \checkmark to select **Favourite and Locked Programmes**.
- Press $\>$ repeatedly to select the **Locked Programme** list.
- Use \wedge or \vee to go through the list of channels pressing **OK** to select the required, a pad-lock will appear in the box.

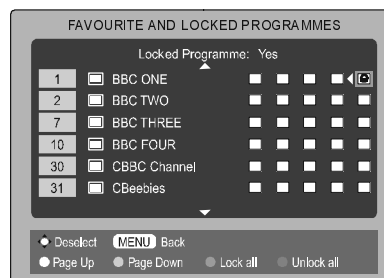

- Press **EXIT** to finish.
- When any of the channels in the **Locked Programme** list are now selected the PIN must be entered before they can be accessed.

Encrypted Programmes

Selecting **Encrypted Programmes** allows all encrypted programmes to be shown in the programme list even if they are not available to select.


- In the **FEATURE MENU** press \wedge or \vee to select **Encrypted Programmes**.
- Use \langle or \rangle to select **ON** or **OFF**.

Digital settings continued - audio languages, subtitles, reset tv, common interface

Audio Languages

This feature allows a programme or film to be viewed with a choice of soundtrack language, provided they are currently being broadcast.

- 1 From the **SETUP MENU** press ∇ to select **Languages**.

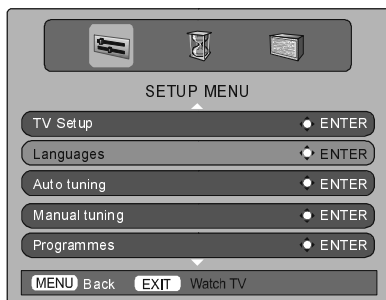

- 2 Press **OK**, then \wedge or ∇ to highlight the **Audio Language**.
- 3 Use \langle or \rangle to select **ENGLISH**, **WELSH** or **GAELIC**.



Note: If more than one soundtrack is available, use \odot / \square to select between them.

Subtitles

This feature will show subtitles on the bottom of the screen in the selected language provided they are being broadcast.

- 1 From the **LANGUAGES** menu press ∇ to select **Subtitles**.
- 2 Use \langle or \rangle to select **OFF**, **ENGLISH**, **WELSH** or **GAELIC**.

Reset TV


Selecting **Reset TV** will delete all stored **digital** channels and settings. The television will return to factory settings and then auto tune.

- 1 Press **MENU** and then press ∇ until **Reset TV** is highlighted.
- 2 Press **OK** to select. A screen will appear warning that all digital settings will be lost, press **OK** to continue.
The welcome screen will appear, press **OK** to continue, the television will then auto tune.

Common Interface

The **Common Interface Slot**, situated on the back of the television, enables the insertion of a **CAM** (Conditional Access Module) and card. These are purchased from a service provider and allow additional broadcasts to be viewed. For information see a service provider.

- 1 Insert the **CAM** and card into the **Common Interface slot**, following the instructions provided with the **CAM**. A box will appear on screen to confirm that the **CAM** is loaded.
- 2 From the **FEATURE MENU** press \wedge or ∇ to select **Common Interface Slot**.

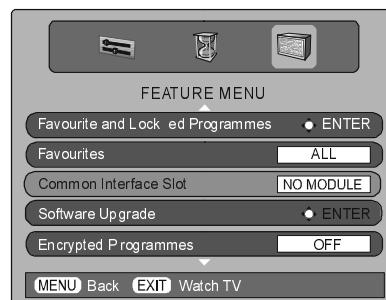


- 3 Details of the **CAM** should now be available. Use **OK** to select it.

Digital settings continued - version, auto upgrade and searching for new software


Version

This feature can be used to check the version of software currently installed.

- From the **FEATURE MENU** press \checkmark to select **Software Upgrade**.

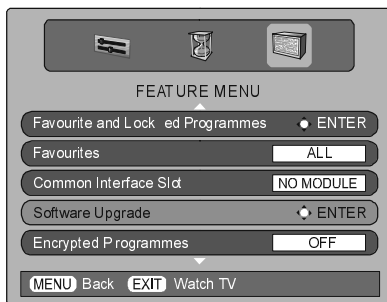

- Press \wedge or \vee to select **Version**. Use \leftarrow or \rightarrow to select. When the software has been updated there will be a choice of two versions available.

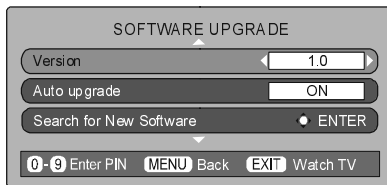

Auto Upgrade


If **Auto upgrade** is selected the software will automatically update as each version becomes available, provided the television is on or in standby. If the television is on, a screen prompt will appear showing the software download taking place.

- From the **SOFTWARE UPGRADE** menu press \checkmark to select **Auto Upgrade**.
- Use \leftarrow or \rightarrow to select **ON** or **OFF**.


Searching for new software

If preferred, software upgrades can be searched for manually using **Search For New Software**.


- In the **SOFTWARE UPGRADE** menu press \wedge or \vee to select **Search For New Software**.

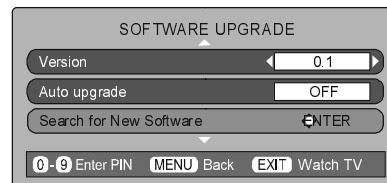

- Press **OK**. The television will automatically start searching for a software upgrade, the progress bar will move along the line.

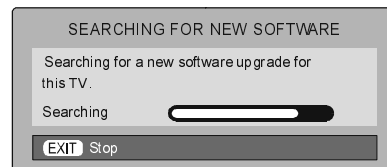

If an upgrade is found the television will automatically start downloading, if not a screen will appear stating that an upgrade is unavailable.

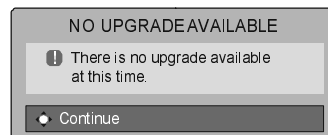


This can take several minutes.

Input selection, AV connections, PC RGB sound mode and analogue switch-off

For 17WLT56B and 20WLT56B models:

Settings for the INPUT and OUTPUT sockets so that the television recognises connected equipment. See page 6-7 for a clear view of the back connection recommendations.

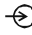Most media recorders and decoders send a signal through the scart lead to switch the television to the correct Input socket. Alternatively press the external source selection button  until the desired source is selected in **Source menu**.


Input selection


Use the Input Selection if the television does not switch over automatically.



- 1 Press  to select **ATV**, **AV-1**, **AV-2**, **AV-2S**, **YPbPr**, **AV-3S**, **PC RGB** or **DTV**.

OUTPUT signal selection for AV-2 (Scart 2)




This enables selection of the source to output from AV-2. For example, to record transmissions in stereo from a stereo decoder - connect a stereo decoder to **AV-1** and stereo media recorder to **AV-2**, then select **AV-1** as the **Av-2 Output**. The signal received through SCART 1 will output directly through SCART 2.

 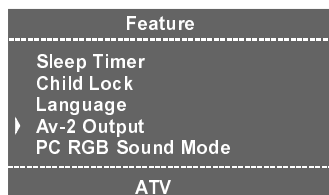- 1 From the **Feature** menu, press  to select **Av-2 Output**.



- 2 Use  or  to change **Av-2 Output** option to:
ATV = The last television programme selection.
AV-1 = The picture from equipment connected to **AV-1**.
DTV = The programme selection from the digital mode.

PC RGB Sound Mode

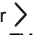- 1 From the **Feature** menu, press  to select **PC RGB Sound Mode**.
- 2 Use  or  to change **PC RGB Sound Mode** option to **TV**, **AV-1**, **AV-2**, **YPbPr** or **PC RGB**. The sound of the selected source will be heard when the TV is in PC RGB mode.

Analogue switch-off


This is a digital television which is integrated to allow the use of both digital and analogue services. However, during the lifetime of this set it is very likely that analogue services will be switched off to allow for more new digital services.

This 'switch-off' will happen in a number of phases, which will be advertised in your area well in advance. It is recommended that at each phase the television is re-tuned to ensure that existing and new digital services can be viewed without disruption (see **Auto tuning** page).

Input selection, AV connections, PC RGB sound mode and analogue switch-off


For 23WLT56B models:

Settings for the INPUT and OUTPUT sockets so that the television recognises connected equipment. See page 7 for a clear view of the back connection recommendations.

Most media recorders and decoders send a signal through the scart lead to switch the television to the correct Input socket. Alternatively press the external source selection button  until the desired source is selected in **Source menu**.


Input selection


Use the Input Selection if the television does not switch over automatically.



- 1 Press  to select **ATV, AV-1, AV-2, AV-2S, YPbPr, AV-4, AV-4S, PC RGB** or **DTV**.

OUTPUT signal selection for AV-2 (Scart 2)

This enables selection of the source to output from AV-2. For example, to record transmissions in stereo from a stereo decoder - connect a stereo decoder to **AV-1** and stereo media recorder to **AV-2**, then select **AV-1** as the **Av-2 Output**. The signal received through SCART 1 will output directly through SCART 2.


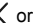
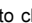
- 1 From the **Feature** menu, press  to select **Av-2 Output**.

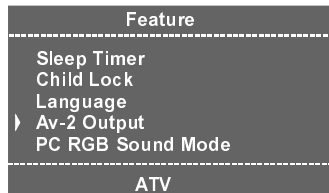

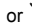- 2 Use  or  to change **Av-2 Output** option to:
ATV = The last television programme selection.
AV-1 = The picture from equipment connected to **AV-1**.
AV-4 = The picture from equipment connected to the **AV-4** (Connections on the side).

DTV= The programme selection from the digital mode.

PC RGB Sound Mode

- 1 From the **Feature** menu, press  to select **PC RGB Sound Mode**.
- 2 Use  or  to change **PC RGB Sound Mode** option to **ATV, AV-1, AV-2, AV-4, PC RGB** or **DTV**. The sound of the selected source will be heard when the TV is in PC RGB mode.

Analogue switch-off


This is a digital television which is integrated to allow the use of both digital and analogue services. However, during the lifetime of this set it is very likely that analogue services will be switched off to allow for more new digital services.


This 'switch-off' will happen in a number of phases, which will be advertised in your area well in advance. It is recommended that at each phase the television is re-tuned to ensure that existing and new digital services can be viewed without disruption (see **Auto tuning page**).

PC Mode

Picture, PIP Picture, Feature, Geometry and PIP Source menus in PC mode are described below. The other menu items are identical to TV mode menus. Please see the previous sections.

Switching From TV to PC Mode

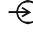- 1 Press  button and select **PC RGB** item in **Source** menu.
- 2 Press **MENU** in **PC Mode**, Main menu appears on the screen as below:

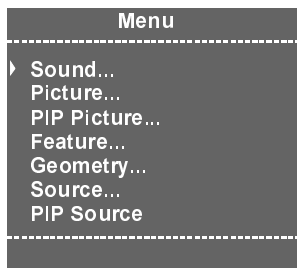

Sound


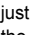
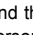
The **Sound** menu is as in the TV mode.

Picture

In **PC mode**, the **Picture** menu appears on the screen as below.


- 1 Select the **Picture** option from the main menu.




- 2 Press  to select the option you want to adjust and then press ,  or **OK** button to suit the personal taste.

PIP Picture

- 1 Select **PIP Picture** in main menu.

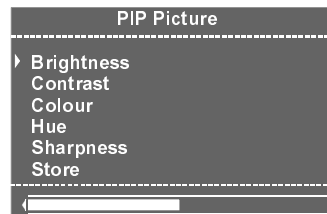


- 2 Press  to select the item you want to adjust.
- 3 Please refer to the previous sections for getting information about how to adjust the menu items.

Feature Menu

In **PC mode**, the **Feature** menu appears on the screen as below.


- 1 Select **Feature** option in main menu.

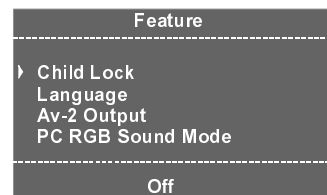

- 2 Please refer to the previous sections for getting information about how to adjust the menu items.

Geometry Menu

Geometry menu is available in **PC mode**. If you shift the picture horizontally or vertically to an unwanted position, use **Geometry** menu items to put the picture into correct place automatically.

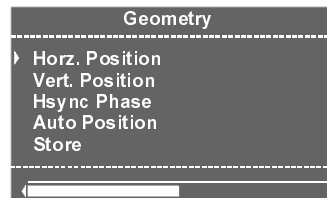

PC Mode continued

Horizontal Position

Horz. (Horizontal) Position shifts the image horizontally to right hand side or left hand side of the screen.

- 1 When you enter the **Geometry** menu, **Horz. Position** becomes selected.
- 2 Press < or > button to adjust the value.

Vertical Position

Vert. (Vertical) Position shifts the image vertically towards the top or bottom of the screen.

- 1 In the **Geometry** menu press ∨ until **Vert. Position** is selected.
- 2 Press < or > to adjust the value.

Hsync Phase

Depending on the resolution and scan frequency that you input to the TV Set, you may see a hazy or noisy picture on the screen. In such a case you can use this item to get a clear picture by trial and error method.

- 1 In the **Geometry** menu press ∨ button until **Hsync Phase** is selected.
- 2 Press < or > to adjust the value.

Auto Position


If you shift the picture horizontally or vertically to an unwanted position, use this item to put the picture into correct place automatically. Auto position adjustment is recommended to be done with the full screen image for correct adjustment.

- 1 In the **Geometry** menu press ∨ button until **Auto Position** is selected.
- 2 Press < or > to activate.
"Please Wait" is displayed at the bottom of the menu. After a few seconds the screen geometry is adjusted automatically.

Source

The **Source** menu is as in the TV mode.


PIP (Picture-in-Picture) Source


This menu is available when the PIP mode is activated by pressing the  button.

- 1 Select **PIP Source** in main menu.
- 2 For **17WLT56B** and **20WLT56B** models:
Press < or > to select **TV**, **AV-1**, **AV-2**, **AV-2S**, **AV-3S** or **DTV**. Then press **OK**.
For **23WLT56B** model:
Press < or > to select **ATV**, **AV-1**, **AV-2**, **AV-2S**, **AV-4**, **AV-4S** or **DTV**.
- 3 Press **EXIT** to finish.


Now you can use **OK** button to activate a window. Press < , > to set the PIP window position and ^ , ∨ to adjust the PIP window size (if PIP window is activated).

PC and Picture

If **PC and Picture (PAP)** feature is activated by pressing the  button twice, main menu appears on the screen as below:

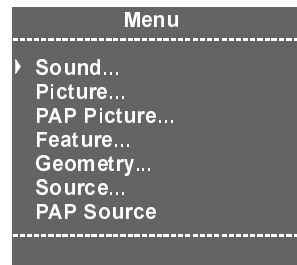

In this mode, **Picture** menu becomes as below:

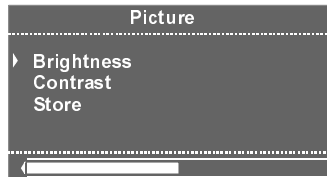

PAP Picture and **PAP Source** options have the same items with **PIP Picture** and **PIP Source**.

And the rest of the menu options in the main menu have the same descriptions as stated in previous sections.

For 17WLT56B models:

PC input typical display modes

The display has a maximum resolution of 1280 x 768, vertical sync. frequency range of 50-75 Hz and a horizontal sync. frequency range of 30-69 KHz.

The following table is an illustration of some of the typical video display modes.

<i>Mode</i>	<i>Resolution</i>		<i>Frequency</i>	
	<i>Horizontal</i>	<i>Vertical</i>	<i>Hor. (kHz)</i>	<i>Ver. (Hz)</i>
1	640	400	31.5	70
2	640	480	31.5	60
3	640	480	37.9	72
4	640	480	37.5	75
5	720	400	31.5	70
6	800	600	35.2	56
7	800	600	37.9	60
8	800	600	48.1	72
9	800	600	46.9	75
10	1024	768	48.4	60
11	1024	768	56.5	70
12	1024	768	60.0	75
13	1280	720	44.8	60
14	1280	768	47.8	60

The native resolution of the TFT-LCD Panel is 1280 x 768. Therefore using Mode 14 is advised to get the best PC input display quality.

For 20WLT56B models:

PC input typical display modes

The display has a maximum resolution of 1360 x 768, vertical sync. frequency range of 50-75 Hz and a horizontal sync. frequency range of 30-69 KHz.

The following table is an illustration of some of the typical video display modes.

<i>Mode</i>	<i>Resolution</i>		<i>Frequency</i>	
	<i>Horizontal</i>	<i>Vertical</i>	<i>Hor. (kHz)</i>	<i>Ver. (Hz)</i>
1	640	400	31.5	70
2	640	480	31.5	60
3	640	480	37.9	72
4	640	480	37.5	75
5	720	400	31.5	70
6	800	600	35.2	56
7	800	600	37.9	60
8	800	600	48.1	72
9	800	600	46.9	75
10	1024	768	48.4	60
11	1024	768	56.5	70
12	1024	768	60.0	75
13	1280	720	44.6	60
14	1280	768	47.6	60
15	1360	768	47.6	60

The native resolution of the TFT-LCD Panel is 1366 x 768. Therefore using Mode 15 is advised to get the best PC input display quality.

For 23WLT56B models:

PC input typical display modes

The display has a maximum resolution of 1366 x 768, vertical sync. frequency range of 50-75 Hz and a horizontal sync. frequency range of 30-69 KHz.

The following table is an illustration of some of the typical video display modes.

<i>Mode</i>	<i>Resolution</i>		<i>Frequency</i>	
	<i>Horizontal</i>	<i>Vertical</i>	<i>Hor. (kHz)</i>	<i>Ver. (Hz)</i>
1	640	400	31.5	70
2	640	480	31.5	60
3	640	480	37.9	72
4	640	480	37.5	75
5	720	400	31.5	70
6	800	600	35.2	56
7	800	600	37.9	60
8	800	600	48.1	72
9	800	600	46.9	75
10	1024	768	48.4	60
11	1024	768	56.5	70
12	1024	768	60.0	75
13	1280	720	44.8	60
14	1280	768	47.8	60
15	1366	768	47.8	60

The native resolution of the TFT-LCD Panel is 1366 x 768. Therefore using Mode 15 is advised to get the best PC input display quality.

Digital text and interactive services, analogue text

Digital text and interactive services

The digital text and interactive services are the up-to-date way of viewing service information, using computer-style formats, incorporating pictures and interactive views.

They offer high quality on-screen images with multi-colour photographic still images, advanced text and graphics and are user-friendly. These services are free to anyone with a digital television, however; they are not available for all digital stations and are dependant on the broadcaster.

Simply using the coloured buttons on the remote control and \wedge , \vee , \langle and \rangle make navigating pages and pull-down menus quick and easy.


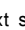

Using Digital interactive services

Most channels that offer interactive services will show a prompt, for example, "PRESS RED".

- 1 To access digital interactive services press the TEXT or RED button. It may take a few seconds to load.
- 2 Using \wedge or \vee highlight the required subject and press OK.
Use the coloured buttons as instructed.
- 3 To return to normal viewing press TEXT.

Analogue text

The Text    button:

To view text services press   . Press again to return to normal viewing. Programmes cannot be changed until text is cancelled.

The first text page shown will be the *initial* page.


Any text page can be accessed by entering the 3 digit page number using the numbered buttons, pressing the coloured buttons or pressing \blacktriangle P to advance to the next page and \blacktriangledown P to go back to the previous page.

Four coloured titles will appear at the base of the screen. To access one of the four given subjects, press the relevant coloured button on the remote control.


For further information on your particular text system(s), see the broadcast text index page or, consult your local Toshiba dealer.

Below is a guide to the functions of the remote control text buttons.

To display an initial page:


Press  to access an initial page. The one displayed is dependant on the broadcaster.

To display a sub-page of a text page:

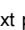If a text page has sub-pages, press  and enter the subpage number using the numbered buttons.


After subpage numbers appears on text page, press left or right buttons to display the subpages.

To reveal concealed text:


To discover the solutions on quiz and joke pages press the  button.

To hold a wanted page:


At times it is convenient to hold a page of text.

Press  and HOLD will appear in the top left of the screen. The page will be held on screen until the button is pressed again.

To enlarge the text display size:

Press  once to enlarge the top half of the page, press again to enlarge the bottom half of the page. Press again to revert to normal size.


To select a page whilst viewing a normal page:

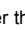
Enter the page number then press , a normal picture will be displayed. The television will indicate when the page is present by displaying the page number at the top of the screen. Press

 to view the page.

To *display news flashes*:

Select the news flash page for the chosen text service (see the index page of text service).

Press . The news flashes will be displayed as and when they are broadcast. Press

 again to cancel the display.

The news flash page must be cancelled before changing programmes.

Note: Volume level cannot be adjusted in Teletext mode.

Questions and Answers

Below are the answers to some of the most common queries.
For more information go to www.toshiba.co.uk

Q Why is there no sound or picture?

A Check the mains switch is on and check all connections.
Check the television is not in standby mode.


Q Why is there a picture but no sound?

A Check the volume has not been turned down or that sound mute has not been selected.

Q What can cause a poor analogue picture?

A Interference or a weak signal. Try a different television station. **FINE TUNING** may help.

Q Why doesn't the video/DVD being played show on screen?

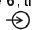A Make sure the VCR or DVD player is connected to the television as shown on page 6, then select the correct input by pressing .

Q Why is the VCR/DVD picture in black and white?

A Check the correct **input** has been chosen, **S-VIDEO** or **AV**. See **AV connections**.


Q Why is there a good video picture but no sound?

A Check the SCART lead connection.

Q Why doesn't the remote control work?

A Check the side switch on the remote control is in TV mode.
Check the batteries aren't dead or inserted incorrectly.


Q Why is the DTV main menu unavailable?

A **Analogue** mode is selected. Press  to select **DTV**.

Q Why don't the controls on the top of the television work?

A Check that **CHILD LOCK** is not selected.

Q Why is there a message permanently on the screen?

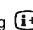A Remove it by pressing .

Q Why is the channel locked?

A The channel has been selected in **Locked Programmes**. See **Digital Settings** pages.

Q Why are the menus locked?

A **LOCK MENUS** is selected. See **Parental Controls** page.

Q Why are some of the digital channels unavailable?

A Your subscription needs upgrading. Contact your service provider.

Q Why when digital subtitles have been selected are they not showing on screen?

A Subtitles are not currently being transmitted by the broadcaster.

Q Why is the soundtrack in English when a different audio language has been selected?

A The programme is currently being broadcast with an English soundtrack only.

Q Why is the sound only coming from one speaker when stereo sound is selected?

A Check that the balance in the **SOUND** menu hasn't been set to one side.

Questions and Answers

Q What can be done if the PIN number has been forgotten?


A Use the Master PIN code of 1276, then change to a number of your choice. Ensure that no-one else can use the Master PIN by removing the Owner's Manual.

Q Why is there no digital text service?

A The digital programme being viewed is not broadcasting digital text. Try another digital programme.

Q Why are there problems with analogue text?

A Good performance of text depends on a good strong broadcast signal. This normally requires a roof or loft aerial. If the text is unreadable or garbled, check the aerial. Go to the main index page of the text service and look for the *User Guide*. This will explain the basic operation of text in some detail. If further information is needed on how to use text see the text section.

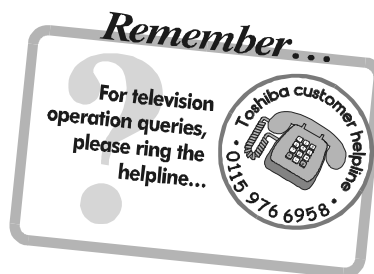

Cleaning the screen and cabinet...

Turn off the power, clean the screen and cabinet with a soft, dry cloth. We recommend that you **do not** use any proprietary polishes or solvents on the screen or cabinet as this may cause damage.

Disposal...

The following information is only for EU member states.

The use of the symbol indicates that this product may not be treated as household waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.





Notes

For your own records





Notes

For your own records



Specifications and accessories

17WLT56B

Broadcast Systems / Channels

PAL-I	UHF UK21-UK69
PAL-B/G	UHF E21-E69 VHF E2-E12, S1-S41
SECAM-L	UHF F21-F69 VHF F1-F10, B-Q
SECAM-D/K	UHF R21-R69 VHF R1-R12

Video Input PAL, SECAM, NTSC 3.58/4.43

External Connections

AV-1	Input/Output	21-pin Scart	RGB, A/V
AV-2	Input/Output	21-pin Scart	S-Video, A/V
AV-3	Input	RCA RCA	Component - Y/Pb/Pr Audio L+R
AV-3S	Input	4 pin	S-Video

VGA Connection

Common Interface - One Module

Programme Positions 100

Stereo Nicam, German
2 carrier system

Visible Screen Size
(approx.) 37cm (H) 23cm (V)

Display 15:9

Screen Resolution 1280x768

Sound Output (at 10% distortion) Main 3W + 3W

Power Consumption
as specified in EN60107-1 : 1997 60 W

Standby (approx.) < 3W

Dimensions
(approx.)

with stand	40cm(H)	47cm(W)	20cm(D)
without stand	36cm(H)	47cm(W)	8cm(D)

Weight (approx.) 5.7 Kg

Headphone Socket 3.5mm stereo

Accessories Remote control
2 batteries
(AAA, IEC R03 1.5V)
VGA cable
"P" Clip Fixing

Specifications and accessories

20WLT56B

Broadcast Systems / Channels

PAL-I	UHF UK21-UK69
PAL-B/G	UHF E21-E69 VHF E2-E12, S1-S41
SECAM-L	UHF F21-F69 VHF F1-F10, B-Q
SECAM-D/K	UHF R21-R69 VHF R1-R12

Video Input PAL, SECAM, NTSC 3.58/4.43

External Connections

AV-1	Input	21-pin Scart	RGB, A/V
AV-2	Input/Output	21-pin Scart	S-Video, A/V
AV-3	Input	RCA RCA	Component - Y/Pb/Pr Audio L+R
AV-3S	Input	4 pin	S-Video

VGA Connection

Common Interface - One Module

Programme Positions 100

Stereo Nicam, German
2 carrier system

Visible Screen Size
(approx.) 45cm (H) 25cm (V)

Display 16:9

Screen Resolution 1366x768

Sound Output (at 10% distortion) Main 5W + 5W

Power Consumption
as specified in EN60107-1 : 1997 80 W

Standby (approx.) < 3W

Dimensions
(approx.)

with stand	42 cm (H)	54 cm (W)	24 cm (D)
without stand	38 cm (H)	54 cm (W)	9 cm (D)

Weight (approx.) 7.2 Kg

Headphone Socket 3.5mm stereo

Accessories Remote control
2 batteries
(AAA, IEC R03 1.5V)
VGA cable
"P" Clip Fixing

Specifications and accessories

23WLT56B

Broadcast Systems / Channels				Programme Positions	100
PAL-I	UHF UK21-UK69				
PAL-B/G	UHF E21-E69 VHF E2-E12, S1-S41			Stereo	Nicam, German 2 carrier system
SECAM-L	UHF F21-F69 VHF F 1-F10, B-Q			Visible Screen Size (approx.)	51cm (H) 29cm (V)
SECAM-D/K	UHF R21-R69 VHF R1-R12			Display	16.9
Video Input	PAL, SECAM, NTSC 3.58/4.43			Screen Resolution	1366x768
External Connections				Sound Output (at 10% distortion)	Main 5W + 5W
AV-1	Input	21-pin Scart	RGB, A/V	Power Consumption as specified in EN60107-1 : 1997	110 W
AV-2	Input/Output	21-pin Scart	S-Video, A/V	Standby (approx.)	< 3W
AV-3	Input	RCA RCA	Component - Y/Pb/Pr Audio L+R	Dimensions (approx.)	
AV-4 (Side)	Input	RCA	Video-Composite	with stand	48cm(H) 62cm(W) 24cm(D)
AV-4S (Side)	Input	4-pin	S-Video	without stand	43cm(H) 62cm(W) 10cm(D)
VGA Connection				Weight (approx.)	8.4 Kg
Common Interface - One Module				Headphone Socket	3.5mm stereo
				Accessories	Remote control 2 batteries (AAA, IEC R03 1.5V) VGA cable "P" Clip Fixing