

19" LCD TV

Model: M19/11



USER GUIDE



WARNINGS

Thank you for purchasing this television. For your safety, please take time to read these instructions carefully in order to familiarise yourself with the operation of the appliance and the important safety information. We strongly recommend that this product is installed by a competent person. If in doubt, refer to the retailer or the manufacturer helpline.

Caution

This television contains no user serviceable parts. Please refer to the manufacturer or authorised repair agent in the event of malfunction. Do not remove the back cover from the television.

Warning

To reduce the risk of fire, electric shock or damage to the television, do not expose it to dust, rain or moisture, or place any objects filled with liquids on or near the television.

Do not place the television in a confined space, ensure that nothing can obstruct the ventilation openings at the rear of the television.

Do not place naked flames on or near the television.

Dispose of this television and any components including batteries in an environmentally friendly manner. If in doubt, please contact your local authority for details of recycling.

Your LCD TV should be cleaned using a dry or slightly damp cloth. You should not use an alcohol based cleaner

Safety

For your safety, this appliance is fitted with a fused moulded 3 pin mains plug. Should the fuse need to be replaced, ensure that any replacement is of the same amperage and approved with the BSI mark. (⚡)

Never try and replace the mains plug unless you have adequate qualifications and are legally authorised to do so. In the event that a replacement Mains cable is required, contact the manufacturer for a suitable replacement.

Never use the television if it is damaged in any way.

Always place the television on a flat level surface avoiding anywhere which may be subject to strong vibration. Ensure the television is not placed on top of the power cable as the weight of the television may damage the cable and cause a safety hazard.

Never place mobile phones, speakers or any other device which may cause magnetic or radio interference with the television. If interference is apparent, move the device causing the interference away from the television.

Packaging

Please save the packaging for the television as you will need this in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package it correctly. The safest way to package your item in the event of warranty/service repair is in its original box/packaging

WARNINGS

Screen Burn

A characteristic of Plasma and LCD TV Panels is that displaying the same image for a long time may cause a permanent after-image to remain on the screen. This is called screen burn. Most pictures shown on your TV will be constantly moving and fill the screen.

Examples of images that you need to watch out for are as follows (this is not an all-inclusive list):


- **TV Channel Logos:** e.g. Shopping channel logos and pricing displays-especially if they are bright and stationary. Moving or low-contrast graphics are less likely to cause ageing of the screen.
- **Picture-in-Picture and Multi Picture-in-Picture:** Do not view for long periods of time using the Picture-in-Picture or Multi Picture-in-Picture functions.
- **Time Displays**
- **Teletext:** Do not view a stationary page for long periods of time.
- **TV/DVD Menus:** e.g. Listings of DVD disk content.
- **Pause Mode:** Do not leave the TV in pause mode for long periods of time, e.g. When watching DVDs or videos.

Note: To prevent screen burn if viewing any of the above for long periods of time, reduce contrast and brightness when viewing. Once burn-in occurs it will never disappear completely.

How do I dispose of this product?

UK: Waste electrical products should not be disposed of with household waste. Separate disposal facilities exist. For your nearest facilities, please see www.recycle-more.co.uk or instore for details.

ROI: Produced after 13th August 2005. Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

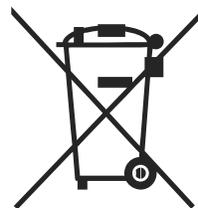

CONTENTS

	Page
Getting Started	
What is included in the box with the TV	4
How to set up the TV for the first time	
Tuning into Digital / Freeview TV Stations	5
Tuning into Analogue TV Stations (i.e 1 - 5)	5
TV & remote control buttons	
Remote control buttons and their functions	6
TV buttons and their functions	7
Input connections on TV	
Connecting power supply	7
Connecting via HDMI	7
Connecting via VGA (For PC mode)	7
Connecting via SCART	7
Connecting via Audio	7
Connecting TV In	7
Connecting Coax	7
Connecting YPbPr	7
Changing Source	8
Digital / Freeview TV operation	
Adjusting the picture settings	9
Adjusting the sound settings	10
Adjusting General Settings	11 - 12
Searching for new digital channels / services	12
Using Electronic Programme Guide (EPG)	13
First time install / Reinstalling digital TV / radio stations	13
Using / changing system Pin code	13
Analogue TV Operation	
Tuning Analogue TV	14
Naming channels	14
Editing channels / channel positions	15
Changing country settings	15
Using teletext	16
Using with a PC	
Installing to use on a Windows XP PC	17
PC Mode Menu Operation (VGA)	
Adjusting Contrast	18
Adjusting Brightness	18
Adjusting Colour Settings	18
Configuration PC use	19
DVD Mode Menu Operation	
System Settings page	20
Set-up Audio	21
Set-up Digital	21
Wall Mounting	
Removing the stand	22
Attaching a wall bracket	22
Using with Sky Digital (B Sky B)	
Connecting via SCART	23
Connecting via RF	23
Universal / Sky Remote Control	
Operating TV with a Universal / Sky Remote Control	23
Frequently Asked Questions	24
Technical Specification	25
Warranty - Helpline Information	25
Index	26

**Trouble setting up?
Call the Technical Support line on 0845 456 6767**

GETTING STARTED - INCLUDED ACCESSORIES

Accessories

Included with this TV are the following accessories:

1x - User Guide Book



1x - Remote control



1x - RF lead



2x - AAA batteries



1x - AC mains lead



1x - Power Adapter



Please save your packaging as you will need this in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package it correctly. The safest way to package your item in the event of warranty/service repair is in it's original box/packaging.


GETTING STARTED - INITIAL SET UP

IMPORTANT - AFTER TUNING DO NOT PRESS ANY BUTTONS FOR 20 SECONDS SO THE CHANNEL INFORMATION CAN BE STORED.


TUNING IN DIGITAL TV

IMPORTANT — Please ensure the TV has reached room temperature before connecting the power for the first time

- 1) Connect the mains lead to your electrical outlet and connect the power adaptor to the television.

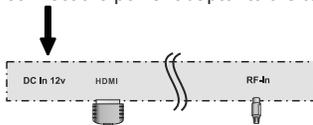

 - 2) Connect the RF Cable supplied to the **'RF IN'** on the rear of the TV and connect the other end of the cable to your TV Aerial outlet



- 3) Install batteries in the remote control and press the [STANDBY] button to turn on the TV.

The 'Initial Set up-DVBT/Freeview TV' menu should now appear. If it does not, please go to step 4b.

- 4a) Press [ENTER] on the remote control whilst 'confirm' is highlighted on screen.



Auto tune will now take place and set up is complete.


If you do not see the above screen to tune in the channels:-

- 4b) Ensure the TV is in DVB mode (press [INPUT] on remote control and select DVB)
Press the button labelled 'DVB-MENU' on remote control to access settings menu,
Scroll to 'Channel Search' and press [ENTER].

If you do not have Digital TV (Freeview) in your area or wish to tune in via the analogue signal please follow the below.

- 5) Switch the TV to 'TV' mode.
To select TV mode, press [INPUT], then scroll to TV and press [ENTER].

The initial Set up screen will appear as below

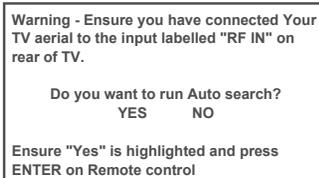

- 6) Once you have read the on screen message and checked that you have connected the RF cable to the 'RF-IN' on the rear of the TV, ensure 'Yes' is highlighted and press [ENTER].

The TV channels will now tune in. After a few minutes, tuning in will finish and the TV will go into 'Program Edit' mode where you can move channels to the desired positions.

PR	NAME	SYSTEM	FREQ	SKIP
1	BBC1	I	833.25	OFF
2	BBC2	I	807.25	OFF
3	ITV	I	733.25	OFF
4	CH4	I	727.25	OFF
5	CH5	I	695.25	OFF
6		I	450.00	ON
7		I	450.00	ON
8		I	450.00	ON
9		I	450.00	ON
10		I	450.00	ON

SWAP INSERT COPY DELETE
 Exit

To "swap" channel positions - scroll to channel you wish to swap press Red button on R/Control. Then scroll to position you would like to move it to, then press ENTER.

- 7) Scroll to select the channel you would like to move/swap, then press the red button.

Then, move to the location you would like to move it to. Press [ENTER].

Repeat the process with all channels.

To rename the channels, refer to page 14.
Press [LCD MENU] to exit.

Important - Due to signal strength variations across the UK for Digital TV, please note that not all of the channels/services may be available in your region.

Over the coming months as coverage increases, more services and channels may become available. Every few months, follow point 4b to re-scan for new channels/services.

In the event of poor reception in either Analogue TV or Digital TV (DVB) it may be necessary to install a signal 'booster' to enhance reception. For Digital/Freeview TV (DVB) you may need to upgrade your aerial to a High Gain Digital version.

REMOTE CONTROL BUTTONS

1 STANDBY

Switch on LCD TV when at standby mode or vice versa.

AUTO/EJECT

Press to auto adjust in PC mode and eject the DVD in DVD mode.

Press to display the information of the channel in DVB mode.

2 NUMBER BUTTONS

Press 0-9 to select a TV channel directly when you are watching TV. The channel will change after 2 seconds.

To enter page number in teletext mode.

-/-

Press this button to enter a program number for multiple program channel such as 2-1, etc.



Return to the previous channel viewed.

3 VOL+/-

Press to increase / decrease the sound level.

TITLE

Press to display the DVD title menu.

LANG

To show the list of audio languages available for the current channel.

MENU

Press to display DVD-disc menu on the screen.

EPG

Press to show the Electronic Program Guide menu.

DISPLAY

Press to display the source and channel's information

CH+/-

Press to scan through channels. To scan quickly channels, press and hold down either +/- button.

4 THUMBSTICK(/ ENTER)

Allows you to navigate the on-screen menus and adjust the system settings to your preference.

LCD MENU


To display OSD menu of different input source.

DVB SETUP

To display the setup menu of DVB on the screen.

DVD SETUP

To display the setup menu of DVD on the screen.

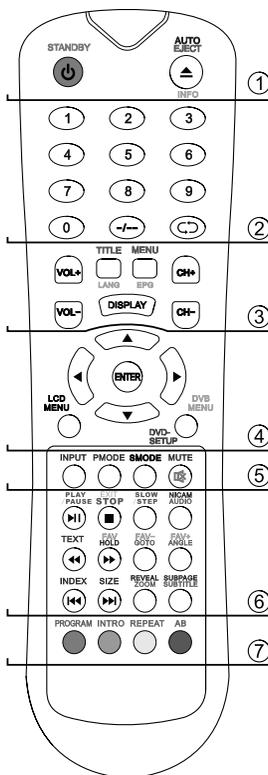

5 INPUT

Press to cycle through the input source.

PMODE

Press repeatedly to cycle through the available video picture mode.

SMODE

Press to cycle through the different sound modes.

MUTE

Press to mute the sound and press again to restore.

6 PLAY/PAUSE

Press to play or pause the DVD playing.

EXIT/STOP

DVB mode: Exit the DVB menu.

DVD mode: Stop the DVD playing.

SLOW/STEP

Press to slow / step the speed of DVD Playing.

DVB mode: the speed of DVD playing.

DVD mode: press to select NICAM.

DVD mode: press to select DVD audio channels.

TEXT(Fast reverse)

Teletext mode: press to enter the teletext mode.

DVD mode: press to play a DVD program in fast rewind mode.

FAV/HOLD

DVB mode: press to display FAV menu.

DVD mode: press hold on or off for current page display.

FAV-/IGOTO

DVB mode: decrease fav channel.

DVD mode: press to goto in DVD.

FAV+/ANGLE

DVB mode: increase fav channel.

DVD mode: select different angle of DVD

INDEX(PREV)

Teletext mode: request the index page.

DVD mode: press to reply the current program from the previous chapter.

SIZE(NEXT)

Teletext mode: change the display size.

DVD mode: press to advance forward to the next chapter.

REVEAL/ZOOM

To reveal or hidden the hidden words.

DVD mode: select the zoom of DVD playback.

SUBPAGE/SUBTITLE

Sub coded page access. To switch the dialogue at the bottom of the screen

7 Program

To select the DVD program playback.

INTRO

Intro/ Scan/ 9 picture display .

REPEAT

Repeat playback .


AB

Press to AB playback.

INPUTS & CONNECTIONS

TV BUTTONS


1	Select the input source: TV/SCART/PC/AV/DVD/HDMI
2	OSD (On Screen Display) Menu
3	Volume down/Left orientation
4	Volume up/Right orientation
5	Channel down/Scroll down
6	Channel up/Scroll up
7	Standby
8	Power ON/OFF
9	Remote Control Receiver
10	Power LED Indicator
11	DVD - Eject Disc
12	DVD - Play
13	DVD - Pause
14	DVD - Stop
15	DVD - Rewind/Back Chapter
16	DVD - Forward/Next Chapter

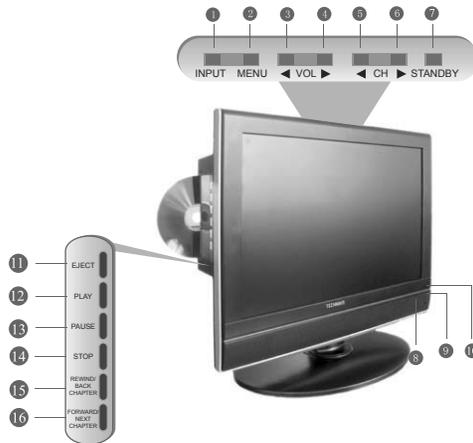

REAR CONNECTIONS



A	DC In 12v	Power input
B	HDMI In	HDMI input
C	VGA In	VGA input
D	SCART	SCART input
E	VIDEO In	Video input
F	COMPONENT	Component input
G	PC In (Audio)	Audio input for AV/PC
H	YPbPr In (Audio)	Component Audio input
I	RF In	TV Aerial input
J	Coax Out	Digital Audio Out (DVD)

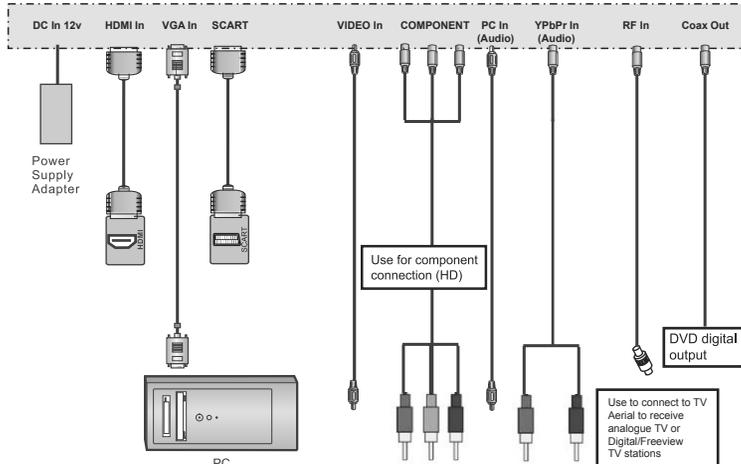

INPUTS & CONNECTIONS

Selecting Input Source

To switch between the different connections is very easy.


- 1) Press [INPUT] - The following will appear
- 2) Press [V] or [^] to select the input you require.
- 3) Press [ENTER]

Connecting HD Ready Devices

There are two options for HD.

- 1) By connecting via HDMI cable (not included) – this provides both HD picture and sound.
- 2) By connecting via Component (YPbPr) cable (not included) – this provides HD picture. Input on TV should be set to YPbPr

You will also need to connect the sound input cable to the YPbPr Audio Input.

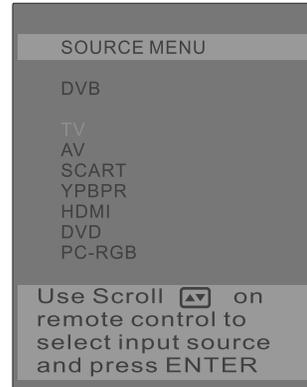

DVB-T MODE MENU OPERATION

PICTURE SETTINGS

Lets you adjust the brightness, contrast colour and sharpness to enhance the viewing experience.

Adjusting Brightness

Increase or decrease the brightness of the picture

- 1) Press [LCD-MENU] to enter menu
- 2) Press [V] to select Brightness
- 3) Then press [>] or [<] to increase or decrease the brightness



- 4) Press [LCD-MENU] twice to exit

Adjusting Contrast

Adjust the balance between black & white

- 1) Press [LCD-MENU] to enter menu
- 2) Press [V] twice to select Contrast
- 3) Then press [>] or [<] to increase or decrease the Contrast



- 4) Press [LCD-MENU] twice to exit

Adjusting Colour

Increase or decrease the Red, Green & Blue which make up the picture

- 1) Press [LCD-MENU] to enter menu
- 2) Press [V] 3 times to select Colour
- 3) Then press [>] or [<] to increase or decrease the Colour



- 4) Press [LCD-MENU] twice to exit

Adjusting Sharpness

Increase or decrease the sharpness of the picture depending on signal strength. If you have a poor signal strength you should reduce the sharpness to get a better picture.

- 1) Press [LCD-MENU] to enter menu
- 2) Press [V] 4 times to select Sharpness
- 3) Then press [>] or [<] to increase or decrease the Sharpness



- 4) Press [LCD-MENU] twice to exit

DVB-T MODE MENU OPERATION

SOUND SETTINGS

Lets you adjust the balance and audio presets to enhance the viewing experience.

Adjusting Balance

To switch the sound between the left and right speakers

- 1) Press [LCD-MENU] to enter menu
- 2) Press [>] to go to Sound menu
- 3) Press [V] twice to select Balance
- 4) Then press [>] or [<] to increase or decrease the balance



- 5) Press [LCD-MENU] twice to exit

Selecting Audio Preset

Switch between different preset sound options.

- 1) Press [LCD-MENU] to enter menu
- 2) Press [>] to go to Sound menu
- 3) Press [V] 3 times to select Audio Preset
- 4) Then press [>] or [<] to switch between Theatre, Voice, Music, Personal.



- 5) Press [LCD-MENU] twice to exit

If you select Personal you can now move down to highlight Bass or Treble and increase or decrease using the [<] or [>].


DVB-T MODE MENU OPERATION

GENERAL SETTINGS

Adjusting Blue Screen

Changes the background when there is no input between clear and a blue background

- 1) Press [LCD-MENU] to enter menu
- 2) Press [>] twice to go to General menu
- 3) Press [V] to select Blue Screen
- 4) Then press [>] or [<] to change between on and off

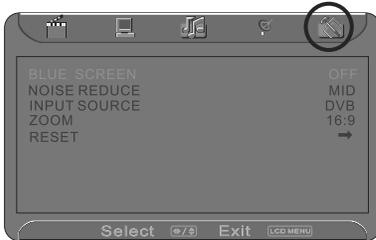

- 5) Press [LCD-MENU] twice to exit

Noise Reduce

Reduces the interference in the picture

- 1) Press [LCD-MENU] to enter menu
- 2) Press [>] twice to go to General menu
- 3) Press [V] twice to select Noise Reduce
- 4) Then press [>] or [<] to change between LOW, MID, HIGH, OFF




- 5) Press [LCD-MENU] twice to exit

Adjusting Input Source

You may wish to change the input which is being used

- 1) Press [LCD-MENU] to enter menu
- 2) Press [>] twice to go to General menu
- 3) Press [V] 3 times to select Input Source
- 4) Then press [>] or [<] to change between DVB, DVD, TV, SCART, HDMI, YPBPR and PC-RGB

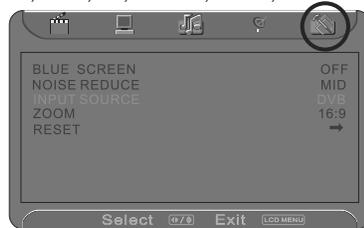

- 5) Press [LCD-MENU] twice to exit

Adjusting Zoom

You may wish to change picture format between 16:9 and 4:3.

- 1) Press [LCD-MENU] to enter menu
- 2) Press [>] twice to go to General menu
- 3) Press [V] 4 times to select Zoom
- 4) Then press [>] or [<] to change between 16:9 and 4:3




- 5) Press [LCD-MENU] twice to exit

Reset

You may wish to reset the menus to factory settings

- 1) Press [LCD-MENU] to enter menu
- 2) Press [>] twice to go to General menu
- 3) Press [V] 5 times to select Reset
- 4) Then press [>] to reset

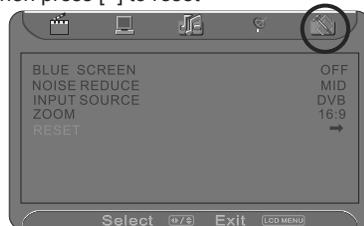

DVB-T CHANNEL SETTINGS MENU

Within Digital (DVB-T) mode there is also a channel settings menu. This is provided so you can search for new channels, change the picture format, create favourite lists and apply a pin code to limit access.

The menu is very user friendly.



Channel List

- 1) Press [DVB-MENU]
- 2) Press [ENTER]



This tells you various information about each channel

To delete stations

Press [V] or [A] to select the station
Press [YELLOW] to delete the stations.

To lock stations

You may wish to lock channels so they can't be viewed - i.e. Adult content.
Press [V] or [A] to select the station
Press [BLUE] to lock the selected channel
Enter the pin code and then press [ENTER]
See page 13 for 'Pin Code' function

- 3) Press [DVB-MENU] twice to exit

Create/Edit Favourite List

- 1) Press [DVB-MENU]
- 2) Press [V] to select favourite list
- 3) Press [ENTER]



You can create favourite lists for up to 5 users


- 4) Press [V] or [A] to select the station you wish to add.
It will be highlighted in light blue.
- 5) Press [ENTER] to add
Repeat this process until you have added all the channels you want
You can store up to 100 stations in the favourite list
- 6) Press [RED] to move the next Favourite list.
- 7) Press [DVB-MENU] twice to exit

To use the favourite list. Press [FAV] and select the list you require to use.

Search for New Channels

Every so often new channels are launched on digital.
You can search for these as follows.

- 1) Press [DVB-MENU]
- 2) Press [V] twice to select Channel Search
- 3) Press [ENTER]

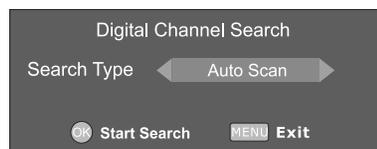

- 4) Press [ENTER] to start search
When it has finished it will return to digital TV


DVB-T CHANNEL SETTINGS & ELECTRONIC PROGRAM GUIDE (EPG)

Picture Size / Format


Your television has been factory set to show the correct picture format depending on the signal being received by the broadcast TV station.

If you wish to change the picture format.

- 1) Press [DVB-MENU]
- 2) Press [V] 5 times to select Picture Settings
- 3) Press [ENTER] to select

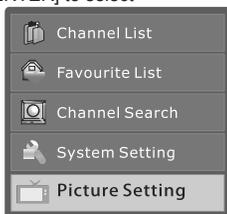

- 4) Press [←] or [→] to select either 4:3 or 16:9
- 5) Press [ENTER] to accept settings
- 6) Press [DVB-MENU] twice to exit.

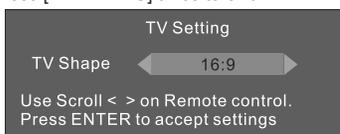

System Settings

- 1) Press [DVB-MENU]
- 2) Press [V] 3 times to select System Settings
- 3) Press [ENTER]



First Time Installation/Reinstall

Press [V] to highlight First Time Installation, Press [ENTER]. You will then be prompted on screen. Press [←] to highlight Confirm and then press [ENTER]

System Info

You may be asked by a service engineer which version of software your TV has.

- Press [V] twice
Press [ENTER]

Software version will now be displayed on screen.

Change Pin Code

- Press [V] 3 times
Press [ENTER]
Enter old pin code
(default is 888888)
Enter new pin code
Enter again
Press [ENTER] to confirm

Software update

This mode is so a service engineer can do a software update, as default it should be set to Auto.

- 4) After you have finished with this menu press [DVB-MENU] twice to exit menu

The Electronic Program Guide is available in DVB-T mode. It is a 7 day TV guide and provides information about forthcoming programmes (where supported by the broadcasted channel).

You can view the start and end time of all programs and on all channels for the next 7 days.

It is very simple to operate.

- 1) Press [EPG]. The following will appear



- 2) Press [CH+] or [CH-] to select channel you wish to see information about



- 3) Press [V] or [Λ] to move through the programs for the day highlighted
- 4) Press [→] or [←] to move through the days of the week

In the top right hand corner will appear information about the program you have selected

- 5) Press [DVB-MENU] to exit EPG.

TV MODE MENU OPERATION

TUNING SETTINGS

Tuning Program

You may wish to do some additional tuning, in order to improve the picture quality, move channels around or connect via RF to a freeview box or Sky digital.

- 1) Press [LCD-MENU] to enter menu
- 2) Press [>] twice to go to Tuning Menu
- 3) Press [V] to select Tuning Program
- 4) Press [>] to enter menu

You are now in this menu. The following can now be changed:



Fine Tune

You may wish to improve the picture quality on certain channels.

Press [V] until Fine Tune is highlighted and Press [>] or [<] to adjust.

System

You may wish to alter the System that the TV is set to if you wish to take the TV abroad. The system for the UK should be set to I.

Press [V] until System is highlighted and Press [>] or [<] to change between the different options.

Skip

If there is a channel that you do not wish to view you can add 'Skip' to that channel. When you press P+ or P- it will skip past this channel. Press [V] until Skip is highlighted and Press [>] to change to ON

Automatic Frequency Control (AFC)

This lets the TV automatically fine tune to a frequency. As default it should be set to ON.

Press [V] until AFC is highlighted and Press [>] to change to ON

Channel Name/Rename

This is to change the name of the channel. Press [V] until Channel Name is highlighted and Press [>] to enter name. Press [V] or [^] to change the letters and [>] to move to next letter.

Delete

You may wish to delete a channel if it has not tuned in correctly or is repeated. Press [V] until Delete is highlighted and Press [>] to select. The Press [<] so 'Yes' is highlighted and Press [ENTER] to delete.

Manual Search

You may wish to manual search if you can't find a certain channel or if you wish to connect to a Satellite/Cable box via RF/Aerial connector. Press [V] until Manual Search is highlighted and Press [>] to enter menu. Then Press [>] to scan downwards or Press [V] to move to scan upwards and Press [>] to start.


- 5) Press [LCD-MENU] 3 times to exit.

TV MODE MENU OPERATION

Program Edit / Changing Channel Position

You can change the channel position to suit your requirements.

- 1) Press [LCD-MENU] to enter menu
 - 2) Press [>] twice to go to Tuning menu
 - 3) Press [V] twice to select Program Edit
 - 4) Press [>] to enter menu
 - 5) To swap a channels
Press [RED]
 - 6) Move to the location you would like to place it
Press [ENTER]
- Repeat the process with all channels.

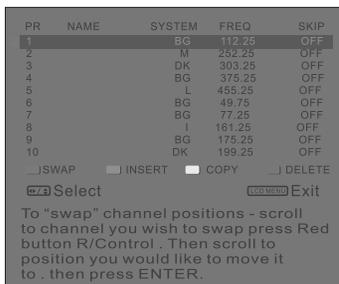

- 7) Press [LCD-MENU] to exit

Changing Country Settings

If you are moving the TV to another country you will need to change the region. The TV's default is UK.

- 1) Press [LCD-MENU] to enter menu
- 2) Press [>] twice to go to Tuning menu
- 3) Press [V] 3 times to select Country
- 4) Then press [>] or [<] to change between the countries



- 5) Press [LCD-MENU] twice to exit


Auto Search

Scan for all channels based on the current settings

- 1) Press [LCD-MENU] to enter menu
- 2) Press [>] twice to go to Tuning menu
- 3) Press [V] 4 times to select Auto Search
- 4) Then press [ENTER]
- 5) Press [<] to highlight 'ENTER' and then Press [ENTER]. The TV will now tune in.



- 6) The program edit screen will now appear

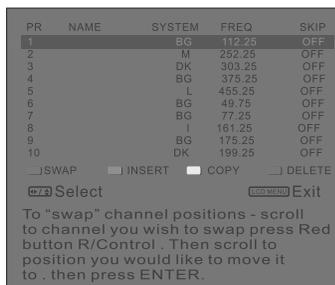

- 7) To swap a channel Press [RED]

Move to the location you would like to place it
Press [ENTER]
Repeat the process with all channels.
Press [LCD-MENU] to exit

TV MODE TELETEXT OPERATION

Teletext is a service offered by some broadcasters.

Teletext Operation

- 1) Press [TEXT], after a few seconds teletext page 100 should appear. Here is an example of BBC1



- 2) You can now navigate to the page you require in a number of ways:
 - a) Press the page you require using the number buttons i.e. page 302, by pressing [3][0][2]
 - b) Press the colour buttons, these will take you to page indicated on screen for each colour
 - c) Press [CH+] or [CH-] these will take you to next page. i.e. if you are on page 150 and you press [CH-] the page will switch to 149
- 3) To exit Teletext press [TEXT] twice to exit.

Other buttons

[SIZE] this increases or decreases the size of the text on screen
 [INDEX] some pages are more than one page long this button displays the number of pages
 [REVEAL] if there is an answer or something hidden this will display it
 [SUBPAGE] displays the sub page if it exists

CONNECTING TO A PC - WINDOWS XP

IMPORTANT— Before connecting to a PC you must ensure that the settings of the PC's output are correct for the new LCD Monitor.

You need to do the following with your old monitor connected


- 1) Switch on your PC
- 2) When finished booting up, right click your mouse anywhere on the screen, this screen will appear



- 3) left click your mouse on Properties, this screen will appear



- 4) Left mouse click on Settings, this screen will appear. Check the Screen Resolution is set to 1024 by 768 pixels, if it is not change to this.

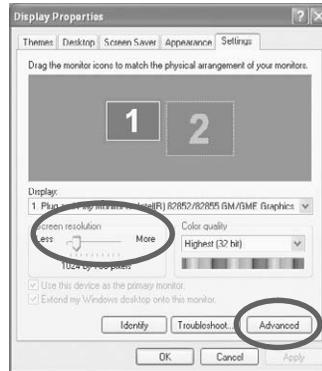

- 5) Left mouse click on Advance, this screen will appear, click on tab called 'monitor'



- 6) Left click on the drop down for Screen refresh rate and select 60 Hertz.
- 7) Finally click Apply, then click Yes and the settings will be saved.
- 8) Turn off your PC.
- 9) Connect up your LCD TV to your PC and switch on.
- 10) Switch on your PC, Windows will automatically Install the LCD TV.

PC MODE MENU OPERATION (VGA)

Within PC mode there is an additional menu. This can be operated in the following way.

PC SETTINGS

Adjusting Brightness

Increase or decrease the brightness of the picture

- 1) Press [LCD-MENU] to enter menu
- 2) Press [V] to select brightness
- 3) Then press [>] or [<] to increase or decrease the brightness



- 4) Press [LCD-MENU] twice to exit

Adjusting Contrast

Adjust the balance between black & white

- 1) Press [LCD-MENU] to enter menu
- 2) Press [V] twice to select contrast
- 3) Then press [>] or [<] to increase or decrease the contrast




- 4) Press [LCD-MENU] twice to exit

Adjusting Colour Settings

Choose between 9300k, 6500k or User

- 1) Press [LCD-MENU] to enter menu
- 2) Press [V] 3 times to select colour settings
- 3) Then press [<] or [>] to switch between 9300k, 6500k or USER.

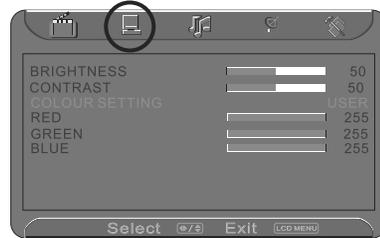

When in USER mode you can move down and highlight Red, Green or Blue and increase or decrease using [<] or [>].


PC MODE MENU OPERATION (VGA)

PC SETTINGS

Auto Configuration of Screen

Lets you automatically configure the television to be used as a computer monitor

- 1) Press [MENU] to enter menu
- 2) Press [>] to select PC settings
- 3) Press [V] to select Auto Config

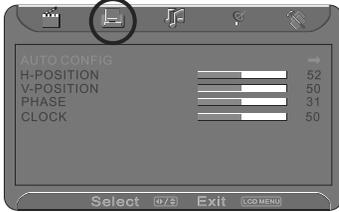

- 4) Then press [>] for the TV to automatically configure itself
- 5) Press [MENU] twice to exit

Horizontal Position

Changes the horizontal position of the picture

- 1) Press [MENU] to enter menu
- 2) Press [>] to select PC settings
- 3) Press [V] twice to select H-Position



- 4) Then press [>] or [<] to move the picture to left or right
- 5) Press [MENU] twice to exit

Vertical Position

Changes the vertical position of the picture

- 1) Press [MENU] to enter menu
- 2) Press [>] to select PC settings
- 3) Press [V] 3 times to select V-Position



- 4) Then press [>] or [<] to move the picture up or down
- 5) Press [MENU] twice to exit

Phase

To adjust delay time of phase in order to reduce the noise of picture

- 1) Press [MENU] to enter menu
- 2) Press [>] to select PC settings
- 3) Press [V] 4 times to select Phase



- 4) Then press [>] or [<] to increase or decrease the phase
- 5) Press [MENU] twice to exit

Clock

To adjust delay time of clock in order to reduce the noise of picture

- 1) Press [MENU] to enter menu
- 2) Press [>] to select PC settings
- 3) Press [V] 5 times to select Clock



- 4) Then press [>] or [<] to increase or decrease the clock
- 5) Press [MENU] twice to exit

DVD MODE MENU OPERATION


With DVD Mode there is an additional menu. This can be operated in the following way.

SYSTEM SET UP

Adjusting TV System

Lets you adjust between NTSC, PAL, AUTO (PAL is default for the UK)

- 1) Press [DVD-SETUP] to enter menu
- 2) Press [>] to select TV System
- 3) Press [>] to enter menu
- 4) Press [V] or [/] to highlight NTSC, PAL or AUTO
- 5) Press [ENTER] to confirm

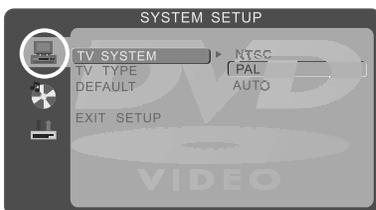


- 6) Press [DVD-SETUP] to exit

Adjust TV Type

This lets you select the format of the picture that is being received

- 1) Press [DVD-SETUP] to enter menu
- 2) Press [>] to select TV System
- 3) Press [V] to select TV Type
- 4) Press [>] to enter menu
- 5) Press [V] or [/] to highlight 4:3PS, 4:3LB or 16:9
- 6) Press [ENTER] to confirm

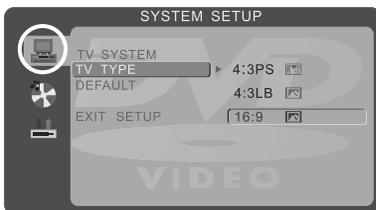


- 7) Press [DVD-SETUP] to exit

Returning Default

This let you switch the DVD menus above back to Default settings

- 1) Press [DVD-SETUP] to enter menu
- 2) Press [>] to select TV System
- 3) Press [V] to select Default
- 4) Press [>] to enter menu
- 5) Press [>] to highlight Yes
- 6) Press [ENTER] to confirm

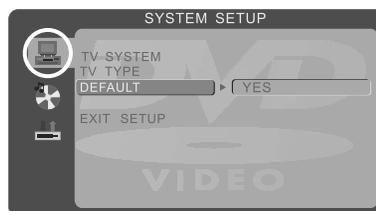

- 7) Press [DVD-SETUP] to exit

DVD MODE MENU OPERATION

AUDIO SET UP

Adjusting Audio Out

Lets you adjust between SPDIF/OFF, SPDIF/RAW, SPDIF/PCM

This is to alter the output type, you should use SPDIF/RAW when you have a receiver that can decode the signal and SPDIF/PCM if you do not have the ability to decode the signal.

- 1) Press [DVD-SETUP] to enter menu
- 2) Press [V] to select Audio Set Up
- 3) Press [>] to select Audio Out
- 4) Press [>] to enter menu
- 5) Press [V] or [^] to highlight SPDIF/OFF, SPDIF/RAW or SPDIF/PCM
- 6) Press [ENTER] to confirm



- 7) Press [DVD-SETUP] to exit

Adjusting Tone

Lets you increase or decrease the Tone of the sound

- 1) Press [DVD-SETUP] to enter menu
- 2) Press [V] to select Audio Set Up
- 3) Press [>] to enter menu
- 4) Press [V] to select Tone
- 5) Press [>] to enter menu
- 6) Press [V] or [^] to increase or decrease the tone
- 7) Press [ENTER] to confirm




- 8) Press [DVD-SETUP] to exit

DIGITAL SET UP

Adjusting Dynamic Range

Lets you adjust the Dynamic range between Full, 6/8, 4/8, 2/8 and Off.

- 1) Press [DVD-SETUP] to enter menu
- 2) Press [V] twice to select Digital Set Up
- 3) Press [>] to select Dynamic Range
- 4) Press [>] to enter menu
- 5) Press [V] or [^] to increase or decrease the Dynamic range
- 6) Press [ENTER] to confirm

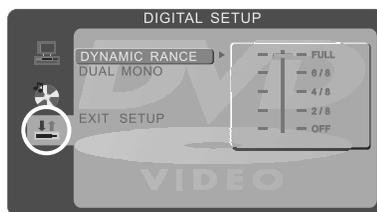

- 7) Press [DVD-SETUP] to exit

Adjusting the Dual Mono

Lets you change the sound between Stereo, Mono Left, Mono Right and Mixed Mono.

- 1) Press [DVD-SETUP] to enter menu
- 2) Press [V] twice to select Digital Set Up
- 3) Press [>] to enter menu
- 4) Press [V] to select Dual Mono
- 5) Press [>] to enter menu
- 6) Press [V] or [^] to switch between Stereo, Mono L, Mono R and Mix Mono
- 7) Press [ENTER] to confirm



- 8) Press [DVD-SETUP] to exit

WALL MOUNTING

IMPORTANT— BEFORE DRILLING ANY HOLES IN THE WALL ENSURE YOU ARE NOT DRILLING WHERE THERE COULD BE ANY ELECTRIC WIRES, WATER OR GAS PIPES

THIS TV REQUIRES A VESA 100 WALL MOUNT, OR EQUIVALENT



100

To remove the stand

- 1) Remove the two screws highlighted below



- 2) The stand will now come off

Wall Mounting the TV.

- 1) Remove the four screws highlighted below.
- 2) The wall mount can now be easily attached to the mounting holes on the rear of the TV. These holes are indicated in the picture below



Important – Ensure the length of screws included with your wall mount that secure the Wall Mount to the TV do not exceed 10 mm. Using longer screws could cause irreparable damage to the TV

USING WITH SKY DIGITAL

You may wish to use your TV with Sky Digital.

There are a number of connection options, the best being connecting via SCART cable.

Connecting via SCART

- 1) Connect the SCART cable from the Sky Digital Box to SCART of the TV
- 2) Press [INPUT]
- 3) Press [V] or [^] to select SCART
- 4) Press [ENTER]

The channel your Sky Digital box is displaying will now be shown on the TV.

You may wish to share your Sky Digital signal around the home by using an RF connection. If this TV is to be connected in this way, please follow the below.

Connecting via RF

Ensure the Sky signal is switched on, before you start the below.

- 1) Connect the RF cable from the RF output socket of the sky/cable box to the 'RF IN' of the TV.
- 2) Press [LCD-MENU] to enter menu
- 3) Press [>] twice to select Tuning Menu
- 4) Press [V] to select Tuning Program



- 5) Press [ENTER] to enter menu
- 6) Press [>] to select the channel you require your Sky on. Please select a channel not in use i.e. channel 6.
- 7) Press [V] 7 times to select Manual Search
- 8) Press [>] to enter
- 9) Press [^] to select Up.
- 10) Press [>] to start search.
- 11) Once tuned in, Press [LCD-MENU] 3 times to exit.

Manually tune until you locate the Sky channel. If it stops press [>] again and search will continue. (Often, the frequency required is 847.25 mhz, depending on which model of Sky Set top box)

Once tuned in it will go back to TV

USING WITH SKY DIGITAL REMOTE CONTROLS (BSKYB) OR UNIVERSAL REMOTE CONTROL

You may wish to use your Sky Digital or universal remote control to operate the channels and sound functions of this TV. For this you require a 'code' that needs to be programmed into your Sky Digital or universal remote control.

At the point of manufacture, BSKyB have not launched the code required for this model of TV. Sky are due to launch a new remote control which will include the necessary code to operate the basic functions of the TV during 2008 (called revision 9). The date was not released at the time of printing this manual, however it is estimated to be between July and December 2008.

FREQUENTLY ASKED QUESTIONS

Frequently Asked Questions

Question: I have tuned in Digital TV but I am not receiving any or all of the channels and/or the channels I receive are breaking up

Solution:

- 1) Check you are in an area that can receive Freeview. Visit www.freeview.co.uk or call 08701 111 270.
- 2) Check you have a digital aerial. Many indoor aerials will say they are digital ready, but you will not get a good signal
- 3) Consider purchasing a signal booster, it is much cheaper than a digital aerial and cures 70% of poor signal problems.
- 4) Failing the above for now use the analogue TV, until the signal becomes stronger in your area.

Question: The sound quality is high pitched?

Solution:

Go into the sound settings menu as shown earlier in the manual and increase the level of the bass and the decrease the treble

Question: I have put a DVD disc into the DVD drive, but the TV is not taking it.

Solution:

Check the TV is set to DVD mode, as the DVD drive only works in this mode.

Question: I have inserted a disc but it is not playing

Solution:

- 1) Ensure you have put the disc in facing the correct way forward
- 2) Ensure the disc is clean and is not scratched

Question: The subtitles are switched on when I am watching a DVD

Solution:

Each time you press [Subtitles] button you switch between the different languages. Off is one of the options. If you still have subtitle on, access through the DVD disc menu and switch off.

If you are still experiencing problems please contact the Helpline

TECHNICAL SPECIFICATION

LCD	Type	19" LCD
Input signal	PC-RGB	Horizontal frequency: 20-70KHz Vertical frequency: 60Hz
	RF	75 ohm Antenna / PAL-SECAM
	Video	1 AV/Composite RCA ,1 YPbPr/YCbCr 1 SCART
	Audio	1 3.5mm phone jack for PC/AV audio in 1 3.5mm phone jack for YPbPr/YCbCr audio in
	HDMI	1HDMI
Resolution	Recommended	1440×900
Speaker Output		3W×2
Power	Voltage	DC 12V
Power adapter	Voltage	AC 100-240 V 47-63Hz 1.5A
Brightness		300 cd/m2
Contrast		700:1
Dimensions	Physical	520mm(W) x 442mm(H) x 200mm(D) incl.Stand 20,5"(W) x 17,4"(H) x 7,9"(D)
Weight	Net	6.8kg (14.9 lb)

WARRANTY & HELPLINE INFORMATION

Your Tesco appliance is covered by a warranty for 12 months from the date of purchase. If a fault develops during this period, please contact the Tesco electrical helpline on 0845 456 6767. Please have your original purchase receipt with you when you call. This warranty in no way affects your consumer rights.

INDEX

Audio out - DVD mode	20	Picture Settings - DVD mode	18
Audio Presets	10	Pin Code	13
Auto Search - TV mode	15	Remote buttons	6
Balance	10	Reset Settings	11
Block channels - DVB mode	12	Reset Settings - DVD mode	18
Blue Screen	11	Search for new channels - DVB mode	12
Brightness	9, 18	Sharpness	9
Channel naming/re-name - TV mode	14	Side TV Buttons	7
Channel Order - DVB mode	12	Skip channel - TV mode	14
Channel Order - TV mode	15	Sky Digital Use	22
Colour	9, 18	Sound Settings - DVD mode	20
Connectivity - Rear of TV	7	Source Selection	8, 11
Contrast	9, 18	Stand removal	21
Country Settings - TV mode	15	System Adjustment - TV mode	14
Delete channels - DVB mode	12	System/Software Info	13
Delete channels - TV mode	14	Technical Specification	24
Dynamic Range - DVD mode	20	Teletext	16
Electronic Program Guide (EPG)	13	Tone - DVD mode	20
FAQ	23	Tuning in Analogue TV Stations	5
Favourite list	12	Tuning in Digital / Freeview TV Stations	5
Fine Tuning - TV mode	14	TV System - DVD mode	18
First Time Install - DVB mode	13	Universal Remote controls	22
HD Devices	8	Vertical Position - PC Mode	19
Horizontal Position - PC Mode	19	Wall mounting	21
Manual search - TV mode	14	Warranty / Service support	25
Noise Reduction	11	What is in the box	4
PC Settings for using this TV	17	Zoom	11







