

LCD TV

Model: S15/7



USER GUIDE



WARNINGS

Thank you for purchasing this television. For your safety, please take time to read these instructions carefully in order to familiarise yourself with the operation of the appliance and the important safety information. We strongly recommend that this product is installed by a competent person. If in doubt, refer to the retailer or the manufacturer helpline.

Caution

This television contains no user serviceable parts. Please refer to the manufacturer or authorised repair agent in the event of malfunction. Do not remove the back cover from the television.

Warning

To reduce the risk of fire, electric shock or damage to the television, do not expose it to dust, rain or moisture, or place any objects filled with liquids on or near the television.

Do not place the television in a confined space, ensure that nothing can obstruct the ventilation openings at the rear of the television.

Do not place naked flames on or near the television.

Dispose of this television and any components including batteries in an environmentally friendly manner. If in doubt, please contact your local authority for details of recycling.

Your LCD TV should be cleaned using a dry or slightly damp cloth. You should not use an alcohol based cleaner

Safety

For your safety, this appliance is fitted with a fused moulded 3 pin mains plug. Should the fuse need to be replaced, ensure that any replacement is of the same amperage and approved with the BSI mark. (⚡)

Never try and replace the mains plug unless you have adequate qualifications and are legally authorised to do so. In the event that a replacement Mains cable is required, contact the manufacturer for a suitable replacement.

Never use the television if it is damaged in any way.

Always place the television on a flat level surface avoiding anywhere which may be subject to strong vibration. Ensure the television is not placed on top of the power cable as the weight of the television may damage the cable and cause a safety hazard.

Never place mobile phones, speakers or any other device which may cause magnetic or radio interference with the television. If interference is apparent, move the device causing the interference away from the television.

Packaging

Please save the packaging for the television as you will need this in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package it correctly. The safest way to package your item in the event of warranty/service repair is in its original box/packaging

WARNINGS

Screen Burn

A characteristic of Plasma and LCD TV Panels is that displaying the same image for along time may cause a permanent after-image to remain on the screen. This is called screen burn. Most pictures shown on your TV will be constantly moving and fill the screen.

Examples of images that you need to watch out for are as follows (this is not an all-inclusive list):

- **TV Channel Logos: e.g. Shopping channel logos and pricing displays-especially if they are bright and stationary. Moving or low-contrast graphics are less likely to cause ageing of the screen.**
- **Picture-in-Picture and Multi Picture-in-Picture: Do not view for long periods of time using the Picture-in-Picture or Multi Picture-in-Picture functions.**
- **Time Displays**
- **Teletext: Do not view a stationary page for long periods of time.**
- **TV/DVD Menus: e.g. Listings of DVD disk content.**
- **Pause Mode: Do not leave the TV in pause mode for long periods of time, e.g. When watching DVDs or videos.**

Note: To prevent screen burn if viewing any of the above for long periods of time, reduce contrast and brightness when viewing. Once burn-in occurs it will never disappear completely.

How do I dispose of this product?

UK: Waste electrical products should not be disposed of with household waste. Separate disposal facilities exist. For your nearest facilities, please see www.recycle-more.co.uk or instore for details.

ROI: Produced after 13th August 2005. Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



CONTENTS

	Page
Getting Started	
What is included in the box with the TV	4
How to set up the TV for the first time	
Tuning in the TV Stations	5
TV & remote control buttons	
Remote control buttons and their functions	6
TV buttons and their functions	6
Input connections on TV	
Connecting via VGA (For PC mode)	7
Connecting via SCART	7
Connecting via Audio	7
Connecting to TV Aerial	7
Connecting S-Video	7
TV Operation	
Adjusting the picture settings	8
Adjusting the sound settings	9
Tuning Analogue TV	10
Naming channels	10
Editing channels / channel positions	10
Changing language	11
Adjusting Functions	11
PC Settings	12
Using teletext	13
Using with a PC	
Installing to use on a Windows XP PC	14
Wall Mounting	
Removing the stand	15
Attaching a wall bracket	15
Using with Sky Digital (B Sky B)	
Connecting via SCART	16
Connecting via RF	16
Universal / Sky Remote Control	
Operating TV with a Universal / Sky Remote Control	16
Frequently Asked Questions	17
Technical Specification	18
Warranty - Helpline Information	18
Index	19

If you experience any problems with this Television,
Please contact the helpline.

Customer Support/Technical Helpline
Sky Media UK LTD
Telephone: 0870 242 6292
Email: service.uk@umc-slovakia.sk

GETTING STARTED - INCLUDED ACCESSORIES

Accessories

Included with this TV are the following accessories:

1x - User Guide Book



1x - Remote control



1x - RF lead



2x - AAA batteries



1x - AC mains lead



1x - Transformer



Please save your packaging as you will need this in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package it correctly. The safest way to package your item in the event of warranty/service repair is in it's original box/packaging.


GETTING STARTED - INITIAL SET UP

IMPORTANT - AFTER TUNING DO NOT PRESS ANY BUTTONS FOR 20 SECONDS SO THE CHANNEL INFORMATION CAN BE STORED.


TUNING IN

IMPORTANT — Please ensure the TV has reached room temperature before connecting the power for the first time

- 1) Connect the mains lead to your electrical outlet and connect the power adaptor to the television.

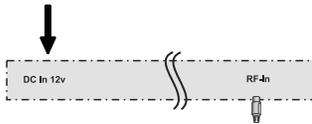

- 2) Connect the RF Cable supplied to the '**RF IN**' on the rear of the TV and connect the other end of the cable to your TV Aerial outlet

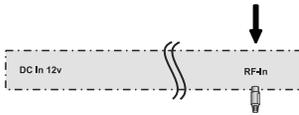

- 3) Install batteries in the remote control and press the [POWER] button to turn on the TV.



The initial Set up screen will appear as below



- 4) Once you have read the on screen message and checked that you have connected the RF cable to the 'RF-IN' on the rear of the TV, ensure 'Yes' is highlighted and press [MENU].

The TV channels will now tune in. After a few minutes, tuning in will finish and the TV will go into 'Program Edit' mode where you can move channels to the desired positions.




- 5) Scroll to select the channel you would like to move/swap, then press the yellow button.
- 6) Move to the location you would like the channel and press the red button

Repeat the process with all channels.
To rename the channels, refer to page 10.
Press [MENU] 3 times to exit.


REMOTE CONTROL BUTTONS

- 1 POWER** Power ON/OFF
- 2 INPUT** Select Input source:
TV / SCART / YBPBR /
HDMI/PC-RGB
- 3 MUTE** Mute
- 4 MENU** OSD Menu
- 5 V-** Volume down / Left
orientation
- 6 V+** Volume up / Right
orientation
- 7 P+** Channel up / Scroll up
- 8 P-** Channel down / Scroll down
- 9 0 - 9** Direct number selection
for channel or Teletext page
- 10 - / --** Select 1 or 2 digits for
channel selection
- 11 SWAP** Return to previous
channel
- 12 MTS** Multi-Channel
TV Sound selection(mono,
stereo, dual I/II)
- 13 DISPLAY** Displays channel
information
- 14 BACK** Exit OSD Menu
- 15 AUTO** Automatic picture adjust
in PC mode

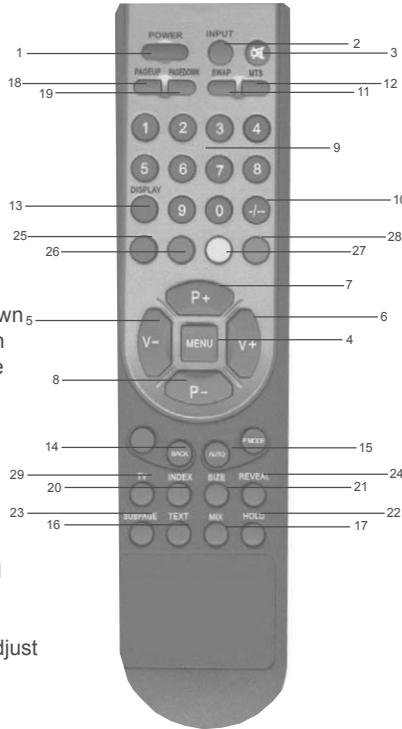

- 16 TEXT** Enter into Teletext
mode
- 17 MIX** Switch into mixed mode
(TV/Teletext)
- 18 PAGE UP** Increase the page
number by one in Teletext mode
- 19 PAGE DOWN** Decrease
the page number by one in
Teletext mode
- 20 INDEX** Return to the main
Teletext page
- 21 SIZE** Change display size
- 22 HOLD** Hold on or off for
current page display
- 23 SUBPAGE** Subpage access
- 24 REVEAL** Reveal hidden
information
- 25 RED** Corresponds to the
subject in the colour field
- 26 GREEN** Corresponds to the
subject in the colour field
- 27 YELLOW** Corresponds to the
subject in the colour field
- 28 BLUE** Corresponds to the
subject in the colour field
- 29 TV** Exit the Teletext mode
and return to TV mode


FRONT PANEL BUTTONS

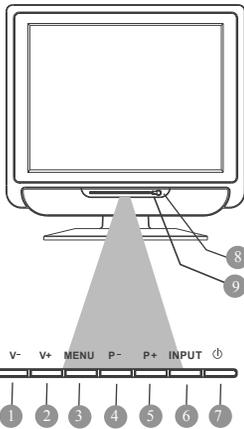


- | | |
|---|---------------------------------|
| 1 | Volume down/left cursor button |
| 2 | Volume up/right cursor button |
| 3 | Settings menu |
| 4 | Channel/Program down |
| 5 | Channel/Program up |
| 6 | Program/Input selector |
| 7 | Standby power on/off button |
| 8 | Indicating light |
| 9 | Remote control receiving window |

INPUTS & CONNECTIONS

SIDE CONNECTIONS

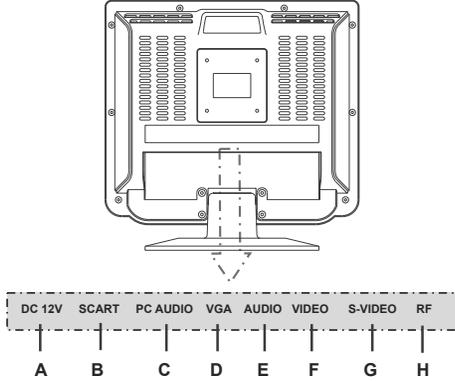

A	DC 12V	Power input
B	SCART	SCART input
C	PC AUDIO	AUDIO input for VGA/PC
D	VGA	VGA input
F	AUDIO	AUDIO input
E	VIDEO	VIDEO input
G	S-VIDEO	S-VIDEO input
H	RF	Antenna input

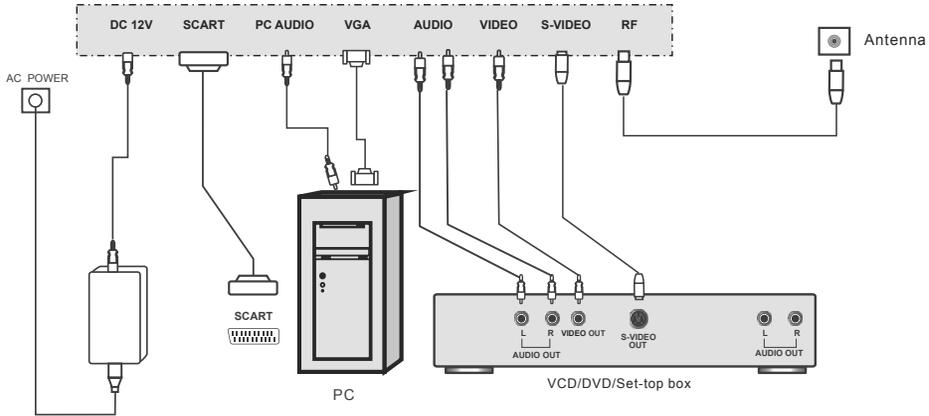

Selecting Input Source

To switch between the different connections is very easy.

- 1) Press [INPUT] - The following will appear
- 2) Press [P-] or [P+] to select the input you require.
- 3) Press [V+]

SOURCE MENU

TV
AV
S-VIDEO
SCART
PC

MENU OPERATION

PICTURE SETTINGS

Lets you adjust the picture mode preset, brightness, contrast, saturation, sharpness, hue to enhance the viewing experience.

Adjusting the Picture mode

Switch between the preset picture modes of Normal, User, Vivid and Soft.

- 1) Press [MENU] to enter menu
- 2) Press [V+] to enter picture settings & select Picture Mode
- 3) Press [V+] or [V-] to change between the different presets



- 4) Press [MENU] twice to exit

Note: If you select USER, you can then adjust the following 5 options.

Adjusting Brightness

Increase or decrease the brightness of the picture

- 1) Press [MENU] to enter menu
- 2) Press [V+] to enter picture settings
- 3) Press [P-] to select Brightness
- 4) Press [V+] or [V-] to adjust



- 5) Press [MENU] twice to exit

Adjusting Contrast

Adjust the balance between black and white

- 1) Press [MENU] to enter menu
- 2) Press [V+] to enter picture settings
- 3) Press [P-] twice to select Contrast
- 4) Press [V+] or [V-] to adjust



- 5) Press [MENU] twice to exit

Adjusting Saturation

Alter the Red, Green & Blue which make up the picture

- 1) Press [MENU] to enter menu
- 2) Press [V+] to enter picture settings
- 3) Press [P-] 3 times to select Saturation
- 4) Press [V+] or [V-] to adjust




- 5) Press [MENU] twice to exit

Adjusting Sharpness

Increase or decrease the sharpness of the picture depending on signal strength. If you have a poor signal strength you should reduce the sharpness to get a better picture.

- 1) Press [MENU] to enter menu
- 2) Press [V+] to enter picture settings
- 3) Press [P-] 4 times to select Sharpness
- 4) Press [V+] or [V-] to adjust

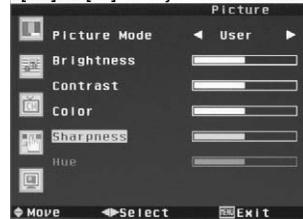

- 5) Press [MENU] twice to exit

Adjusting Hue

Alter the colour tone of the picture

- 1) Press [MENU] to enter menu
- 2) Press [V+] to enter picture settings
- 3) Press [P-] 5 times to select Hue
- 4) Press [V+] or [V-] to adjust



- 5) Press [MENU] twice to exit

MENU OPERATION

SOUND SETTINGS

Lets you adjust the sound mode preset, volume, bass, treble to enhance the viewing experience.

Adjusting the Sound mode

Switch between the preset sound modes of Normal, News, Movie & User.

- 1) Press [MENU] to enter menu
- 2) Press [P-] to select sound settings
- 3) Press [V+] to enter sound settings & select Sound mode
- 4) Press [V+] or [V-] to adjust



- 5) Press [MENU] twice to exit

Note: If you want to adjust bass or treble you must select User

Adjusting Volume

Increases or decreases the volume

- 1) Press [MENU] to enter menu
- 2) Press [P-] to select sound settings
- 3) Press [V+] to enter sound settings
- 4) Press [P-] to select Volume
- 5) Press [V+] or [V-] to adjust



- 6) Press [MENU] twice to exit

Adjusting Bass

Increases or decreases the bass within the sound

- 1) Press [MENU] to enter menu
- 2) Press [P-] to select sound settings
- 3) Press [V+] to enter sound settings
- 4) Press [P-] twice to select Bass
- 5) Press [V+] or [V-] to adjust



- 6) Press [MENU] twice to exit

Adjusting Treble

Increases or decreases the treble within the sound

- 1) Press [MENU] to enter menu
- 2) Press [P-] to select sound settings
- 3) Press [V+] to enter sound settings
- 4) Press [P-] 3 times to select Treble
- 5) Press [V+] or [V-] to adjust




- 6) Press [MENU] twice to exit

Adjusting Balance

To switch the sound between the left and right speakers

- 1) Press [MENU] to enter menu
- 2) Press [P-] to select sound settings
- 3) Press [V+] to enter sound settings
- 4) Press [P-] 4 times to select Balance
- 5) Press [V+] or [V-] to adjust

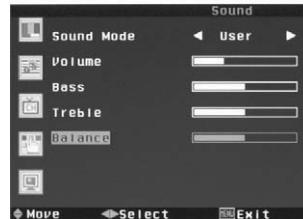

- 6) Press [MENU] twice to exit

MENU OPERATION

CHANNEL SETTINGS

You may wish to do some additional tuning, in order to improve the picture quality, move channels around or connect via RF to a freeview box or Sky digital.

Auto Tune

Scan for all channel based on the current settings

- 1) Press [MENU] to enter menu
- 2) Press [P-] twice to select channel settings
- 3) Press [V+] to enter channel settings & select Auto Tune
- 4) Press [V+] to start tuning



- 5) Press [MENU] twice to exit

After tuning is complete you will be taken to the program edit screen. See later on this page.

Manual Tune

You may wish to manual search if you can't find a certain channel, or if you want to connect to a Satellite/Cable box via RF/Aerial connector.

- 1) Press [MENU] to enter menu
- 2) Press [P-] twice to select channel settings
- 3) Press [V+] to enter channel settings
- 4) Press [P-] to select Manual Tune
- 5) Press [V+] to enter.
- 6) Press [P-] to select Search.
- 7) Press [V-] or [V+] to search.
- 8) When you are happy you have found the channel, press [P-] to highlight Store and then press [P+].



- 9) Press [MENU] twice to exit

Fine Tune

You may wish to fine tune in order improve the picture quality

- 1) Press [MENU] to enter menu
- 2) Press [P-] twice to select channel settings
- 3) Press [V+] to enter channel settings
- 4) Press [P-] twice to select Fine Tune
- 5) Press [V+] to enter.
- 6) Press [V-] or [V+] to search.
- 7) When you are happy you have found the channel, press [P-] to highlight Store and then press [P+].



- 8) Press [MENU] twice to exit

Adding Skip

If there is a channel that you do not wish to view you can add Skip to that channel. When you press P+ or P- it will skip past this channel

- 1) Go to the channel you wish to skip
- 2) Press [MENU] to enter menu
- 3) Press [P-] twice to select channel settings
- 4) Press [V+] 3 times to enter channel settings
- 5) Press [P-] 4 times to select Skip
- 6) Press [V+] or [V-] to switch on or off



- 7) Press [MENU] twice to exit

Adjusting Sound System

Change between the different sound systems. It should default to I for the UK.

- 1) Press [MENU] to enter menu
- 2) Press [P-] twice to select channel settings
- 3) Press [V+] to enter channel settings
- 4) Press [P-] 4 times to select Sound System
- 5) Press [V+] or [V-] to adjust



- 6) Press [MENU] twice to exit

Program Edit & Channel Naming

Lets you alter the position of the channel and change the names of them.

- 1) Press [MENU] to enter menu
- 2) Press [P-] twice to select channel settings
- 3) Press [V+] to enter channel settings
- 4) Press [P-] 5 times to select Program
- 5) Press [V+] to enter



- 6) Press the YELLOW button to select the channel you wish to move
- 7) Press [P+] or [P-] to move to the location which you would like this channel
- 8) Press the RED button (R/C) to confirm. The channel is now moved
- 9) Press [MENU] 3 times to exit

If you wish to change the channel name when in the above menu (see image)

- 1) Press the RED button on the channel you wish to rename
- 2) Press [P+] or [P-] to add a character and press [V+] to move to next character
- 3) Press the RED button to confirm the channel name

MENU OPERATION

FUNCTION SETTINGS

Lets you alter the menu language and basic menu settings.

Adjusting Language

Choose the language that you would like for the On Screen Display

- 1) Press [MENU] to enter menu
- 2) Press [P-] 3 times to select function settings
- 3) Press [V+] to enter function settings & select Language
- 4) Press [V+] or [V-] to adjust



- 5) Press [MENU] twice to exit

Adjusting Blue Background

Alters the menu background colour

- 1) Press [MENU] to enter menu
- 2) Press [P-] 3 times to select function settings
- 3) Press [V+] to enter function settings
- 4) Press [P-] to select Blue Back
- 5) Press [V+] to switch on or off



- 6) Press [MENU] twice to exit

Adjusting Text Language

Alters the language of teletext. For the UK it should be set to West.

- 1) Press [MENU] to enter menu
- 2) Press [P-] 3 times to select function settings
- 3) Press [V+] to enter function settings
- 4) Press [P-] twice to select TXT Language
- 5) Press [V+] or [V-] to adjust



- 6) Press [MENU] twice to exit

Adjusting Colour Temperature

Lets you alter the colour present options

- 1) Press [MENU] to enter menu
- 2) Press [P-] 3 times to select function settings
- 3) Press [V+] to enter function settings
- 4) Press [P-] 3 times to select Color Temp
- 5) Press [V+] to enter.
- 6) Press [V+] or [V-] to adjust between Warm, Normal, Cool & User. If you select User you can move down and adjust the red, green & blue.



- 7) Press [MENU] twice to exit

Adjusting DNR (Dynamic Noise Reduction)

Reduce the interference in the picture

- 1) Press [MENU] to enter menu
- 2) Press [P-] 3 times to select function settings
- 3) Press [V+] to enter function settings
- 4) Press [P-] 4 times to select DNR
- 5) Press [V+] or [V-] to adjust



- 6) Press [MENU] twice to exit

Reset Memory

This restores the TV to factory settings

- 1) Press [MENU] to enter menu
- 2) Press [P-] 3 times to select function settings
- 3) Press [V+] to enter function settings
- 4) Press [P-] 5 times to select Reset
- 5) Press [V+] to reset



- 6) Press [MENU] twice to exit

MENU OPERATION

PC SETTINGS

Lets you alter the settings for if you use the television as a PC monitor

Adjusting Clock

To adjust delay time of clock in order to reduce the noise of picture

- 1) Press [MENU] to enter menu
- 2) Press [P-] 4 times to select PC settings
- 3) Press [V+] to enter PC settings & select Clock
- 4) Press [V+] or [V-] to adjust



- 5) Press [MENU] twice to exit

Adjusting Phase

To adjust delay time of phase in order to reduce the noise of picture

- 1) Press [MENU] to enter menu
- 2) Press [P-] 3 times to select PC settings
- 3) Press [V+] to enter PC settings
- 4) Press [P-] to select Phase
- 5) Press [V+] or [V-] to adjust



- 6) Press [MENU] twice to exit

Adjusting Horizontal Position

Changes the horizontal position of the picture

- 1) Press [MENU] to enter menu
- 2) Press [P-] 3 times to select PC settings
- 3) Press [V+] to enter PC settings
- 4) Press [P-] twice to select H-Position
- 5) Press [V+] or [V-] to adjust



- 6) Press [MENU] twice to exit

Adjusting Vertical Position

Changes the vertical position of the picture

- 1) Press [MENU] to enter menu
- 2) Press [P-] 3 times to select PC settings
- 3) Press [V+] to enter PC settings
- 4) Press [P-] 3 times to select V-Position
- 5) Press [V+] or [V-] to adjust



- 6) Press [MENU] twice to exit

Adjusting Screen Position Automatically

Lets you automatically configure the television to be used as a computer monitor

- 1) Press [MENU] to enter menu
- 2) Press [P-] 3 times to select PC settings
- 3) Press [V+] to enter PC settings
- 4) Press [P-] 4 times to select Auto
- 5) Press [V+] to set



- 6) Press [MENU] twice to exit

TV MODE TELETEXT OPERATION

Teletext is a service offered by some broadcasters which is provided with the video and audio signals.

Teletext Operation

- 1) Press [TEXT], after a few seconds teletext page 100 should appear. Here is an example of BBC1



- 2) You can now navigate to the page you require in a number of ways:
 - a) Press the page you require using the number buttons i.e. page 302, by pressing [3][0][2]
 - b) Press the colour buttons, these will take you to page indicated on screen for each colour
 - c) Press [PAGEUP] or [PAGEDN] these will take you to next page. i.e. if you are on page 150 and you press [PAGEDN] the page will switch to 149
- 3) To exit Teletext press [TEXT] at any time

Other buttons

[SIZE] this increases or decreases the size of the text on screen
[INDEX] takes you to the index page on the channels
[REVEAL] if there is answer or something hidden this will display it
[SUBPAGE] displays the sub page if it exists

CONNECTING TO A PC - WINDOWS XP

IMPORTANT— Before connecting to a PC you must ensure that the settings of the PC's output are correct for the new LCD Monitor.

You need to do the following with your old monitor connected

- 1) Switch on your PC
- 2) When finishing booting up, right click your mouse anywhere on the screen, this screen will appear




- 3) Left click your mouse on Properties, this screen will appear




For Vista operating system the process is very similar to the above. If you require additional support please contact the helpline.

- 4) Left mouse click on Settings, this screen will appear. Check the Screen Resolution is set to 1024 by 768 pixels, if it is not change to this.

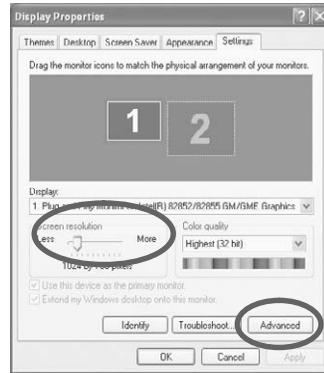

- 5) Left mouse click on Advance, this screen will appear, click on tab called 'monitor'

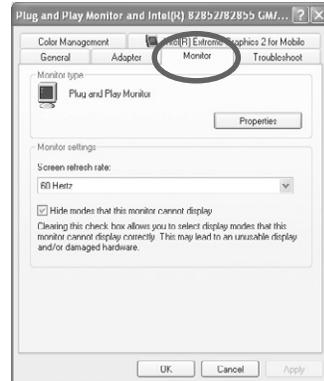

- 6) Left click on the drop down for Screen refresh rate and select 60 Hertz.
- 7) Finally click Apply, then click Yes and the settings will be saved.
- 8) Turn off your PC.
- 9) Connect up your LCD TV to your PC and switch on.
- 10) Switch on your PC, Windows will automatically install the LCD TV.

WALL MOUNTING

IMPORTANT— BEFORE DRILLING ANY HOLES IN THE WALL ENSURE YOU ARE NOT DRILLING WHERE THERE COULD BE ANY ELECTRIC WIRES, WATER OR GAS PIPES


THIS TV REQUIRES A VESA 75 WALL MOUNT, OR EQUIVALENT



75

To remove the stand


- 1) Remove the four screws highlighted below

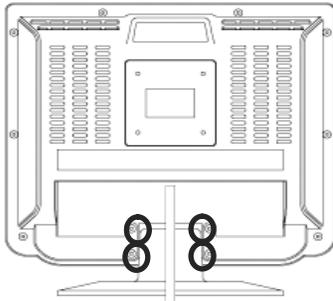

- 2) The stand will now come off

Wall Mounting the TV.

- 1) Remove the four screws highlighted below.
- 2) The wall mount can now be easily attached to the mounting holes on the rear of the TV. These holes are indicated in the picture below

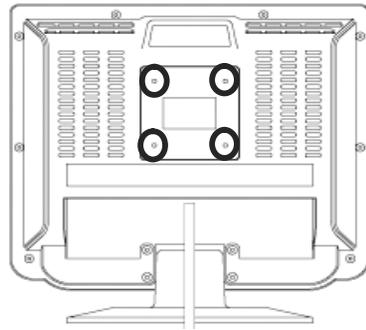

Important – Ensure the length of screws included with your wall mount that secure the Wall Mount to the TV do not exceed 8mm. Using longer screws could cause irreparable damage to the TV

USING WITH SKY DIGITAL

You may wish to use your TV with Sky Digital.

There are a number of connection options, the best being connecting via SCART cable.

Connecting via SCART

- 1) Connect the SCART cable from the Sky Digital Box to SCART of the TV
- 2) Press [INPUT]
- 3) Press [P-] or [P+] to select SCART
- 4) Press [V+]

The channel your Sky Digital box is displaying will now be shown on the TV.

You may wish to share your Sky Digital signal around the home by using an RF connection. If this TV is to be connected in this way, please follow the below.

Connecting via RF

Ensure the Sky signal is switched on, before you start the below.

- 1) Connect the RF cable from the RF output socket of the sky/cable box to the 'RF IN' of the TV.
- 2) Press [MENU] to enter menu
- 3) Press [P-] twice to select Channel menu
- 4) Press [V+] to enter channel settings



- 5) Press [P-] to select Manual Tune
- 6) Press [V+] to enter.
- 7) Press [P-] to select Search.
- 8) Press [V-] or [V+] to search.
- 9) When you are happy you have found the channel, press [P-] to highlight Store and then press [P+].
- 10) Press [MENU] twice to exit

Manually tune until you locate the Sky channel. If it stops press [>] again and search will continue. (Often, the frequency required is 847.25 mhz, depending on which model of Sky Set top box)

Once tuned in it will go back to TV

USING WITH SKY DIGITAL REMOTE CONTROLS (BSKYB) OR UNIVERSAL REMOTE CONTROL

You may wish to use your Sky Digital or universal remote control to operate the channels and sound functions of this TV. For this you require a 'code' that needs to be programmed into your Sky Digital or universal remote control.

At the point of manufacture, BSKyB have not launched the code required for this model of TV. Sky are due to launch a new remote control which will include the necessary code to operate the basic functions of the TV during 2008 (called revision 9). The date was not released at the time of printing this manual, however it is estimated to be between July and December 2008.

www.skymediauk.co.uk
email - service.uk@umc-slovakia.sk

FREQUENTLY ASKED QUESTIONS

Frequently Asked Questions

Question:	Solution:
The sound quality is high pitched?	Go into the sound settings menu as shown earlier in the manual and increase the level of the bass and the decrease the treble
I received my tv without a manual. I have lost my manual	Manuals are available to download from our website, please visit www.skymediauk.co.uk for more information
I have connected the TV to my VCR via SCART but it is not recording	In addition to connecting via SCART, you should connect the aerial cable from the wall socket to VCR and another aerial cable from the VCR to the TV.

If you are still experiencing problems please contact the Helpline
Customer Support/Technical Helpline
Sky Media UK LTD
Telephone: 0870 242 6292
Email: service.uk@umc-slovakia.sk
Visit our web site www.skymediauk.co.uk for further Trouble shooting
and frequently asked questions.

TECHNICAL SPECIFICATION

Width: height	4:3
Max visible size	38cm (screen diagonal length)
Inherent resolution	1024(H)X768(V)
Visible angle (CR/10)	Horizon: 120° Vertical: 100° (Screen parameter)
Cover rate of color field	Cp≥32% [NTSC color field]
Brightness	250m ² (Screen parameter)
Contrast	450:1 (Screen parameter)
Response time	16ms (Screen parameter)
Mode of broadcast signal	PAL/SECAM, B/G, D/K, I, L, LL
Mode of video signal	PAL/NTSC/SECAM
Channel range	VHF L: 1-5 channel, H:6-12 channel UHF:13-57 channels CATV:Z1-Z43 channels
Stored channels	127
Radio frequency	RF inputting resistance 75Ω
Video	VIDEO Inputting resistance 75Ω Inputting voltage 1V _{pp} ± 3db S-VIDEO Inputting resistance 75Ω Inputting voltage Y: 1V _{pp} ± 3db C: 0.3V _{pp} ± 3db Inputting resistance 75Ω Inputting voltage 0.7V _{pp} ± 3db voltage Y: 1V _{pp} ± 3db C: 0.3V _{pp} ± 3db
Audio input	Inputting resistance >20 KΩ Inputting voltage=2 V
Max power with no distortion load	2×1.2W (8Ω load) -240V AC 50-60HZ
The TV shape and size	380×190×375(mm)
Standby power consumption	≤3W
Total running power consumption	≤48W
Weight	3kg
Using environment	Temperature: 3-35℃ Humidity: 20%-80% Pressure: 86-108Kpa

Warranty / Service support

This television has a 12 month return to manufacturer warranty.

Your warranty starts from Date of Purchase.

In the event that your TV requires to be repaired, we may replace the item at our discretion if we believe the item is uneconomical to be repaired or if we feel a permanent repair is not possible.

In the event of fault, in the first instance please refer to the frequently asked questions.

If you are still unable to remedy the fault, unplug the TV from the mains power lead for 3 minutes, then reconnect.

If fault is found, please make a note of the following information as you will need this when you contact the helpline.

Model Number (Can be found on the rear of the TV)

Serial Number (Can be found on the rear of the TV)

Where purchased from (i.e retailer name)

Date of purchase (Please keep a copy of your purchase receipt safe - you will need this)

IMPORTANT – PLEASE SAVE ALL OF YOUR PACKAGING MATERIALS AS IN THE EVENT OF REPAIR / SERVICE, YOU WILL NEED TO PACKAGE THE ITEM ADEQUATELY IN ORDER THAT IT CAN BE COLLECTED / REPAIRED OR REPLACED AND RETURNED.

Sky Media UK

Telephone 0870 242 6292.

Email service.uk@umc-slovakia.sk

You can find contact details, latest support information on any of our web sites.

www.skymediauk.co.uk or www.umc-slovakia.sk

INDEX

Audio Presets	9	Remote buttons	6
Auto Search	10	Reset Settings	11
Balance	9	Sharpness	8
Blue Screen	11	Skip channel	10
Brightness	8	Sky Digital Use	16
Channel naming/re-name	10	Source Selection	7
Channel Order	10	Stand removal	15
Connectivity - Rear of TV	7	System Adjustment	10
Contrast	8	Technical Specification	18
Delete channels	10	Teletext	13
FAQ	17	Tuning in TV Stations	5
Fine Tuning	10	TV Buttons	6
Horizontal Position - PC Mode	12	Universal Remote controls	16
Manual search	10	Vertical Position - PC Mode	12
Language	11	Wall mounting	15
Noise Reduction	11	Warranty / Service support	18
Connecting to a PC		What is in the box	4
- Windows XP settings	14		







S15/MAN/0049

